


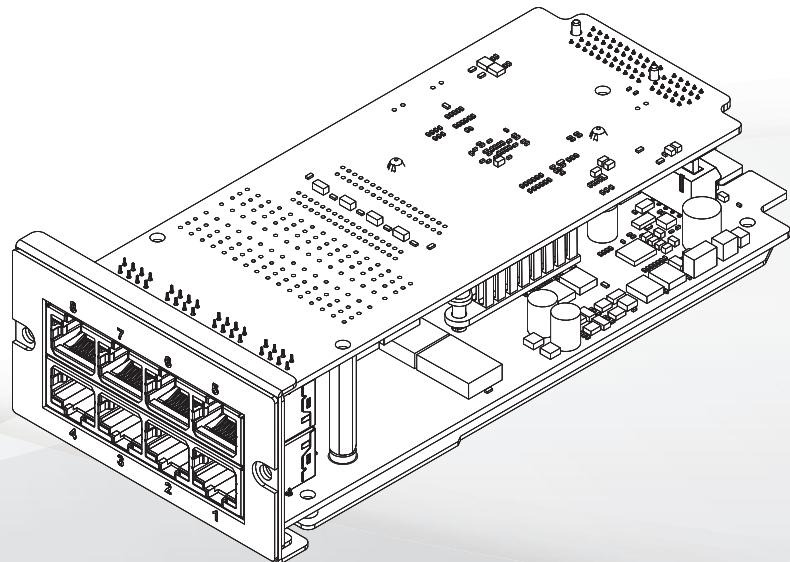

PuIM Series


PuIM-1G8T-I350

www.ieeworld.com



Package Contents

PuIM-1G8T-I350

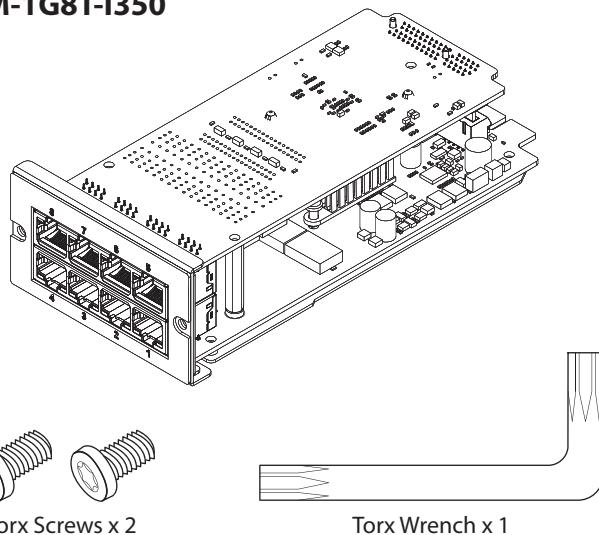


Torx Screws x 2




Torx Wrench x 1

PuIM-1G8T-I350 Block Diagram

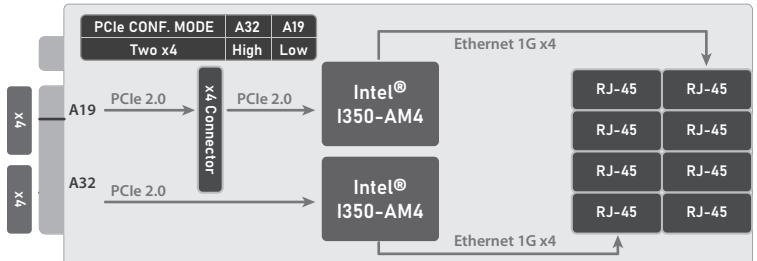


LAN LED Status

 

LED	State	Description
Link (Left)	Yellow	Active
Speed (Right)	Green	1 Gbps date rate
Speed (Right)	Orange	100 Mbps data rate


Hardware Installation

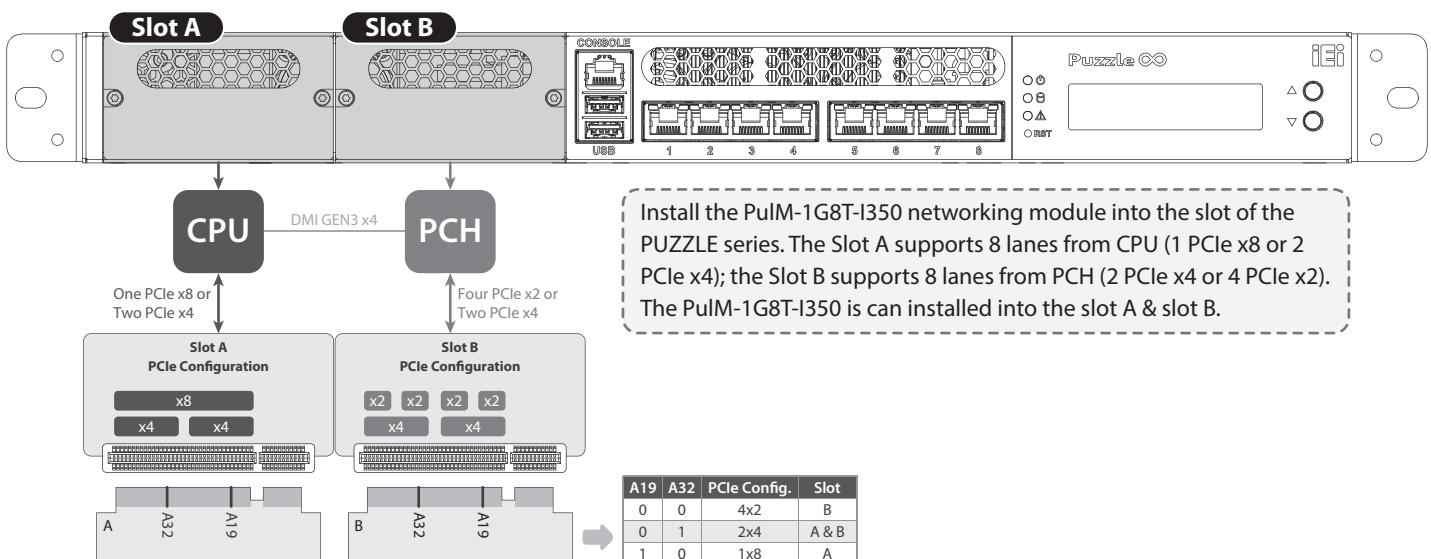

Networking Module Installation


Step 1

Use the Torx wrench to remove the two Torx screws.

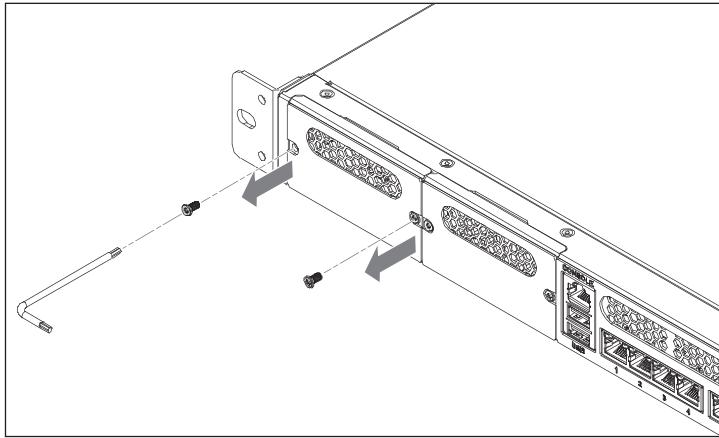


Step 2

Remove the slot cover. Save the slot cover screws.

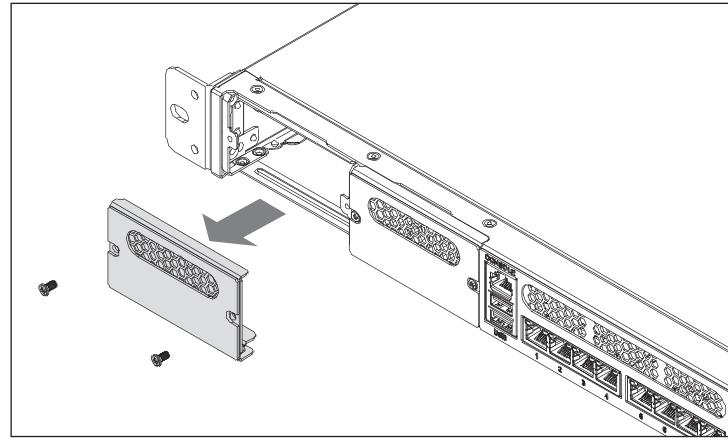


Step 3

Slide an IEI networking module into the slot until the module is seated in the slot correctly and securely.

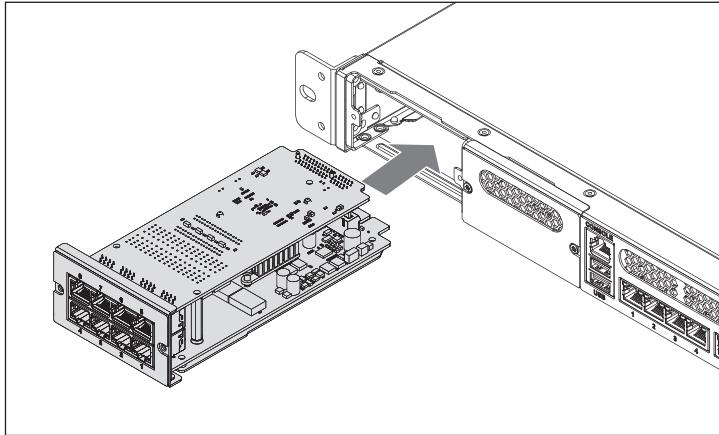

Step 4

Install the previously-removed Torx screws to secure the module to the chassis.

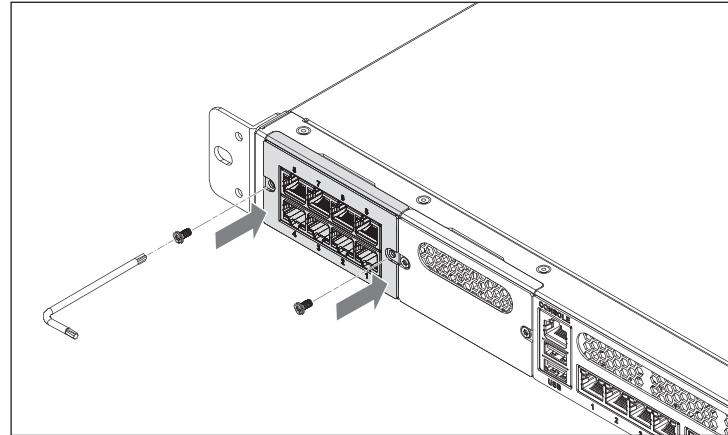

威強電工業電腦 IEI Integration Corp.

No. 29, Zhongxing Rd., Xizhi Dist., New Taipei City 221, Taiwan

TEL : +886-2-86916798 / +886-2-26902098 FAX : +886-2-66160028

sales@ieiworld.com www.ieiworld.com

