

**MODEL:
IMBA-R680**

ATX motherboard supports LGA1700 12th/13th Intel® Core® i9/i7/i5/i3, Celeron® and Pentium® processor, DDR5, Triple Independent Displays, Dual 2.5GbE LAN, M.2, SATA 6Gb/s and RoHS

User Manual

Revision

Date	Version	Changes
April 27, 2023	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

Table of Contents

1 INTRODUCTION.....	15
1.1 INTRODUCTION.....	16
1.2 FEATURES.....	17
1.3 CONNECTORS	18
1.4 DIMENSIONS.....	19
1.5 DATA FLOW	20
1.6 TECHNICAL SPECIFICATIONS	21
2 PACKING LIST.....	23
2.1 ANTI-STATIC PRECAUTIONS.....	24
2.2 UNPACKING PRECAUTIONS.....	24
2.3 PACKING LIST	25
2.4 OPTIONAL ITEMS	26
3 CONNECTORS	28
3.1 PERIPHERAL INTERFACE CONNECTORS.....	29
3.1.1 <i>IMBA-R680 Layout</i>	29
3.1.2 <i>Peripheral Interface Connectors</i>	30
3.1.3 <i>External Interface Panel Connectors</i>	31
3.2 INTERNAL PERIPHERAL CONNECTORS	32
3.2.1 <i>CPU 12V Power Connector</i>	32
3.2.2 <i>ATX Power Connector</i>	33
3.2.3 <i>Battery Connector</i>	34
3.2.4 <i>Chassis Intrusion Connector</i>	36
3.2.5 <i>AT/ATX Power Mode Setting</i>	37
3.2.6 <i>Digital I/O Connector</i>	38
3.2.7 <i>EC Debug Connector</i>	39
3.2.8 <i>Clear CMOS Button</i>	40
3.2.9 <i>Flash Descriptor Security Override Jumper</i>	41
3.2.10 <i>Fan Connector (CPU)</i>	42
3.2.11 <i>Fan Connectors (System)</i>	43

3.2.12 Audio Connector for iEi AC-KIT-888S kit	44
3.2.13 Front Panel Connector	45
3.2.14 I ² C Connector	46
3.2.15 SMBus Connector	47
3.2.16 LAN Link LED connector.....	48
3.2.17 M.2 M-key Slot.....	49
3.2.18 PCI x1 Slots.....	51
3.2.19 PCIe x4 Slots.....	52
3.2.20 PCIe x16 slots	53
3.2.21 Onboard Power Button	54
3.2.22 DDR5 DIMM sockets.....	55
3.2.23 SATA 6Gb/s Connectors.....	56
3.2.24 RS-232 Serial Port Connectors.....	57
3.2.25 Flash SPI ROM Connector	58
3.2.26 Flash EC ROM Connector.....	59
3.2.27 Internal USB 2.0 Connectors.....	60
3.2.28 Internal USB 3.2 Gen 1 Connector.....	61
3.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	62
3.3.1 External 2.5GbE RJ-45 and dual USB 3.2 Gen 1 combo connector	62
3.3.2 External 2.5GbE RJ-45 and dual USB 3.2 Gen 2 combo connector	63
3.3.3 External Dual USB 3.2 Gen 2 Connector.....	65
3.3.4 External HDMI And DP Combo Connector	66
3.3.5 External RS-232 /422/485 Connector.....	68
4 INSTALLATION	69
4.1 ANTI-STATIC PRECAUTIONS.....	70
4.2 INTERNAL PERIPHERAL DEVICE CONNECTIONS.....	70
4.2.1 SATA Drive Connection	70
4.3 INSTALLATION CONSIDERATIONS.....	73
4.4 SOCKET LGA1700 CPU INSTALLATION.....	74
4.5 SOCKET LGA1700 COOLING KIT INSTALLATION	78
4.6 DIMM INSTALLATION	80
4.7 M.2 MODULE INSTALLATION.....	81
4.8 SOFTWARE INSTALLATION	84
4.9 DRIVER DOWNLOAD	84

IMBA-R680 ATX Motherboard

5 BIOS	86
5.1 INTRODUCTION.....	87
5.1.1 Starting Setup.....	87
5.1.2 Using Setup	88
5.1.2.1 Keyboard Navigation	88
5.1.2.2 Touch Navigation	89
5.1.3 Getting Help.....	90
5.1.4 Unable to Reboot after Configuration Changes	90
5.1.5 BIOS Menu Bar.....	90
5.2 MAIN.....	91
5.3 ADVANCED.....	94
5.3.1 CPU Configuration	95
5.3.2 Trusted Computing.....	100
5.3.3 RTC Wake Settings.....	101
5.3.4 F81866 Super IO Configuration	103
5.3.4.1 Serial Port 1 Configuration	104
5.3.4.2 Serial Port 2 Configuration	105
5.3.4.3 Serial Port 3 Configuration	107
5.3.4.4 Serial Port 4 Configuration	108
5.3.4.5 Serial Port 5 Configuration	109
5.3.4.6 Serial Port 6 Configuration	110
5.3.5 EC KB9068 H/W Monitor.....	111
5.3.5.1 Smart Fan Mode Configuration	113
5.3.6 Serial Port Console Redirection	115
5.3.6.1 Console Redirection Settings.....	116
5.3.7 NVMe Configuration.....	119
5.4 CHIPSET	120
5.4.1 System Agent (SA) Configuration	121
5.4.1.1 Memory Configuration	122
5.4.1.2 Graphics Configuration.....	123
5.4.1.3 VMD Configuration.....	126
5.4.1.4 PEG Port Configuration.....	127
5.4.2 PCH-IO Configuration	128
5.4.2.1 PCI Express Configuration	131

5.4.2.1.1 PCIe Root Port Setting.....	131
5.4.2.2 SATA Configuration.....	133
5.4.2.3 HD Audio Configuration.....	134
5.5 SECURITY.....	135
5.6 BOOT.....	137
5.6.1 Boot Configuration	137
5.6.2 Boot Option Priorities.....	138
5.7 SAVE & EXIT	139
A REGULATORY COMPLIANCE	141
B PRODUCT DISPOSAL	143
C BIOS OPTIONS	145
D WATCHDOG TIMER	149
E ERROR BEEP CODE.....	152
E.1 PEI BEEP CODES.....	153
E.2 DXE BEEP CODES	153
F HAZARDOUS MATERIALS DISCLOSURE.....	154
F.1 RoHS II DIRECTIVE (2015/863/EU)	155
F.2 CHINA RoHS.....	156

List of Figures

Figure 1-1: IMBA-R680	16
Figure 1-2: Connectors	18
Figure 1-3: IMBA-R680 Dimensions (mm)	19
Figure 1-4: Data Flow Diagram	20
Figure 3-1: Peripheral Interface Connectors	29
Figure 3-2: CPU 12V Power Connector Location	32
Figure 3-3: ATX Power Connector Location	33
Figure 3-4: Battery Connector Location	35
Figure 3-5: Chassis Intrusion Connector Location	36
Figure 3-6: AT/ATX Power Mode Switch Locations	37
Figure 3-7: Digital I/O Connector Location	38
Figure 3-8: EC Debug Connector Location	39
Figure 3-9: Clear CMOS Jumper Location	40
Figure 3-10: Flash Descriptor Security Override Jumper Location	41
Figure 3-11: CPU Fan Connector Location	42
Figure 3-12: System Fan Connector Locations	43
Figure 3-13: Audio Connector Location	44
Figure 3-14: Front Panel Connector Location	45
Figure 3-15: I ² C Connector Location	46
Figure 3-16: SMBus Connector Location	47
Figure 3-17: LAN LED Connector Locations	48
Figure 3-18: M.2 M-key Slot Location	49
Figure 3-19: PCI x1 Slot Locations	51
Figure 3-20: PCIe x4 Slot Locations	52
Figure 3-21: PCIe x16 Slot Locations	53
Figure 3-22: Power Button Location	54
Figure 3-23: DDR5 DIMM Sockets Location	55
Figure 3-24: SATA 6Gb/s Connector Locations	56
Figure 3-25: RS-232 Connector Location	57
Figure 3-26: Flash SPI ROM Connector Location	58
Figure 3-27: Flash EC ROM Connector Location	59

Figure 3-28: Internal USB 2.0 Connector Locations	60
Figure 3-29: Internal USB 3.2 Gen 1 Connector Location	61
Figure 3-30: External Peripheral Interface Connector	62
Figure 3-31: USB 3.2 and LAN Connector	62
Figure 3-32: USB 3.2 Connector.....	64
Figure 3-33: USB 3.2 Connector.....	65
Figure 3-34: HDMI Connector	66
Figure 3-35: DP++ Connector	67
Figure 4-1: SATA Drive Cable Connection.....	71
Figure 4-2: SATA Power Drive Connection.....	72
Figure 4-3: Disengage the CPU Socket Load Lever.....	75
Figure 4-4: Remove Protective Cover.....	75
Figure 4-5: Insert The Socket LGA1200 CPU.....	77
Figure 4-6: Close the Socket LGA1200.....	78
Figure 4-7: Cooling Kit Support Bracket	79
Figure 4-8: DIMM Installation.....	80
Figure 4-9: Inserting the M.2 Module into the Slot at an Angle.....	81
Figure 4-10: Securing the M.2 Module.....	82
Figure 4-11: Press the Retainer.....	82
Figure 4-12: Aligning the M.2 Module with the Retainer.....	83
Figure 4-13: Securing the M.2 Module.....	83
Figure 4-14: IEI Resource Download Center.....	84
Figure 5-1: BIOS Starting Menu	87

List of Tables

Table 1-1: IMBA-R680 Specifications	22
Table 2-1: Packing List.....	25
Table 2-2: Optional Items	27
Table 3-1: Peripheral Interface Connectors	31
Table 3-2: Rear Panel Connectors	31
Table 3-3: CPU 12V Power Connector Pinouts.....	32
Table 3-4: ATX Power Connector Pinouts.....	34
Table 3-5: Battery Connector Pinouts	35
Table 3-6: Chassis Intrusion Connector Pinouts	36
Table 3-7: AT/ATX Power Mode Switch Settings.....	37
Table 3-8: Digital I/O Connector Pinouts.....	38
Table 3-9: EC Debug Connector Pinouts	39
Table 3-10: Clear CMOS Jumper Pinouts.....	40
Table 3-11: Flash Descriptor Security Override Jumper Pinouts.....	41
Table 3-12: CPU Fan Connector Pinouts.....	42
Table 3-13: System Fan Connector Pinouts	43
Table 3-14: Audio Connector Pinouts	44
Table 3-15: Front Panel Connector Pinouts.....	45
Table 3-16: I ² C Connector Pinouts.....	46
Table 3-17: SMBus Connector Pinouts	47
Table 3-18: LAN1 LED Connector (JLAN_LED1) Pinouts.....	48
Table 3-19: LAN2 LED Connector (JLAN_LED 2) Pinouts.....	49
Table 3-20: M.2 M-key Connector Pinouts	51
Table 3-21: SATA 6Gb/s Connector Pinouts.....	56
Table 3-22: RS-232 Connector Pinouts	57
Table 3-23: Flash SPI ROM Connector Pinouts.....	58
Table 3-24: Flash EC ROM Connector Pinouts.....	59
Table 3-25: Internal USB 2.0 Connector Pinouts.....	60
Table 3-26: Internal USB 3.2 Gen 1 Connector Pinouts.....	61
Table 3-27: USB 3.2 Port Pinouts.....	63
Table 3-28: RJ45 Pinouts	63

Table 3-29: USB 3.2 Port Pinouts	64
Table 3-30: Dual RJ45 Pinouts	64
Table 3-31: USB 3.2 Port Pinouts	65
Table 3-32: HDMI Connector Pinouts	66
Table 3-33: DP++ Connector Pinouts	67
Table 3-34: External RS-232/422/485 Connector Pinouts	68
Table 3-35: DB-9 RS-232/422/485 Pinouts	68
Table 5-1: BIOS Navigation Keys	88
Table 5-2: BIOS On-screen Navigation Keys	89

BIOS Menus

BIOS Menu 1: Main (1/2).....	91
BIOS Menu 2: Main (2/2).....	91
BIOS Menu 3: Advanced	94
BIOS Menu 4: CPU Configuration (1/3).....	95
BIOS Menu 5: CPU Configuration (2/3).....	96
BIOS Menu 6: CPU Configuration (3/3).....	96
BIOS Menu 7: PCH-FW Configuration	100
BIOS Menu 8: RTC Wake Settings (1/2).....	101
BIOS Menu 9: RTC Wake Settings (2/2).....	102
BIOS Menu 10: F81866 Super IO Configuration	103
BIOS Menu 11: Serial Port 1 Configuration Menu	104
BIOS Menu 12: Serial Port 2 Configuration Menu	105
BIOS Menu 13: Serial Port 3 Configuration Menu	107
BIOS Menu 14: Serial Port 4 Configuration Menu	108
BIOS Menu 15: Serial Port 5 Configuration Menu	109
BIOS Menu 16: Serial Port 6 Configuration Menu	110
BIOS Menu 17: EC KB9068 H/W Monitor (1/2)	111
BIOS Menu 18: EC KB9068 H/W Monitor (2/2)	112
BIOS Menu 19: Smart Fan Mode Configuration	113
BIOS Menu 20: Serial Port Console Redirection (1/2).....	115
BIOS Menu 21: Serial Port Console Redirection (2/2).....	116
BIOS Menu 22: COM Console Redirection Settings	117
BIOS Menu 23: NVMe Configuration.....	119
BIOS Menu 24: Chipset	120
BIOS Menu 25: System Agent (SA) Configuration	121
BIOS Menu 26: Memory Configuration.....	122
BIOS Menu 27: Graphics Configuration	123
BIOS Menu 28: LCD Control	125
BIOS Menu 29: VMD Configuration.....	126
BIOS Menu 30: PEG Port Configuration.....	127
BIOS Menu 31: PCH-IO Configuration (1/2)	128

BIOS Menu 32: PCH-IO Configuration (2/2)	129
BIOS Menu 33: PCI Express Configuration	131
BIOS Menu 34: PCIe Slot Configuration Submenu	132
BIOS Menu 35: SATA Configuration	133
BIOS Menu 36: HD Audio Configuration	134
BIOS Menu 37: Security (1/2).....	135
BIOS Menu 38: Security (2/2).....	136
BIOS Menu 39: Boot	137
BIOS Menu 40: Save & Exit.....	139

Chapter

1

Introduction

1.1 Introduction

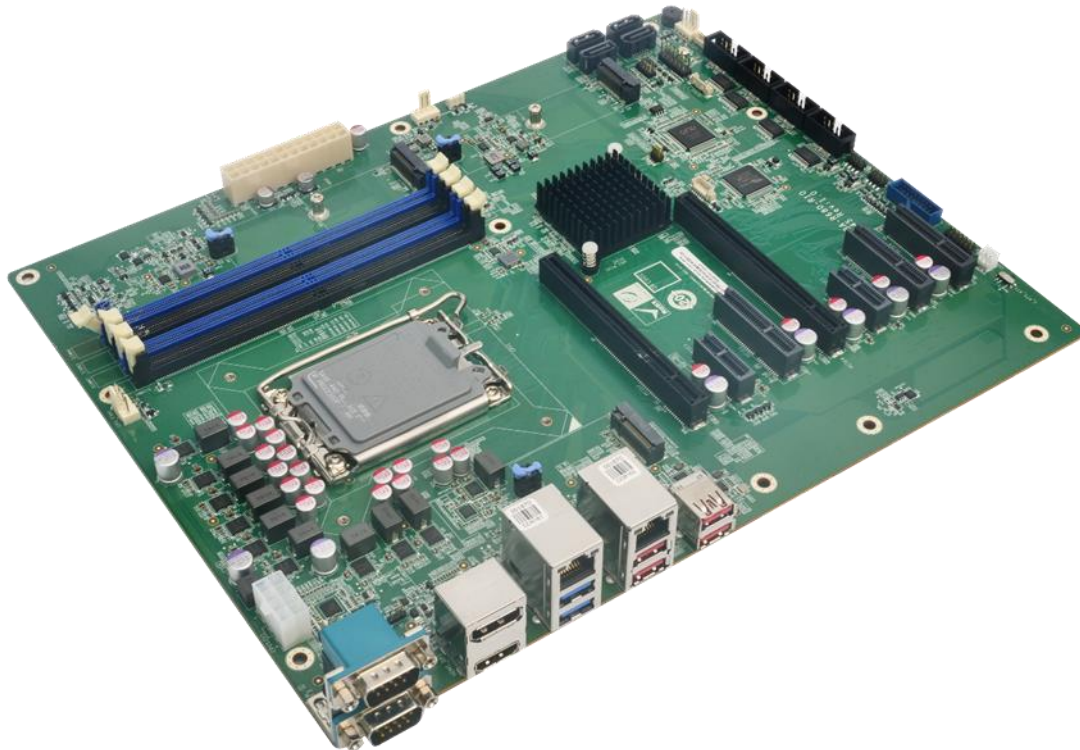


Figure 1-1: IMBA-R680

The IMBA-R680 is an ATX motherboard. It accepts a Socket LGA1700 Intel® 12/13th Core® i9/i7/i5/i3, Pentium® or Celeron® processor and supports four 288-pin dual-channel unbuffered DDR5 SDRAM DIMM modules up to 128 GB. The Intel® R680E chipset supports four SATA 6Gb/s drives. Moreover, the IMBA-R680 includes DP, HDMI and iDPM for triple independent display.

The IMBA-R680 provides two 2.5GbE interfaces through the Intel® I225V controllers. Expansion and I/O include two PCIe slots, two PCIe x16 slot, three PCIe x4 slots, two M.2 slots, six COM ports, two USB 3.2 Gen 1, four USB 3.2 Gen 2, four USB 3.2 via internal pin headers, two USB 3.2 Gen 1 via internal box header.

IMBA-R680 ATX Motherboard

1.2 Features

Some of the IMBA-R680 motherboard features are listed below:

- ATX form factor
- LGA1700 12th/13th Generation Intel® Core® i9/i7/i5/i3, Celeron® and Pentium® processors (up to 125W TDP) Intel® R680E chipset
- Four 288-pin dual-channel unbuffered DDR5 (up to 4400 MHz) SDRAM DIMM slots supporting up to 128 GB memory (ECC & non-ECC supported)
- Two Intel® I225V 2.5GbE controller
- Triple independent display by DP, HDMI and iDPM eDP/ LVDS/ VGA module
- Four SATA 6Gb/s connectors support RAID 0, 1, 5, 10
- Two USB 3.2 Gen 1 ports and four USB 3.2 Gen 2 ports
- One M.2 M-key slot for SSD; one M.2 M-key slot with PCIe x4 signal
- 2 x PCIe Gen5 x16 slot with x8 signal
- 3 x PCIe Gen4 x4 open-end slot
- 2 x PCIe Gen3 x1 slot
- Six serial ports (two on panel, the others via internal pin header)
- TPM 2.0 security function supported by PTT
- RoHS compliant

1.3 Connectors

The connectors on the IMBA-R680 are shown in the figure below.

Four 288-pin 4400 MHz Dual-channel
DDR5 SDRAM Unbuffered DIMMs

2 x M.2 M Key (2242/2280)

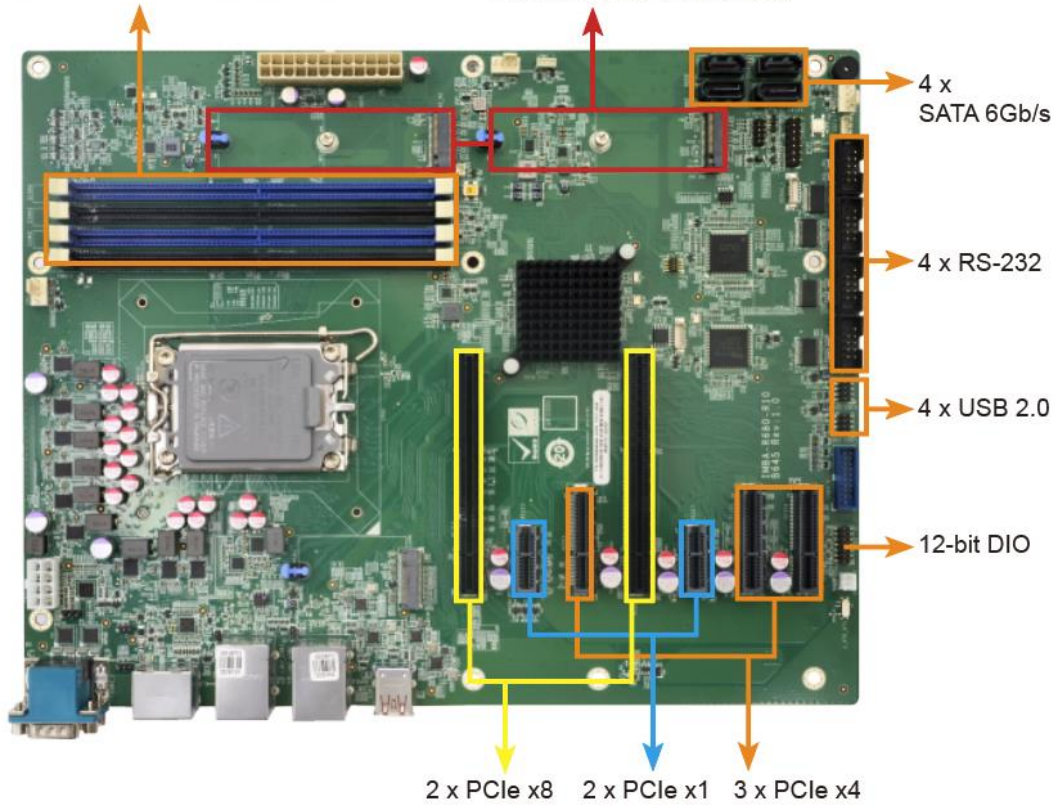


Figure 1-2: Connectors

IMBA-R680 ATX Motherboard

1.4 Dimensions

The main dimensions of the IMBA-R680 are shown in the diagram below.

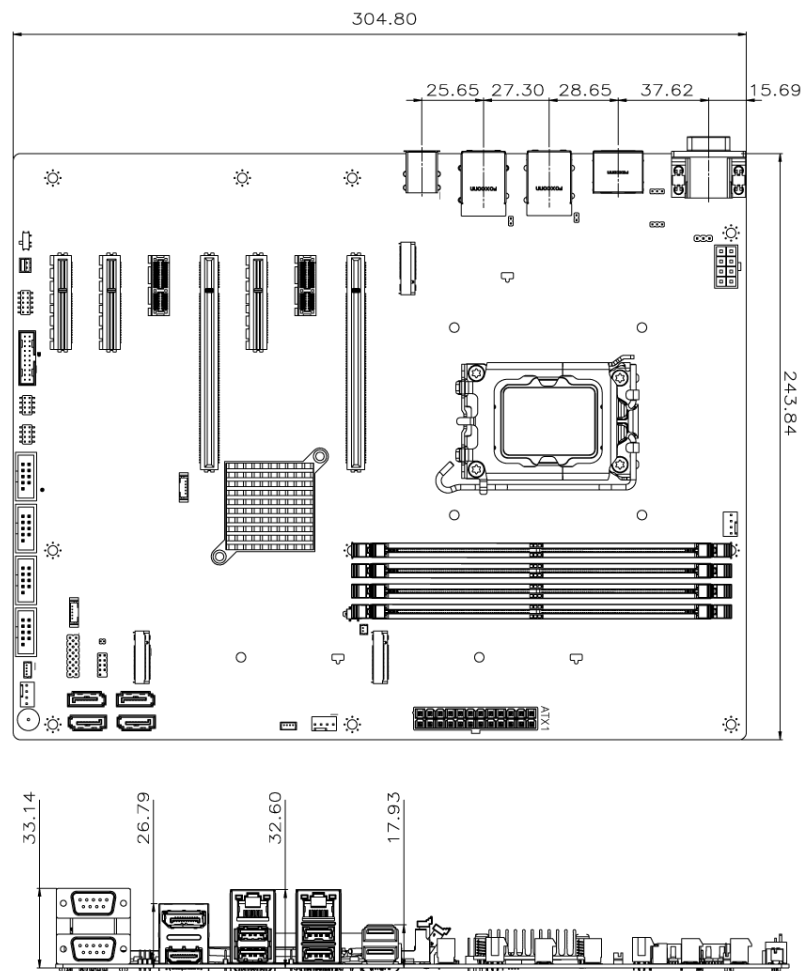


Figure 1-3: IMBA-R680 Dimensions (mm)

1.5 Data Flow

Figure 1-4 shows the data flow between the system chipset, the CPU and other components installed on the motherboard.

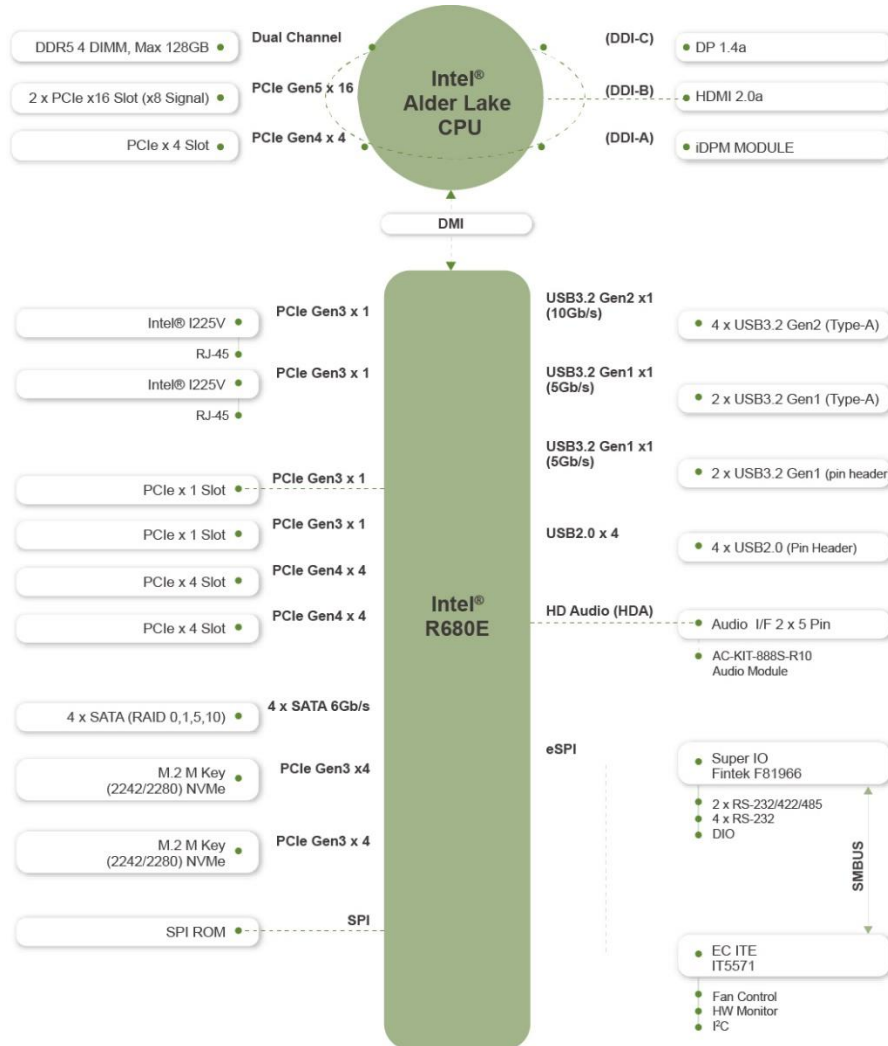


Figure 1-4: Data Flow Diagram

IMBA-R680 ATX Motherboard

1.6 Technical Specifications

The IMBA-R680 technical specifications are listed below.

Specification/Model	IMBA-R680
Form Factor	ATX
CPU Supported	12th/13th Generation Intel® Core® i9/i7/i5/i3, Pentium® and Celeron® processor
Chipset	Intel® R680E
Memory	Four 288-pin dual-channel unbuffered DDR5 (up to 4400 MHz) SDRAM DIMM slots supporting up to 128 GB memory (ECC & non-ECC supported)
Graphics Engine	New Intel® Xe Graphics architecture with SRIOV, Genlock
Display Output	Triple independent display 1 x DP (up to 4096 x 2304 @ 60Hz) 1 x HDMI (up to 3840 x 2160 @ 30Hz) 1 x iEi iDPM eDP/ LVDS/ VGA module
Ethernet Controllers	LAN1: Intel® I225V 2.5GbE controller LAN2: Intel® I225V 2.5GbE controller
Audio	Realtek ALC888S HD Audio codec supports 7.1-channel
BIOS	AMI UEFI BIOS
Watchdog Timer	Software programmable supports 1~255 sec. system reset
Expansions	2 x PCIe Gen5 x16 slot with x8 signal 3 x PCIe Gen4 x4 open-end slot 2 x PCIe Gen3 x1 slot 1 x M.2 M key (2242/2280, PCIe x4), NVMe supported 1 x M.2 M key (2242/2280, PCIe x2 for SSD), NVMe supported
I/O Interface Connectors	
Audio Connectors	One internal audio connector (10-pin header)
Chassis Intrusion	One 2-pin header

Specification/Model	IMBA-R680
Digital I/O	12-bit digital I/O
Ethernet	Two RJ-45 GbE ports
Fan	1 x CPU fan connector (1x4 pin) 2 x System fan connector (1x4 pin)
Front Panel	One 7-pin header (power LED, HDD LED, speaker, power button, reset button)
I²C	One 4-pin wafer connector
LAN LED	Two 2-pin headers for LAN1 LED and LAN2 LED
Serial ATA	Four SATA 6Gb/s connectors (support RAID 0, 1, 5, 10)
Serial Ports	2x RS-232/422/485 via DB-9 (RS-485 support AFC) 4x RS-232 via internal box header
SMBus	One 4-pin wafer connector
USB Ports	4 x USB 3.2 Gen 2 (Type-A) (10Gb/s) on rear panel 2 x USB 3.2 Gen 1 (Type-A) (5Gb/s) on rear panel 4 x USB 2.0 ports via internal pin header 2 x USB 3.2 Gen 1 (5Gb/s) ports via internal box header
Environmental and Power Specifications	
Power Supply	AT/ATX power supply
Power Consumption	3.3V@0.89A, 5V@10.05A, 12V@6.05A, 5VSB@0.64A (Intel® Core® i7-12700E CPU with four 16 GB 4800 MHz DDR5 memory, EuP mode enabled)
Operating Temperature	0°C ~ 60°C
Storage Temperature	-30°C ~ 70°C
Operating Humidity	5% ~ 95% (non-condensing)
Physical Specifications	
Dimensions	244 mm x 305 mm
Weight (GW/NW)	1200g / 700g

Table 1-1: IMBA-R680 Specifications

Chapter

2

Packing List

2.1 Anti-static Precautions



WARNING!

Static electricity can destroy certain electronics. Make sure to follow the ESD precautions to prevent damage to the product, and injury to the user.

Make sure to adhere to the following guidelines:

- **Wear an anti-static wristband:** Wearing an anti-static wristband can prevent electrostatic discharge.
- **Self-grounding:** Touch a grounded conductor every few minutes to discharge any excess static buildup.
- **Use an anti-static pad:** When configuring any circuit board, place it on an anti-static mat.
- **Only handle the edges of the PCB:** Don't touch the surface of the motherboard. Hold the motherboard by the edges when handling.

2.2 Unpacking Precautions

When the IMBA-R680 is unpacked, please do the following:

- Follow the anti-static guidelines above.
- Make sure the packing box is facing upwards when opening.
- Make sure all the packing list items are present.

IMBA-R680 ATX Motherboard

2.3 Packing List



NOTE:

If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the IMBA-R680 was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The IMBA-R680 is shipped with the following components:












Quantity	Item and Part Number	Image
1	IMBA-R680 single board computer	
2	SATA cable	
1	I/O shielding	
1	Quick installation guide	

Table 2-1: Packing List

2.4 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
Dual-port USB cable with bracket, 300mm (P/N: CB-USB02A-RS)	
USB 3.0/3.2 cable with bracket, 450 mm (P/N: 19800-010500-200-RS)	
SATA power cable (P/N: 32102-000100-200-RS)	
RS-232 cable, 230mm · P=2.54 (P/N: 32205-000702-100-RS)	
eDP to eDP converter board (for iEi iDPM connector) (P/N: iDPM-eDP-R10)	
eDP to LVDS converter board (for iEi iDPM connector) (P/N: iDPM-LVDS-R10)	
eDP to VGA converter board (for iEi iDPM connector) (P/N: iDPM-VGA-R10)	

IMBA-R680 ATX Motherboard



Item and Part Number	Image
Cooler module (P/N: 19100-000326-00-RS)	
Cooler module (P/N: 19100-000323-00-RS)	

Table 2-2: Optional Items

Chapter

3

Connectors

IMBA-R680 ATX Motherboard

3.1 Peripheral Interface Connectors

This chapter details all the peripheral interface connectors.

3.1.1 IMBA-R680 Layout

The figures below show all the peripheral interface connectors.

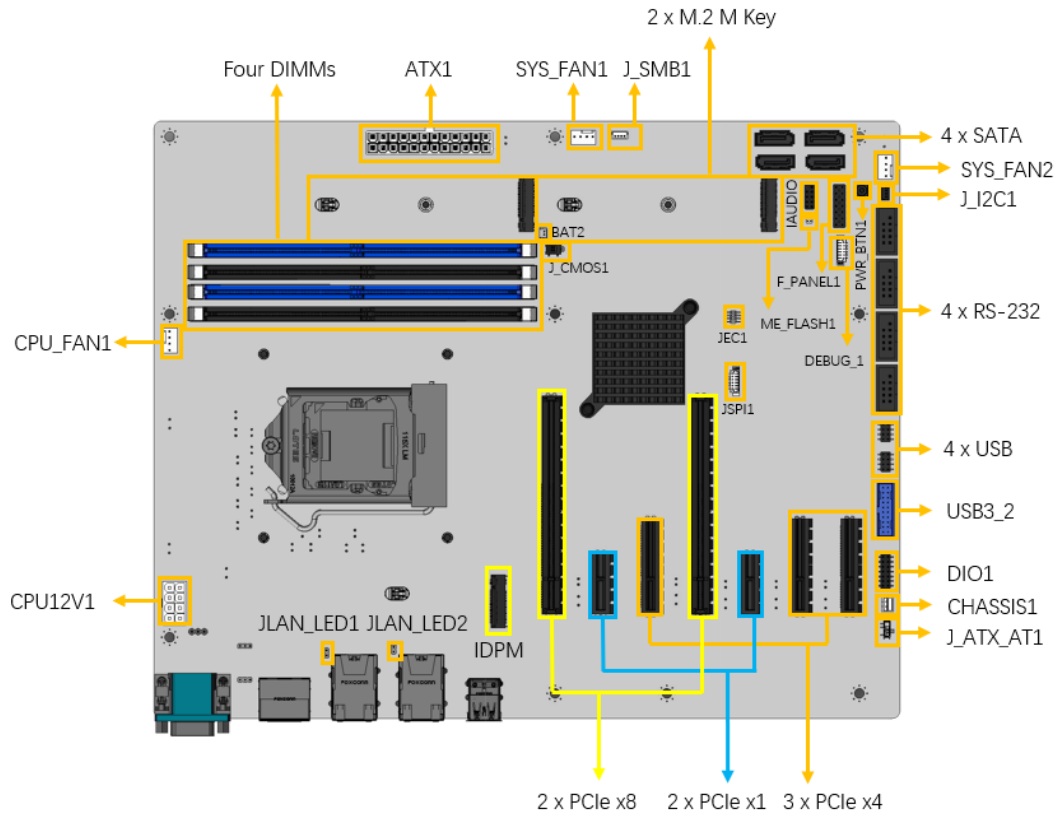


Figure 3-1: Peripheral Interface Connectors

3.1.2 Peripheral Interface Connectors

The table below lists all the connectors on the board.

Connector	Type	Label
AT/ATX power mode setting	3-pin switch	J_ATX_AT1
Clear CMOS jumper	Button	J_CMOS1
Flash descriptor security override jumper	2-pin header	ME_FLASH1
Audio connector for iEi AC-KIT-888S kit	10-pin header	IAUDIO
ATX power connector	24-pin connector	ATX1
ATX CPU 12V power connector	8-pin Molex power connector	CPU12V1
RTC battery connector	2-pin header	BAT2
Chassis intrusion connector	2-pin header	CHASSIS1
DDR5 DIMM slots	288-pin socket	DIMM1, DIMM2, DIMM3, DIMM4
Digital I/O connector	14-pin header	DIO1
EC debug connector	6-pin header	DEBUG_1
Fan connectors	4-pin wafer	CPU_FAN1, SYS_FAN1, SYS_FAN2
Front panel connector	14-pin header	F_PANEL1
I ² C connector	4-pin wafer	J_I2C1
LAN1 link LED connector	2-pin header	JLAN_LED1
LAN2 link LED connector	2-pin header	JLAN_LED2
RS-232 serial port connectors	10-pin box header	COM3, COM4, COM5, COM6
SATA 6Gb/s connectors	8-pin SATA connector	SATA1, SATA2, SATA3, SATA4
SMBus connector	4-pin wafer	J_SMB1
Flash SPI ROM connector	6-pin header	JSPI1

IMBA-R680 ATX Motherboard

Connector	Type	Label
Flash EC ROM connector	8-pin header	JEC1
Internal USB 2.0 connectors	8-pin header	USB2_CN1, USB2_CN2
Internal USB 3.2 Gen 1 connector	20-pin box header	USB3_2
M.2 M key slots	M-key slot	M2_M1, M2_M2
iEi iDPM slot	M-key slot	IDPM
PCIe x1 slots	PCIe x1 slot	PCIE3, PCIE7
PCIe x4 slots	PCIe x4 slot	PCIE1, PCIE5, PCIE6
PCIe x16 slots	PCIe x16 slot	PCIE2, PCIE4
Onboard power button	Push button	PWR_BTN1

Table 3-1: Peripheral Interface Connectors

3.1.3 External Interface Panel Connectors

The table below lists the connectors on the external I/O panel.

Connector	Type	Label
External dual RS-232/422/485 connector	Dual DB-9	COM1_2
External HDMI and DP combo connector	HDMI, DisplayPort	HDMI_DP1
External 2.5GbE RJ-45 and dual USB 3.2 Gen 1 combo connector	USB 3.2 RJ45	LAN1_USB1
External 2.5GbE RJ-45 and dual USB 3.2 Gen 2 combo connector	USB 3.2 RJ45	LAN2_USB2
External dual USB 3.2 Gen 2 connector	USB 3.2	USB3_1

Table 3-2: Rear Panel Connectors

3.2 Internal Peripheral Connectors

The section describes all of the connectors on the IMBA-R680.

3.2.1 CPU 12V Power Connector

- CN Label:** CPU12V1
- CN Type:** 8-pin Molex power connector, p=4.2mm
- CN Location:** See **Figure 3-2**
- CN Pinouts:** See **Table 3-3**

This connector provides power to the CPU.

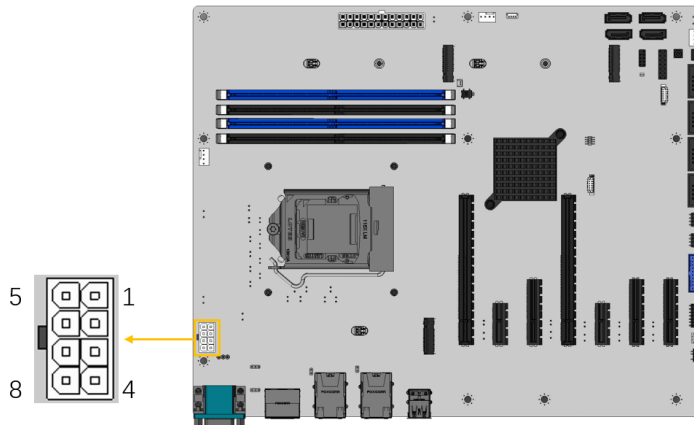


Figure 3-2: CPU 12V Power Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	5	+12V
2	GND	6	+12V
3	GND	7	+12V
4	GND	8	+12V

Table 3-3: CPU 12V Power Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.2 ATX Power Connector

- CN Label:** ATX1
- CN Type:** 24-pin connector, p=4.2 mm
- CN Location:** See Figure 3-3
- CN Pinouts:** See Table 3-4

The ATX power connector connects to an ATX power supply.

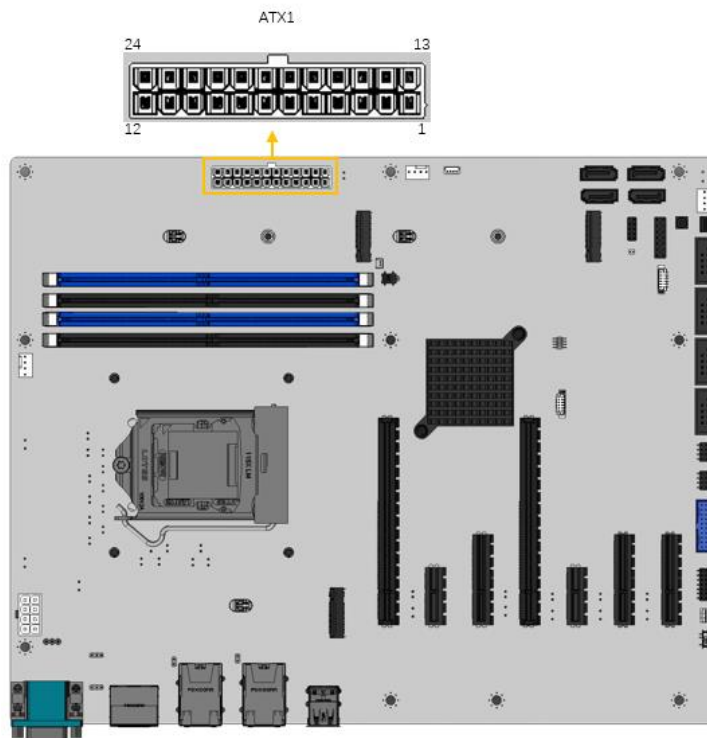


Figure 3-3: ATX Power Connector Location

Pin	Description	Pin	Description
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PS_ON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND

Pin	Description	Pin	Description
8	Power good	20	-5V
9	5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

Table 3-4: ATX Power Connector Pinouts

3.2.3 Battery Connector


CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.


NOTE:

It is recommended to attach the RTC battery onto the system chassis in which the IMBA-R680 is installed.

- CN Label:** **BAT2**
- CN Type:** 2-pin header
- CN Location:** See **Figure 3-4**
- CN Pinouts:** See **Table 3-5**

A system battery is placed in the battery holder. The battery provides power to the system clock to retain the time when power is turned off.

IMBA-R680 ATX Motherboard

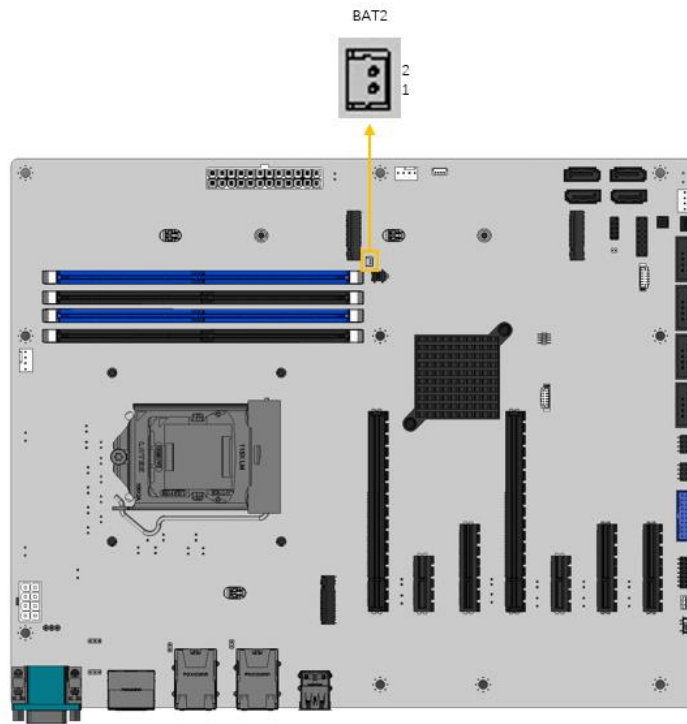


Figure 3-4: Battery Connector Location

Pin	Description	Pin	Description
1	VBATT	2	GND

Table 3-5: Battery Connector Pinouts

3.2.4 Chassis Intrusion Connector

- CN Label:** CHASSIS1
- CN Type:** 2-pin header, p=2.54 mm
- CN Location:** See **Figure 3-5**
- CN Pinouts:** See **Table 3-6**

The chassis intrusion connector is for a chassis intrusion detection sensor or switch that detects if a chassis component is removed or replaced.

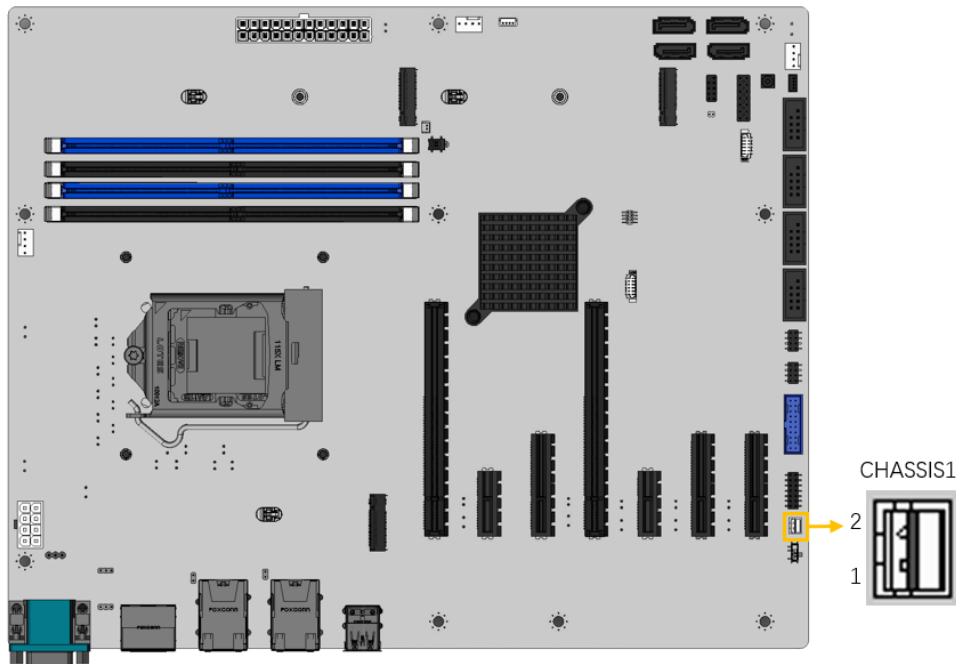


Figure 3-5: Chassis Intrusion Connector Location

Pin	Description	Pin	Description
1	CASEOPEN_N	2	GND

Table 3-6: Chassis Intrusion Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.5 AT/ATX Power Mode Setting

- CN Label:** J_ATX_AT1
- CN Type:** 3-pin switch
- CN Location:** See Figure 3-6
- CN Pinouts:** See Table 3-7

The AT/ATX power mode selection is made through the AT/ATX power mode switch.

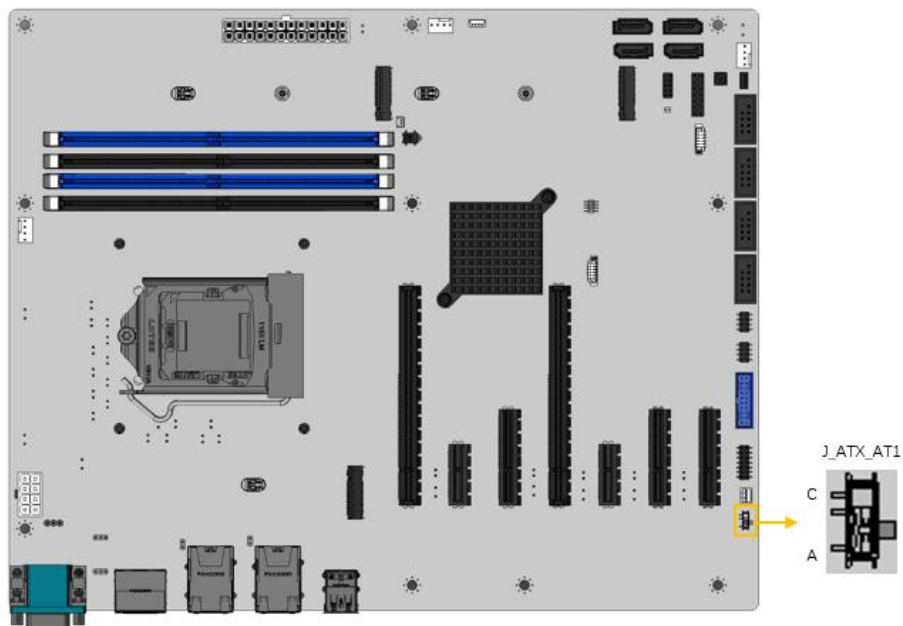


Figure 3-6: AT/ATX Power Mode Switch Locations

Pin	Description	Pin	Description
Short A - B	ATX Power Mode (default)	Short B - C	AT Power Mode

Table 3-7: AT/ATX Power Mode Switch Settings

3.2.6 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 14-pin header, p=2.0 mm
- CN Location:** See **Figure 3-7**
- CN Pinouts:** See **Table 3-8**

The Digital I/O connector provides programmable input and output for external devices.

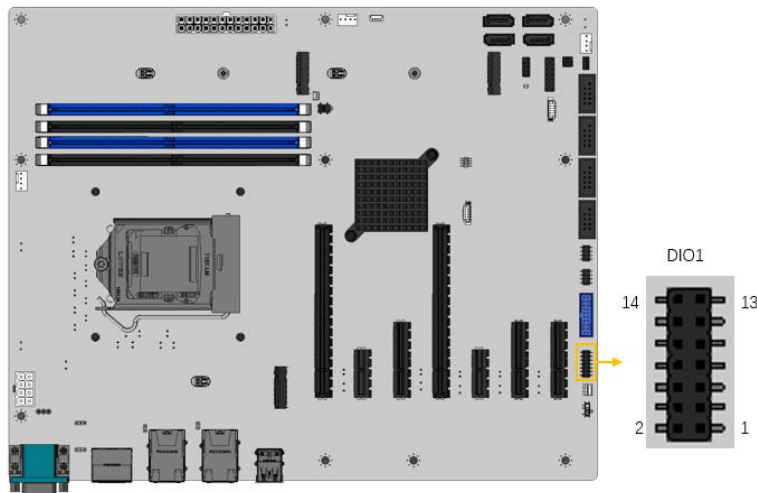


Figure 3-7: Digital I/O Connector Location

Pin	Description	Pin	Description
1	GND	2	VCC
3	Output 5	4	Output 4
5	Output 3	6	Output 2
7	Output 1	8	Output 0
9	Input 5	10	Input 4
11	Input 3	12	Input 2
13	Input 1	14	Input 0

Table 3-8: Digital I/O Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.7 EC Debug Connector

- CN Label:** DEBUG_1
- CN Type:** 6-pin header
- CN Location:** See Figure 3-8
- CN Pinouts:** See Table 3-9

The EC debug connector is used for EC debug.

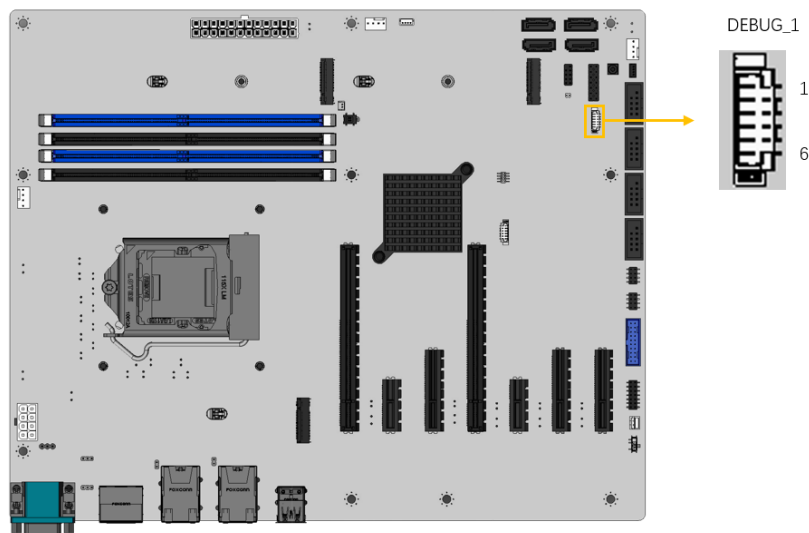


Figure 3-8: EC Debug Connector Location

Pin	Description	Pin	Description
1	NC	4	EDICLK
2	EDICS	5	EDIDI
3	EDIDO	6	GND

Table 3-9: EC Debug Connector Pinouts

3.2.8 Clear CMOS Button

- CN Label:** J_CMOS1
- CN Type:** Button
- CN Location:** See **Figure 3-9**
- CN Pinouts:** See **Table 3-10**

The J_CMOS1 is used to Clear CMOS Setup.

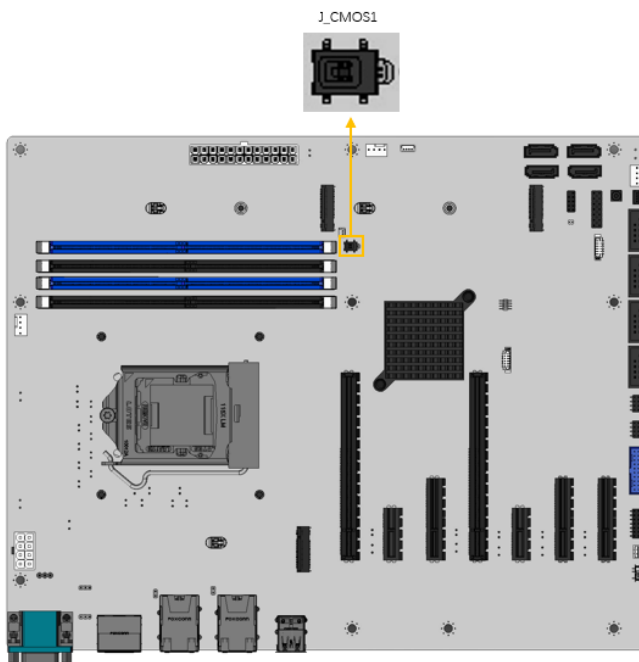


Figure 3-9: Clear CMOS Jumper Location

Pin	Description
NC	Keep CMOS Setup (Normal Operation)
Press button	Clear CMOS Setup

Table 3-10: Clear CMOS Jumper Pinouts

IMBA-R680 ATX Motherboard

3.2.9 Flash Descriptor Security Override Jumper

- CN Label:** ME_FLASH1
- CN Type:** 2-pin header, p=2.00 mm
- CN Location:** See Figure 3-10
- CN Pinouts:** See Figure 3-11

The ME_FLASH1 connector is used for Flash Descriptor security override jumper.

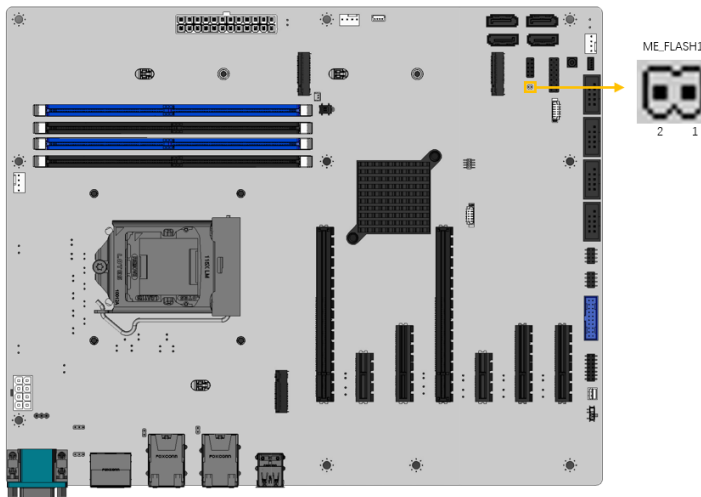


Figure 3-10: Flash Descriptor Security Override Jumper Location

Pin	Description
Short	Disabled (default)
Open	Enabled

Table 3-11: Flash Descriptor Security Override Jumper Pinouts

To update the ME firmware, please follow the steps below.

- Step 1:** Before turning on the system power, short the Flash Descriptor Security Override jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.

Step 3: Remove the metal clip on the Flash Descriptor Security Override jumper or return to its default setting.

Step 4: Restart the system. The system will reboot 2 ~ 3 times to complete the ME firmware update.

3.2.10 Fan Connector (CPU)

- CN Label:** CPU_FAN1
- CN Type:** 4-pin wafer, p=2.54 mm
- CN Location:** See **Figure 3-11**
- CN Pinouts:** See **Table 3-12**

The fan connector attaches to a CPU cooling fan.

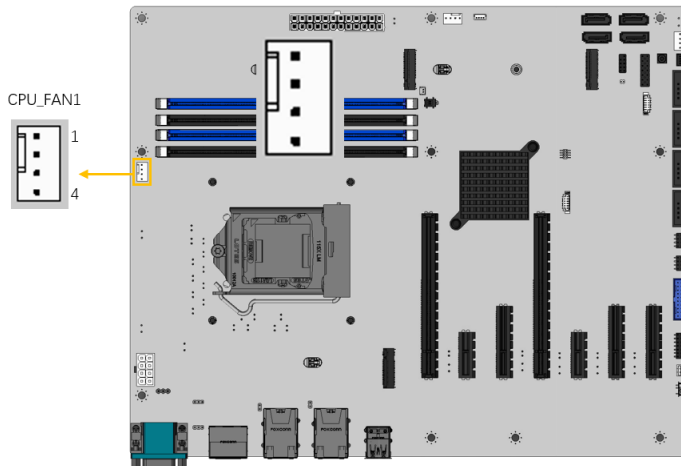


Figure 3-11: CPU Fan Connector Location

Pin	Description	Pin	Description
1	GND	2	+12V
3	FANIO	4	PWM (+5V)

Table 3-12: CPU Fan Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.11 Fan Connectors (System)

CN Label: SYS_FAN1, SYS_FAN2

CN Type: 4-pin wafer, p=2.54 mm

CN Location: See Figure 3-12

CN Pinouts: See Table 3-13

Each fan connector attaches to a system cooling fan. The fan connector provides smart fan function.

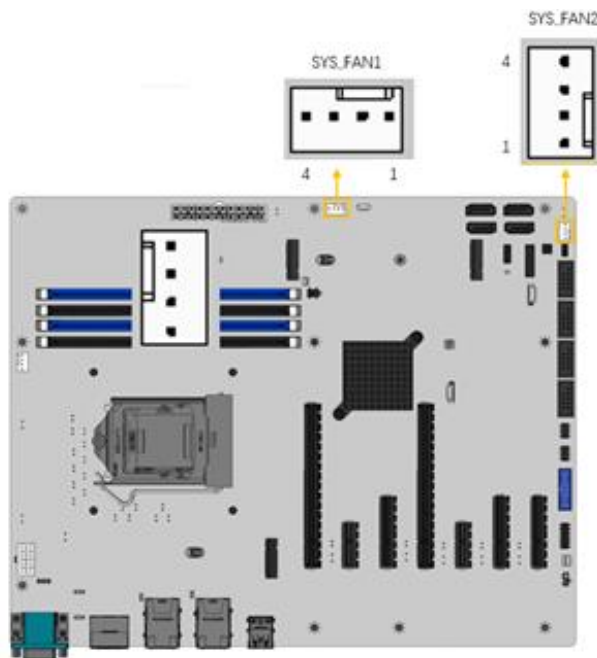


Figure 3-12: System Fan Connector Locations

Pin	Description	Pin	Description
1	GND	2	+12V
3	FANIO	4	PWM (+5V)

Table 3-13: System Fan Connector Pinouts

3.2.12 Audio Connector for iEi AC-KIT-888S kit

- CN Label:** IAUDIO
- CN Type:** 10-pin header, p=2.54 mm
- CN Location:** See Figure 3-13
- CN Pinouts:** See Table 3-14

This connector connects to speakers, a microphone and an audio input.

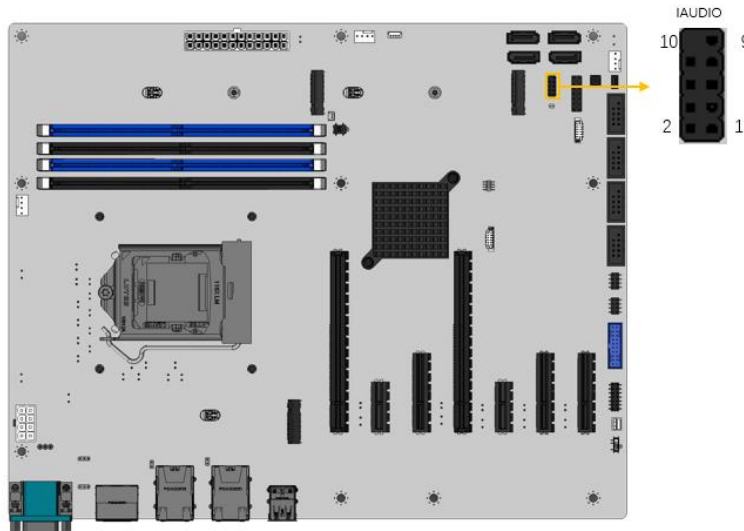


Figure 3-13: Audio Connector Location

Pin	Description	Pin	Description
1	HDA_SYNC_R	2	HDA_BCLK_R
3	HDA_SDO_R	4	HDA_PCBEPC
5	HDA_SDI_0_R	6	HDA_RST_R
7	+5V	8	GND
9	+12V	10	GND

Table 3-14: Audio Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.13 Front Panel Connector

- CN Label:** F_PANEL1
- CN Type:** 14-pin header, p=2.54 mm
- CN Location:** See Figure 3-14
- CN Pinouts:** See Table 3-15

The front panel connector connects to the indicator LEDs and buttons on the computer's front panel.

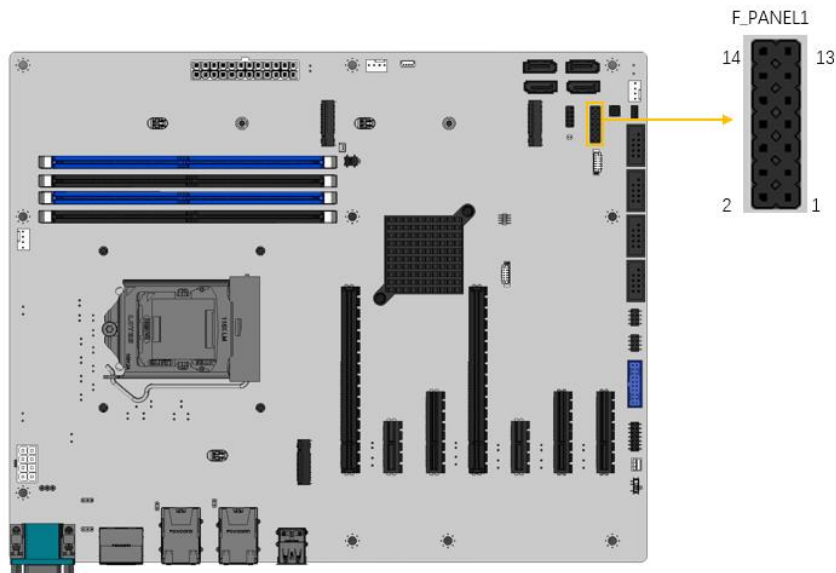


Figure 3-14: Front Panel Connector Location

Function	Pin	Description	Pin	Description	
PWR LED	1	PWR_LED+	2	SPKR+	SPKR
	3	NC	4	NC	
	5	PWR_LED-	6	NC	
PWR BTN	7	PWR_BTN+	8	SPKR-	
	9	PWR_BTN-	10	NC	
HDD LED	11	HDD_LED+	12	Reset+	RESET
	13	HDD_LED-	14	Reset-	

Table 3-15: Front Panel Connector Pinouts

3.2.14 I²C Connector

- CN Label:** J_I2C1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See Figure 3-15
- CN Pinouts:** See Table 3-16

The I²C connector is used to connect I²C-bus devices to the mainboard.

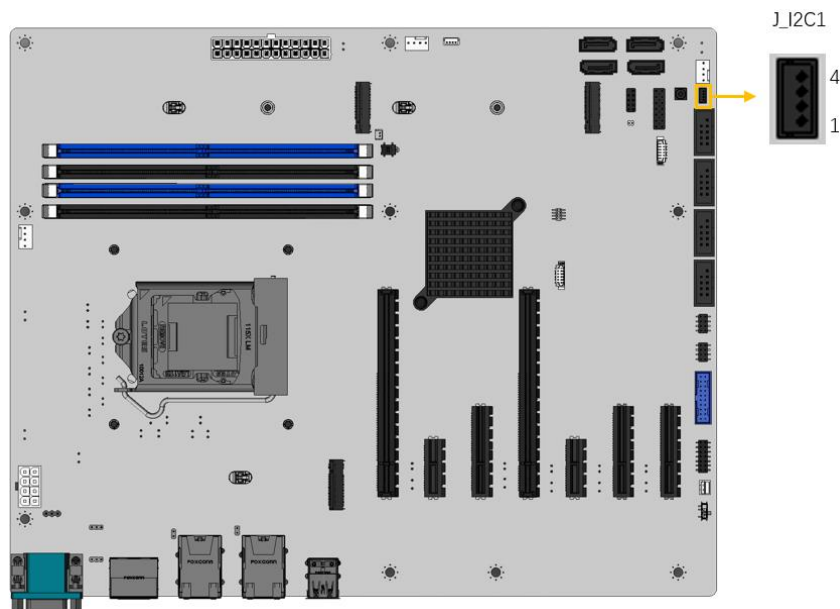


Figure 3-15: I²C Connector Location

Pin	Description	Pin	Description
1	GND	3	I2C_CLK
2	I2C_DATA	4	+5V

Table 3-16: I²C Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.15 SMBus Connector

- CN Label:** J_SMB1
- CN Type:** 4-pin wafer, p=1.25 mm
- CN Location:** See Figure 3-16
- CN Pinouts:** See Table 3-17

The SMBus (System Management Bus) connector provides low-speed system management communications.

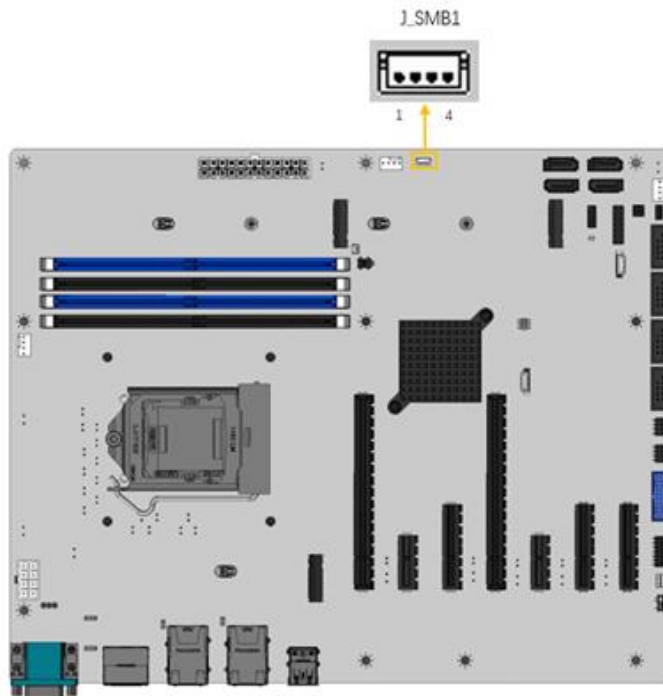


Figure 3-16: SMBus Connector Location

Pin	Description
1	GND
2	SMB_DATA
3	SMB_CLK
4	+5V

Table 3-17: SMBus Connector Pinouts

3.2.16 LAN Link LED connector

- CN Label:** JLAN_LED1, JLAN_LED2
- CN Type:** 2-pin header, p=2.00 mm
- CN Location:** See **Figure 3-17**
- CN Pinouts:** See **Table 3-18** and **Table 3-19**

The LAN LED connectors are used to connect to the LAN LED indicators on the chassis to indicate users the link activities of the two LAN ports.

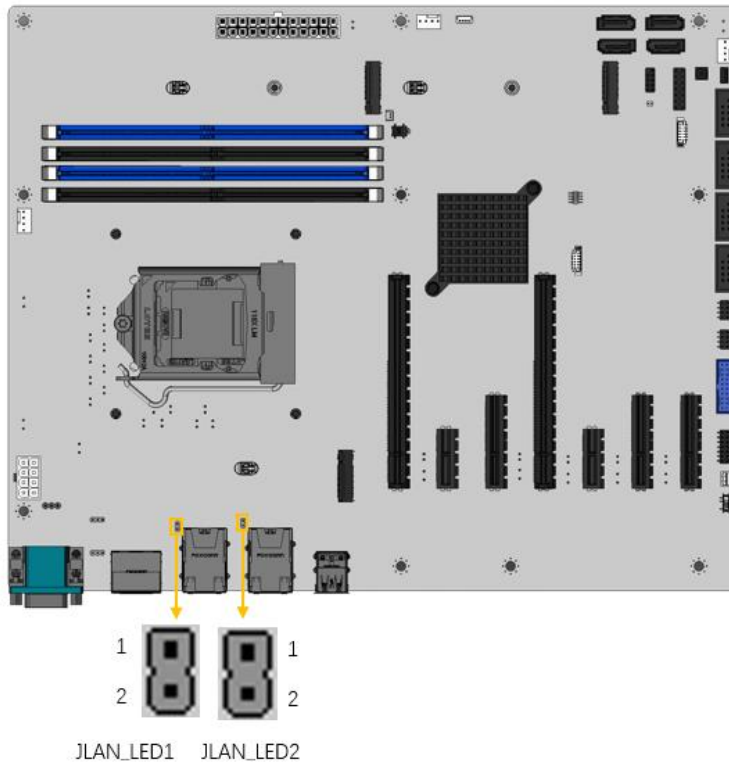


Figure 3-17: LAN LED Connector Locations

Pin	Description
1	+3.3V
2	I225_LINK_ACT_N

Table 3-18: LAN1 LED Connector (JLAN_LED1) Pinouts

IMBA-R680 ATX Motherboard

Pin	Description
1	+3.3V
2	I225_LINK_ACT_N

Table 3-19: LAN2 LED Connector (JLAN_LED 2) Pinouts

3.2.17 M.2 M-key Slot

CN Label: M2_M1, M2_M2

CN Type: M-key slot

CN Location: See Figure 3-18

CN Pinouts: See Table 3-20

The M.2 2242/2280 slot is keyed in the M position.

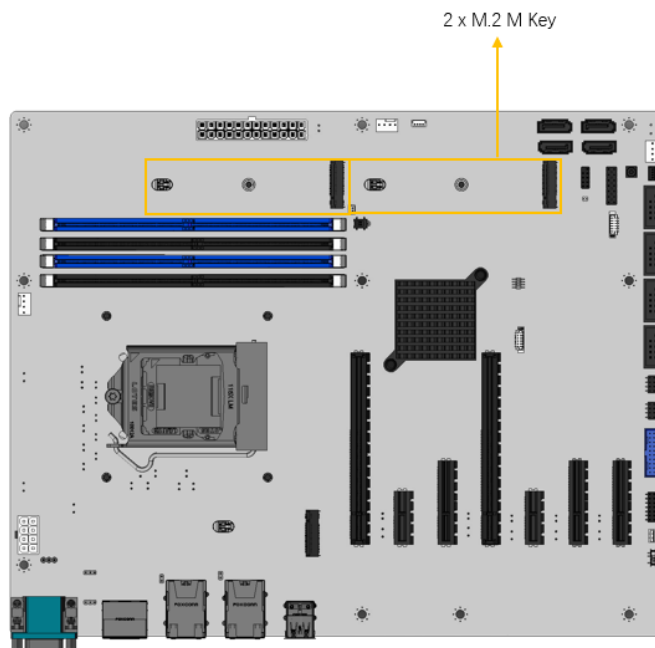


Figure 3-18: M.2 M-key Slot Location

Pin	Description	Pin	Description
1	GND	2	+3.3V
3	GND	4	+3.3V
5	PCIE_4_RX_DN	6	N/C
7	PCIE_4_RX_DP	8	N/C
9	GND	10	NGFF1_ACT_N
11	PCIE_TX_DN4	12	+3.3V
13	PCIE_TX_DP4	14	+3.3V
15	GND	16	+3.3V
17	PCIE_3_RX_DN	18	+3.3V
19	PCIE_3_RX_DP	20	N/C
21	GND	22	N/C
23	PCIE_TX_DN3	24	N/C
25	PCIE_TX_DP3	26	N/C
27	GND	28	N/C
29	PCIE_2_RX_DN	30	N/C
31	PCIE_2_RX_DP	32	N/C
33	GND	34	N/C
35	PCIE_TX_DN2	36	N/C
37	PCIE_TX_DP2	38	M_2_SSD_SLP
39	GND	40	N/C
41	PCIE_1_RX_DN	42	N/C
43	PCIE_1_RX_DP	44	N/C
45	GND	46	N/C
47	PCIE_TX_DN1	48	N/C
49	PCIE_TX_DP1	50	PLT_RST_N
51	GND	52	SRCCLKREQB_17_N
53	PCIE_CLK_DN17	54	NC
55	PCIE_CLK_DP17	56	N/C
57	GND	58	N/C
59	N/C	60	N/C
61	N/C	62	N/C
63	N/C	64	N/C

IMBA-R680 ATX Motherboard

Pin	Description	Pin	Description
65	N/C	66	N/C
67	N/C	68	NC
69	PEDET	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	GND		

Table 3-20: M.2 M-key Connector Pinouts

3.2.18 PCIe x1 Slots

- CN Label:** PCIE3, PCIE7
- CN Type:** PCIe x1 Slot
- CN Location:** See Figure 3-19

The PCI x1 slot enables a PCI x1 expansion module to be connected to the board.

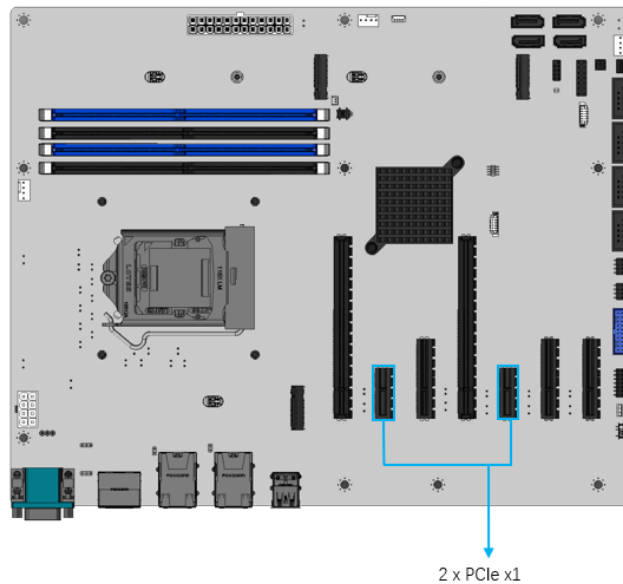


Figure 3-19: PCIe x1 Slot Locations

3.2.19 PCIe x4 Slots

CN Label: PCIE1, PCIE5, PCIE6

CN Type: PCIe x4 slot

CN Location: See **Figure 3-20**

The PCIe x4 expansion card slots are for PCIe x4 expansion cards.

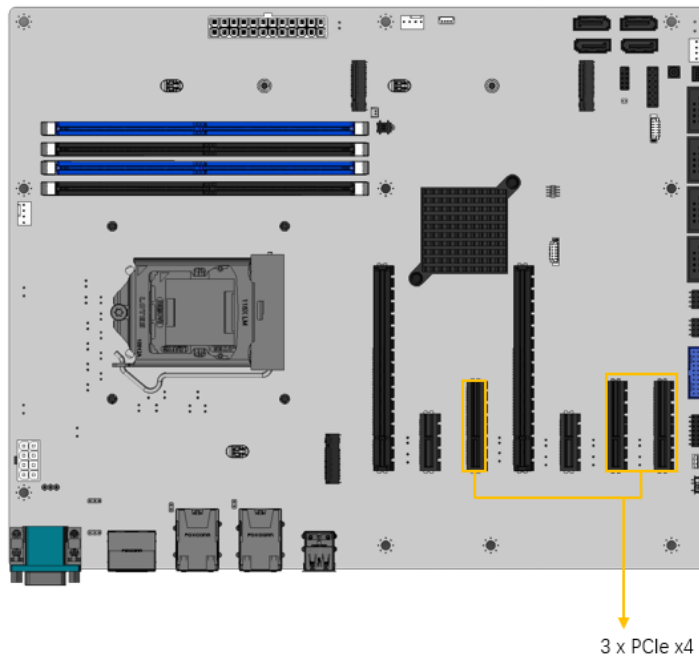


Figure 3-20: PCIe x4 Slot Locations

IMBA-R680 ATX Motherboard

3.2.20 PCIe x16 slots

- CN Label:** PCIE2, PCIE4
- CN Type:** PCIe x16 slot
- CN Location:** See **Figure 3-21**

The PCIe x16 expansion card slots are for PCIe x16 expansion cards.

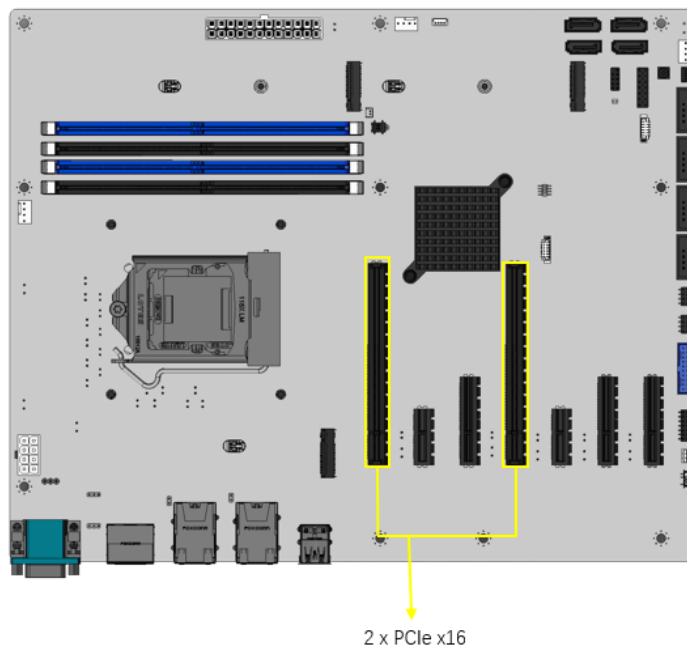


Figure 3-21: PCIe x16 Slot Locations

3.2.21 Onboard Power Button

- CN Label:** PWR_BTN1
- CN Type:** Push button
- CN Location:** See Figure 3-22

The on-board power button controls system power.

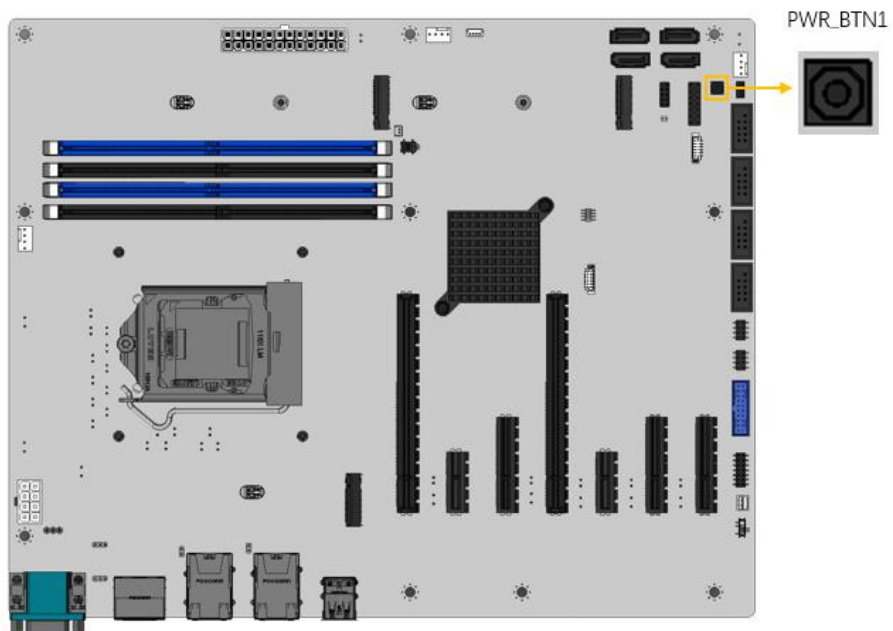


Figure 3-22: Power Button Location

IMBA-R680 ATX Motherboard

3.2.22 DDR5 DIMM sockets

CN Label: DIMM1, DIMM2, DIMM3, DIMM4

CN Type: 288-pin socket

CN Location: See Figure 3-23

The DIMM slots are for DDR5 DIMM memory modules

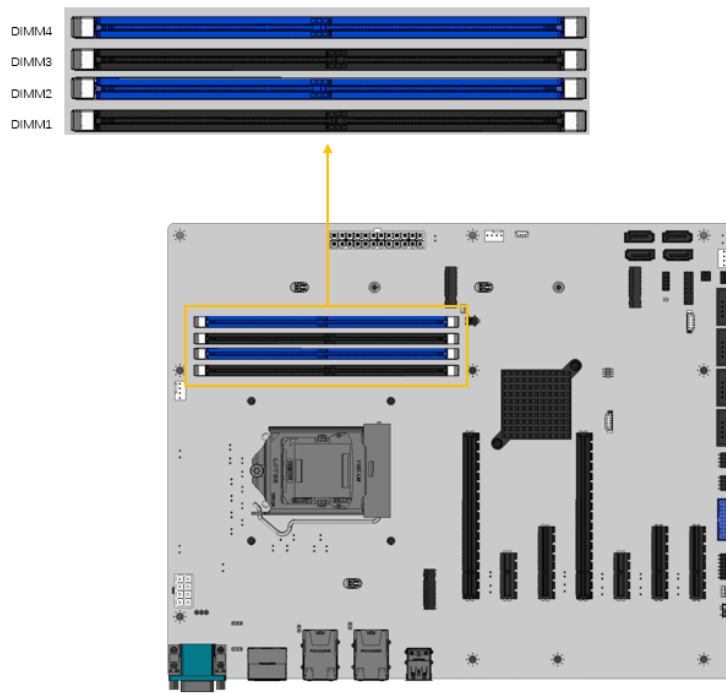


Figure 3-23: DDR5 DIMM Sockets Location

3.2.23 SATA 6Gb/s Connectors

- CN Label:** SATA1, SATA2, SATA3, SATA4
- CN Type:** 8-pin SATA connector
- CN Location:** See Figure 3-24
- CN Pinouts:** See Table 3-21

The SATA drive connectors can be connected to SATA drives and support up to 6Gb/s data transfer rate.

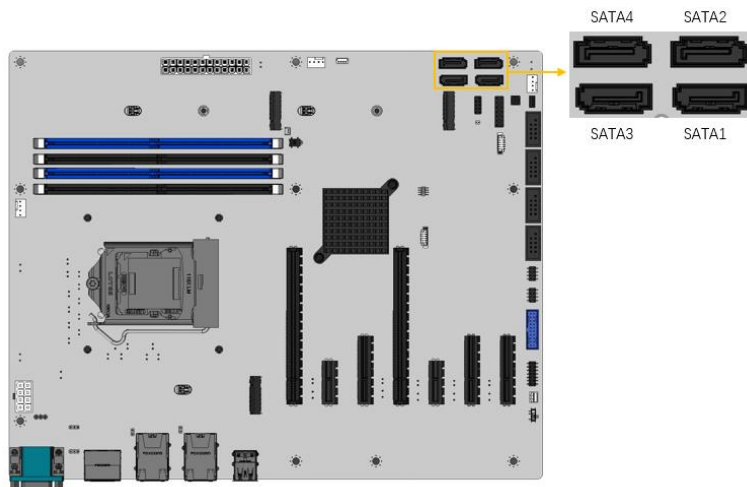


Figure 3-24: SATA 6Gb/s Connector Locations

Pin	Description
1	GND
2	SATA_TX+
3	SATA_TX-
4	GND
5	SATA_RX-
6	SATA_RX+
7	GND
8	N/C

Table 3-21: SATA 6Gb/s Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.24 RS-232 Serial Port Connectors

- CN Label:** COM3, COM4, COM5, COM6
- CN Type:** 10-pin box header, p=2.54 mm
- CN Location:** See Figure 3-25
- CN Pinouts:** See Table 3-22

Each of these connectors provides RS-232 communications.

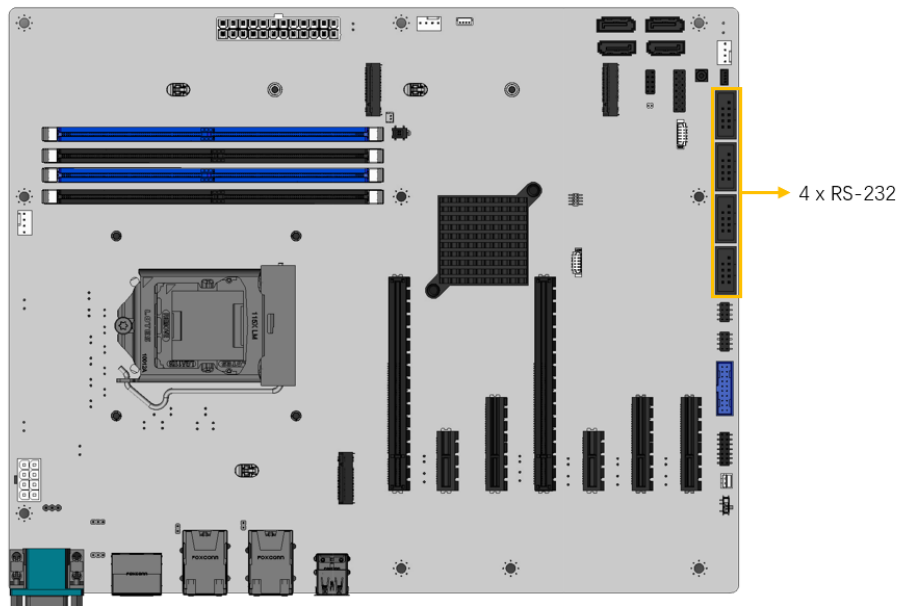


Figure 3-25: RS-232 Connector Location

Pin	Description	Pin	Description
1	DCD	2	DSR
3	RXD	4	RTS
5	TXD	6	CTS
7	DTR	8	RI
9	GND	10	GND

Table 3-22: RS-232 Connector Pinouts

3.2.25 Flash SPI ROM Connector

- CN Label:** JSPI1
- CN Type:** 6-pin header, p=1.25 mm
- CN Location:** See Figure 3-26
- CN Pinouts:** See Table 3-23

The Flash SPI ROM connector is used to flash the SPI ROM.

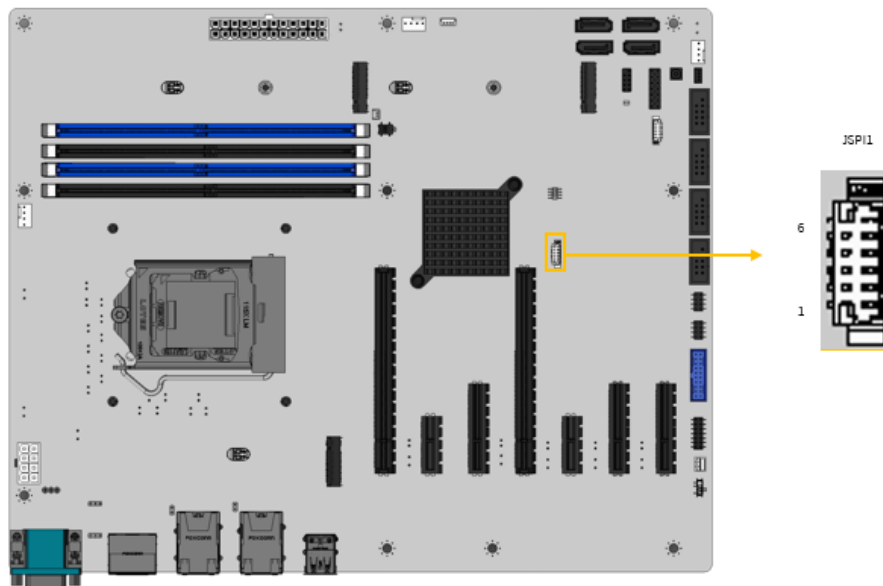


Figure 3-26: Flash SPI ROM Connector Location

Pin	Description	Pin	Description
1	+3.3V	4	SPI_CLK
2	SPI_CS#	5	SPI_SI
3	SPI_SO	6	GND

Table 3-23: Flash SPI ROM Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.26 Flash EC ROM Connector

- CN Label:** JEC1
- CN Type:** 8-pin header, p=1.27 mm
- CN Location:** See Figure 3-27
- CN Pinouts:** See Table 3-24

The Flash EC ROM connector is used to flash the EC ROM.

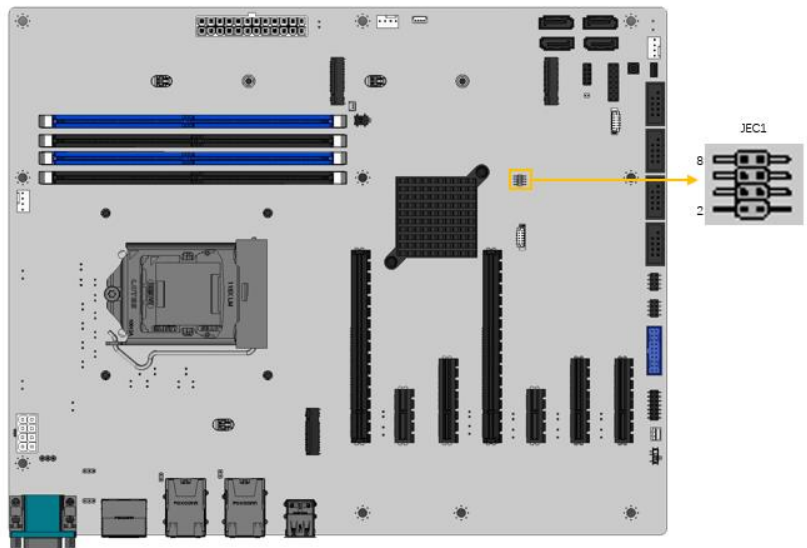


Figure 3-27: Flash EC ROM Connector Location

Pin	Description	Pin	Description
1	FSCE#	2	+3.3V
3	FMISO	4	NC
5	EC_DET_FLASH	6	FSCK
7	GND	8	FMOSI

Table 3-24: Flash EC ROM Connector Pinouts

3.2.27 Internal USB 2.0 Connectors

- CN Label:** USB2_CN1, USB2_CN2
- CN Type:** 8-pin header, p=2.54 mm
- CN Location:** See Figure 3-28
- CN Pinouts:** See Table 3-25

The Internal USB 2.0 connectors connect to USB 2.0 devices. Each pin header provides two USB 2.0 ports.

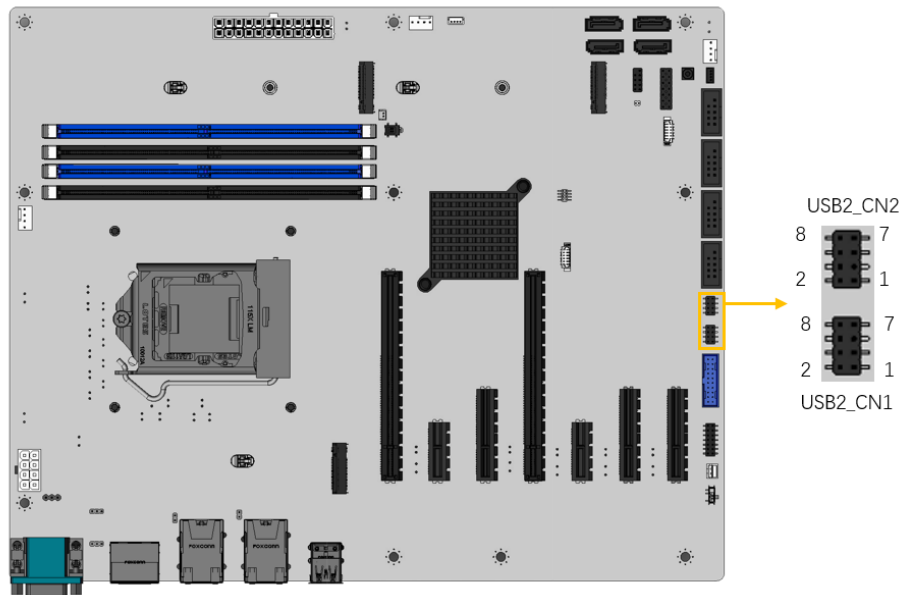


Figure 3-28: Internal USB 2.0 Connector Locations

Pin	Description	Pin	Description
1	VCC	2	GND
3	USB_DATA-	4	USB_DATA+
5	USB_DATA+	6	USB_DATA-
7	GND	8	VCC

Table 3-25: Internal USB 2.0 Connector Pinouts

IMBA-R680 ATX Motherboard

3.2.28 Internal USB 3.2 Gen 1 Connector

- CN Label:** USB3_2
- CN Type:** 20-pin box header, p=2.00 mm
- CN Location:** See Figure 3-29
- CN Pinouts:** See Table 3-26

The Internal USB 3.2 Gen 1 connector connects to USB 3.2 devices. This connector provides two USB 3.2 Gen 1 (5Gb/s) ports.

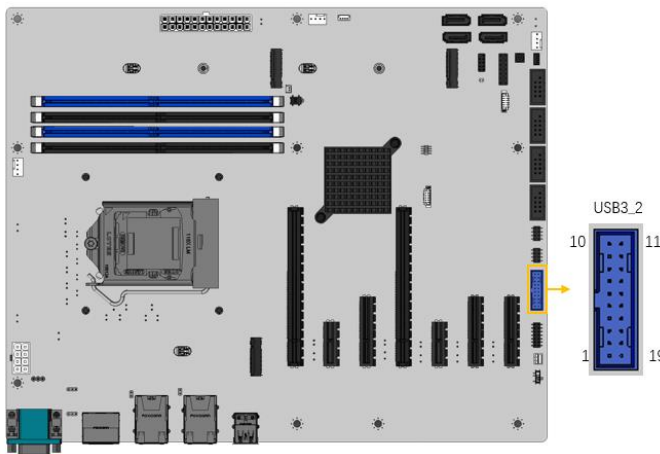


Figure 3-29: Internal USB 3.2 Gen 1 Connector Location

Pin	Description	Pin	Description
1	+5V	11	USB2_4_P
2	USB3_RX3_N	12	USB2_4_N
3	USB3_RX3_P	13	GND
4	GND	14	USB3_TX4_P
5	USB3_TX3_N	15	USB3_TX4_N
6	USB3_TX3_P	16	GND
7	GND	17	USB3_RX4_P
8	USB2_3_N	18	USB3_RX4_N
9	USB2_3_P	19	+5V
10	N/C		

Table 3-26: Internal USB 3.2 Gen 1 Connector Pinouts

3.3 External Peripheral Interface Connector Panel

The figure below shows the external peripheral interface connector (EPIC) panel. The EPIC panel consists of the following:

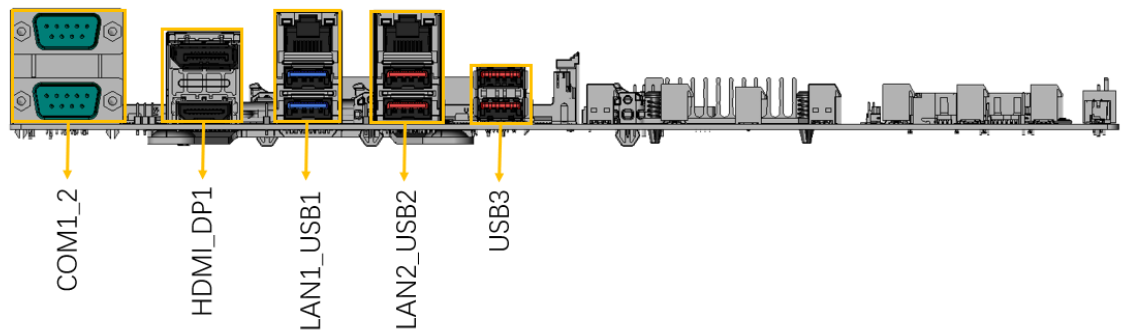


Figure 3-30: External Peripheral Interface Connector

3.3.1 External 2.5GbE RJ-45 and dual USB 3.2 Gen 1 combo connector

- CN Label:** LAN1_USB1
- CN Type:** USB 3.2 RJ45
- CN Location:** See Figure 3-31
- CN Pinouts:** See Table 3-27 and Table 3-28

The LAN1_USB1 connector includes dual USB 3.2 Gen 1 (5Gb/s) and one 2.5GbE RJ-45.



Figure 3-31: USB 3.2 and LAN Connector

IMBA-R680 ATX Motherboard

Pin	Description	Pin	Description
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 3-27: USB 3.2 Port Pinouts

The dual 2.5GbE RJ-45 connector.

PIN	DESCRIPTION	PIN	DESCRIPTION
20	LAN1_MDI0P	24	LAN1_MDI2P
21	LAN1_MDI0N	25	LAN1_MDI2N
22	LAN1_MDI1P	26	LAN1_MDI3P
23	LAN1_MDI1N	27	LAN1_MDI3N

Table 3-28: RJ45 Pinouts

3.3.2 External 2.5GbE RJ-45 and dual USB 3.2 Gen 2 combo connector

- CN Label:** LAN2_USB2
- CN Type:** USB 3.2 RJ45
- CN Location:** See **Figure 3-32**
- CN Pinouts:** See **Table 3-29** and **Table 3-30**

The LAN2_USB2 connector includes dual USB 3.2 Gen 2 (10Gb/s) and one 2.5GbE RJ-45.



Figure 3-32: USB 3.2 Connector

Pin	Description	Pin	Description
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 3-29: USB 3.2 Port Pinouts

The dual 2.5GbE RJ-45 connector.

PIN	DESCRIPTION	PIN	DESCRIPTION
20	LAN1_MDI0P	24	LAN1_MDI2P
21	LAN1_MDI0N	25	LAN1_MDI2N
22	LAN1_MDI1P	26	LAN1_MDI3P
23	LAN1_MDI1N	27	LAN1_MDI3N

Table 3-30: Dual RJ45 Pinouts

IMBA-R680 ATX Motherboard

3.3.3 External Dual USB 3.2 Gen 2 Connector

- CN Label:** USB3_1
- CN Type:** USB 3.2
- CN Location:** See Figure 3-33
- CN Pinouts:** See Table 3-31

The USB3_1 connector supports dual USB 3.2 Gen 2(10Gb/s).



Figure 3-33: USB 3.2 Connector

Pin	Description	Pin	Description
1	VCC	10	VCC
2	USB_DATA-	11	USB_DATA-
3	USB_DATA+	12	USB_DATA+
4	GND	13	GND
5	USB3_RX-	14	USB3_RX-
6	USB3_RX+	15	USB3_RX+
7	GND	16	GND
8	USB3_TX-	17	USB3_TX-
9	USB3_TX+	18	USB3_TX+

Table 3-31: USB 3.2 Port Pinouts

3.3.4 External HDMI And DP Combo Connector

- CN Label:** HDMI_DP1
- CN Type:** HDMI, DisplayPort
- CN Location:** See **Figure 3-34** and **Figure 3-35**
- CN Pinouts:** See **Table 3-32** and **Table 3-33**

The HDMI connector can connect to an HDMI device.

Pin	Description	Pin	Description
21	HDMI_DATA2	31	GND
22	GND	32	HDMI_CLK#
23	HDMI_DATA2#	33	N/C
24	HDMI_DATA1	34	N/C
25	GND	35	HDMI_SCL
26	HDMI_DATA1#	36	HDMI_SDA
27	HDMI_DATA0	37	GND
28	GND	38	+5V
29	HDMI_DATA0#	39	HDMI_HPD
30	HDMI_CLK		

Table 3-32: HDMI Connector Pinouts



Figure 3-34: HDMI Connector

The DP++ connector connects to a display device with DisplayPort interface.

Pin	Description	Pin	Description
1	LANE0P	11	GND
2	GND	12	LANE3N
3	LANE0N	13	AUX_CTRL_DET_C
4	LANE1P	14	GND
5	GND	15	AUXP

IMBA-R680 ATX Motherboard

Pin	Description	Pin	Description
6	LANE1N	16	GND
7	LANE2P	17	AUXN
8	GND	18	HPD
9	LANE2N	19	GND
10	LANE3P	20	+5V

Table 3-33: DP++ Connector Pinouts

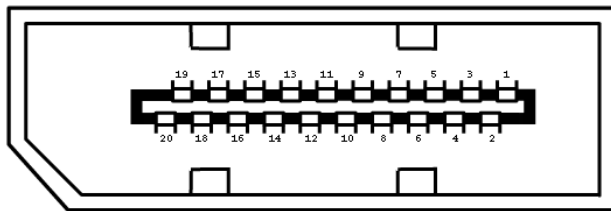


Figure 3-35: DP++ Connector

3.3.5 External RS-232 /422/485 Connector

- CN Label:** COM1_2
- CN Type:** Dual DB-9
- CN Pinouts:** See Table 3-34

The COM connector connects to a serial device that supports RS-232/422/485 communication.

	RS-232	RS-422	RS-485
1	DCD	TXD422-	TXD485-
2	RXD	TXD422+	TXD485+
3	TXD	RXD422+	--
4	DTR	RXD422-	--
5	GND	--	--
6	DSR	--	--
7	RTS	--	--
8	CTS	--	--
9	RI	--	--

Table 3-34: External RS-232/422/485 Connector Pinouts

Use the optional RS-232/422/485 cable to connect to a serial device. The pinouts of the DB-9 connector are listed below.

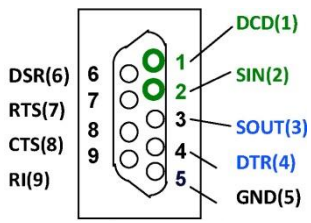
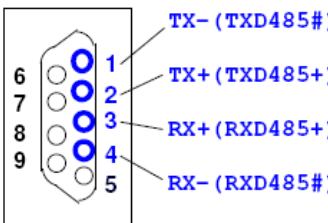
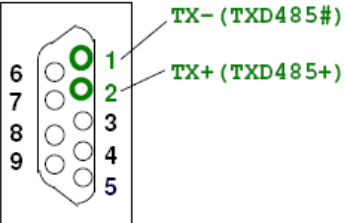
RS-232 Pinouts	RS-422 Pinouts	RS-485 Pinouts
 <p>D-SUB 9PIN MALE MODE 01</p>	 <p>D-SUB 9PIN MALE MODE 00</p>	 <p>D-SUB 9PIN MALE MODE 10/11</p>

Table 3-35: DB-9 RS-232/422/485 Pinouts

Chapter

4

Installation

4.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the IMBA-R680 may result in permanent damage to the IMBA-R680 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the IMBA-R680. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the IMBA-R680 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the IMBA-R680, place it on an anti-static pad. This reduces the possibility of ESD damaging the IMBA-R680.
- **Only handle the edges of the PCB:** When handling the PCB, hold the PCB by the edges.

4.2 Internal Peripheral Device Connections

This section outlines the installation of peripheral devices to the onboard connectors.

4.2.1 SATA Drive Connection

The IMBA-R680 is shipped with two SATA drive cables. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: Locate the connectors. The locations of the SATA drive connectors are shown in **Chapter 3**.

IMBA-R680 ATX Motherboard

Step 2: Insert the cable connector. Insert the cable connector into the on-board SATA drive connector until it clips into place. See **Figure 4-1**.

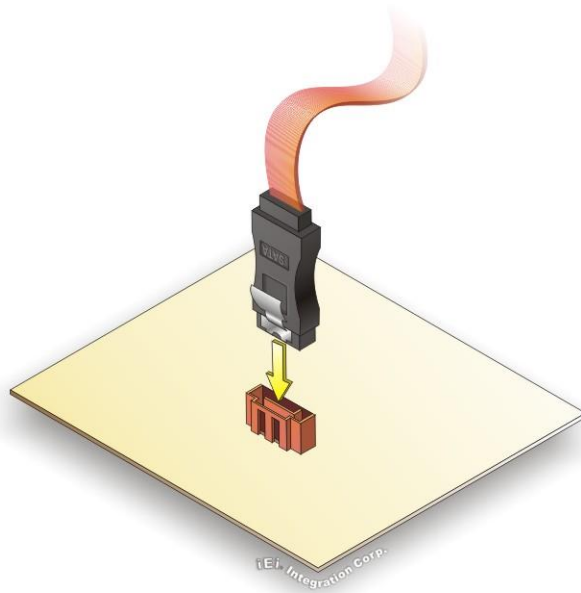


Figure 4-1: SATA Drive Cable Connection

Step 3: Connect the cable to the SATA disk. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 4-2**.

Step 4: Connect the SATA power cable. Connect the SATA power connector to the back of the SATA drive. See **Figure 4-2**.

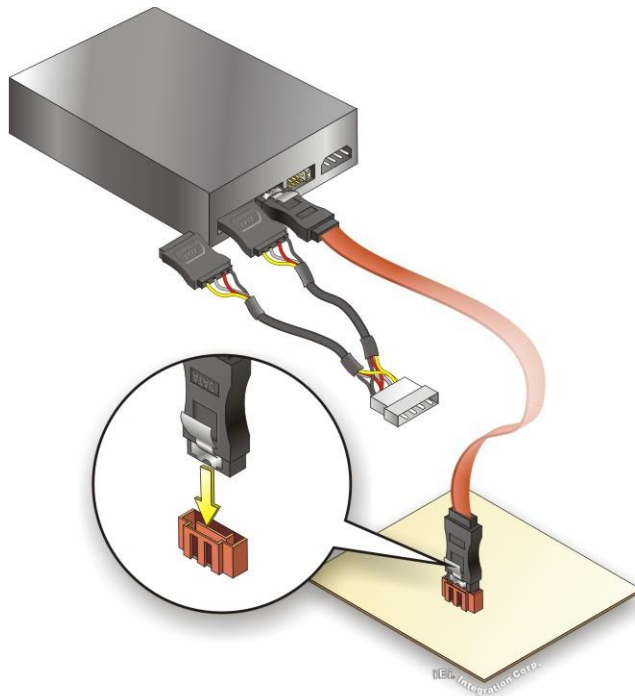


Figure 4-2: SATA Power Drive Connection

The SATA power cable can be bought from IEI. See Optional Items in Section 2.4.

IMBA-R680 ATX Motherboard

4.3 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before installation. All installation notices must be strictly adhered to. Failing to adhere to these precautions may lead to severe damage and injury to the person performing the installation.



WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the components and injury to the user.

Before and during the installation please **DO** the following:

- Read the user manual:
 - The user manual provides a complete description of the IMBA-R680 installation instructions and configuration options.
- Wear an electrostatic discharge cuff (ESD):
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- Place the IMBA-R680 on an anti-static pad:
 - When installing or configuring the motherboard, place it on an anti-static pad. This helps to prevent potential ESD damage.
- Turn all power to the IMBA-R680 off:
 - When working with the IMBA-R680, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

Before and during the installation of the IMBA-R680, **DO NOT**:

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

4.4 Socket LGA1700 CPU Installation



WARNING:

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

To install the CPU, follow the steps below.

Step 1: **Disengage the load lever** by pressing the lever down and slightly outward to clear the retention tab. Fully open the lever. See **Figure 4-3**.

IMBA-R680 ATX Motherboard

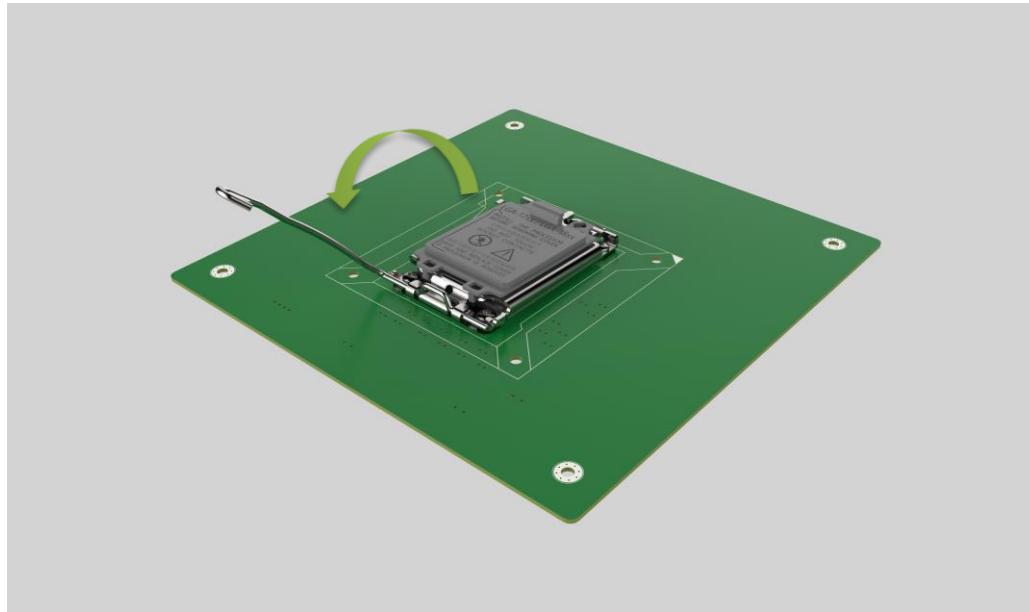


Figure 4-3: Disengage the CPU Socket Load Lever

Step 2: Open the socket and remove the protective cover. The black protective cover can be removed by pulling up on the tab labeled "Remove". See

Figure 4-4.

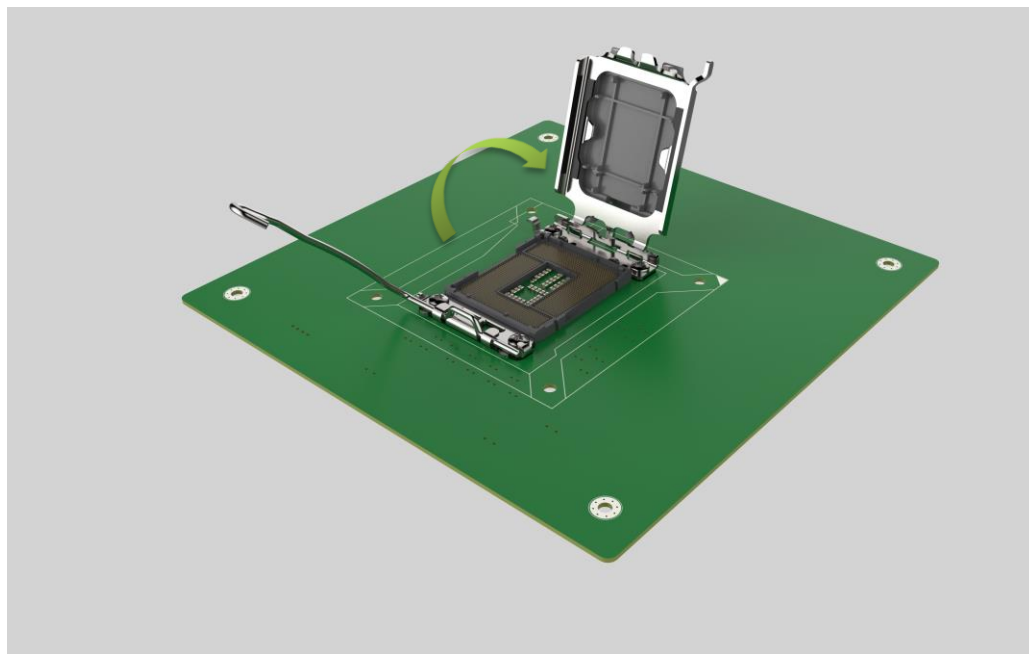


Figure 4-4: Remove Protective Cover

Step 3: Inspect the CPU socket. Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.

Step 4: Orientate the CPU properly. The contact array should be facing the CPU socket.



WARNING:

DO NOT touch the pins at the bottom of the CPU. When handling the CPU, only hold it on the sides.

Step 5: Correctly position the CPU. Match the Pin 1 mark with the cut edge on the CPU socket.

Step 6: Align the CPU pins. Locate pin 1 and the two orientation notches on the CPU. Carefully match the two orientation notches on the CPU with the socket alignment keys.

Step 7: Insert the CPU. Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly. See **Figure 4-5**.

IMBA-R680 ATX Motherboard

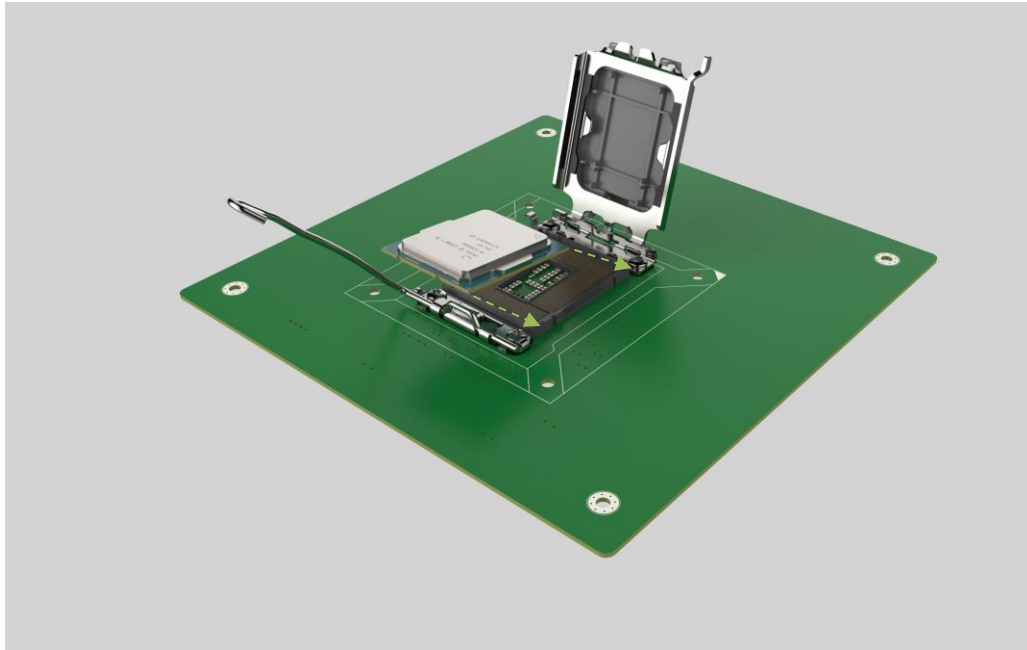


Figure 4-5: Insert The Socket LGA1700 CPU

Step 8: Close the CPU socket. Close the load plate and pull the load lever back a little to have the load plate be able to secure to the knob. Engage the load lever by pushing it back to its original position (**Figure 4-6**). There will be some resistance, but will not require extreme pressure.

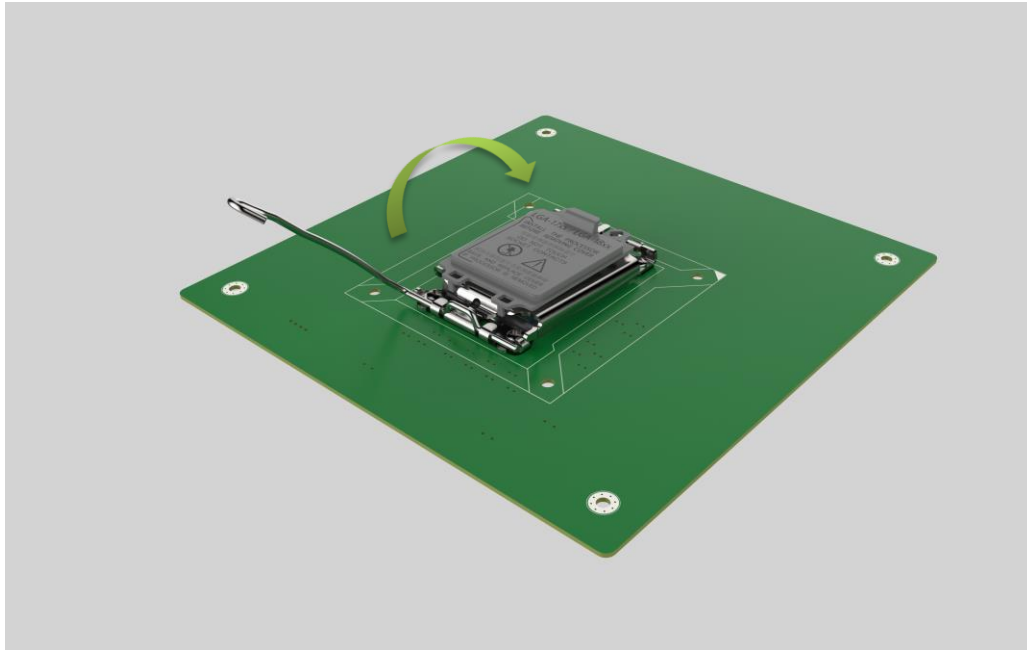


Figure 4-6: Close the Socket LGA1700

Step 9: Connect the 12 V power to the board. Connect the 12 V power from the power supply to the board.

4.5 Socket LGA1700 Cooling Kit Installation



WARNING:

DO NOT attempt to install a push-pin cooling fan.

The pre-installed support bracket prevents the board from bending and is **ONLY** compatible with captive screw type cooling fans.

The cooling kit can be bought from IEI. The cooling kit has a heat sink and fan.

IMBA-R680 ATX Motherboard



WARNING:

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the cooling kit, follow the instructions below.

Step 1: A cooling kit bracket is pre-installed on the rear of the motherboard. See **Figure 4-7**.

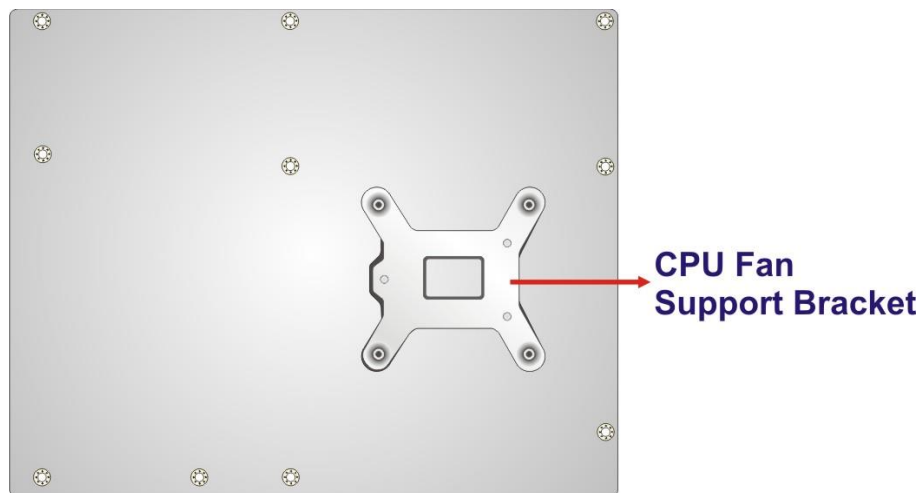


Figure 4-7: Cooling Kit Support Bracket

- Step 2:** Place the cooling kit onto the socket LGA1700 CPU. Make sure the CPU cable can be properly routed when the cooling kit is installed.
- Step 3:** Mount the cooling kit. Gently place the cooling kit on top of the CPU. Make sure the four threaded screws on the corners of the cooling kit properly pass through the holes of the cooling kit bracket.

Step 4: Tighten the screws. Use a screwdriver to tighten the four screws. In a diagonal pattern, tighten each screw a few turns then move to the next one, until they are all secured. Do not overtighten the screws.

Step 5: Connect the fan cable. Connect the cooling kit fan cable to the CPU fan connector on the IMBA-R680. Carefully route the cable and avoid heat generating chips and fan blades.

4.6 DIMM Installation

To install a DIMM, please follow the steps below and refer to **Figure 4-8**.

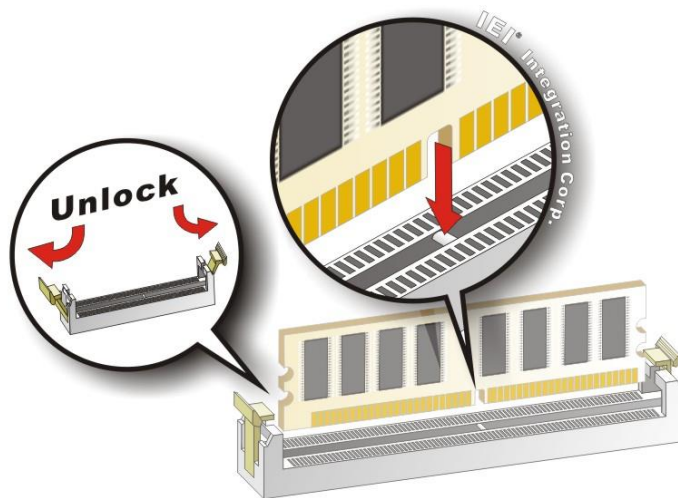


Figure 4-8: DIMM Installation

- Step 1: Open the DIMM socket handles.** Open the two handles outwards as far as they can. See **Figure 4-8**.
- Step 2: Align the DIMM with the socket.** Align the DIMM so the notch on the memory lines up with the notch on the memory socket. See **Figure 4-8**.
- Step 3: Insert the DIMM.** Once aligned, press down until the DIMM is properly seated. Clip the two handles into place. See **Figure 4-8**.
- Step 4: Removing a DIMM.** To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

IMBA-R680 ATX Motherboard



CAUTION:

For quad channel configuration, install four identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

4.7 M.2 Module Installation

The IMBA-R680 provide two ways to install the M.2 expansion card. One is using screw, and the other is using the retainer. Please follow the steps below.

Mode One: Using screw

- Step 1:** Locate the M.2 module slot. See **Chapter 3**.
- Step 2:** Remove the retention screw secured on the motherboard.
- Step 3:** Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20° (**Figure 4-9**).

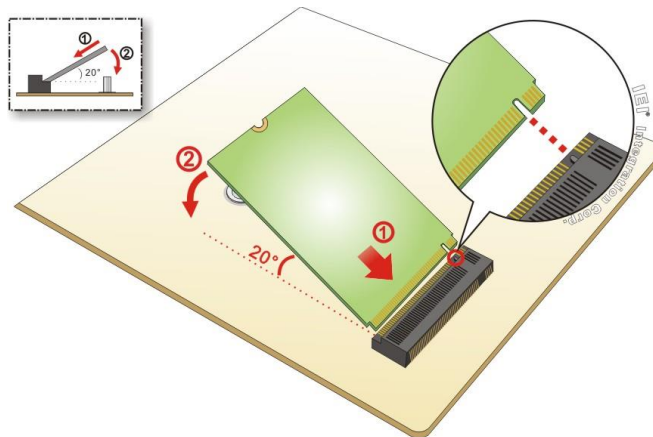


Figure 4-9: Inserting the M.2 Module into the Slot at an Angle

- Step 4:** Secure the M.2 module with the previously removed retention screw (**Figure 4-10**).

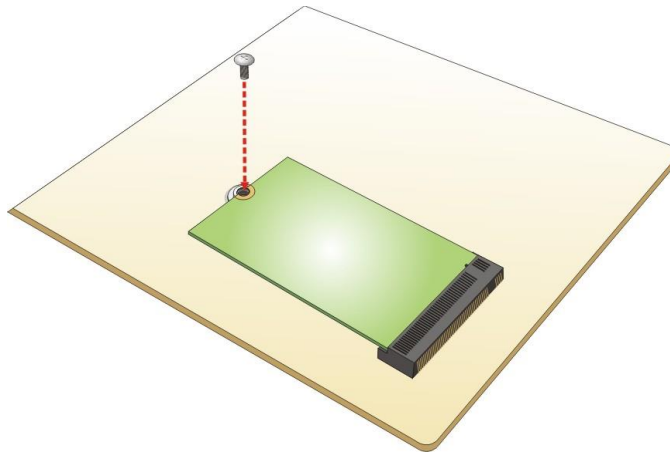


Figure 4-10: Securing the M.2 Module

Mode Two: Using the Retainer

Step 1: Press the retainer down as shown below. (See **Figure 4-11**)

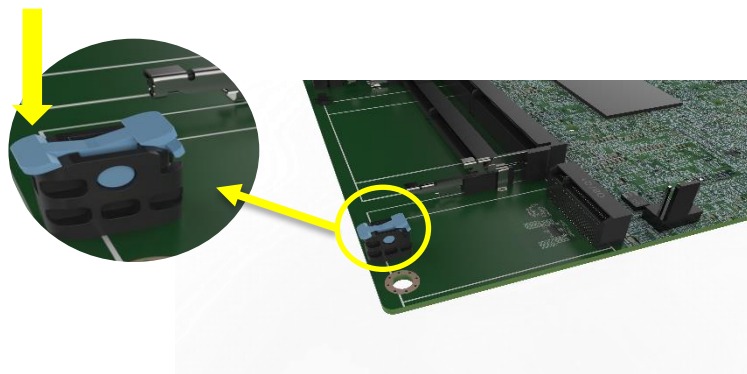


Figure 4-11: Press the Retainer

IMBA-R680 ATX Motherboard

Step 2: Line up the notch on the M.2 module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20°. (See **Figure 4-9**)

Step 3: Align the notch on the end of the M.2 module with the clip of the retainer. (See

Figure 4-12)

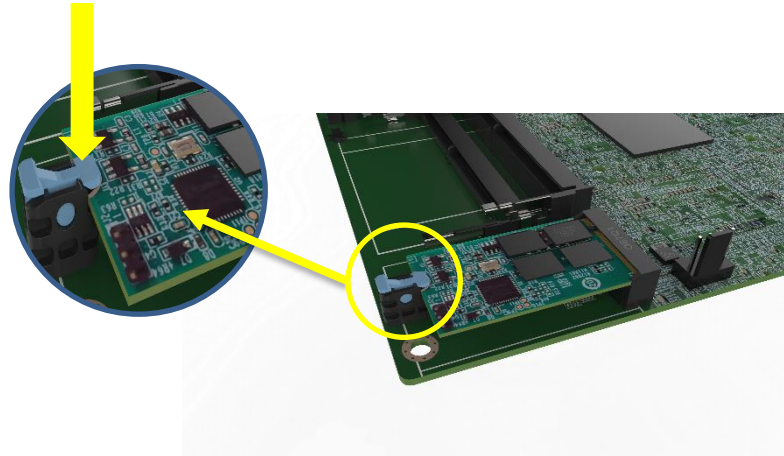


Figure 4-12: Aligning the M.2 Module with the Retainer

Step 4: Press the M.2 module down until it is secured into place by the retainer. (See **Figure 4-13**)

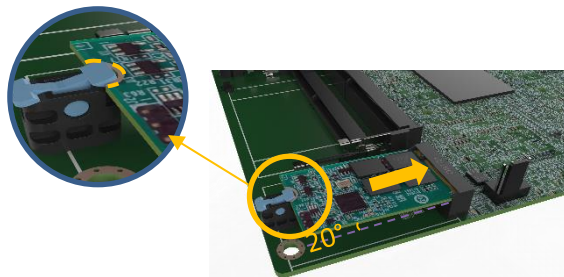


Figure 4-13: Securing the M.2 Module

Step 5: If you want to remove the M.2 module, you should press the retainer down as described in Step 1 to release the M.2 module. (See **Figure 4-11**)

4.8 Software Installation

All the drivers for the IMBA-R680 are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type IMBA-R680 and press Enter to find all the relevant software, utilities, and documentation.


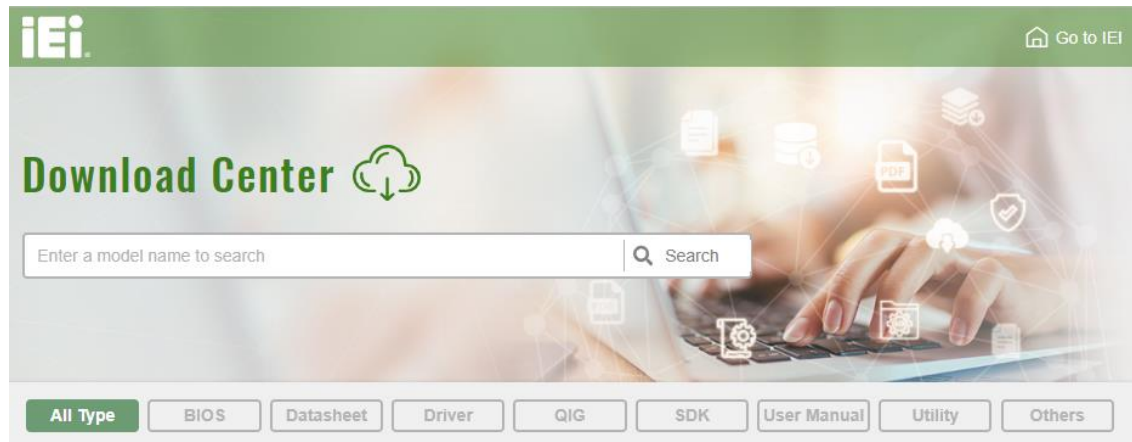


Figure 4-14: IEI Resource Download Center

4.9 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to <https://download.ieiworld.com>. Type IMBA-R680 and press Enter.

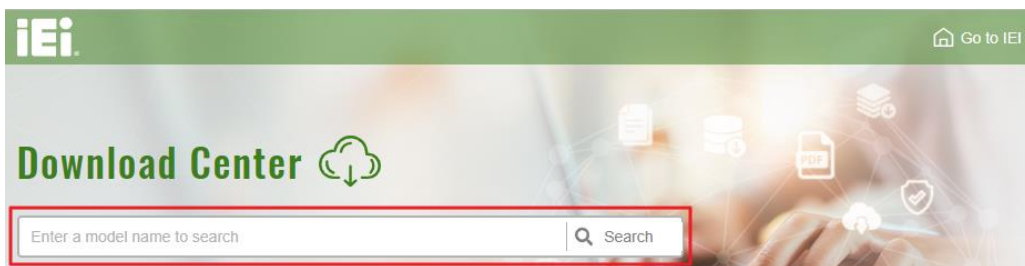

Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

IMBA-R680 ATX Motherboard

[All Type](#)
[BIOS](#)
[Datasheet](#)
[Driver](#)
[QIG](#)
[SDK](#)
[User Manual](#)
[Utility](#)
[Others](#)

WAFER-BT-i1 Product Info ▶

Embedded Computer ▶ Single Board Computer ▶ Embedded Board
 3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

Driver

File Name	Published	Version	File Checksum
7B000-001033-RS V2.3.iso (2.23 GB)	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

7B000-001168-RS_V1.4.iso

❶ [Click here to download entire ISO file. \(2.99 GB\)](#)

* Download individual file *

- Docs
 - 1.Chipset
 - ❷ 10.1.1.12.zip (2.7 MB)
 - 2.VGA
 - 3.Audio
 - 4.Lan
 - 5.USB 3.0
 - 6.Serial IO
 - 7.TXE
 - 8.Manual



NOTE:

To install software from the downloaded ISO image file in Windows 8, 8.1 or 10, double-click the ISO file to mount it as a virtual drive to view its content. On Windows 7 system, an additional tool (such as Virtual CD-ROM Control Panel from Microsoft) is needed to mount the file.

Chapter

5

BIOS

IMBA-R680 ATX Motherboard

5.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

5.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. **Using keyboard:** Press the **DEL** or **F2** as soon as the system is turned on.
2. **Using touchscreen:** Press the **Setup** button on the upper right corner of the BIOS Starting Menu.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again, then the BIOS Starting Menu will appear. Select "Setup" and press Enter to get into the BIOS Setup.

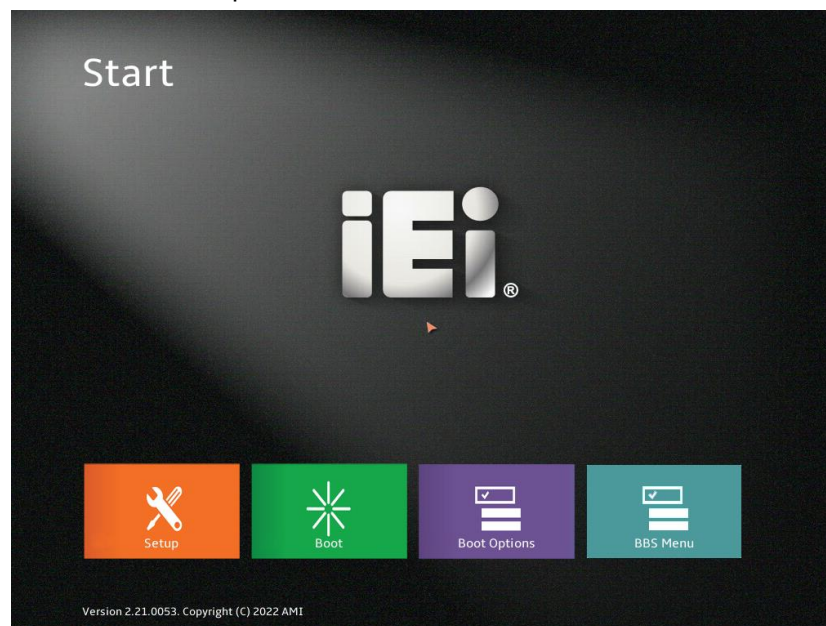


Figure 5-1: BIOS Starting Menu

5.1.2 Using Setup

The BIOS Setup menu can be navigated by using a keyboard or a touchscreen.

5.1.2.1 Keyboard Navigation

For keyboard navigation, use the navigation keys shown in **Table 5-1**.


Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes
-	Decrease the numeric value or make changes
Page Up	Move to the previous page
Page Dn	Move to the next page
Esc	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2	Load previous values
F3	Load optimized defaults
F4	Save changes and Exit BIOS
<K>	Scroll help area upwards
<M>	Scroll help area downwards

Table 5-1: BIOS Navigation Keys

IMBA-R680 ATX Motherboard

5.1.2.2 Touch Navigation

For touchscreen navigation, use the on-screen navigation keys shown below.

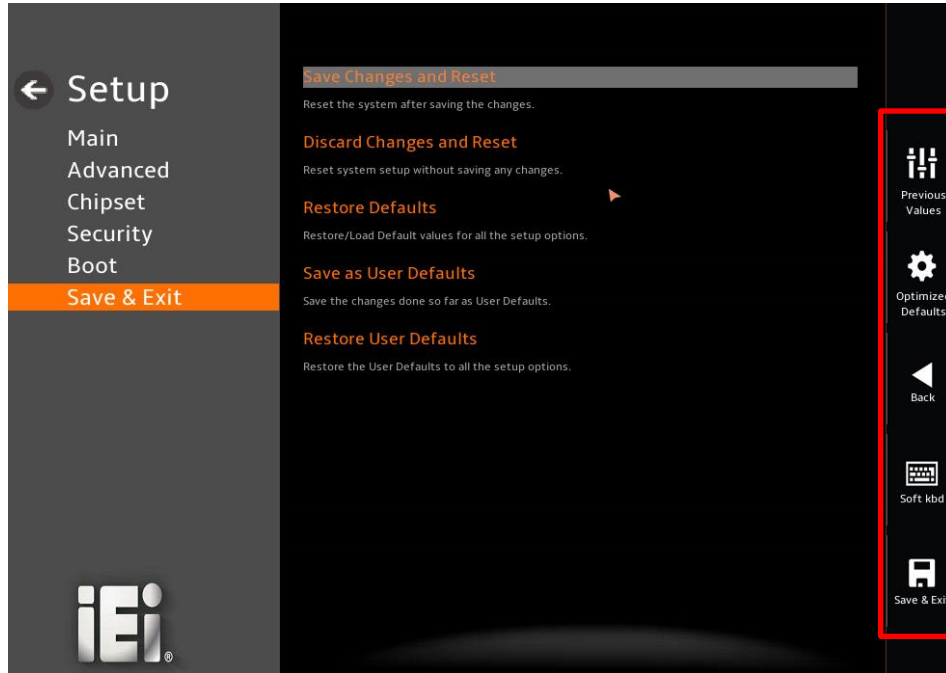

On-screen Button	Function
Previous Values	Load the last value you set.
Optimized Defaults	Load the factory default values in order to achieve the best performance.
Back	Return to the previous menu.
Soft kbd	Display the on-screen keyboard.
Save & Exit	Save the changes made to the BIOS options and reset the system.

Table 5-2: BIOS On-screen Navigation Keys

5.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window, press the **Esc** key.

5.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 4**.

5.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings


The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

IMBA-R680 ATX Motherboard


5.2 Main

The **Main** BIOS menu (**BIOS Menu 2**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

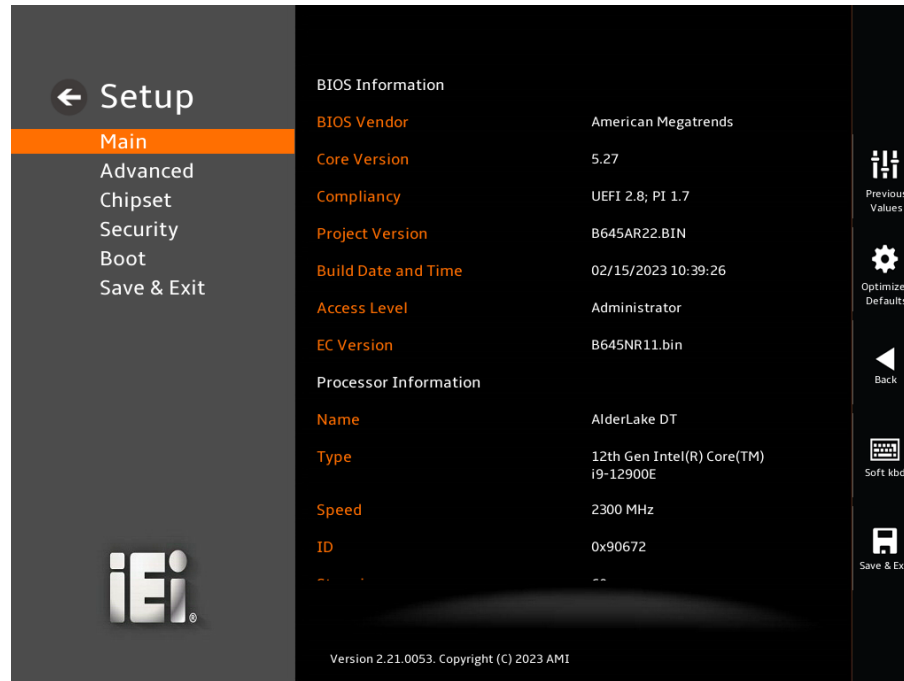

BIOS Menu 1: Main (1/2)

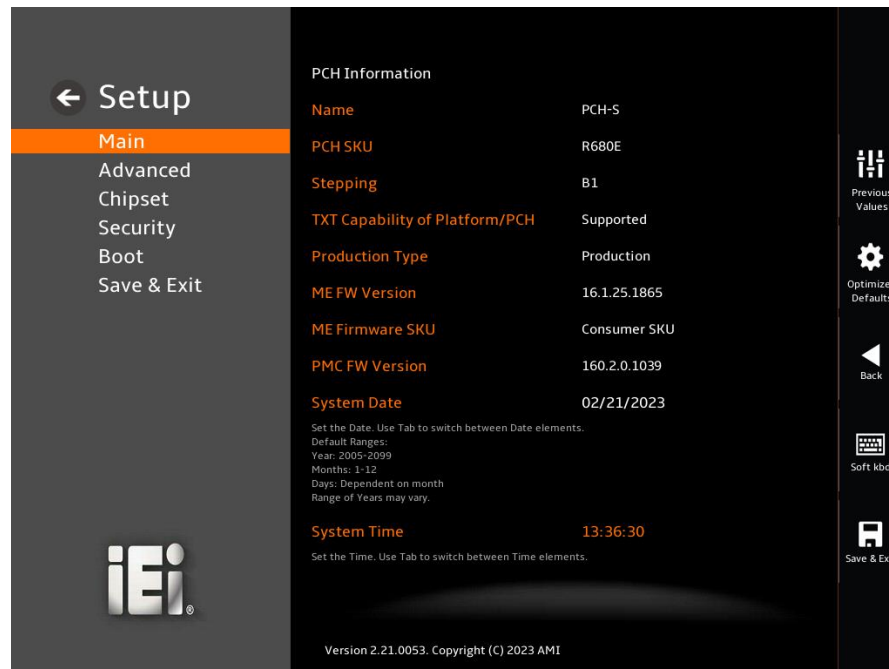

BIOS Menu 2: Main (2/2)

→ BIOS Information

The **BIOS Information** lists a brief summary of the BIOS. The fields in **BIOS Information** cannot be changed. The items shown in the system overview include:

- **BIOS Vendor:** Installed BIOS vendor
- **Core Version:** Current BIOS version
- **Compliance:** Current UEFI & PI version
- **Project Version:** the board version
- **Build Date and Time:** Date the current BIOS version was made
- **EC Version:** Current EC version

→ Processor Information

The **Processor Information** lists a brief summary of the Processor. The fields in **Processor Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the Processor Details
- **Type:** Displays the Processor Type
- **Speed:** Displays the Processor Speed
- **ID:** Displays the Processor ID

→ PCH Information

The **PCH Information** lists a brief summary of the PCH. The fields in **PCH Information** cannot be changed. The items shown in the system overview include:

- **Name:** Displays the PCH Name
- **PCH SKU:** Displays the PCH SKU
- **Stepping:** Displays the PCH Stepping
- **TXT Capability of Platform/PCH:** Displays the TXT Capability
- **Production Type:** Displays the Production Type
- **ME FW Version:** Displays the ME Firmware Version
- **ME Firmware SKU:** Displays the ME Firmware SKU
- **PMC FW Version:** Displays the PMC Firmware Version

IMBA-R680 ATX Motherboard

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.


5.3 Advanced

Use the **Advanced** menu (**BIOS Menu 3**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

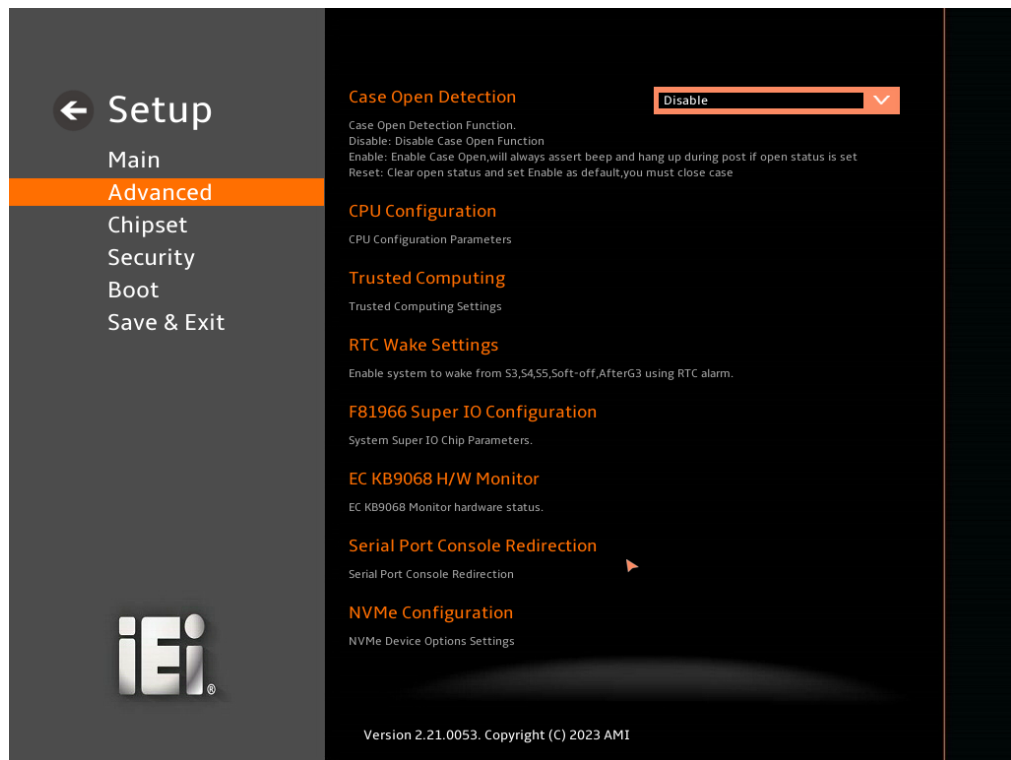

BIOS Menu 3: Advanced


IMBA-R680 ATX Motherboard

5.3.1 CPU Configuration


Use the **CPU Configuration** menu (**BIOS Menu 4**) to view detailed CPU specifications or enable the Intel Virtualization Technology.



BIOS Menu 4: CPU Configuration (1/3)

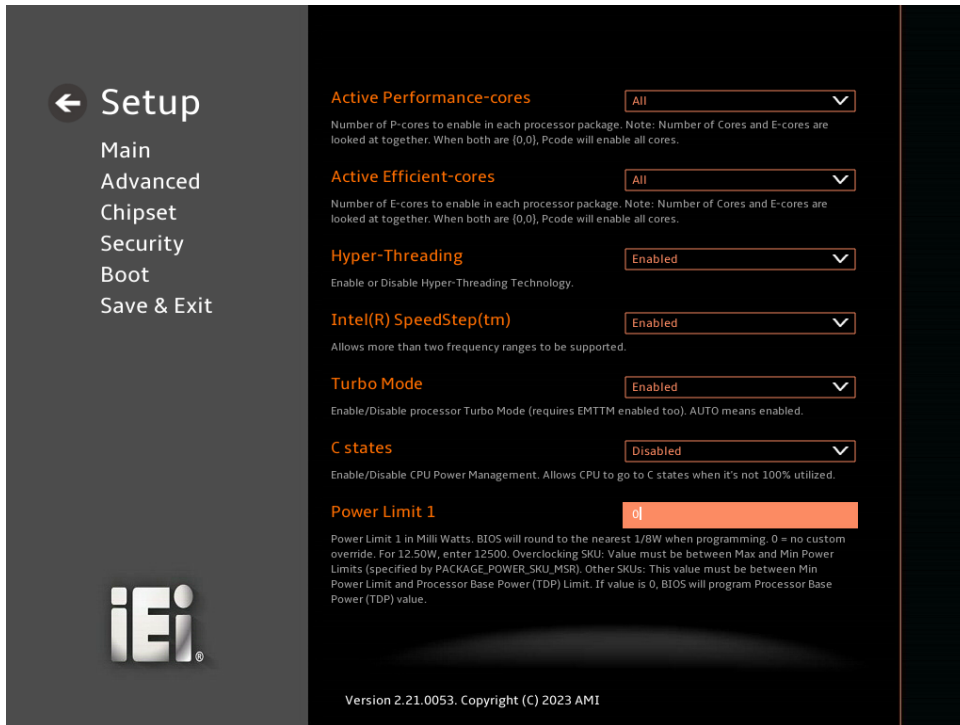

BIOS Menu 5: CPU Configuration (2/3)

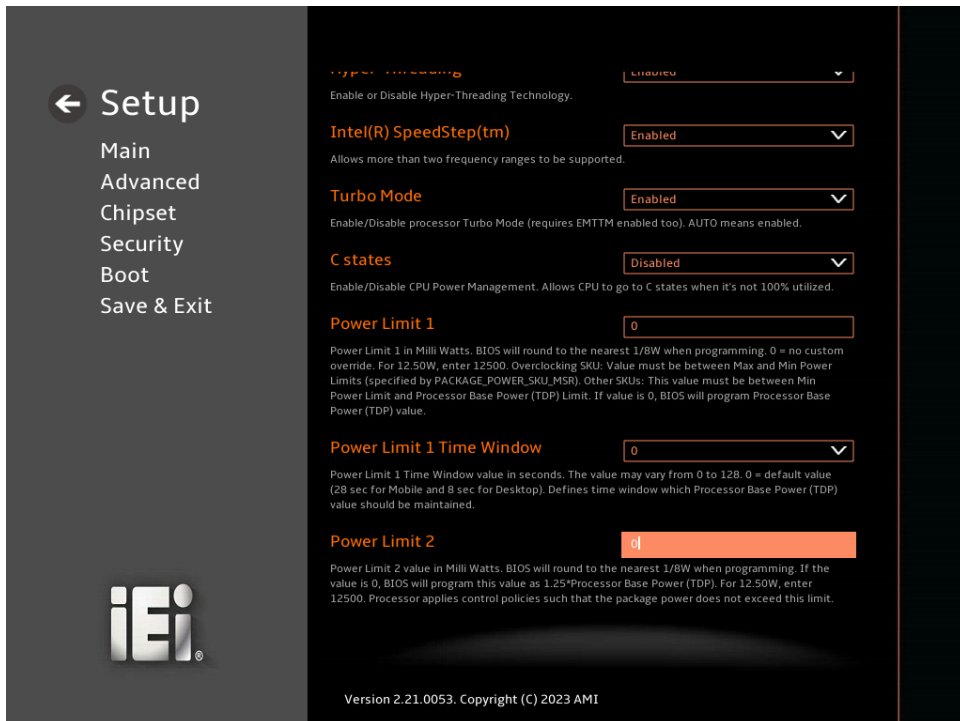

BIOS Menu 6: CPU Configuration (3/3)

IMBA-R680 ATX Motherboard

→ Intel (VMX) Virtualization Technology [Enabled]

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- **Disabled** Disables Intel Virtualization Technology.
- **Enabled** **DEFAULT** Enables Intel Virtualization Technology.

→ Active Performance Cores [All]

Use the **Active Performance Cores** BIOS option to enable numbers of P-cores in the processor package.

- **All** **DEFAULT** Enable all P-cores in the processor package.
- **1** Enable one P-core in the processor package.

→ Active Efficient Cores [All]

Use the **Active Efficient Cores** BIOS option to enable numbers of E-cores in the processor package.

- **All** **DEFAULT** Enable all E-cores in the processor package.
- **0** Enable zero E-core in the processor package.
- **1** Enable one E-cores in the processor package.
- **2** Enable two E-cores in the processor package.
- **3** Enable three E-cores in the processor package.
- **4** Enable four E-cores in the processor package.
- **5** Enable five E-cores in the processor package.
- **6** Enable six E-cores in the processor package.
- **7** Enable seven E-cores in the processor package.

→ Hyper-Threading [Enabled]

Use the **Hyper-Threading** option to enable or disable the **Hyper-Threading** Technology.

- **Disabled** Disables Hyper-Threading Technology
- **Enabled** **DEFAULT** Enables Hyper-Threading Technology

→ Intel(R) SpeedStep(tm) [Enabled]

Use the **Intel(R) SpeedStep(tm)** option to enable or disable the Intel® SpeedStep Technology which allows more than two frequency ranges to be supported.

- **Disabled** Disables Intel® SpeedStep Technology
- **Enabled** **DEFAULT** Enables Intel® SpeedStep Technology

→ Turbo Mode [Enabled]

Use the **Turbo Mode** option to enable or disable Turbo Mode which requires Intel Speed Step or Intel Speed Shift to be available and enabled.

- **Disabled** Disables Turbo Mode Technology
- **Enabled** **DEFAULT** Enables Turbo Mode Technology

→ C states [Disabled]

Use the **C states** option to enable or disable CPU power management which allows CPU to go to C states when it is not 100% utilized.

- **Disabled** **DEFAULT** Disables CPU power management
- **Enabled** Enables CPU power management

→ Power Limit 1 [0]

Use the + or – key to change the **Power Limit 1** value. BIOS will program the default values for Limit 1 and Power Limit 1 Time Window. For 12.50W, enter 12500.

IMBA-R680 ATX Motherboard

→ Power Limit 1 Time Window [0]


Use the **Power Limit 1 Time Window** option to select the PL1 time duration. The value may vary from 0 to 128. For 0 is the default value

→ Power Limit 2 [0]

Use the + or – key to change the **Power Limit 2** value. BIOS will round to the nearest 1/8W when programming. 0 = no custom override. For 12.50W, enter 12500.

5.3.2 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 7**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

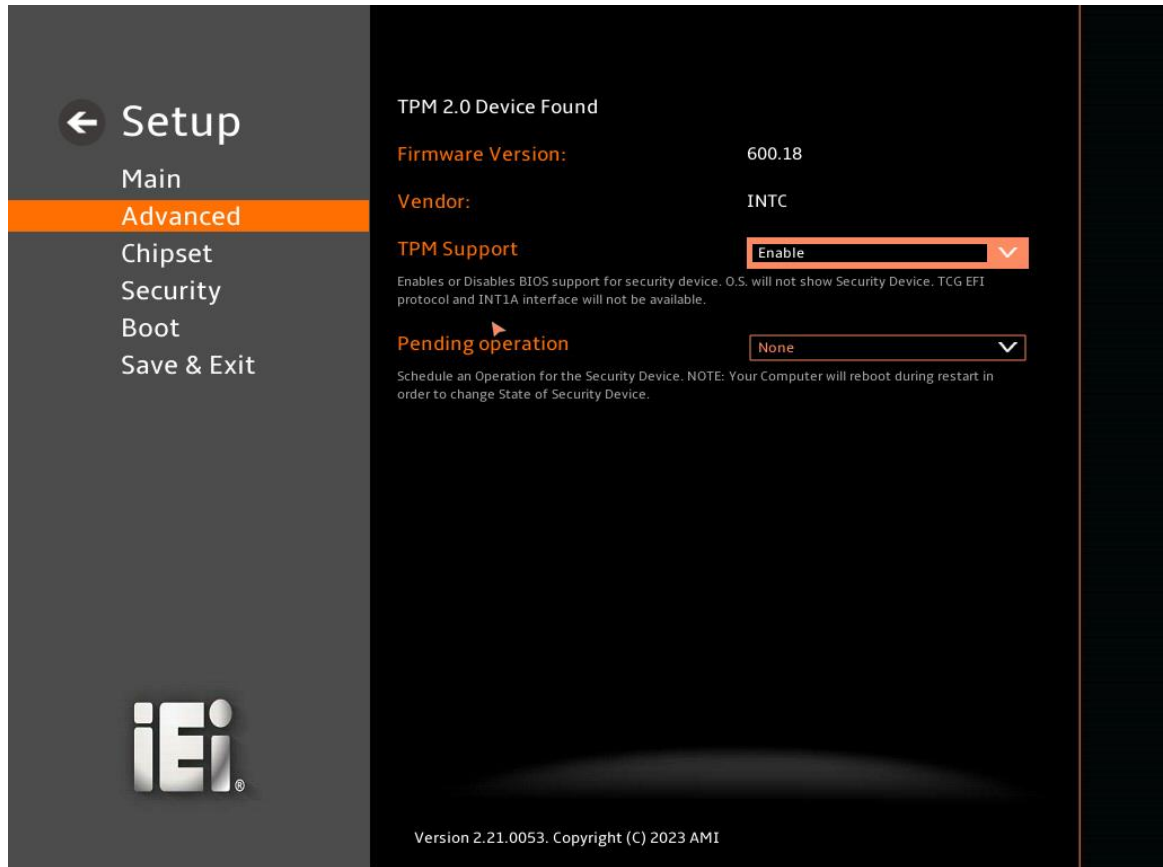

BIOS Menu 7: PCH-FW Configuration

→ TPM Support [Enable]

Use the **TPM Support** option to enable or disable BIOS support for security device.

- **Disable** TPM support is disabled.
- **Enable** DEFAULT TPM support is enabled.

→ Pending Operation [None]


Use the **Pending Operation** option to schedule an operation for the security device.

IMBA-R680 ATX Motherboard


- ➔ None **DEFAULT** TPM information is previous.S
- ➔ TPM Clear TPM information is cleared

5.3.3 RTC Wake Settings

The **RTC Wake Settings** menu (**BIOS Menu 8**) configures RTC wake event.

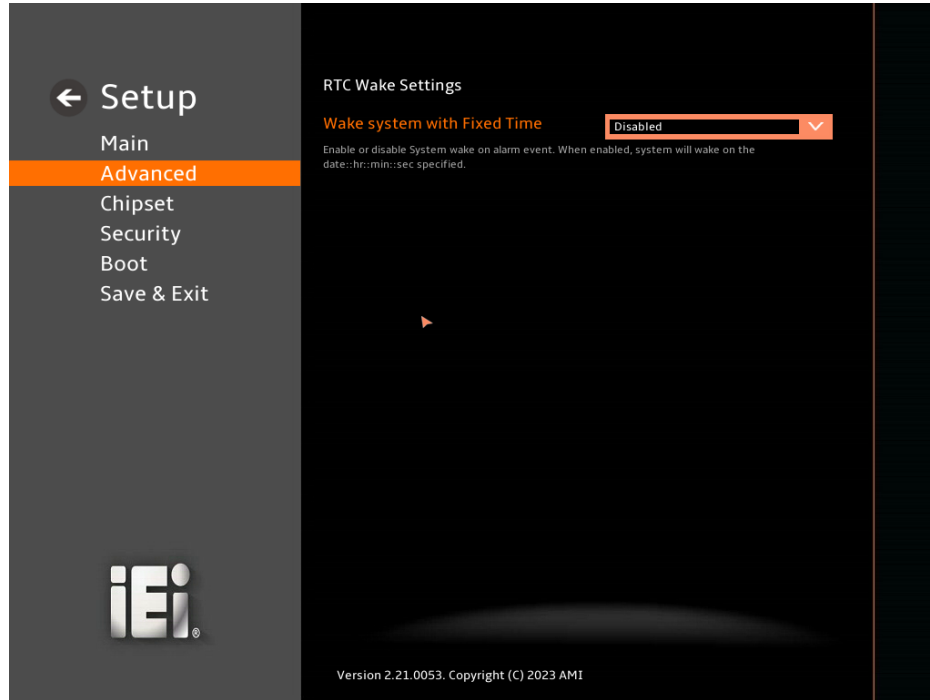

BIOS Menu 8: RTC Wake Settings (1/2)

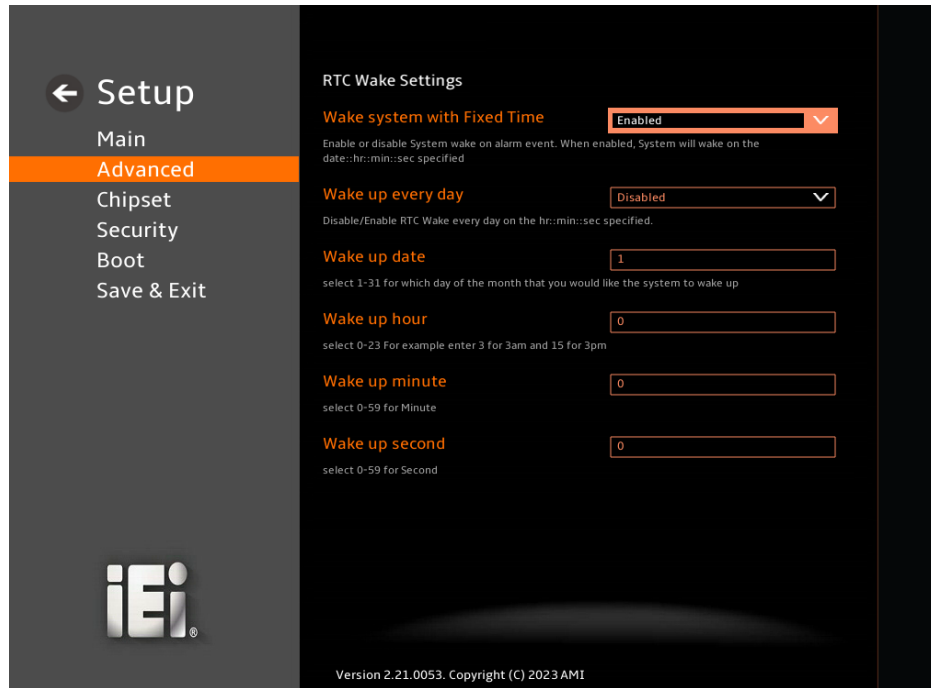

BIOS Menu 9: RTC Wake Settings (2/2)

➔ **Wake system with Fixed Time [Enabled]**

Use the **Wake system with Fixed Time** option to enable or disable the system wake on alarm event.


- ➔ **Disabled** The real time clock (RTC) cannot generate a wake event
- ➔ **Enabled** **DEFAULT** If selected, the **Wake up every day** option appears allowing you to enable to disable the system to wake every day at the specified time. Besides, the following options appear with values that can be selected:
 - Wake up date
 - Wake up hour
 - Wake up minute
 - Wake up second

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

IMBA-R680 ATX Motherboard

5.3.4 F81966 Super IO Configuration


Use the **F81966 Super IO Configuration** menu (**BIOS Menu 10**) to set or change the configurations for serial ports.

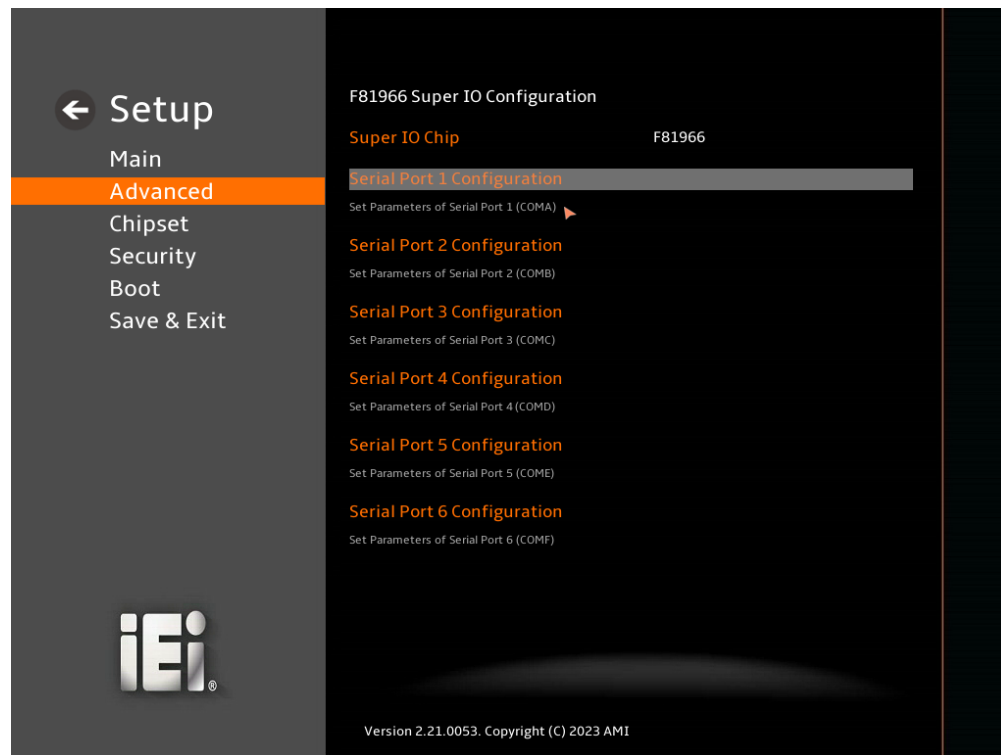

BIOS Menu 10: F81966 Super IO Configuration

5.3.4.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 11**) to configure the serial port n.

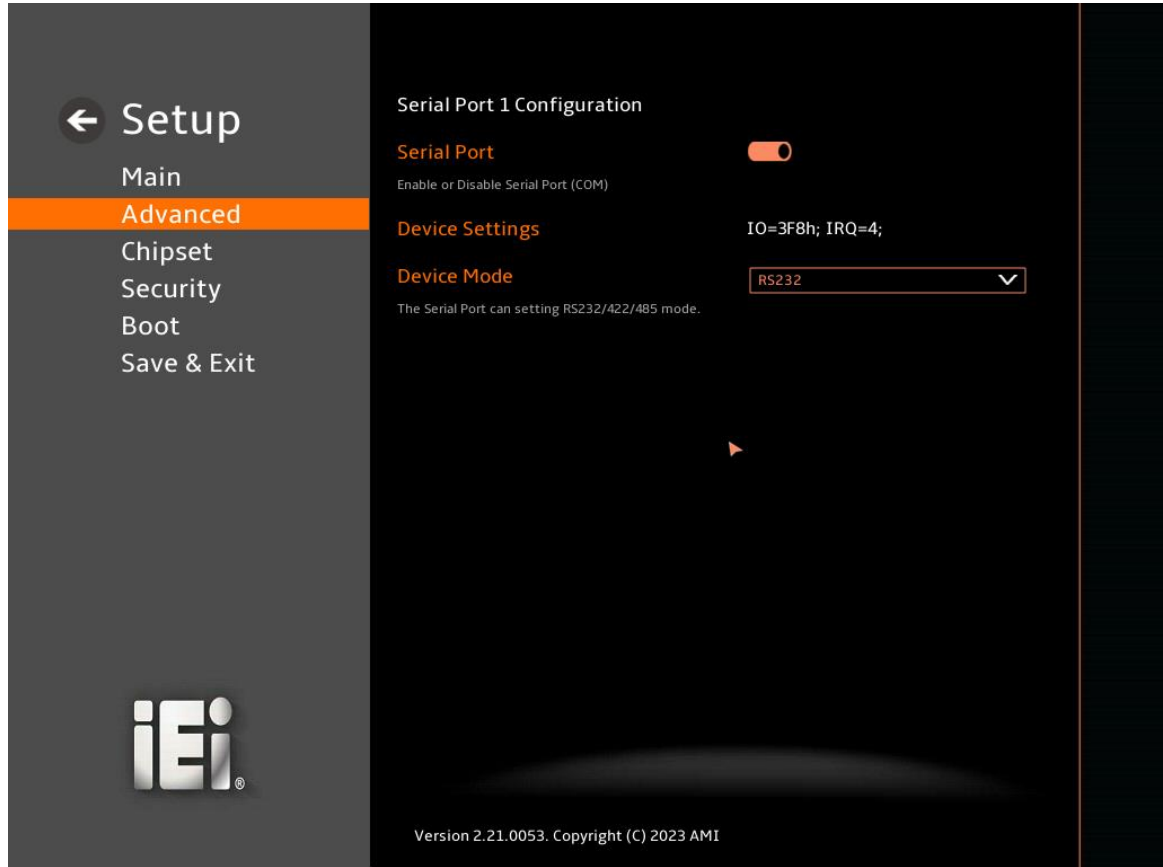

BIOS Menu 11: Serial Port 1 Configuration Menu

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

IMBA-R680 ATX Motherboard

→ **IO=3F8h;** Serial Port I/O port address is 3F8h and the interrupt
IRQ=4 address is IRQ4


→ Device Mode [RS232]

Use the **Device Mode** option to change the serial port mode.

→ RS232	DEFAULT	The serial port mode is RS-232
RS422 with Register		The serial port mode is RS-422
RS485 with Register		The serial port mode is RS-485

5.3.4.2 Serial Port 2 Configuration

Use the **Serial Port 2 Configuration** menu (**BIOS Menu 12**) to configure the serial port n.

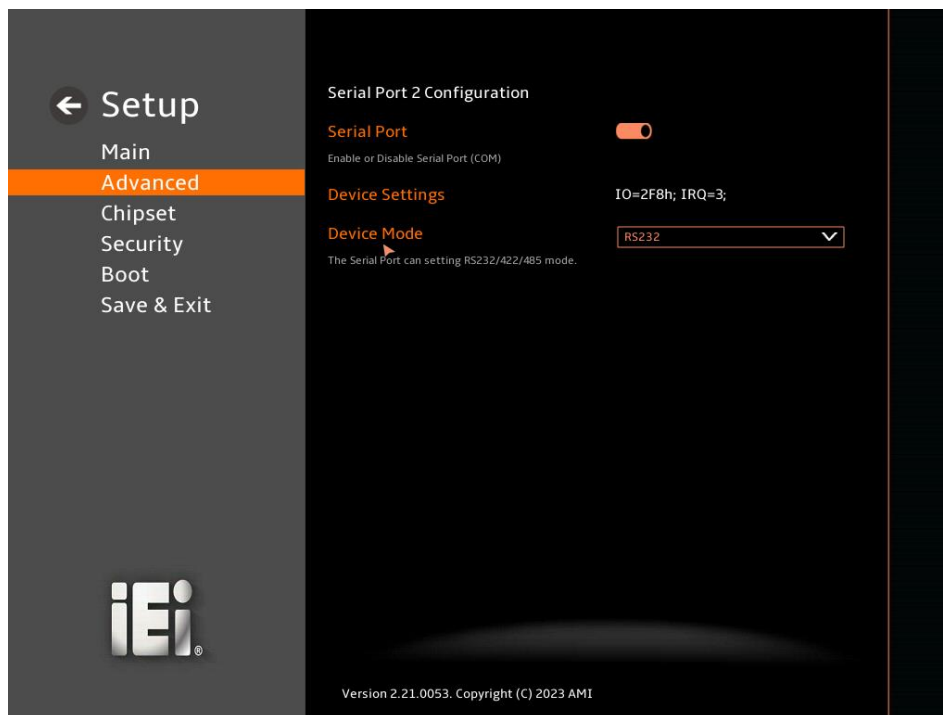

BIOS Menu 12: Serial Port 2 Configuration Menu

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ **Device Settings**

The **Device Settings** option shows the serial port IO port address and interrupt address.

- **IO=2F8h;** Serial Port I/O port address is 2F8h and the interrupt
IRQ=3 address is IRQ3

→ **Device Mode [RS232]**


Use the **Device Mode** option to change the serial port mode.

- **RS232** **DEFAULT** The serial port mode is RS-232
- RS422 with Register** The serial port mode is RS-422
- RS485 with Register** The serial port mode is RS-485

IMBA-R680 ATX Motherboard

5.3.4.3 Serial Port 3 Configuration

Use the **Serial Port 3 Configuration** menu (**BIOS Menu 13**) to configure the serial port 3.

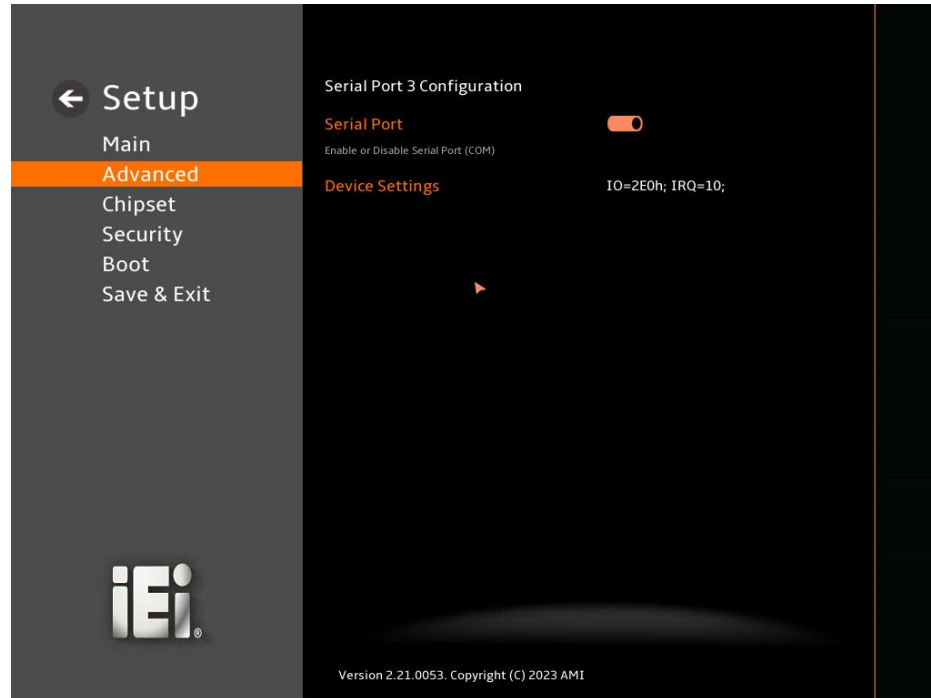

BIOS Menu 13: Serial Port 3 Configuration Menu

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port


→ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

- **IO=2E0h;** Serial Port I/O port address is 2E0h and the interrupt
IRQ=10 address is IRQ10

5.3.4.4 Serial Port 4 Configuration

Use the **Serial Port 4 Configuration** menu (**BIOS Menu 14**) to configure the serial port 4.

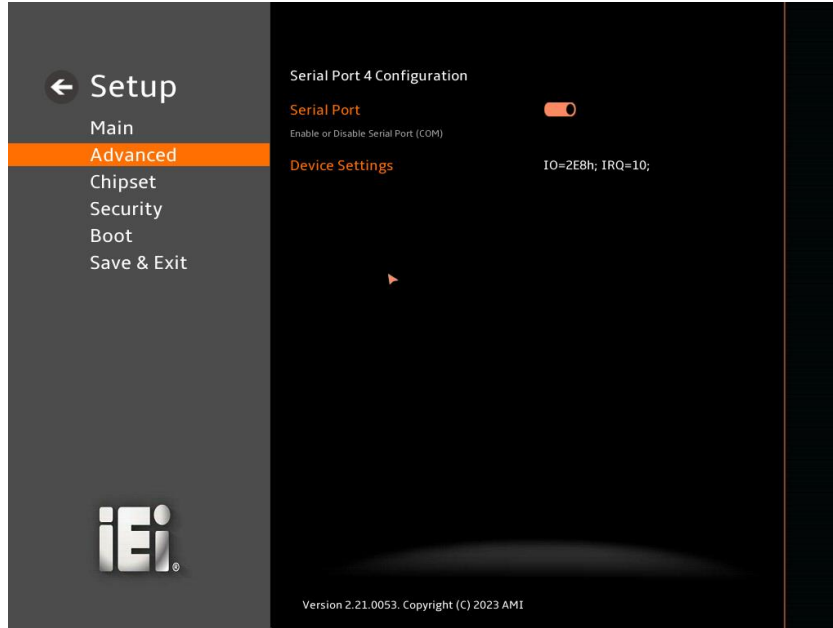

BIOS Menu 14: Serial Port 4 Configuration Menu

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled** **DEFAULT** Enable the serial port

➔ Device Settings


The **Device Settings** option shows the serial port IO port address and interrupt address.

- ➔ **IO=2E8h;** Serial Port I/O port address is 2E8h and the interrupt
IRQ=10 address is IRQ10

IMBA-R680 ATX Motherboard

5.3.4.5 Serial Port 5 Configuration

Use the **Serial Port 5 Configuration** menu (**BIOS Menu 15**) to configure the serial port 5.

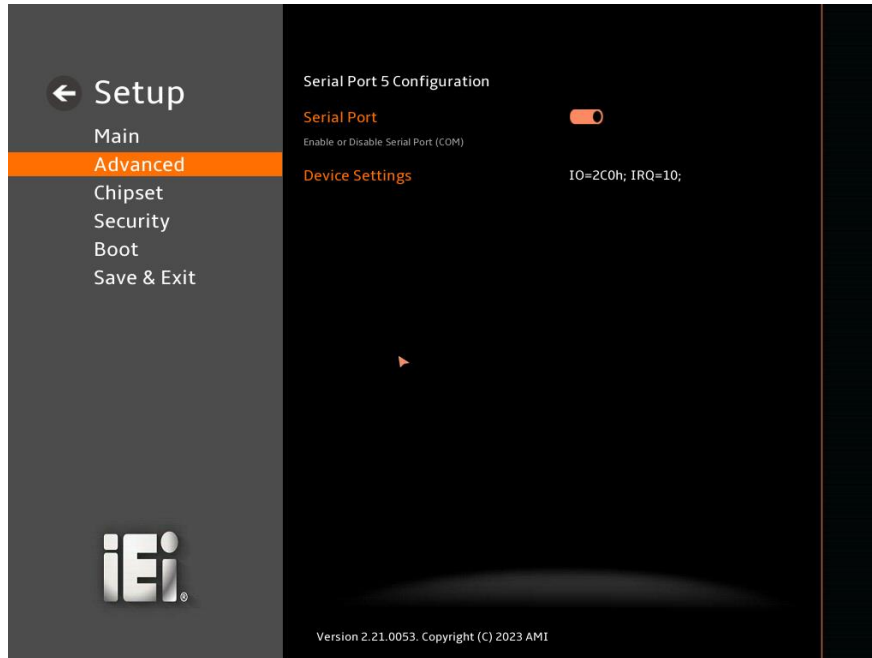

BIOS Menu 15: Serial Port 5 Configuration Menu

→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

→ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

- **IO=2C0h;** Serial Port I/O port address is 2C0h and the interrupt
IRQ=10 address is IRQ10

5.3.4.6 Serial Port 6 Configuration

Use the **Serial Port 6 Configuration** menu (**BIOS Menu 16**) to configure the serial port 6.



BIOS Menu 16: Serial Port 6 Configuration Menu

➔ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- ➔ **Disabled** Disable the serial port
- ➔ **Enabled DEFAULT** Enable the serial port

➔ Device Settings

The **Device Settings** option shows the serial port IO port address and interrupt address.

- ➔ **IO=2C8h;** Serial Port I/O port address is 2C8h and the interrupt
IRQ=10 address is IRQ10


IMBA-R680 ATX Motherboard

5.3.5 EC KB9068 H/W Monitor

The **EC KB9068 H/W Monitor** menu (**BIOS Menu 17**) contains the smart fan mode configuration submenu and shows the state of H/W real-time operating temperature, fan speeds and system voltages.



BIOS Menu 17: EC KB9068 H/W Monitor (1/2)

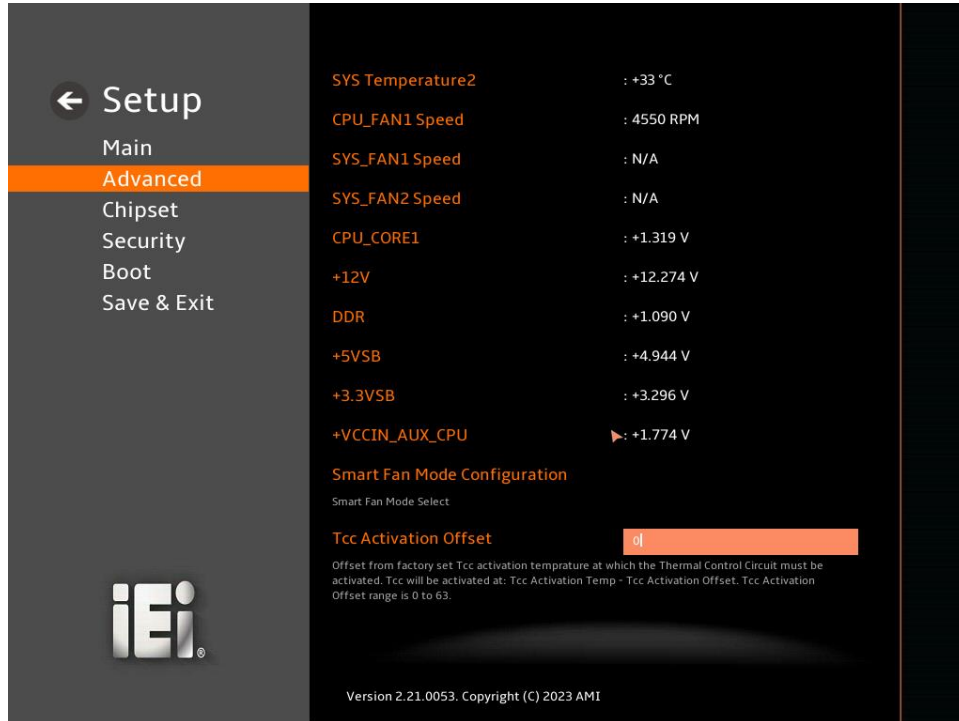

BIOS Menu 18: EC KB9068 H/W Monitor (2/2)

→ PC Health Status

The following system parameters and values are shown. The system parameters that are monitored are:


- System Temperatures:
 - CPU Temperature
 - System Temperature1
 - System Temperature2
- Fan Speeds:
 - CPU_Fan1 Speed
 - SYS_Fan1 Speed
 - SYS_Fan2 Speed
- Voltages:
 - CPU_CORE1
 - +12V
 - DDR
 - +5VSB

IMBA-R680 ATX Motherboard

- +3.3VSB
- +VCCIN_AUX_CPU

5.3.5.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 19**) to configure the CPU/system fan start/off temperature and control mode.

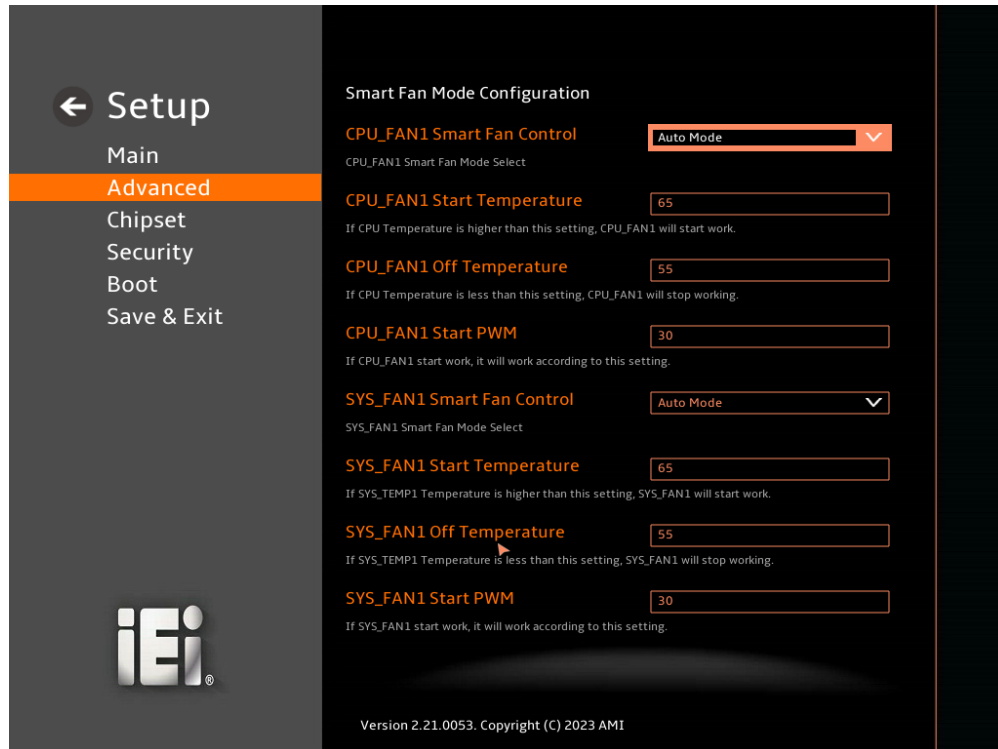

BIOS Menu 19: Smart Fan Mode Configuration

→ CPU_FAN1 Smart Fan Control [Auto Mode]

Use the **CPU_FAN1 Smart Fan Control** option to configure the CPU Smart Fan.

- **Manual Mode** The fan spins at the speed set in Manual Mode settings.
- **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ **CPU_FAN1 Start Temperature**

If the CPU temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **CPU_FAN1 Off Temperature**

If the CPU temperature is lower than the value set this option, the fan speed change to be lowest. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **CPU_FAN1 Start PWM**

Use the **CPU_FAN1 Start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **SYS_FAN1 Smart Fan Control [Auto Mode]**

Use the **SYS_FAN1 Smart Fan Control** option to configure the System Smart Fan.

→ **Manual Mode** The fan spins at the speed set in Manual Mode settings.

→ **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

→ **SYS_FAN1 Start Temperature**

If the System temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ **SYS_FAN1 Off Temperature**

If the System temperature is lower than the value set this option, the fan speed change to be lowest. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.


IMBA-R680 ATX Motherboard

→ SYS_FAN1 Start PWM


Use the **SYS_Fan1 Start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

5.3.6 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 20 & BIOS Menu 21**) allows the console redirection options to be configured. Console Redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

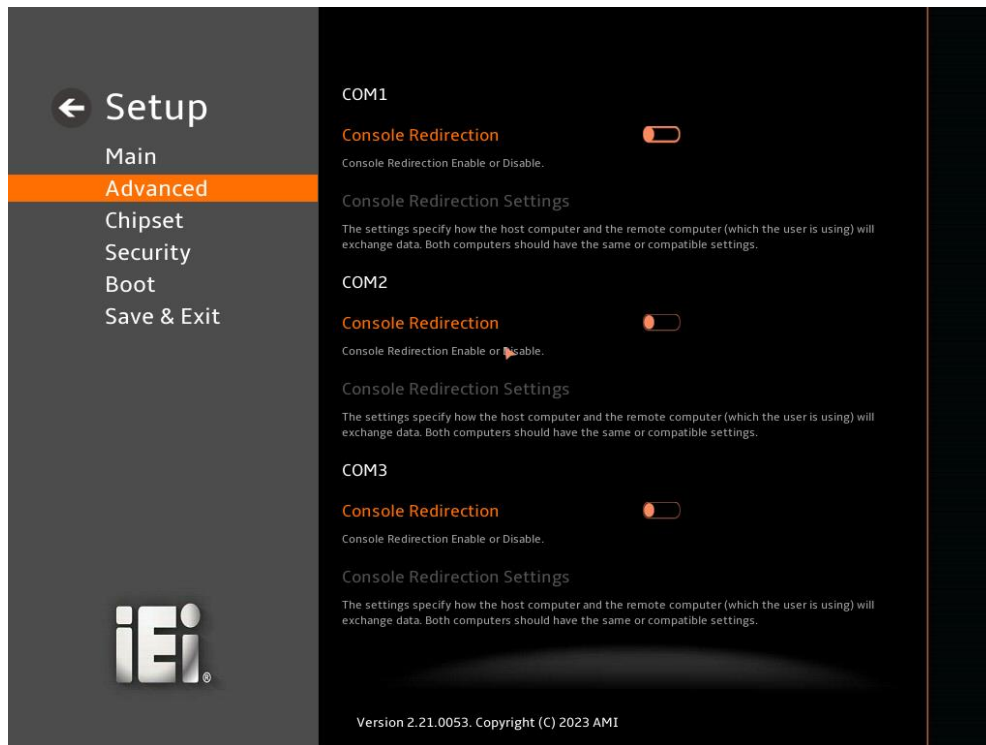

BIOS Menu 20: Serial Port Console Redirection (1/2)

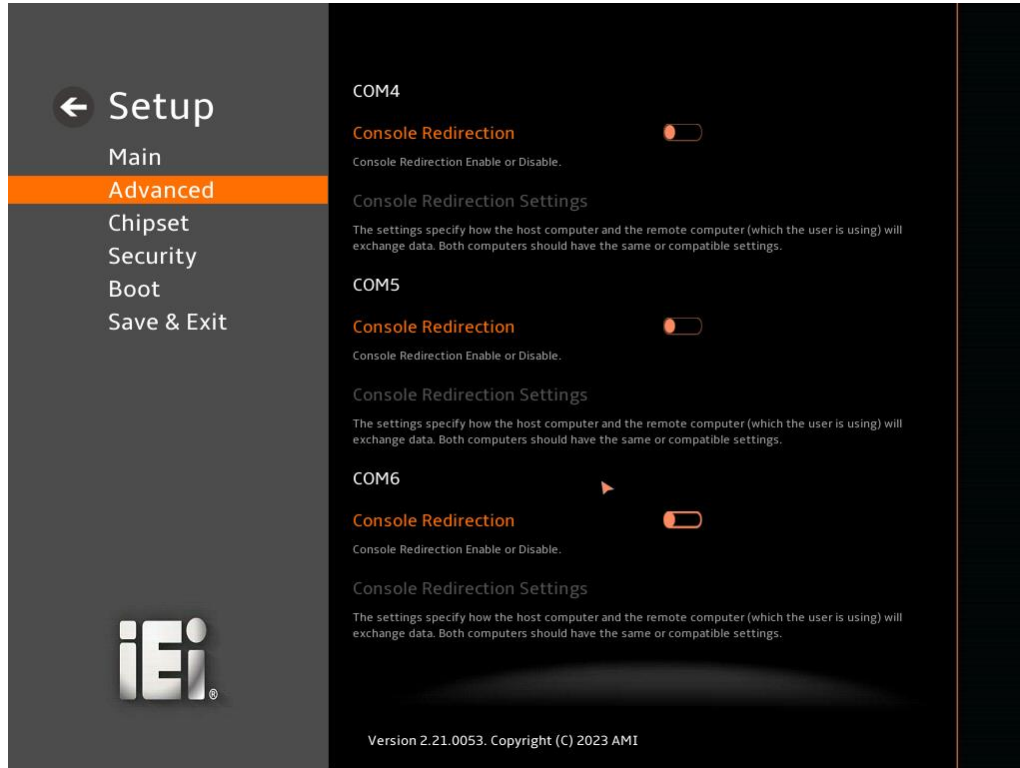

BIOS Menu 21: Serial Port Console Redirection (2/2)

➔ **Console Redirection [Disabled]**

Use **Console Redirection** option to enable or disable the console redirection function.


- ➔ **Disabled** **DEFAULT** Disabled the console redirection function
- ➔ **Enabled** Enabled the console redirection function

The **Console Redirection Settings** submenu will be available when the **Console Redirection** option is enabled.

5.3.6.1 Console Redirection Settings

The following options are available in the **Console Redirection Settings** submenu (**BIOS Menu 22**) when the **COM Console Redirection** (for COM1 to COM6) option is enabled.

IMBA-R680 ATX Motherboard

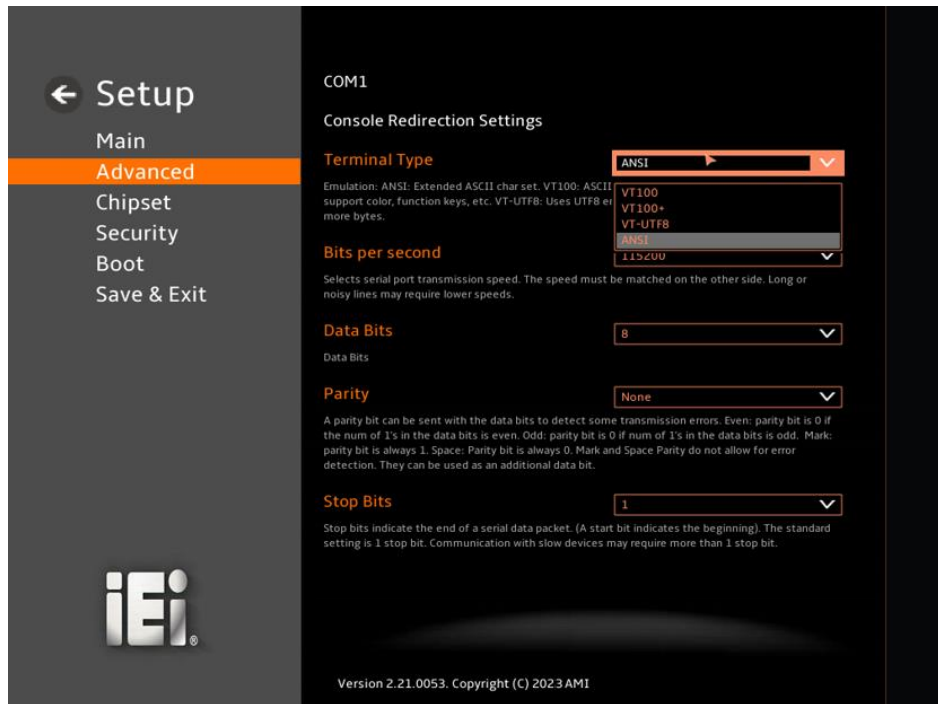

BIOS Menu 22: COM Console Redirection Settings

➔ Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- | | | | |
|---|----------------|----------------|-------------------------------------|
| ➔ | VT100 | | The target terminal type is VT100 |
| ➔ | VT100+ | | The target terminal type is VT100+ |
| ➔ | VT-UTF8 | | The target terminal type is VT-UTF8 |
| ➔ | ANSI | DEFAULT | The target terminal type is ANSI |

➔ Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match on the other side. Long or noisy lines may require lower speeds.

- | | | |
|---|--------------|---|
| ➔ | 9600 | Sets the serial port transmission speed at 9600. |
| ➔ | 19200 | Sets the serial port transmission speed at 19200. |
| ➔ | 38400 | Sets the serial port transmission speed at 38400. |

- **57600** Sets the serial port transmission speed at 57600.
- **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

→ Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8** **DEFAULT** Sets the data bits at 8.

→ Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None** **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.
- **Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- **Mark** The parity bit is always 1. This option does not allow for error detection.
- **Space** The parity bit is always 0. This option does not allow for error detection.

→ Stop Bits [1]


Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- **1** **DEFAULT** Sets the number of stop bits at 1.
- **2** Sets the number of stop bits at 2.

IMBA-R680 ATX Motherboard

5.3.7 NVMe Configuration

Use the **NVMe Configuration (BIOS Menu 23)** menu to display the NVMe controller and device information.

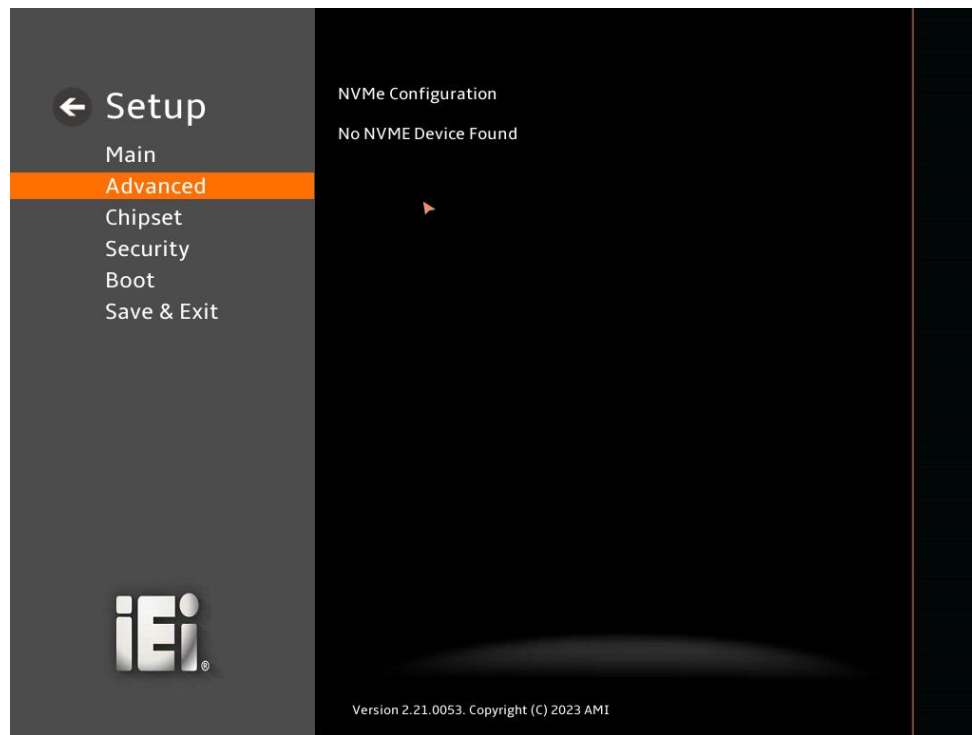

BIOS Menu 23: NVMe Configuration

5.4 Chipset

Use the **Chipset** menu (**BIOS Menu 24**) to access the PCH IO and System Agent (SA) configuration menus.



WARNING!

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.




BIOS Menu 24: Chipset

IMBA-R680 ATX Motherboard

5.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 25**) to configure the System Agent (SA) parameters.

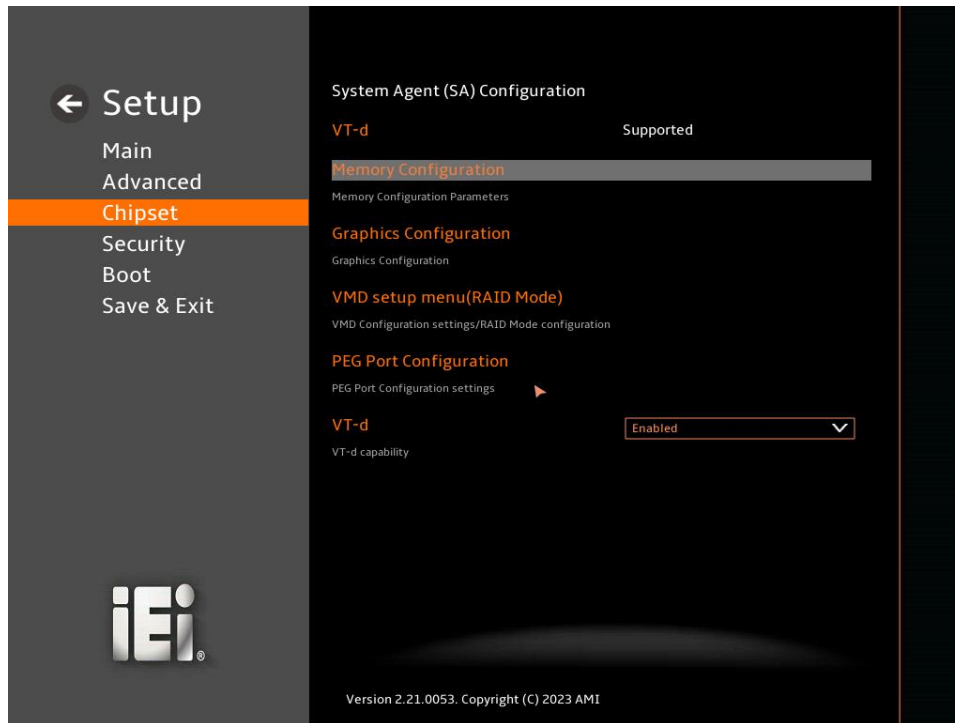

BIOS Menu 25: System Agent (SA) Configuration

→ VT-d [Enabled]

Use the **VT-d** option to enable or disable the VT-d capability.

- **Disabled** Disable the VT-d capability
- **Enabled** **DEFAULT** Enable the VT-d capability

5.4.1.1 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 26**) to view memory information.




BIOS Menu 26: Memory Configuration

IMBA-R680 ATX Motherboard

5.4.1.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 27)** menu to configure the video device connected to the system.

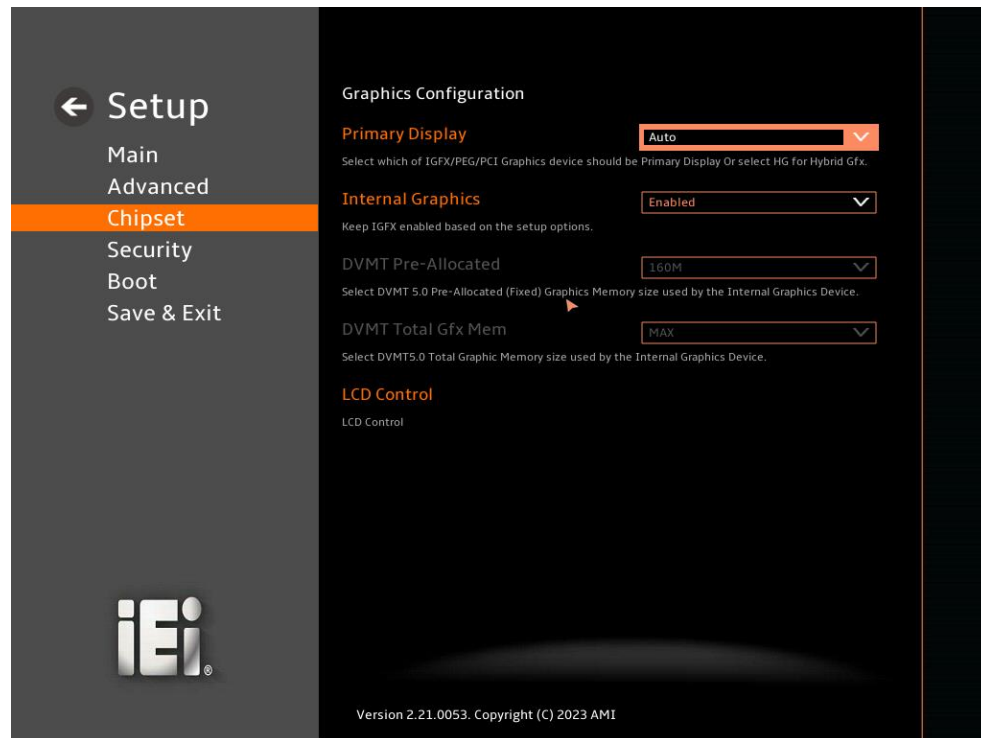

BIOS Menu 27: Graphics Configuration

→ Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto **Default**
- IGFX
- PEG
- PCI
- SG

→ Internal Graphics [Enabled]

Use the **Internal Graphics** option to configure whether to keep IGFX enabled. If user wants to support dual display by internal graphics and external graphics, this Internal Graphics

option should be set to Enabled and the above Primary Display option should be set to IGFX.

- | | | | |
|---|----------|---------|----------------|
| → | Auto | | Auto mode |
| → | Disabled | | Disables IGFX. |
| → | Enabled | Default | Enables IGFX. |

→ **DVMT Pre-Allocated [160M]**

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- | | | |
|---|------|---------|
| ▪ | 80M | |
| ▪ | 160M | Default |


→ **DVMT Total Gfx Mem [MAX]**

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- | | | |
|---|------|---------|
| ▪ | 128M | |
| ▪ | 256M | |
| ▪ | MAX | Default |

IMBA-R680 ATX Motherboard

→ LCD Control

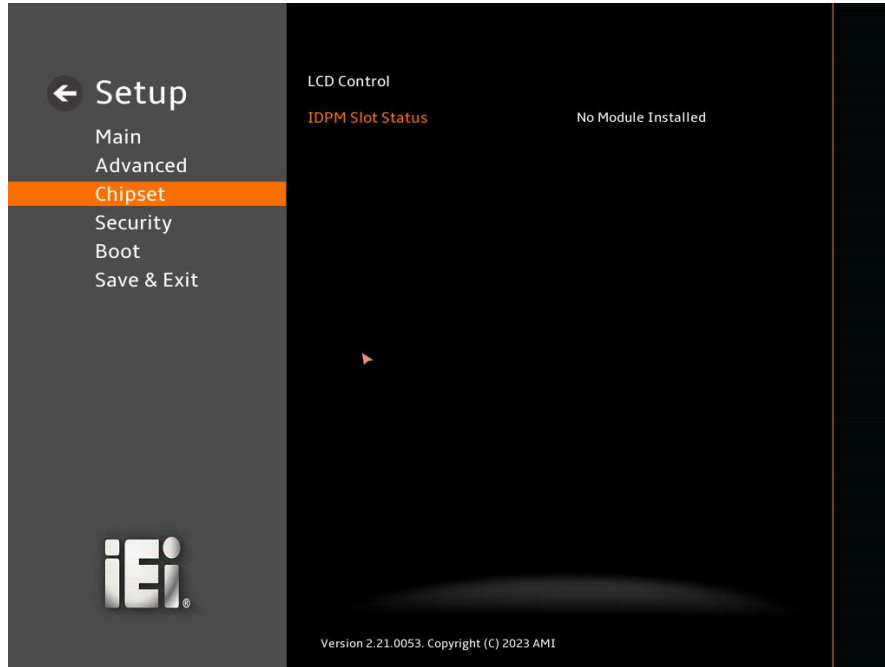

BIOS Menu 28: LCD Control

5.4.1.3 VMD Configuration



BIOS Menu 29: VMD Configuration


➔ **Enable VMD controller [Disabled]**

Use the **Enable VMD controller** option to enable or disable VMD controller.

- ➔ **Disabled** **Default** Disable VMD controller.
- ➔ **Enabled** Enable VMD controller.

IMBA-R680 ATX Motherboard

5.4.1.4 PEG Port Configuration

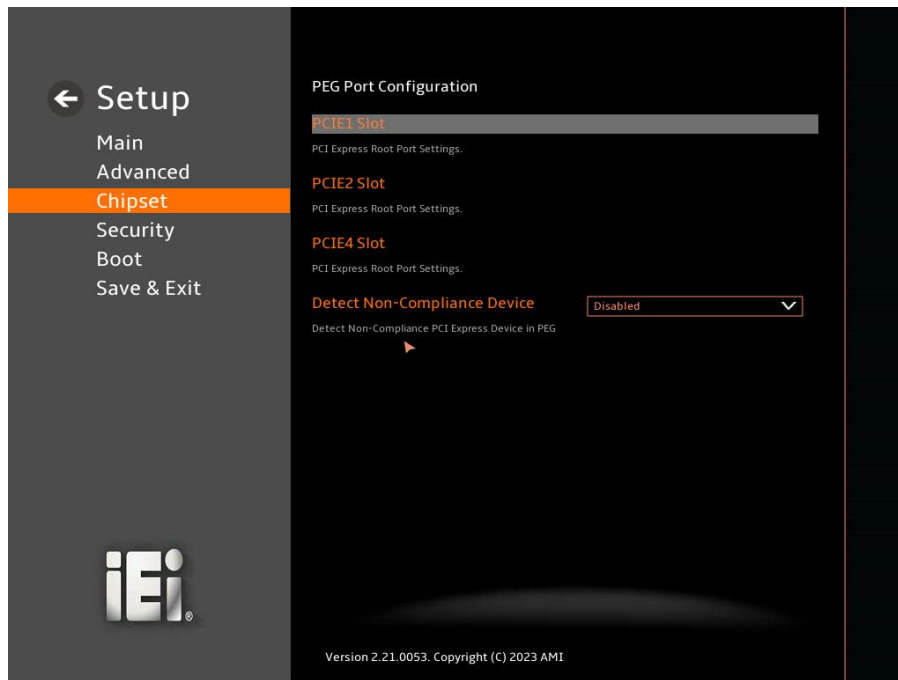

BIOS Menu 30: PEG Port Configuration


→ Detect Non-Compliance Device [Disabled]

Use the **Detect Non-Compliance Device** option to detect non-compliance PCIe device in PEG.

- **Disabled** **DEFAULT** Do not detect non-compliance PCIe device in PEG
- **Enabled** Detect non-compliance PCIe device in PEG

5.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 31**) to configure the PCH parameters.

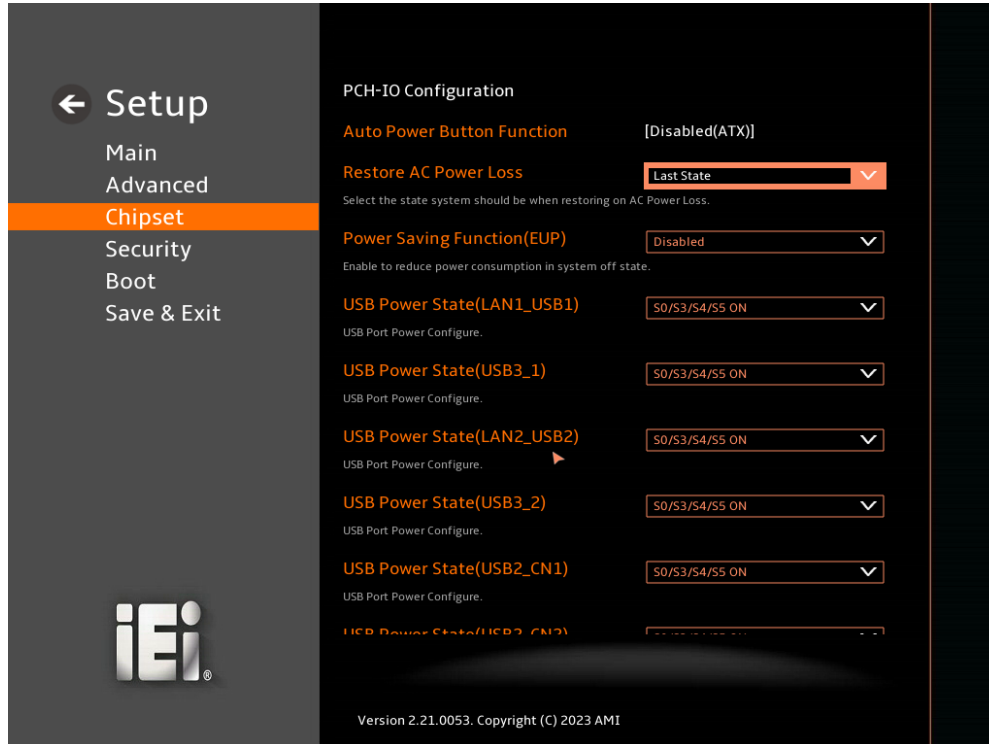

BIOS Menu 31: PCH-IO Configuration (1/2)

IMBA-R680 ATX Motherboard



BIOS Menu 32: PCH-IO Configuration (2/2)

→ Auto Power Button Function [Disabled (ATX)]

Use the **Auto Power Button Function** BIOS option to show the power mode state. Use the J_ATX_AT1 to switch the AT/ATX power mode.

- **Enabled (AT)** The system power mode is AT.
- **Disabled (ATX)** The system power mode is ATX.

→ Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system when the power mode is ATX.

- **Power Off** The system remains turned off
- **Power On** The system turns on

→ **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ **Power Saving Function (EUP) [Disabled]**

Use the **Power Saving Function (EUP)** BIOS option to enable or disable the power saving function.

→ **Disabled** **DEFAULT** Power saving function is disabled.

→ **Enabled** Power saving function is enabled. It will reduce power consumption when the system is off.

→ **USB Power state [S0/S3/S4/S5 ON]**

Use the **USB Power state** option to enable or disable the USB Power.


→ **S0/S3/S4/S5 ON** **DEFAULT** USB Power is on.

→ **S3/S4/S5 OFF** USB Power is off.

IMBA-R680 ATX Motherboard

5.4.2.1 PCI Express Configuration


Use the **PCI Express Configuration** submenu (**BIOS Menu 33**) to configure the PCI Express slots.

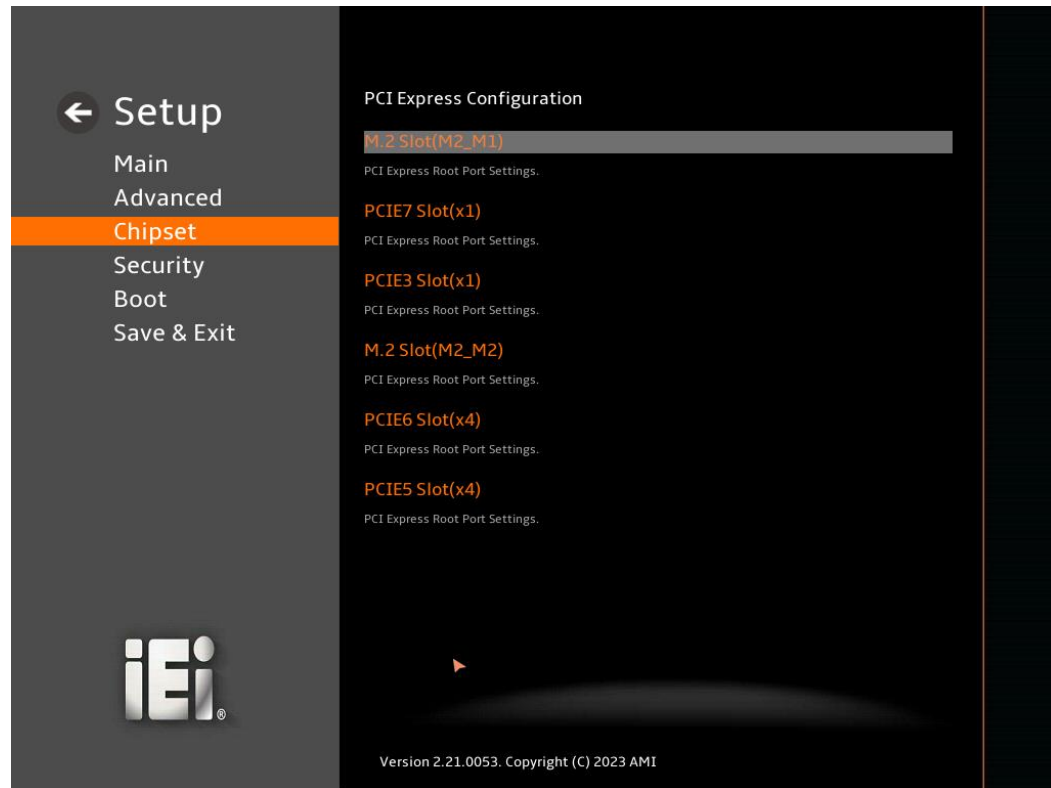

BIOS Menu 33: PCI Express Configuration

5.4.2.1.1 PCIe Root Port Setting

Use the **PCIE3X1**, **PCIE5X4**, **PCIE6X4**, **M2_M1**, **M2_M2**, **PCIE7X1** submenu (**BIOS Menu 34**) to configure the PCI Root Port Setting.

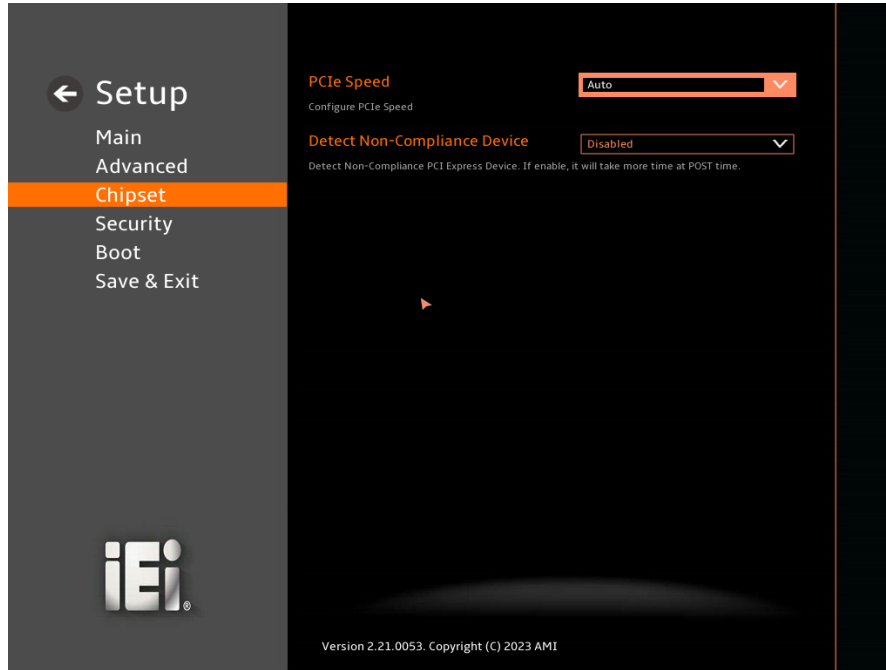

BIOS Menu 34: PCIe Slot Configuration Submenu

➔ **PCIe Speed [Auto]**

Use the **PCIe Speed** option to specify the PCI Express port speed. Configuration options are listed below.

- ➔ **Auto** **DEFAULT** Auto mode.
- ➔ **Gen1** Configure PCIe Speed to Gen1.
- ➔ **Gen2** Configure PCIe Speed to Gen2.
- ➔ **Gen3** Configure PCIe Speed to Gen3.

➔ **Detect Non-Compliance Device [Disabled]**


Use the **Detect Non-Compliance Device** option to configure whether to detect if a non-compliance PCI Express device is connected to the PCI Express port.

- ➔ **Disabled** **DEFAULT** Do not detect if a non-compliance PCI Express device is connected to the PCI Express port.
- ➔ **Enabled** Detect if a non-compliance PCI Express device is connected to the PCI Express port.

IMBA-R680 ATX Motherboard

5.4.2.2 SATA Configuration

Use the **SATA Configuration** menu (**BIOS Menu 35**) to change and/or set the configuration of the SATA devices installed in the system.

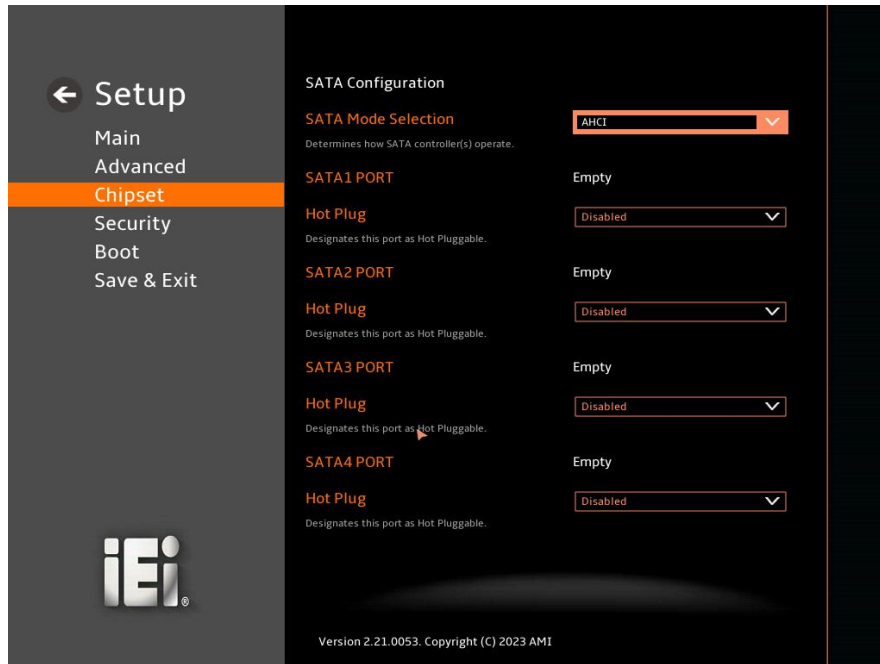

BIOS Menu 35: SATA Configuration

→ SATA Mode Selection [AHCI]

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

- | | | | |
|---|--|----------------|--|
| → | AHCI | DEFAULT | Configures SATA devices as AHCI device. |
| → | Intel RST Premium With Intel Optane System Acceleration | | Configures SATA devices to the Intel RST Premium With Intel Optane System Acceleration mode. |


→ Hot Plug [Disabled]

Use the **Hot Plug** option to designate the correspondent port as hot-pluggable.

- | | | | |
|---|-----------------|----------------|---|
| → | Disabled | DEFAULT | Disables the hot-pluggable function of the SATA port. |
| → | Enabled | | Designates the SATA port as hot-pluggable. |

5.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 36**) to configure the PCH Azalia settings.

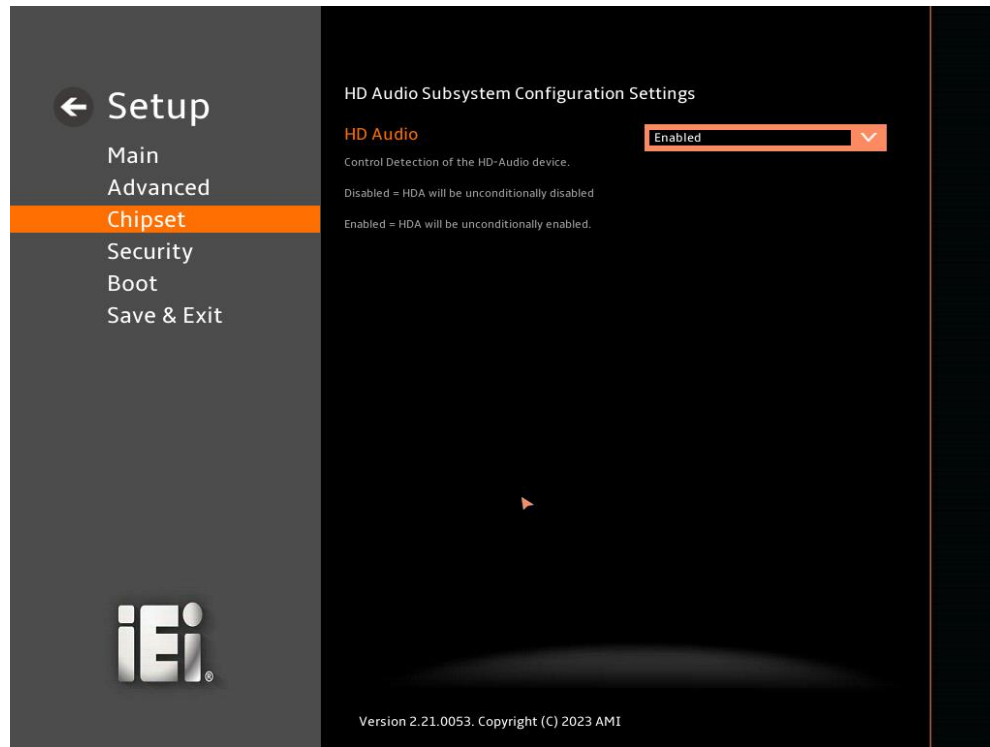

BIOS Menu 36: HD Audio Configuration

→ HD Audio [Enabled]

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- **Disabled** The onboard High Definition Audio controller is disabled.
- **Enabled** **DEFAULT** The onboard High Definition Audio controller is enabled.

IMBA-R680 ATX Motherboard

5.5 Security

Use the **Security** menu (**BIOS Menu 38**) to set system and user passwords.



BIOS Menu 37: Security (1/2)



BIOS Menu 38: Security (2/2)

➔ Administrator Password

Use the **Administrator Password** to set or change an administrator password.


➔ User Password

Use the **User Password** to set or change a user password.

IMBA-R680 ATX Motherboard

5.6 Boot

Use the **Boot** menu (**BIOS Menu 39**) to configure system boot options.

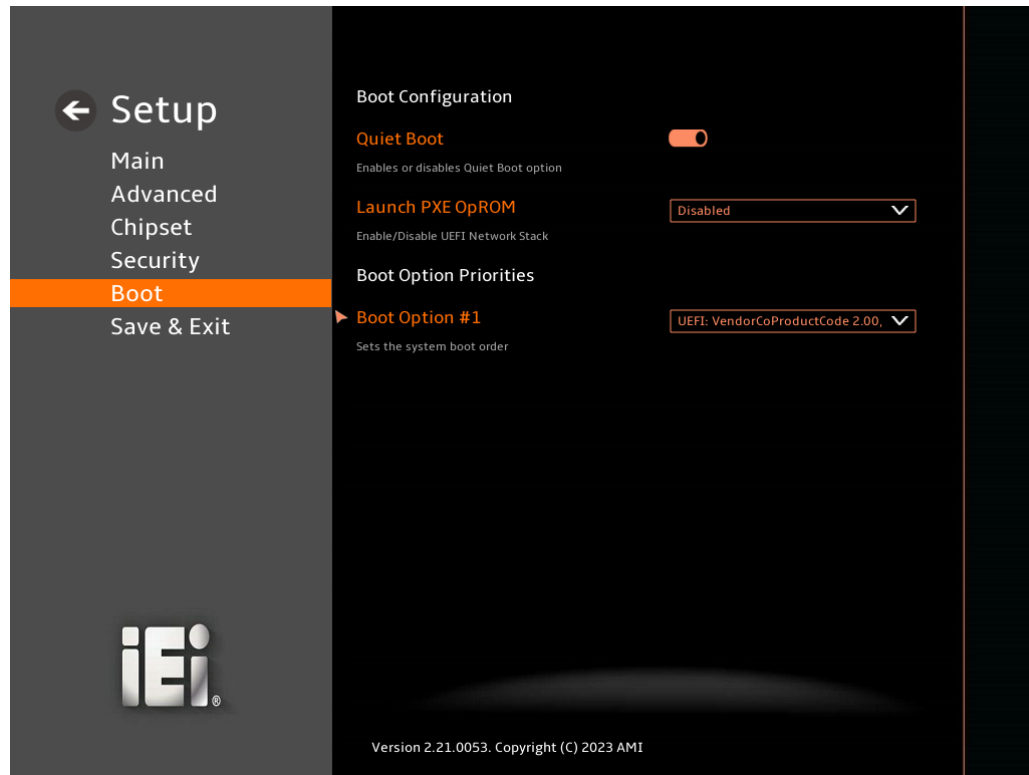

BIOS Menu 39: Boot

5.6.1 Boot Configuration

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed
- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

→ Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- **Enabled** Load PXE Option ROMs.

→ **Option ROM Messages [Force BIOS]**

Use the **Option ROM Messages** option to set the Option ROM display mode.

- **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- **Keep Current** Sets display mode to current.

5.6.2 Boot Option Priorities

Use the Boot Option # N to choose the system boots from the peripherals you selected. The following Boot Options are listed as an example.

→ **Boot Option #1**

Sets the system boot order **ADATA SP580** as the first priority.

- **Windows Boot Manager (P1: ADATA SSD SP580 240GB)**
- **Disabled**

→ **Boot Option #2**


Sets the system boot order **USB Partition 1** as the second priority.

- **UEFI: USB, Partition 1**
- **Disabled**

IMBA-R680 ATX Motherboard

5.7 Save & Exit

Use the **Save & Exit** menu (**BIOS Menu 40**) to load default BIOS values, optimal failsafe values and to save configuration changes.

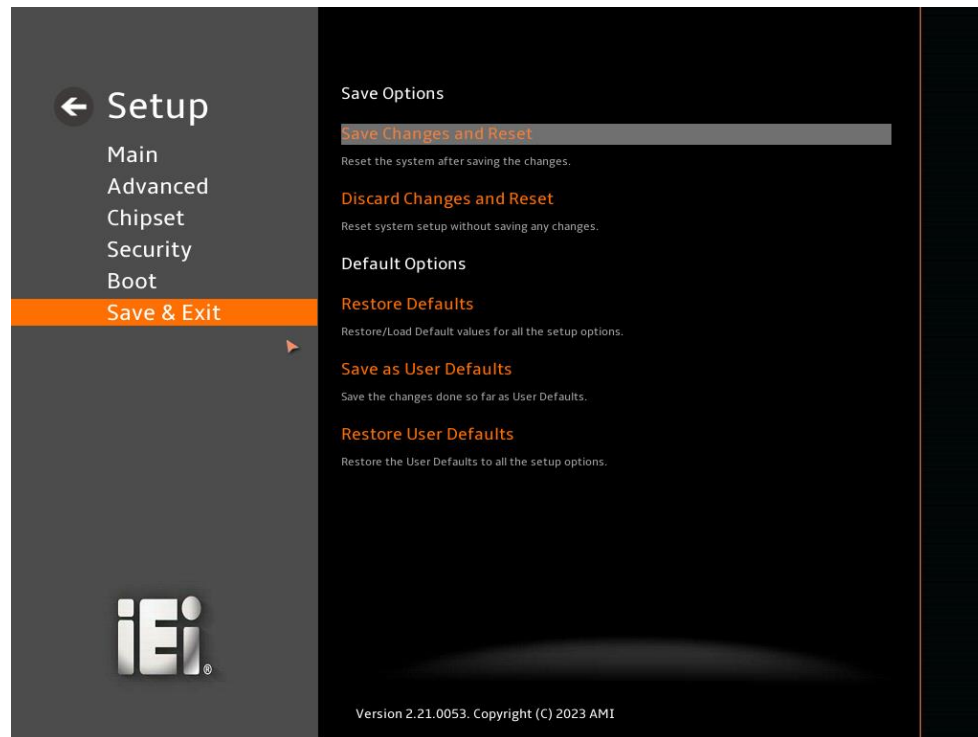

BIOS Menu 40: Save & Exit

→ Save Changes and Reset

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ Discard Changes and Reset

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ Restore Defaults

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment has been tested and found to comply with specifications for CE marking. If the user modifies and/or installs other devices in the equipment, the CE conformity declaration may no longer apply.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Appendix

B


Product Disposal

**CAUTION:**

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union–If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union–The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

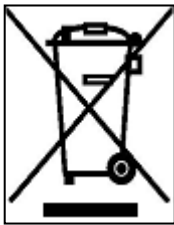

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your device, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

Appendix

C

BIOS Options

Below is a list of BIOS configuration options in the BIOS chapter.

- ➔ BIOS Information92
- ➔ Processor Information.....92
- ➔ PCH Information.....92
- ➔ System Date [xx/xx/xx]93
- ➔ System Time [xx:xx:xx]93
- ➔ Intel (VMX) Virtualization Technology [Enabled]97
- ➔ Active Performance Cores [All]97
- ➔ Active Efficient Cores [All]97
- ➔ Hyper-Threading [Enabled]98
- ➔ Intel(R) SpeedStep(tm) [Enabled]98
- ➔ Turbo Mode [Enabled]98
- ➔ C states [Disabled]98
- ➔ Power Limit 1 [0]98
- ➔ Power Limit 1 Time Window [0]99
- ➔ Power Limit 2 [0]99
- ➔ TPM Support [Enable]100
- ➔ Pending Operation [None]100
- ➔ Wake system with Fixed Time [Enabled]102
- ➔ Serial Port [Enabled]104
- ➔ Device Settings104
- ➔ Device Mode [RS232]105
- ➔ Serial Port [Enabled]105
- ➔ Device Settings106
- ➔ Device Mode [RS232]106
- ➔ Serial Port [Enabled]107
- ➔ Device Settings107
- ➔ Serial Port [Enabled]108
- ➔ Device Settings108
- ➔ Serial Port [Enabled]109
- ➔ Device Settings109
- ➔ Serial Port [Enabled]110
- ➔ Device Settings110
- ➔ PC Health Status112

IMBA-R680 ATX Motherboard

➔ CPU_FAN1 Smart Fan Control [Auto Mode]	113
➔ CPU_FAN1 Start Temperature	114
➔ CPU_FAN1 Off Temperature	114
➔ CPU_FAN1 Start PWM	114
➔ SYS_FAN1 Smart Fan Control [Auto Mode].....	114
➔ SYS_FAN1 Start Temperature	114
➔ SYS_FAN1 Off Temperature	114
➔ SYS_FAN1 Start PWM	115
➔ Console Redirection [Disabled].....	116
➔ Terminal Type [ANSI].....	117
➔ Bits per second [115200].....	117
➔ Data Bits [8]	118
➔ Parity [None].....	118
➔ Stop Bits [1]	118
➔ VT-d [Enabled].....	121
➔ Primary Display [Auto]	123
➔ Internal Graphics [Enabled]	123
➔ DVMT Pre-Allocated [160M]	124
➔ DVMT Total Gfx Mem [MAX].....	124
➔ Enable VMD controller [Disabled]	126
➔ Detect Non-Compliance Device [Disabled]	127
➔ Auto Power Button Function [Disabled (ATX)]	129
➔ Restore AC Power Loss [Last State]	129
➔ Power Saving Function (EUP) [Disabled].....	130
➔ USB Power state [S0/S3/S4/S5 ON].....	130
➔ PCIe Speed [Auto].....	132
➔ Detect Non-Compliance Device [Disabled]	132
➔ SATA Mode Selection [AHCI].....	133
➔ Hot Plug [Disabled]	133
➔ HD Audio [Enabled]	134
➔ Administrator Password	136
➔ User Password	136
➔ Quiet Boot [Enabled]	137
➔ Launch PXE OpROM [Disabled]	137
➔ Option ROM Messages [Force BIOS].....	138

→ Boot Option #1	138
→ Boot Option #2	138
→ Save Changes and Reset	139
→ Discard Changes and Reset	139
→ Restore Defaults	139
→ Save as User Defaults	140
→ Restore User Defaults	140

Appendix

D

Watchdog Timer

**NOTE:**

The following discussion applies to DOS environment. Contact IEI support or visit the IEI website for specific drivers for other operating systems.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

IMBA-R680 ATX Motherboard

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

EXAMPLE PROGRAM:

; INITIAL TIMER PERIOD COUNTER

;

W_LOOP:

;

```

MOV     AX, 6F02H      ;setting the time-out value
MOV     BL, 30         ;time-out value is 48 seconds
INT     15H

```

;

; ADD THE APPLICATION PROGRAM HERE

;

```

CMP     EXIT_AP, 1     ;is the application over?
JNE     W_LOOP        ;No, restart the application

```

```

MOV     AX, 6F02H      ;disable Watchdog Timer
MOV     BL, 0         ;
INT     15H

```

;

; EXIT ;

Appendix

E

Error Beep Code

IMBA-R680 ATX Motherboard

E.1 PEI Beep Codes

Number of Beeps	Description
1	Memory not Installed
1	Memory was installed twice (InstallPeiMemory routine in PEI Core called twice)
2	Recovery started
3	DXE IPL was not found
3	DXE Core Firmware Volume was not found
4	Recovery failed
4	S3 Resume failed
7	Reset PPI is not available

E.2 DXE Beep Codes

Number of Beeps	Description
1	Invalid password
4	Some of the Architectural Protocols are not available
5	No Console Output Devices are found
5	No Console Input Devices are found
6	Flash update is failed
7	Reset protocol is not available
8	Platform PCI resource requirements cannot be met

**NOTE:**

If you have any question, please contact IEI for further assistance.

Appendix

F

Hazardous Materials Disclosure

IMBA-R680 ATX Motherboard

F.1 RoHS II Directive (2015/863/EU)

The details provided in this appendix are to ensure that the product is compliant with the RoHS II Directive (2015/863/EU). The table below acknowledges the presences of small quantities of certain substances in the product, and is applicable to RoHS II Directive (2015/863/EU).

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements									
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)	Bis(2-ethylhexyl) phthalate (DEHP)	Butyl benzyl phthalate (BBP)	Dibutyl phthalate (DBP)	Diisobutyl phthalate (DIBP)
Housing	O	O	O	O	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O	O	O	O	O
Battery	O	O	O	O	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in Directive (EU) 2015/863.</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in Directive (EU) 2015/863.</p>										

F.2 China RoHS

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11364-2014 與 GB/T26572-2011 标准规定的限量要求。