



Storage Server with AMD R-Series Processor, Up to 64 GB DDR4 RAM, Dual M.2 SATA 6Gb/s Slot, Four GbE, 3.5"/2.5" SATA 6Gb/s SSDs, Rack Mount Chassis, RoHS

User Manual





Revision

Date	Version	Changes
April 12, 2018	1.00	Initial release



Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.



Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



HOT SURFACE

This symbol indicates a hot surface that should not be touched without taking care.



Table of Contents

1	INTRODUCTION	1
	1.1 Overview	2
	1.2 Features	
	1.3 Front Panel	3
	1.3.1 LED Indicator Specifications	4
	1.4 Rear Panel	
	1.5 Internal Overview	7
	1.6 Specifications	8
2	UNPACKING	. 10
	2.2 PACKING LIST	11
	2.3 OPTIONAL ITEMS	
3	INSTALLATION	. 14
	3.1 Anti-static Precautions	. 15
	3.2 Installation Precautions	. 15
	3.2.1 High Surface Temperature	. 16
	3.3 MEMORY MODULE INSTALLATION	
	3.4 Expansion Card Installation	. 19
	3.5 M.2 SSD INSTALLATION	. 22
	3.6 HARD DRIVE INSTALLATION	. 26
	3.6.1 Hard Drive Bay Numbering	. 26
	3.6.2 Installing Hard Drive	. 27
	3.7 POWER-ON PROCEDURE	. 31
	3.7.1 Installation Checklist	31
	3.7.2 Power-on Procedure	31
4	MAINTENANCE	. 33
	4.1 COMPONENT REPLACEMENT PROCEDURE	. 34
	4.2 POWER SUPPLY UNIT REPLACEMENT	. 35
5	INTERFACE CONNECTORS	. 36



5.1 PERIPHERAL INTERFACE CONNECTORS	37
5.1.1 Fan Connector (FAN1, FAN2, FAN3, FAN4)	37
5.1.2 ATX Power Connector (ATXPWR1)	38
5.1.3 LPC Connector (LPC_CN1)	38
5.1.4 RDD Connector (RDD1, RDD2)	38
5.1.5 PSU PMBus Connector (CN5)	39
5.1.6 M.2 SATA Card Slot (M2_SATA1, M2_SATA2)	39
5.1.7 Thermistor (SYS_TEMP, M2_TEMP1, M2_TMEP2)	40
5.1.8 On-board Reset Button (SW4)	40
5.2 External Interface Panel Connectors	41
5.2.1 Ethernet Connectors	41
5.2.2 USB 3.0 Connectors	41
5.2.3 USB 2.0 Connectors	42
5.2.4 Console Port	42
5.2.5 EC GPIO	42
5.2.6 SAS Connector	43
A REGULATORY COMPLIANCE	44
B SAFETY PRECAUTIONS	49
B.1 SAFETY PRECAUTIONS	50
B.1.1 General Safety Precautions	50
B.1.2 Anti-static Precautions	51
B.1.3 Product Disposal	52
B.2 MAINTENANCE AND CLEANING PRECAUTIONS	52
B.2.1 Maintenance and Cleaning	52
B.2.2 Cleaning Tools	53
C HAZARDOUS MATERIALS DISCLOSURE	54



List of Figures

Figure 1-1: GRAND-MF Series Storage Server	2
Figure 3-1: Power Connection	
Figure 3-2: Power Button	
Figure 5-1: Jumper and Connector Locations	



List of Tables

Table 1-1: Specifications	9
Table 2-1: Package List	11
Table 2-2: Optional Items	13
Table 5-1: Fan Connector (FAN1, FAN2, FAN3, FAN4) Pinouts	37
Table 5-2: ATX Power Connector (ATXPWR1) Pinouts	38
Table 5-3: LPC Connector (LPC_CN1) Pinouts	38
Table 5-4: RDD Connector (RDD1, RDD2) Pinouts	38
Table 5-6: PSU PMBus Connector (CN5) Pinouts	39
Table 5-7: M.2 SATA Card Slot (M2_SATA1, M2_SATA2) Pinouts	40
Table 5-8: Ethernet Connector Pinouts	41
Table 5-9: USB 3.0 Connector Pinouts	41
Table 5-10: USB 2.0 Connector Pinouts	42
Table 5-11: Console Port Pinouts	42
Table 5-13: EC GPIO Pinouts	42
Table 5-14: SAS Connector Pinouts	43



Chapter

1

Introduction



1.1 Overview



Figure 1-1: GRAND-MF Series Storage Server

The GRAND-MF series is powered by a high-performance AMD R-Series quad-core processor, with up to 64 GB of DDR4 memory. Each GRAND-MF features two M.2 SATA 6Gb/s SSD slots, for use with storage, tiered storage, or cache acceleration. This powerful hardware can also double the encrypted file transfer performance with AES-NI encryption acceleration.

1.2 Features


The GRAND-MF has the following features

- Supports high-performance AMD R-Series quad-core processor
- Supports four DDR4 UDIMM modules with up to 64 GB DDR4 RAM
- Supports two M.2 SATA 6Gb/s SSD slots for fast data transfer and highly-reliable storage.
- Four Gigabit ports
- Support 3.5"/2.5" SATA 6Gb/s HDDs/SSDs




1.3 Front Panel

GRAND-MF-08B & GRAND-MF-12B series:

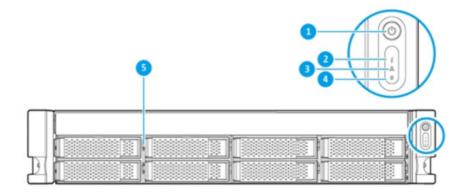

GRAND-MF-16C series:

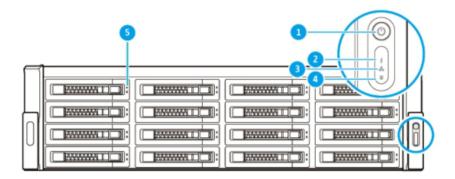

1	Power button	4	Expansion unit LED
2	Status LED	5	Drive status LED
3	Gigabit Ethernet LED		



1.3.1 LED Indicator Specifications

The LED indicators of the GRAND-MF indicate the system status and information. The following table lists the LED indicator behavior. Note that the following information is applicable only when users have properly installed the hard drive, and connected the system to the power supply.


LED	Status	Description		
System Status	Red	 The drive is invalid. The disk volume has reached its full capacity. The disk volume is about to reach its full capacity. The system fan is not functioning. An error occurred when accessing (read/write) the data. A bad sector is detected on the hard drive. 		
	Flashes green every 2 seconds	The system is in S3 sleep mode.		
	Green	The system is ready.		
	Off	All drives are in standby mode.		
	Flashes red	The drive is being located.		
	Red	A drive read/write error has occurred.		
Drive/SSD	Flashes green	The data is being accessed.		
	Green	The drive can be accessed.		
	Off	No drive is detected.		
	Flashes red	The drive is being located.		
	Red	A drive read/write error has occurred.		
M.2 SSD	Flashes green	The data is being accessed.		
	Green	The drive can be accessed.		
	Off	No drive is detected.		





1.4 Rear Panel


GRAND-MF-08B & GRAND-MF-12B & GRAND-MF-16C:

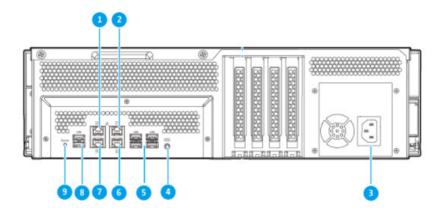

1	Gigabit Ethernet port 3	6	Gigabit Ethernet port 2
2	Gigabit Ethernet port 1	7	Gigabit Ethernet port 4
3	Power port	8	USB 3.0 ports
4	Console port	9	EC GPIO
5	USB 2.0 ports		



GRAND-MF-08B-RP & GRAND-MF-12B-RP & GRAND-MF-16C-RP:

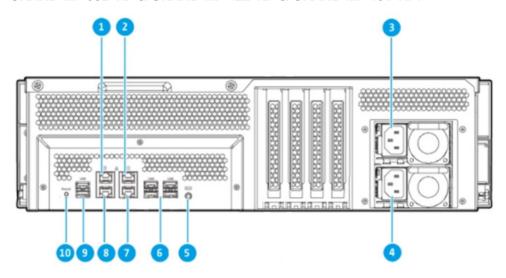


1	Gigabit Ethernet port 3	6	USB 2.0 ports
2	Gigabit Ethernet port 1	7	Gigabit Ethernet port 2
3	Power supply unit 1	8	Gigabit Ethernet port 4
4	Power supply unit 2	9	USB 3.0 ports
5	Console port	10	EC GPIO





1.5 Internal Overview

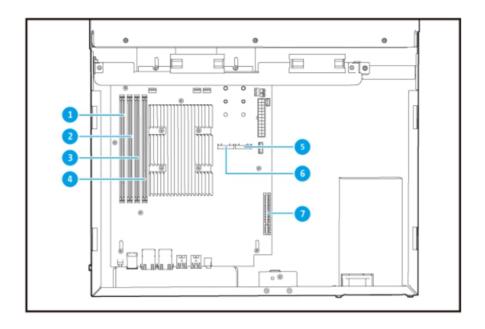

1	DIMM memory slot 4	5	M.2 SSD slot 1
2	DIMM memory slot 3	6	M.2 SSD slot 2
3	DIMM memory slot 2	7	PCle 3.0 x4
4	DIMM memory slot 1		



1.6 Specifications

The specifications for the GRAND-MF are listed below.

	GRAND-MF-16C	GRAND-MF-12B	GRAND-MF-08B			
СРИ	AMD R-Series RX-421ND quad-core 2.1 GHz processor, turbo core up to 3.4 GHz					
Encryption Acceleration	AES-NI					
Memory	Maximum 64 GB (4 x 16 GB) 4 x UDIMM DDR4, up to 2400 MHz (For dual- or quad-DIMM configurations, you must use a pair of identical DDR4 modules.)					
Drive Tray	16 x 3.5"/2.5" SATA					
M.2 SSD Slots	2 x M.2 2280/2260 SATA 6Gb/s SSDs					
USB	2 x USB 3.0 port 4 x USB 2.0 port					
LAN	4 x Gigabit RJ-45 LAN port					
PCle Slot	1 x PCle Gen 3 x4					
LEDs	Status/Power, LAN, USB, HDD					
Buttons	Power/Status button					
Maintenance Port	1 x 3.5 mm console port					
Form Factor	3U rack mount 2U rack mount					
Dimensions (HxWxD) 130 x 481 x 536 mm 5.12" x 18.94" x 21.10" 89 x 482 x 534 mr 3.5" x 18.98" x 21.						
Weight	eight 15.42 kg (34 lbs.) 11.81 kg (26.04 lbs.) 1		GRAND-MF-08B-RP: 10.96 kg (24.16 lbs.) GRAND-MF-08B:			



	14.25 kg (31.42 lbs.)	10.71 kg (23.62 lbs.)	9.86 kg (21.74 lbs.)	
Power Supply	GRAND-MF-16C-RP: 500W (x2), 100-240V AC, 50/60 Hz GRAND-MF-16C: 350W, 100-240V AC, 50/60 Hz	GRAND-MF-12B-RP: 300W (x2), 100-240V AC, 50/60 Hz GRAND-MF-12B: 350W, 100-240V AC, 50/60 Hz	GRAND-MF-08B-RP: 250W (x2), 100-240V AC, 50/60 Hz GRAND-MF-08B: 250W, 100-240V AC, 50/60 Hz	
Operating Temperature	0 to 40° C (32 to 104° F)			
Relative Humidity	5 to 95% non-condensing, wet bulb: 27°C			
Fan	4 x 92 mm, 12V DC	2 x 70 mm, 12V DC		

Table 1-1: Specifications



Chapter

2

Unpacking



2.2 Packing List



If any of the components listed in the checklist below are missing, do not proceed with the installation. Contact the IEI reseller or vendor the GRAND-MF was purchased from or contact an IEI sales representative directly by sending an email to sales@ieiworld.com.

The GRAND-MF is shipped with the following components:

Quantity	Item	Image
2	Ethernet cable	O
2	Power cord	,6
1	Screw pack for 2.5" HDD installation	4545
1	Screw pack for 3.5" HDD installation	

Table 2-1: Package List



2.3 Optional Items

The following are optional components which may be separately purchased:

Item and Part Number	Image
Dual-port 10GbE SFP+ network expansion card (P/N: LAN-10G2SF-MLX)	
Dual-port 10GBASE-T network expansion card (P/N : LAN-10G2T-X550)	
Dual-port Gigabit Network Expansion Card (P/N: LAN-1G2T-I210)	
USB 3.1 Gen 2 10Gbps Type-A dual-port PCle card (P/N : USB-U31A2P01)	
SSD module (M.2 2280 SATA 6Gb/s, 256GB) (P/N: SSD-M2080-256GB-A01)	Garage Parison
Heatsink for M.2 SSD module,14*14MM (P/N: HS-M2SSD-01)	



Item and Part Number	Image
Dual-port storage expansion, SAS 12Gbps (P/N: SAS-12G2E)	
MiniSAS cable (SFF-8644 to SFF-8644),1.0 m (P/N : CAB-SAS10M-8644)	
MiniSAS cable (SFF-8644 to SFF-8644), 0.5m	
Rail kit for rackmout, maxmium load 57 kg (P/N: RAIL-A03-57)	
Rail kit for rackmout (P/N: RAIL-B02)	

Table 2-2: Optional Items



Chapter

3

Installation



3.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the GRAND-MF may result in permanent damage to the GRAND-MF and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the WAFER series motherboard and the power module. (Dry climates are especially susceptible to ESD.) It is therefore critical that whenever the GRAND-MF is opened and any electrical component handled, the following anti-static precautions are strictly adhered to.

- Wear an anti-static wristband: Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- Self-grounding: Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- Use an anti-static pad: When configuring the GRAND-MF, place it on an anti-static pad. This reduces the possibility of ESD damaging the GRAND-MF.

3.2 Installation Precautions

During installation, be aware of the precautions below:

- Read the user manual: The user manual provides a complete description of the GRAND-MF, installation instructions and configuration options.
- DANGER! Disconnect Power: Power to the GRAND-MF must be disconnected during the installation process. Failing to disconnect the power may cause severe injury to the body and/or damage to the system.
- Qualified Personnel: The GRAND-MF must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may



only be carried out by qualified personnel who are familiar with the associated dangers.

- Air Circulation: Make sure there is sufficient air circulation when installing
 the GRAND-MF. The GRAND-MF's cooling vents must not be obstructed by
 any objects. Blocking the vents can cause overheating of the GRAND-MF.
 Leave at least 5 cm of clearance around the GRAND-MF to prevent
 overheating.
- Grounding: The GRAND-MF should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the GRAND-MF.

3.2.1 High Surface Temperature



WARNING:

Some surfaces of the equipment may become hot during operation.

The surface temperature may be up to several tens of degrees hotter than the ambient temperature. Under these circumstances, the equipment needs to be protected against accidental contact.

The equipment is intended for installation in a RESTRICTED ACCESS LOCATION.


- Access can only be gained by SERVICE PERSONS or by USERS who have been instructed about the reasons for the restrictions applied to the location and about any precautions that shall be taken.
- Access is through the use of a TOOL or lock and key, or other means of security, and is controlled by the authority responsible for the location.




3.3 Memory Module Installation

The GRAND-MF has four memory slots and supports DDR4 UDIMMs. To install a memory module, follow the steps below:

- **Step 1:** Turn off the GRAND-MF. Disconnect the power adaptor, network cable(s), and any other connectors or cables from the GRAND-MF.
- **Step 2:** Put on an antistatic wrist strap to prevent electrostatic discharge. The crocodile clip should be connected to the ground.
- **Step 3**: Loosen the 2 screws on the rear of the GRAND-MF as shown below.

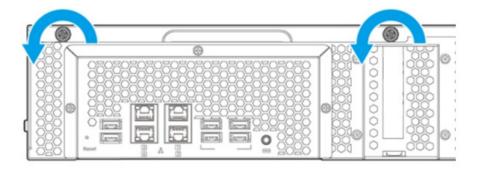


Step 4: Slide the cover away from the GRAND-MF using the handle. Lift the cover.

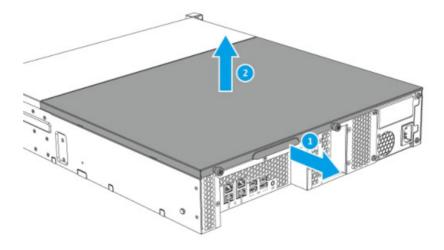


- **Step 5**: Release the ejector clips gently by pulling them out of the sides of the RAM slot.
- **Step 6:** Grip the new RAM on the edges to avoid touching contacts or circuitry on the module.



Step 7: Line up the notch on the RAM to the break in the slot. Set the stick into the slot and apply equal pressure onto both ends of the stick until the clamps on the side click and fully lock the RAM in.

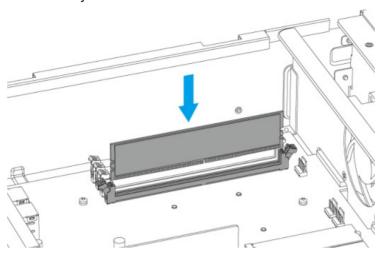


Step 8: Attach the top cover. Place the cover on the GRAND-MF. Slide the cover toward the GRAND-MF. Tighten the screws.

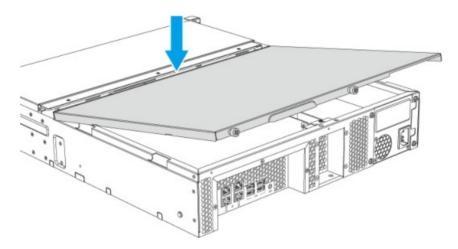





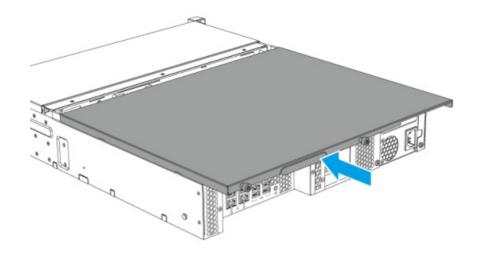

Step 9: Reconnect all cables back into the GRAND-MF.

3.4 Expansion Card Installation



WARNING!


The following instructions should only be performed by an authorized and trained technician.

Strictly adhere to the instructions to install a network expansion card on the system. Failure to do so could result in injury to human body or death.


The GRAND-MF provides four low-profile PCIe expansion slots so that users can add functionality to their system. To install expansion card, follow the steps below.

Step 1: Turn off the GRAND-MF. Disconnect the power adaptor, network cable(s), and any other connectors or cables from the GRAND-MF.

- **Step 2:** Before installing the network expansion card, put on an antistatic wrist strap to prevent electrostatic discharge. The crocodile clip should be connected to the ground.
- **Step 3**: Loosen the 2 screws on the rear of the GRAND-MF as shown below.

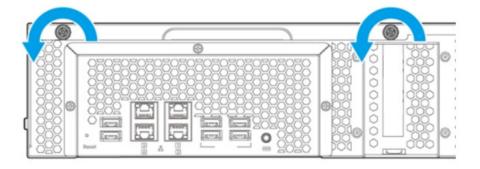


Step 4: Slide the cover away from the GRAND-MF using the handle. Lift the cover.

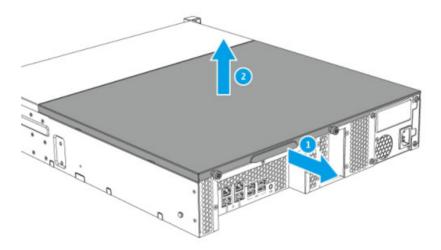


Step 5: Remove screw from the expansion slot cover and detach cover.




Step 6: Line up the notch on the expansion card to the break in the PCIe slot. Fully insert the expansion card to the expansion slot. Fasten screw to lock in card.

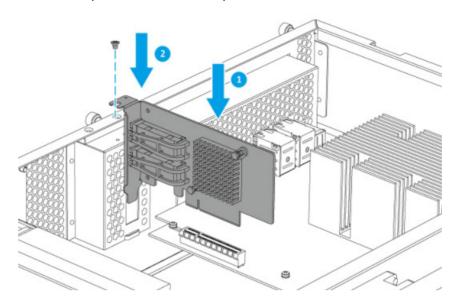

Step 7: Attach the top cover. Place the cover on the GRAND-MF. Slide the cover toward the GRAND-MF. Tighten the screws.

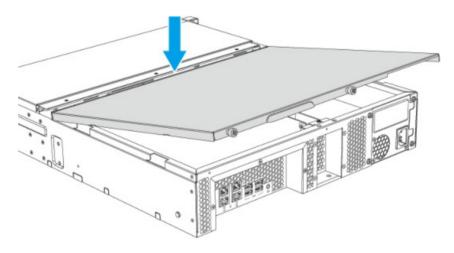



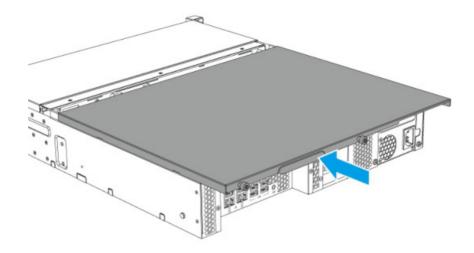

Step 8: Reconnect all cables back into the GRAND-MF.

3.5 M.2 SSD Installation

The GRAND-MF has two M.2 SATA 6Gb/s SSD slots. To install a M.2 SSD, follow the steps below:




NOTE:


IEI recommends installing heatsinks on the M.2 SSD controllers to enhance cooling efficiency and to ensure consistent performance.

- **Step 1:** Turn off the GRAND-MF. Disconnect the power adaptor, network cable(s), and any other connectors or cables from the GRAND-MF.
- **Step 2:** Put on an antistatic wrist strap to prevent electrostatic discharge. The crocodile clip should be connected to the ground.
- **Step 3:** Loosen the 2 screws on the rear of the GRAND-MF as shown below.



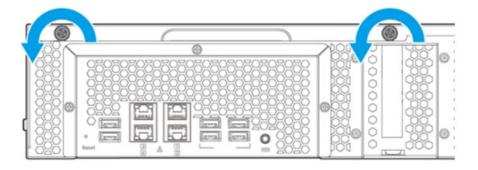

Step 4: Slide the cover away from the GRAND-MF using the handle. Lift the cover.

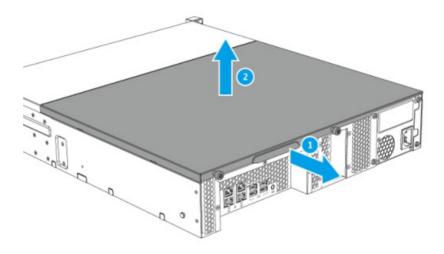


Step 5: Install a heatsink on the M.2 SSD controller. Locate the controller on the M.2 SSD. The controller location varies depending on the model and manufacturer of the M.2 SSD. For details, refer to the documentation or contact the manufacturer. Remove the protective film from the bottom of the heatsink.








Install the heatsink on the controller.

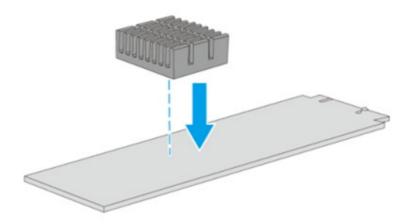


Step 6: Insert a riser screw for a 2260 M.2 SSD.

Step 7: Install the M.2 SSD. Insert the M.2 SSD into the slot.

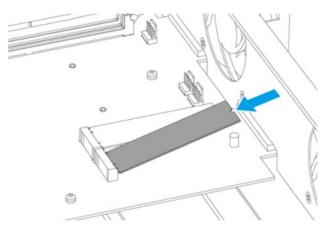


Attach the flat head screw to the riser screw.

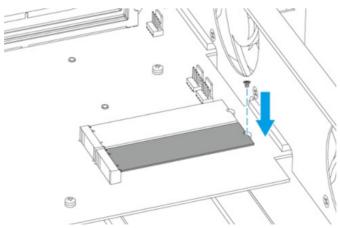



Step 8: Attach the top cover. Place the cover on the GRAND-MF. Slide the cover toward the GRAND-MF. Tighten the screws.

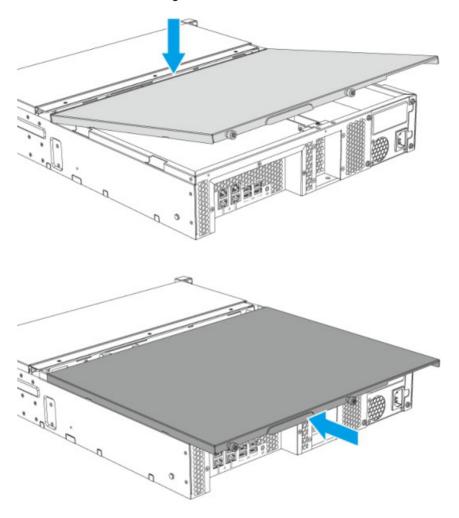



3.6 Hard Drive Installation

The GRAND-MF series is compatible with 2.5-inch/3.5-inch SATA hard drives.




NOTE:

Before installing hard drives, ensure the disk drives (HDDs/SSDs) that you use are compatible with the GRAND-MF.

3.6.1 Hard Drive Bay Numbering


GRAND-MF-08B bay numbering:

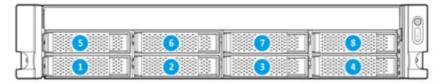

GRAND-MF-12B bay numbering:



GRAND-MF-16C bay numbering:

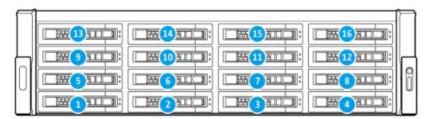






3.6.2 Installing Hard Drive

To install hard drives in GRAND-MF series, follow the steps below:


Step 1: Turn off the GRAND-MF.

Step 2: Remove drive tray:


12B & 08B SKU: Pull the handle to release the tray and pull the tray out.

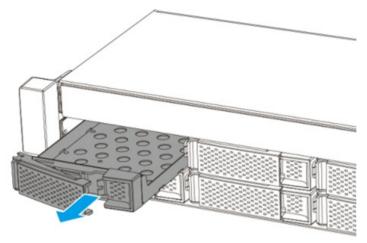


16C SKU: Locate the lock. Slide the lock to the left. Push the gray button to release the handle.

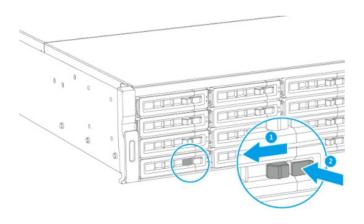



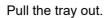

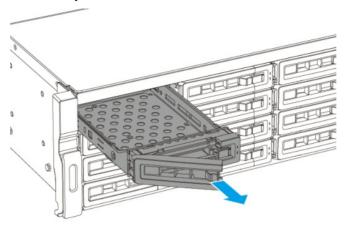


Step 3: Install a 3.5" or 2.5" disk drive on the drive tray.

12B & 08B SKU:

3.5" disk drive

2.5" disk drive

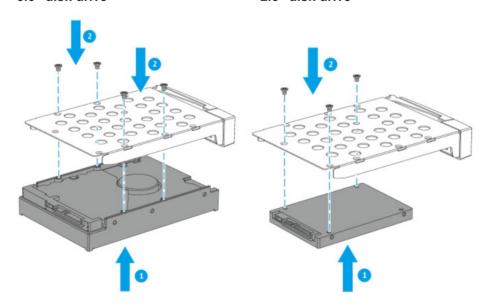




16C SKU:

3.5" disk drive

2.5" disk drive


Step 4: Load the drive tray into the drive bay.

12B & 08B SKU: Insert the tray into the bay. Push the handle.

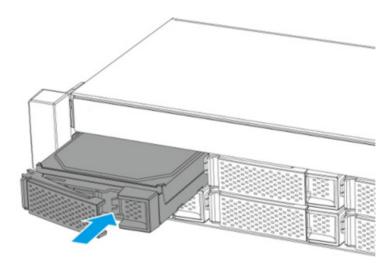



16C SKU: Insert the tray into the bay. Push the handle. Slide the lock to the right.

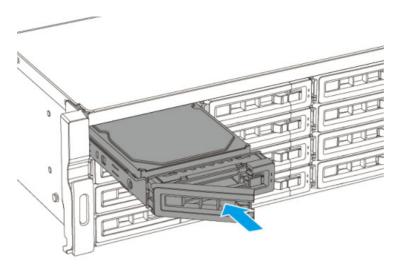



WARNING:

Users are strongly recommended to turn OFF the GRAND-MF before replacing the hard drive to reduce the risk of electric shock.



CAUTION:

IEI disclaims any responsibility for product damage/malfunction or data loss/recovery due to misuse or improper installation of hard disks in any occasions for any reasons.



3.7 Power-On Procedure

3.7.1 Installation Checklist



WARNING:

Make sure a power supply with the correct input voltage is being fed into the system. Incorrect voltages applied to the system may cause damage to the internal electronic components and may also cause injury to the user.

To power on the GRAND-MF, please make sure of the following:

- The HDD/SSD is installed
- The LAN cable is connected
- The power cables are plugged in
- The system is securely mounted

3.7.2 Power-on Procedure

To power-on the GRAND-MF please follow the steps below:

Step 1: Connect the power source to the power input jack(s).

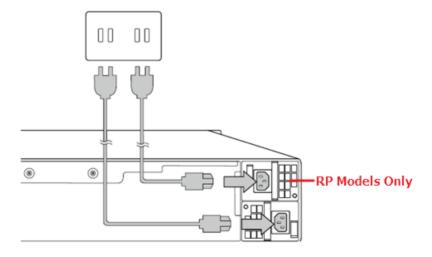


Figure 3-1: Power Connection



Step 2: Push the power button (Figure 3-2).

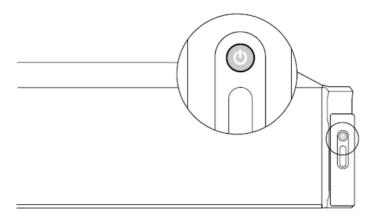


Figure 3-2: Power Button

Step 3: To turn off the GRAND-MF, press the power button for 1.5 seconds.

To force turn off, press the power button for 5 seconds.



Chapter

4

Maintenance





WARNING:

The following instructions should only be performed by an authorized and trained technician.

Before starting, please ensure that you turn off the GRAND-MF, disconnect the power adaptor, network cable(s), and also remove any other device/cable that is attached to the server.

Take Anti-Static precautions whenever maintenance is being carried out on the system components. Failure to take anti-static precautions can cause permanent system damage. For more details on anti-static precautions, please refer to **Section 3.1**.

4.1 Component Replacement Procedure



WARNING!

Users are not advised to attempt to repair or replace any internal or external components of the GRAND-MF storage server other than those listed below. If any other components fail or need replacement, contact the IEI reseller or vendor you purchased the GRAND-MF from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@ieiworld.com.

The industrial server components listed below can all be replaced if they fail:


- SO-DIMM module (see Section 3.3)
- Power supply unit




4.2 Power Supply Unit Replacement

To replace a failed power supply unit, please follow the steps below.

- **Step 1:** Turn off the GRAND-MF. Disconnect the power adaptor, network cable(s), and any other connectors or cables from the GRAND-MF.
- Step 2: Press the latch toward the handle and then pull the PSU out.

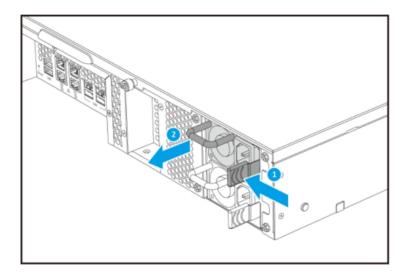

Step 3: Insert new power supply into the GRAND-MF.

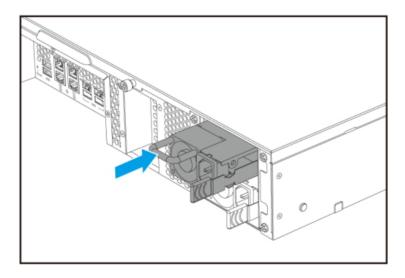

Step 4: Connect the power adaptor and cables to the GRAND-MF.

Step 5: Power on the system.



Chapter

5

Interface Connectors



5.1 Peripheral Interface Connectors

The GRAND-MF system motherboard comes with a number of peripheral interface connectors. The connector locations are shown in **Figure 5-1**. The connector pinouts for these connectors are listed in the following sections.

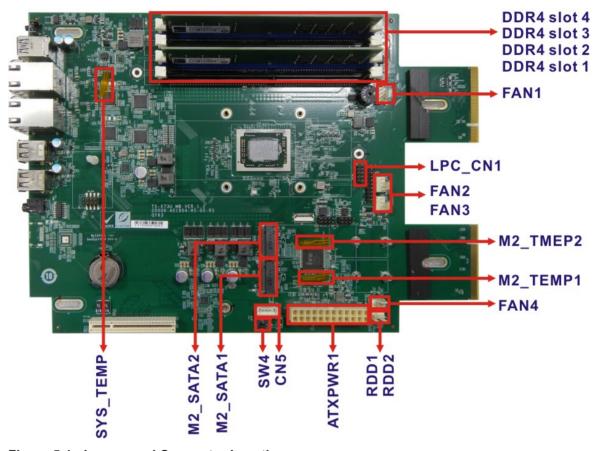


Figure 5-1: Jumper and Connector Locations

5.1.1 Fan Connector (FAN1, FAN2, FAN3, FAN4)

PIN NO.	DESCRIPTION
1	GND
2	+12V
3	FANIO
4	PWM

Table 5-1: Fan Connector (FAN1, FAN2, FAN3, FAN4) Pinouts



5.1.2 ATX Power Connector (ATXPWR1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	+3.3V	13	+3.3V
2	+3.3V	14	NC
3	GND	15	GND
4	+5V	16	PS_ON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	Power good	20	NC
9	5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

Table 5-2: ATX Power Connector (ATXPWR1) Pinouts

5.1.3 LPC Connector (LPC_CN1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	LPC_CLKOUT0_R	2	LPC_AD1_R
3	PLTRST#	4	LPC_AD0_R
5	LPC_FRAME#_R	6	+3.3V
7	LPC_AD3_R	8	GND
9	LPC_AD2_R	10	

Table 5-3: LPC Connector (LPC_CN1) Pinouts

5.1.4 RDD Connector (RDD1, RDD2)

PIN NO.	DESCRIPTION
1	GND
2	EC PSUOK

Table 5-4: RDD Connector (RDD1, RDD2) Pinouts

5.1.5 PSU PMBus Connector (CN5)

PIN NO.	DESCRIPTION
1	+3.3V
2	GND
3	NC
4	PMBUS_DAT
5	PMBUS_CLK

Table 5-5: PSU PMBus Connector (CN5) Pinouts

5.1.6 M.2 SATA Card Slot (M2_SATA1, M2_SATA2)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	3.3V
3	GND	4	3.3V
5	N/C	6	N/C
7	N/C	8	N/C
9	GND	10	DAS/DSS#(O)(OD)
11	N/C	12	3.3V
13	N/C	14	3.3V
15	GND	16	3.3V
17	N/C	18	3.3V
19	N/C	20	N/C
21	GND	22	N/C
23	N/C	24	N/C
25	N/C	26	N/C
27	GND	28	N/C
29	N/C	30	N/C
31	N/C	32	N/C
33	GND	34	N/C
35	N/C	36	N/C
37	N/C	38	DEVSLP(I)(0/3.3V)
39	GND	40	N/C
41	SATA-B+	42	N/C



PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
43	SATA-B-	44	N/C
45	GND	46	N/C
47	SATA-A-	48	N/C
49	SATA-A+	50	N/C
51	GND	52	N/C
53	N/C	54	N/C
55	N/C	56	Reserved/MFG Data
57	GND	58	Reserved/MFG Clock
59	Module Key	60	Module Key
61	Module Key	62	Module Key
63	Module Key	64	Module Key
65	Module Key	66	Module Key
67	N/C	68	SUSCLK(32kHz) (I)(0/3.3V)
69	PEDET(GND-SATA)	70	3.3V
71	GND	72	3.3V
73	GND	74	3.3V
75	GND		

Table 5-6: M.2 SATA Card Slot (M2_SATA1, M2_SATA2) Pinouts

5.1.7 Thermistor (SYS_TEMP, M2_TEMP1, M2_TMEP2)

Thermistor operating temperature range: -30°C ~ 100°C



5.1.8 On-board Reset Button (SW4)





5.2 External Interface Panel Connectors

The table below lists the rear panel connectors on the motherboard. Pinouts of these connectors can be found in the following sections. Refer to **Section 1.4** for connector locations.

5.2.1 Ethernet Connectors

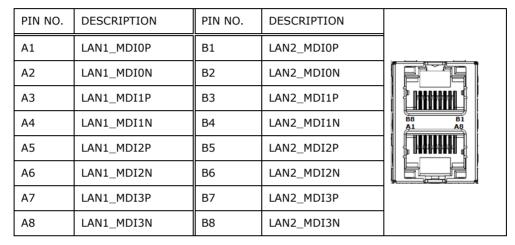


Table 5-7: Ethernet Connector Pinouts

5.2.2 USB 3.0 Connectors

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION	
1	+5V	10	+5V	
2	USB2P0_DM0	11	USB2P0_DM1	
3	USB2P0_DP0	12	USB2P0_DP1	13 12 11 10
4	GND	13	GND	14 15 16 17 18
5	USB3P0_RXDN0	14	USB3P0_RXDN1	
6	USB3P0_RXDP0	15	USB3P0_RXDP1	4 3 2 1
7	GND	16	GND	5 6 7 8 9
8	USB3P0_TXDN0	17	USB3P0_TXDN1	
9	USB3P0_TXDP0	18	USB3P0_TXDP1	

Table 5-8: USB 3.0 Connector Pinouts



5.2.3 USB 2.0 Connectors

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION	
1	VCC	5	VCC	5
2	USB_DATA-	6	USB_DATA-	
3	USB_DATA+	7	USB_DATA+	
4	GND	8	GND	

Table 5-9: USB 2.0 Connector Pinouts

5.2.4 Console Port

The console port supports COM signal.

PIN NO.	DESCRIPTION	
1	GND	
2	SIN1	
3	SOUT1	
4	NC	
5	NC	


Table 5-10: Console Port Pinouts

5.2.5 EC GPIO

PIN NO.	DESCRIPTION
1	GND
2	LPCPD#/WUI6/GPE6
3	GND
4	GND

Table 5-11: EC GPIO Pinouts


5.2.6 SAS Connector

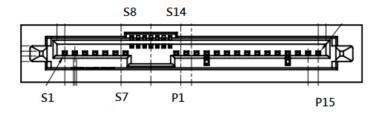

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
S1	GND	P1	NC
S2	BP_SAS_TX_P	P2	NC
S3	BP_SAS_TX_N	Р3	BP_HDD1_PWR_EN
S4	GND	P4	GND
S5	BP_SAS_RX_N	P5	GND
S6	BP_SAS_RX_P	P6	GND
S7	GND	P7	+5V_HDD
S8	GND	P8	+5V_HDD
S9	NC	Р9	+5V_HDD
S10	NC	P10	GND
S11	GND	P11	HDD1_LED_ACT#
S12	NC	P12	GND
S13	NC	P13	+12V_PS
S14	GND	P14	+12V_PS
		P15	+12V_PS

Table 5-12: SAS Connector Pinouts



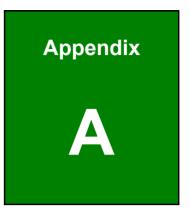

Regulatory Compliance



DECLARATION OF CONFORMITY

 ϵ

This equipment is in conformity with the following EU directives:

- EMC Directive 2004/108/EC
- Low-Voltage Directive 2006/95/EC
- RoHS II Directive 2011/65/EU

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the R&TTE Directive 1999/5/EC.

English

IEI Integration Corp declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Български [Bulgarian]

IEI Integration Corp. декла ⊑ира, че този оборудване е в съответствие със съществените изисквания и другите приложими правила на Директива 1999/5/ЕС.

Česky [Czech]

IEI Integration Corp tímto prohlašuje, že tento zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

Dansk [Danish]

IEI Integration Corp erklærer herved, at følgende udstyr overholder de væsentlige krav c øvrige relevante krav i direktiv 1999/5/EF.

Deutsch [German]

IEI Integration Corp, erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 1999/5/EU.

Eesti [Estonian]

IEI Integration Corp deklareerib seadme seadme vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.



Español [Spanish]

IEI Integration Corp declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Ελληνική [Greek]

ΙΕΙ Integration Corp ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.

Français [French]

IEI Integration Corp déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano [Italian]

IEI Integration Corp dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Latviski [Latvian]

IEI Integration Corp deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 1999/5/EK.

Lietuvių [Lithuanian]

IEI Integration Corp deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Nederlands [Dutch]

IEI Integration Corp dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Malti [Maltese]

IEI Integration Corp jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.

Magyar [Hungarian]

IEI Integration Corp nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Polski [Polish]

IEI Integration Corp oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Português [Portuguese]

IEI Integration Corp declara que este equipamento est □ conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.



Româna [Romanian]

IEI Integration Corp declară că acest echipament este i □ conformitate cu cerinţele esenţiale şi cu celelalte prevederi relevante ale Directivei 1999/5/CE.

Slovensko [Slovenian]

IEI Integration Corp izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Slovensky [Slovak]

IEI Integration Corp týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Suomi [Finnish]

Svenska [Swedish]

IEI Integration Corp förklarar att denna utrustningstyp står I överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.



FCC WARNING



This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Federal Communication Commission Interference Statement

This equipment has been assembled with components that comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Appendix

B

Safety Precautions





WARNING:

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the GRAND-MF.

B.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- Follow the electrostatic precautions outlined below whenever the GRAND-MF is opened.
- Make sure the power is turned off and the power cord is disconnected whenever the GRAND-MF is being installed, moved or modified.
- Do not apply voltage levels that exceed the specified voltage range.
 Doing so may cause fire and/or an electrical shock.
- Electric shocks can occur if the GRAND-MF chassis is opened when the GRAND-MF is running.
- If considerable amounts of dust, water, or fluids enter the GRAND-MF, turn off the power supply immediately, unplug the power cord, and contact the GRAND-MF vendor.
- DO NOT:
 - O Drop the GRAND-MF against a hard surface.
 - O In a site where the ambient temperature exceeds the rated temperature





B.1.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the GRAND-MF may result in permanent damage to the GRAND-MF and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the GRAND-MF. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the GRAND-MF is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- Wear an anti-static wristband: Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- Self-grounding: Before handling any electrical component, touch any
 grounded conducting material. During the time the electrical component is
 handled, frequently touch any conducting materials that are connected to the
 ground.
- Use an anti-static pad: When configuring or working with an electrical component, place it on an antic-static pad. This reduces the possibility of ESD damage.
- Only handle the edges of the electrical component: When handling the electrical component, hold the electrical component by its edges.



B.1.3 Product Disposal



CAUTION:

Risk of explosion if battery is replaced by and incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union:



EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow

the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the GRAND-MF, please follow the guidelines below.

B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the GRAND-MF, please read the details below.

 The interior of the GRAND-MF does not require cleaning. Keep fluids away from the GRAND-MF interior.



- Be cautious of all small removable components when vacuuming the GRAND-MF.
- Turn the GRAND-MF off before cleaning the GRAND-MF.
- Never drop any objects or liquids through the openings of the GRAND-MF.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the GRAND-MF.
- Avoid eating, drinking and smoking within vicinity of the GRAND-MF.

B.2.2 Cleaning Tools

Some components in the GRAND-MF may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the GRAND-MF.

- Cloth Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the GRAND-MF.
- Water or rubbing alcohol A cloth moistened with water or rubbing alcohol
 can be used to clean the GRAND-MF.
- Using solvents The use of solvents is not recommended when cleaning the GRAND-MF as they may damage the plastic parts.
- Vacuum cleaner Using a vacuum specifically designed for computers is
 one of the best methods of cleaning the GRAND-MF. Dust and dirt can restrict
 the airflow in the GRAND-MF and cause its circuitry to corrode.
- Cotton swabs Cotton swaps moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- Foam swabs Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.



Appendix

C

Hazardous Materials Disclosure



The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated "Environmentally Friendly Use Period" (EFUP). This is an estimate of the number of years that these substances would "not leak out or undergo abrupt change." This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements							
	Lead	Mercury	Cadmium	Hexavalent	Polybrominated	Polybrominated		
	(Pb)	(Hg)	(Cd)	Chromium	Biphenyls	Diphenyl Ethers		
				(CR(VI))	(PBB)	(PBDE)		
Housing	О	О	О	0	О	O		
Display	О	О	О	О	О	О		
Printed Circuit	О	О	О	О	О	О		
Board								
Metal Fasteners	О	О	О	О	О	О		
Cable Assembly	О	О	О	О	О	О		
Fan Assembly	О	О	О	О	О	О		
Power Supply	О	О	О	0	О	O		
Assemblies								
Battery	О	О	О	0	О	O		

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).



此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有"环境友好使用期限"的标签,此期限是估算这些物质"不会有泄漏或突变"的年限。本产品可能包含有较短的环境友好使用期限的可替换元件,像是电池或灯管,这些元件将会单独标示出来。

部件名称	有毒有害物质或元素							
	铅	汞	镉	六价铬	多溴联苯	多溴二苯		
	(Pb)	(Hg)	(Cd)	(CR(VI))	(PBB)	醚		
						(PBDE)		
壳体	0	0	0	0	0	0		
显示	0	0	0	0	0	0		
印刷电路板	0	0	0	0	0	0		
金属螺帽	0	0	0	0	0	0		
电缆组装	0	0	0	0	0	0		
风扇组装	0	0	0	0	0	0		
电力供应组装	0	0	0	0	0	0		
电池	0	0	0	0	0	0		

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代)标准规定的限量要求。