



MODEL:
Robot-TP-84M

Teach Pendant with 4-wire Resistive Type Touchscreen,
Deadman Switch, Emergency Button,
IP 64 Protection and RoHS

User Manual

Revision

Date	Version	Changes
June 23, 2016	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.



HOT SURFACE

This symbol indicates a hot surface that should not be touched without taking care.

Table of Contents

1 INTRODUCTION.....	1
1.1 OVERVIEW.....	2
1.2 MODEL VARIATION.....	2
1.3 FEATURES.....	2
1.4 FRONT PANEL.....	3
1.5 REAR PANEL.....	3
1.6 DIMENSIONS.....	4
1.7 SYSTEM SPECIFICATIONS.....	5
2 UNPACKING.....	7
2.1 UNPACKING.....	8
2.2 PACKING LIST.....	9
3 INSTALLATION.....	10
3.1 ANTI-STATIC PRECAUTIONS.....	11
3.2 INSTALLATION PRECAUTIONS.....	11
3.3 SYSTEM CONNECTION.....	12
3.3.1 <i>Robot-TP-84M/K-ML Connection</i>	12
3.3.2 <i>Robot-TP-84M/K Connection</i>	14
3.3.2.1 OSD Keypad Connector.....	15
3.3.2.2 Touch Connector.....	15
3.3.2.3 VGA Connector.....	16
3.3.2.4 Cable Pinouts.....	17
3.4 CARRYING THE SYSTEM.....	18
3.5 OPERATION MODE SELECTION.....	19
3.6 EMERGENCY BUTTONS.....	20
3.6.1 <i>Deadman Switch</i>	20
3.6.2 <i>Emergency Stop Button</i>	21
A SAFETY PRECAUTIONS.....	22
A.1 SAFETY PRECAUTIONS.....	23

A.1.1 General Safety Precautions 23

A.1.2 Anti-static Precautions 24

A.1.3 Product Disposal 25

A.2 MAINTENANCE AND CLEANING PRECAUTIONS 26

A.2.1 Maintenance and Cleaning..... 26

A.2.2 Cleaning Tools..... 26

B HAZARDOUS MATERIALS DISCLOSURE 28

List of Figures

Figure 1-1: Robot-TP-84M Teach Pendant	2
Figure 1-2: Front View	3
Figure 1-3: Rear View	3
Figure 1-4: Robot-TP-84M Dimensions (mm)	4
Figure 3-1: Robot-TP-84M/K-ML with Cable.....	12
Figure 3-2: 37-pin Military Connector Pinout Locations.....	13
Figure 3-3: Robot-TP-84M/K with Cables	14
Figure 3-4: OSD Keypad Connector Pinout Locations	15
Figure 3-5: Touch Connector Pinout Locations	15
Figure 3-6: VGA Connector Pinout Locations	16
Figure 3-7: Hook Locations	18
Figure 3-8: Carrying the Robot-TP-84M	18
Figure 3-9: Mode Selector Switch with Key	19
Figure 3-10: Deadman Switch	20
Figure 3-11: Emergency Stop Button	21

List of Tables

Table 1-1: Model Variation	2
Table 1-2: System Specifications.....	6
Table 3-1: 37-pin Military Connector Pinouts	13
Table 3-2: OSD Keypad Connector Pinouts.....	15
Table 3-3: Touch Connector Pinouts.....	16
Table 3-4: VGA Connector Pinouts.....	16
Table 3-5: Cable Pinouts.....	17

Chapter

1

Introduction

1.1 Overview



Figure 1-1: Robot-TP-84M Teach Pendant

The Robot-TP-84M is a teach pendant with 8.4" 4-wire resistive touchscreen. The Robot-TP-84M is designed for easy and simplified integration into robot arm applications.

1.2 Model Variation

The Robot-TP-84M series has two models. The model variation is listed below:

Model	Brightness	Cable Connection
Robot-TP-84M/K-R11	350 cd/m ²	One 37-pin military connector
Robot-TP-84M/K-ML-R11	350 cd/m ²	Multiple cables and connectors

Table 1-1: Model Variation

1.3 Features

The Robot-TP-84M features are listed below:

- 350 cd/m² high brightness LCD with LED backlight
- 4-wire resistive type touchscreen
- 6-meter long all-in-one cable allows easy installation
- Completely dust and splash proof (IP 64) design, IEC60529 compliant
- One meter drop resistance, MIL-810G 516.60IV compliant
- 0°C~50°C extended operating temperature

Robot-TP-84M

- Equipped with an emergency stop and a 3-position deadman switch to provide safe operation

1.4 Front Panel

The front side of the Robot-TP-84M is a flat bezel panel TFT LCD screen surrounded by a PC/ABS plastic frame.



Figure 1-2: Front View

1.5 Rear Panel

The rear panel provides access to the deadman switch. Refer to **Figure 1-5**.



Figure 1-3: Rear View

1.6 Dimensions

The Robot-TP-84M dimensions are shown below.

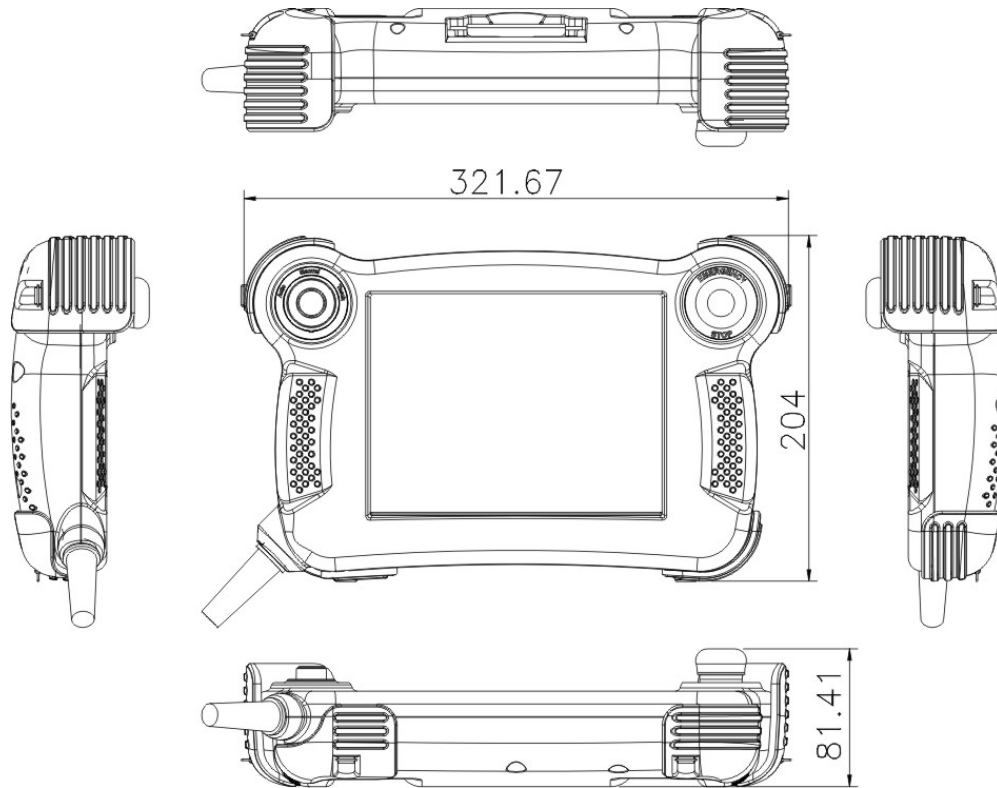


Figure 1-4: Robot-TP-84M Dimensions (mm)

Robot-TP-84M

1.7 System Specifications

The technical specifications for the Robot-TP-84M systems are listed in **Table 1-4**.

Specification		Robot-TP-84M
LCD Size		8.4"
Max. Resolution		800 (W) x 600 (H)
Brightness (cd/m ²)		350
Contrast Ratio		600:1
LCD Color		262K
Pixel Pitch (H x V) (mm)		0.213 (H) x 0.213 (V)
Viewing Angle (H-V)		130° / 150°
Backlight MTBF (hr)		50,000 (LED backlight)
Touchscreen		4-wire resistive type touchscreen Touch controller: Penmount DMC9000
Switches	Emergency Stop Button	For B contacts, two circuit outputs (forced disjunction type)
	Deadman Switch	3-position switch (off-on-off), two circuit outputs
	Mode Selector Switch	3-position (Auto, Manual, Teach) key switch
I/O	Video Input	VGA
	Touch Interface	RS-232
	Power Source	12 V DC input
OSD Control		Software OSD
Construction Material		PC + ABS plastic front frame
Front Panel Color		Black
Weight (N)		3.3 kg

Dimensions (W x H x D) (mm)	321.67 x 204.00 x 81.41
Operating Temperature	0°C ~ 50°C
Storage Temperature	-25°C ~ 65°C
Humidity	<90% (no-condensing)
IP Level	IP 64 compliant (6-side)
Vibration	MIL-STD-810F 514.5C-1
Drop Survival	1 m (38 inches), six sides, compliant with IEC60068-2-32
Power Requirement	12V DC
Power Consumption	6.6 W
Cable Length	6 m

Table 1-2: System Specifications

Chapter

2

Unpacking

2.1 Unpacking

To unpack the Robot-TP-84M, follow the steps below:



WARNING!






The front side LCD screen has a protective plastic cover stuck to the screen. Only remove the plastic cover after the Robot-TP-84M has been properly installed. This ensures the screen is protected during the installation process.

- Step 1:** Use box cutters, a knife or a sharp pair of scissors that seals the top side of the box.
- Step 2:** Open the box.
- Step 3:** Remove both polystyrene cover.
- Step 4:** Lift the monitor out of the boxes.
- Step 5:** Pull the plastic cover off the Robot-TP-84M.
- Step 6:** Make sure all the components listed in the packing list are present.

Robot-TP-84M

2.2 Packing List

The Robot-TP-84M teach pendant is shipped with the following components:

Quantity	Item	Image
Standard		
1	Robot-TP-84M teach pendant	
2	Key	
1	Touch pen	
1	Shoulder belt	
1	Utility CD	

If any of these items are missing or damaged, contact the distributor or sales representative immediately.

Chapter

3

Installation

Robot-TP-84M

3.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the maintenance of the Robot-TP-84M may result in permanent damage to the Robot-TP-84M and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the Robot-TP-84M. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the Robot-TP-84M is accessed internally, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:*** - Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** - When configuring the Robot-TP-84M, place it on an anti-static pad. This reduces the possibility of ESD damaging the Robot-TP-84M.
- ***Only handle the edges of the PCB:*** - When handling the PCB, hold the PCB by the edges.

3.2 Installation Precautions

When installing the Robot-TP-84M, please follow the precautions listed below:

- **Power turned off:** When installing the Robot-TP-84M, make sure the power is off. Failing to turn off the power may cause severe injury to the body and/or damage to the system.
- **Certified Engineers:** Only certified engineers should install and modify onboard functionalities.

- **Anti-static Discharge:** If a user open the rear panel of the Robot-TP-84M, to configure the jumpers or plug in added peripheral devices, ground themselves first and wear an anti-static wristband.

3.3 System Connection

The Robot-TP-84M series has two models: Robot-TP-84M/K-ML and Robot-TP-84M/K. The only difference of these two models is that the Robot-TP-84M/K-ML has a 37-pin military connector while the Robot-TP-84M/K has multiple cables and connectors for connection. The following sections describe the system connection and connector pinouts of these two models.

3.3.1 Robot-TP-84M/K-ML Connection

The Robot-TP-84M/K-ML has a 6-meter cable with a 37-pin military connector to be connected to a robot controller.



Figure 3-1: Robot-TP-84M/K-ML with Cable

The pinout locations and pinouts of the 37-pin connector are described below.

Robot-TP-84M



Figure 3-2: 37-pin Military Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Key SW. - Manual	20	RS-232 – SOUT
2	EMG2	21	--
3	EMG1	22	RS-232 – RTS
4	--	23	--
5	RS-232 - GND	24	--
6	--	25	--
7	RS-232 - chassis	26	GND
8	--	27	DDC – DAT
9	-(N)	28	DDC CLOCK
10	--	A	R (Red+)
11	--	B	GND (Red-)
12	+(P)	C	G (Green+)
13	3 SW.2	D	GND (Green-)
14	3 SW.1	E	B (Blue+)
15	Key SW. - Teach	F	GND (Blue-)
16	+12V	G	VSYNC
17	GND	H	HSYNC
18	--	J	Copper Shielding Mesh
19	RS-232 – SIN		

Table 3-1: 37-pin Military Connector Pinouts

3.3.2 Robot-TP-84M/K Connection

The Robot-TP-84M/K has following cables and connectors for connecting to a robot controller:

- OSD keypad connector (PS/2)
- Touch connector (DB-9 male)
- VGA connector (DB-15 male)
- Cables:
 - Monitor power
 - EMG
 - Key switch
 - 3-way switch
 - LED

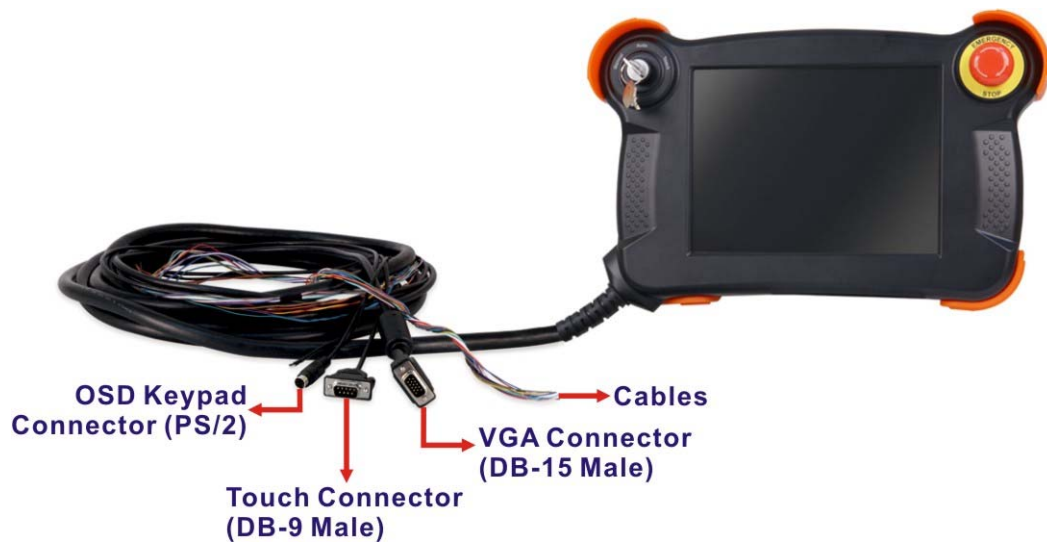


Figure 3-3: Robot-TP-84M/K with Cables

The pinout locations and pinouts of these connectors are described in the following sections.

Robot-TP-84M

3.3.2.1 OSD Keypad Connector

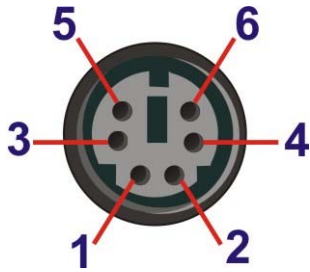


Figure 3-4: OSD Keypad Connector Pinout Locations

PIN NO.	DESCRIPTION
1	KB_DATA
2	--
3	GND
4	PS/2 VCC_IN 5V
5	KB_CLK
6	--

Table 3-2: OSD Keypad Connector Pinouts

3.3.2.2 Touch Connector

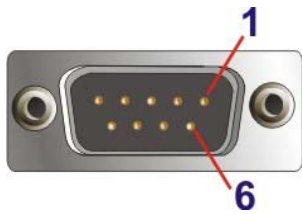


Figure 3-5: Touch Connector Pinout Locations

PIN NO.	DESCRIPTION
1	--
2	RS-232_RX
3	RS-232_TX
4	--
5	GND

6	--
7	RS-232_RTS
8	--
9	--

Table 3-3: Touch Connector Pinouts

3.3.2.3 VGA Connector

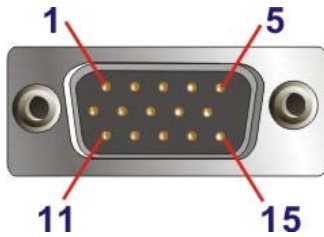


Figure 3-6: VGA Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RED	9	--
2	GREEN	10	--
3	BLUE	11	--
4	--	12	DDC_DATA
5	GND	13	HSYNC
6	(Shield) RED	14	VSYNC
7	(Shield) GREEN	15	DDC_CLOCK
8	--		

Table 3-4: VGA Connector Pinouts

Robot-TP-84M

3.3.2.4 Cable Pinouts

	NO.	COLOR		DESCRIPTION
Monitor Power	1	White		Vin-in (12V only)
	2	Black		GND
EMG	1	Red		EMG 1
	2	Yellow		EMG 2
Key Switch	1	Black		3 SW.2
	2	Brown		KEY SW-Teach
	3	Orange		KEY SW-Manual
3-Way Switch	1	Green		3 SW.2
	2	Blue		3 SW.1
LED	1	Purple		LED_Power (VCC 12~24V)
	2	Gray		LED_Ready
	3	White		LED_Auto
	4	Pink		LED_Servo
	5	Light green		LED_Enable
	6	White/Black		LED_GND

Table 3-5: Cable Pinouts

3.4 Carrying the System

The package comes with a belt for the user to carry the Robot-TP-84M. To use the belt, follow the steps below.

Step 1: Locate the hooks on the four corners of the Robot-TP-84M (**Figure 3-7**).



Figure 3-7: Hook Locations

Step 2: Choose either two hooks to install the belt.

Step 3: Carry the Robot-TP-84M as shown in **Figure 3-8**.



Figure 3-8: Carrying the Robot-TP-84M

Robot-TP-84M

3.5 Operation Mode Selection

The operation mode selector switch allows users to select the operation mode of the Robot-TP-84M teach pendant. The following three operation modes are available.

- Manual
- Auto
- Teach

The mode selector switch is a key switch. Please use the key come with the Robot-TP-84M to switch the operation mode.



Figure 3-9: Mode Selector Switch with Key

3.6 Emergency Buttons

The Robot-TP-84M teach pendant has a deadman switch and an emergency button, which are provided to stop the robot automatically and safely when the operator can no longer operate the robot correctly with the teach pendant in the manual mode.

3.6.1 Deadman Switch



Figure 3-10: Deadman Switch

The deadman switch is located on the rear panel. It is a 3-position switch which is able to react to the following three operating statuses:

- (1) **OFF**: When the switch is not being pressed or is being pressed lightly
- (2) **ON**: When the switch is being pressed with correct pressure
- (3) **OFF**: When the switch is being pressed too strongly

Robot-TP-84M

3.6.2 Emergency Stop Button



Figure 3-11: Emergency Stop Button

The emergency stop button is located on the front panel. Push the button can stop the robot operation immediately.

- **STOP:** Push the emergency stop button to stop operation.
- **RESET:**
 - Pull the emergency stop button to reset or
 - Turn the emergency stop button to rest



Pull to reset



Turn to reset

Appendix

A

Safety Precautions

**WARNING:**

The precautions outlined in this chapter should be strictly followed. Failure to follow these precautions may result in permanent damage to the Robot-TP-84M.

A.1 Safety Precautions

Please follow the safety precautions outlined in the sections that follow:

A.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- **Follow the electrostatic precautions** outlined below whenever the device is opened.
- **Make sure the power is turned off** whenever the Robot-TP-84M is being installed, moved or modified.
- **If considerable amounts of dust, water, or fluids enter the device**, turn off the power supply immediately, unplug the power cord, and contact the Robot-TP-84M vendor.
- **DO NOT:**
 - Drop the device against a hard surface from a distance over 1 meter.
 - Strike or exert excessive force onto the LCD panel.
 - Touch any of the LCD panels with a sharp object
 - In a site where the ambient temperature exceeds the rated temperature

A.1.2 Anti-static Precautions

**WARNING:**

Failure to take ESD precautions during the installation of the Robot-TP-84M may result in permanent damage to the Robot-TP-84M and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the Robot-TP-84M. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the Robot-TP-84M is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- ***Self-grounding:*** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- ***Only handle the edges of the electrical component:*** When handling the electrical component, hold the electrical component by its edges.

Robot-TP-84M

A.1.3 Product Disposal




CAUTION:

Risk of explosion if battery is replaced by an incorrect type. Only certified engineers should replace the on-board battery.

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union – If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union – The device that produces less waste and is easier to recycle is classified as electronic device in terms of the European Directive 2012/19/EU (WEEE), and must not be disposed of as domestic garbage.

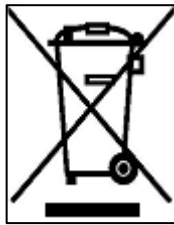

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

A.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the Robot-TP-84M, please follow the guidelines below.



WARNING:

For safety reasons, turn-off the power and unplug the monitor before cleaning.

A.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the Robot-TP-84M, please read the details below.

- To clean the LCD panel, gently wipe it with a piece of soft dry cloth or a slightly moistened cloth.
- The interior of the device does not require cleaning. Keep fluids away from the device interior.
- Be cautious of all small removable components when vacuuming the device.
- Never drop any objects or liquids through the openings of the device.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the device.
- Avoid eating, drinking and smoking within vicinity of the device.

A.2.2 Cleaning Tools

Some components in the Robot-TP-84M may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the Robot-TP-84M.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the device.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol can be used to clean the device.
- **Using solvents** – The use of solvents is not recommended when cleaning the device as they may damage the plastic parts.

Robot-TP-84M

- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the device. Dust and dirt can restrict the airflow in the device and cause its circuitry to corrode.
- **Cotton swabs** – Cotton swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas.
- **Foam swabs** – Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

B

Hazardous Materials Disclosure

Robot-TP-84M

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
Display	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	○	○	○	○	○	○
显示	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求。