

Industrial Device Server User's Manual

IDS-141A / IDS-181A



Version 1.00
December 2009.



ORing Industrial Networking Corp.

3F., No.542-2, Jhongjheng Rd., Sindian

District, New Taipei City 231- 48, Taiwan

Tel: + 886 2 2218 1066

Fax: + 886 2 2218 1014

Website : www.oring-networking.com

E-mail : support@oring-networking.com

Table of Content

GETTING TO KNOW YOUR DEVICE SERVER	1
1.1 <i>About the IDS-141A / IDS-181A Serial Device Server</i>	1
1.2 <i>Software Features</i>	1
1.3 <i>Hardware Features</i>	2
HARDWARE INSTALLATION	3
2.1 <i>Install IDS-141A / IDS-181A on DIN-Rail</i>	3
2.1.1 Mount IDS-141A / IDS-181A on DIN-Rail	3
2.2 <i>Wall Mounting Installation</i>	4
2.2.1 Mount IDS-141A / IDS-181A on wall	5
HARDWARE OVERVIEW	7
3.1 <i>Front Panel</i>	7
3.2 <i>Front Panel LEDs</i>	8
3.3 <i>Serial Ports</i>	9
3.4 <i>Bottom Panel</i>	11
CABLES	12
4.1 <i>Ethernet Cables</i>	12
MANAGEMENT INTERFACE	14
5.1 <i>DS-Tool</i>	14
5.1.1 Install IDS-Tool	14
5.1.2 Using DS-Tool	16
5.1.2.1 Explore device servers	16
5.1.2.2 Configure device servers	17
5.1.2.3 Configure serial port	26
5.2 <i>Configuration by Web Browser</i>	35
5.2.1 Connect to the Web page	35
5.2.1.1 System	37
5.2.1.2 Port serial setting	41
5.2.1.3 Management	49
5.2.1.4 Save/Reboot	53



5.3	<i>Configuration by SSH Console</i>	54
5.3.1	Connect to DS.....	54
TECHNICAL SPECIFICATIONS		55

Getting to Know Your Device Server

1.1 About the IDS-141A / IDS-181A Serial Device Server



IDS-141A / IDS-181A is an innovative 4 & 8 ports RS232 to LAN device server. Users are able to configure IDS-141A / IDS-181A by DS-Tool via LAN port. IDS-141A / IDS-181A offers many powerful features for HW & SW redundant functions.

IDS-141A / IDS-181A can simultaneously transfer data into 5 host PCs. This feature can assure all critical data that saved in different host PCs to avoid Ethernet break or host PCs failure.

Secondly, the IDS-141A / IDS-181A provides dual redundant power inputs on terminal block. IDS-141A / IDS-181A also provides NAT pass through function so that users are able to manage IDS-141A / IDS-181A inside or outside the NAT router. It is easy for different IP domain users to use IDS-141A / IDS-181A. Therefore, IDS-141A / IDS-181A is the best communication redundant solution for current application of serial devices.

1.2 Software Features

- NAT-pass through: User can manage IDS-141A / IDS-181A through NAT router.
- Redundant Power Inputs: 12~48VDC on terminal block. & power jack
- Redundant multiple host devices: 5 simultaneous in Virtual COM, TCP Server, TCP Client mode, and 4 simultaneous for UDP mode.
- Secured Management by HTTPS and SSH.
- Versatile Modes: Virtual Com, Serial Tunnel, TCP Server, TCP Client, UDP
- Event Warning by Syslog, Email, SNMP trap, Relay
- Various Windows O.S. supported: Windows NT/2000/ XP/ 2003/VISTA 32bits



1.3 Hardware Features

- Redundant Power Inputs: 12~48 VDC on terminal block and power jack
- Operating Temperature: -40 to 70°C
- Storage Temperature: -40 to 85 °C
- Operating Humidity: 5% to 95%, non-condensing
- Casing: IP-30
- One 10/100Base-T(X) Ethernet port
- Dimensions(W x D x H) : 26.1(W) x 94.9(D) x 144.3(H) mm

Hardware Installation

2.1 Install IDS-141A / IDS-181A on DIN-Rail

Each IDS-141A / IDS-181A has a Din-Rail kit on rear panel. The Din-Rail kit helps IDS-141A / IDS-181A to fix on the Din-Rail. It is easy to install the IDS-141A / IDS-181A on the Din-Rail:

2.1.1 Mount IDS-141A / IDS-181A on DIN-Rail

Step 1: Slant the IDS-141A / IDS-181A and mount the metal spring to Din-Rail.

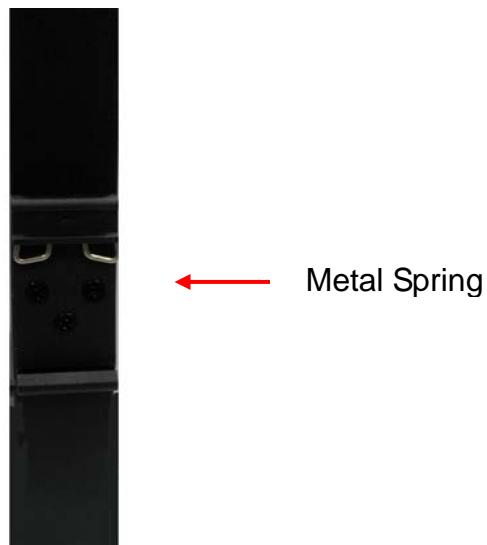


Figure 2-1

Step 2: Push the IDS-141A / IDS-181A toward the Din-Rail until you heard a “click” sound.



Figure 2-2

2.2 Wall Mounting Installation

Each IDS-141A / IDS-181A has another installation method for you. A wall mount panel can be found in the package. The following steps show how to mount the IDS-141A / IDS-181A on the wall:

2.2.1 Mount IDS-141A / IDS-181A on wall

Step 1: Remove Din-Rail kit.

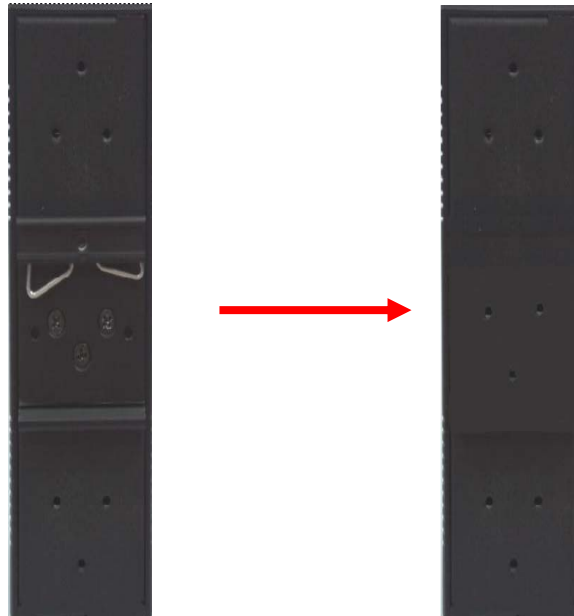


Figure 2-3

Step 2: Use 6 screws that can be found in the package to combine the wall mount panel.
Just like the picture shows below:



Figure 2-4

The screws specification shows in the following two pictures. In order to prevent IDS-141A / IDS-181A from any damage, the size of screws should not be larger than the size that used in IDS-141A / IDS-181A.

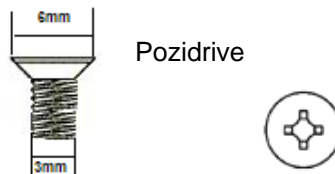


Figure 2-5

Hardware Overview

3.1 Front Panel

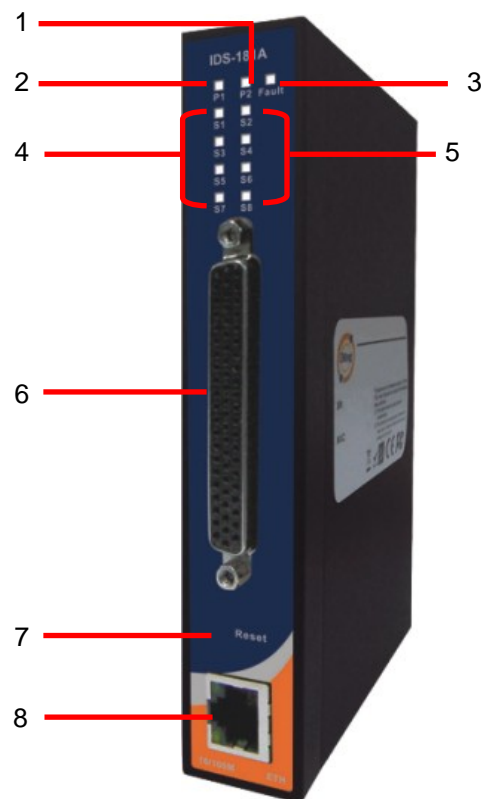


Figure 3-1

1. LED for PWR1 and system status. When the PWR1 links, the green LED will be light on.
2. LED for PWR2 and system status. When the PWR2 links, the green LED will be light on.
3. LED for fault indicator. When fault occurred, this red LED will be light on.



4. LED for Serial ports status. When data transmitted, the green LED will be light on. (S5~S8 only available for IDS-181A)
5. LED for Serial ports status. When data transmitted, the green LED will be light on. (S5~S8 only available for IDS-181A)
6. DB62 Female port.
7. Reset button, press for 10 sec for factory default.
8. 10/100Base-T(X) Ethernet port

3.2 Front Panel LEDS

The following table describes the labels that stick on the IDS-141A / IDS-181A.


LED	Color	Status	Description
PWR1	Green	On	DC power 1 activated.
		Blinking	System Booting / Located by administrator
PWR2	Green	On	DC power 2 activated.
		Blinking	System Booting / Located by administrator
Fault	Amber	On	Fault event occurred.
S1 ~ S8	Green	Blinking	Serial port is transmitting/receiving data(S5~S8 only available for IDS-181A)
ETH	Green/Amber	Green/Amber On/Blinking	100Mbps LNK/ACT
		Green On/Blinking	10Mbps LNK/ACT

Table 3-1 Front panel LEDS



3.3 Serial Ports

There 8 serial ports on the front panel of IDS-141A / IDS-181A shown as below:

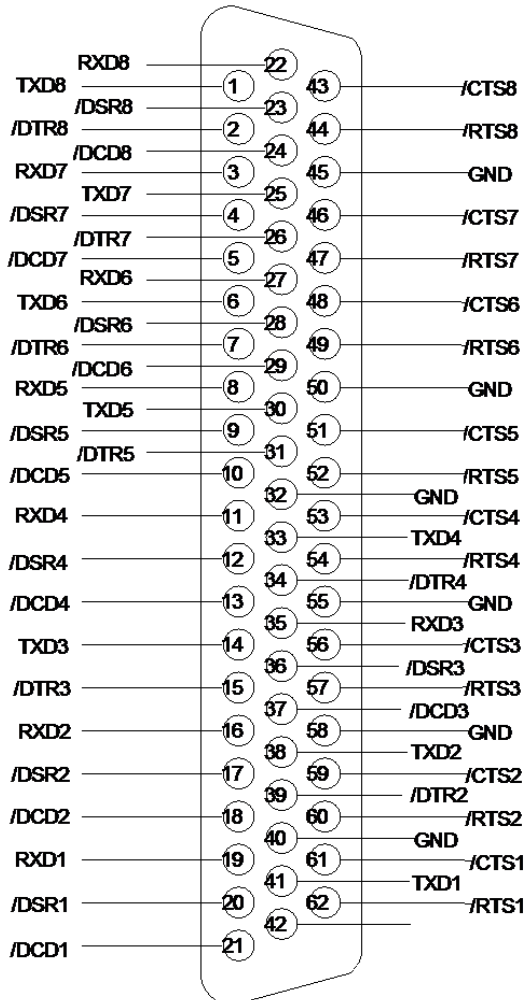

Pin #	RS 232	Pin #	RS 232
1	TXD8	32	GND
2	DTR8	33	TXD4
3	RXD7	34	DTR4
4	DSR7	35	RXD3
5	DCD7	36	DSR3
6	TXD6	37	DCD3
7	DTR6	38	Txd7
8	RXD5	39	DTR2
9	DSR5	40	GND



10	DCD5	41	TXD1
11	RXD4	42	DTR1
12	DSR4	43	CTS8
13	DCD4	44	RTS8
14	TXD3	45	GND
15	DTR3	46	CTS7
16	RXD2	47	RTS7
17	DSR2	48	CTS6
18	DCD2	49	RTS6
19	RXD1	50	GND
20	DSR1	51	CTS5
21	DCD1	52	RTS5
22	RXD8	53	CTS4
23	DSR8	54	RTS4
24	DCD8	55	GND
25	TXD7	56	CTS3
26	DTR7	57	RTS3
27	RXD6	58	GND
28	DSR6	59	CTS2
29	DCD6	60	RTS2
30	TXD5	61	CTS1
31	DTR5	62	RTS1

(S5~S8 only available for IDS-181A)

Table 3-2 Pin assignment

3.4 Bottom Panel

The bottom panel components of IUSB-9041 are shown as below:

1. Terminal block includes: PWR1 (12~48V DC).
2. Relay output (1A@24VDC).
3. Terminal block includes: PWR2 (12~48V DC).
4. Power Jack include: PWR2 (12 ~ 48V DC).
5. Frame ground.

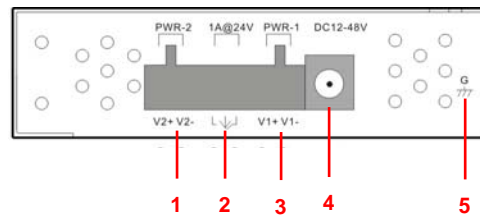


Figure 3-2



Cables

4.1 Ethernet Cables

The IDS-141A / IDS-181A has standard Ethernet ports. According to the link type, the IDS-141A / IDS-181A use CAT 3, 4, 5,5e UTP cables to connect to any other network device (PCs, servers, switches, routers, or hubs). Please refer to the following table for cable specifications.

Cable	Type	Max. Length	Connector
10BASE-T	Cat. 3, 4, 5 100-ohm	UTP 100 m (328 ft)	RJ-45
100BASE-TX	Cat. 5 100-ohm UTP	UTP 100 m (328 ft)	RJ-45

Table 4-1 Cable Types and Specifications

100BASE-TX/10BASE-T Pin Assignments

With 100BASE-TX/10BASE-T cable, pins 1 and 2 are used for transmitting data, and pins 3 and 6 are used for receiving data.



Pin Number	Assignment
1	TD+
2	TD-
3	RD+
4	Not used
5	Not used
6	RD-
7	Not used
8	Not used

Table 4-2 RJ-45 Pin Assignments

The IDS-141A / IDS-181A supports auto MDI/MDI-X operation. You can use a straight-through cable to connect PC to IDS-141A / IDS-181A. The following table below shows the 10BASE-T/ 100BASE-TX MDI and MDI-X port pin outs.

Pin Number	MDI port	MDI-X port
1	TD+(transmit)	RD+(receive)
2	TD-(transmit)	RD-(receive)
3	RD+(receive)	TD+(transmit)
4	Not used	Not used
5	Not used	Not used
6	RD-(receive)	TD-(transmit)
7	Not used	Not used
8	Not used	Not used

Table 4-2 MDI / MDI-X pins assignment

Note: "+" and "-" signs represent the polarity of the wires that make up each wire pair.



Management Interface

5.1 DS-Tool

DS-Tool is a powerful Windows utility for DS series. It supports device discovery, device configuration, group setup, group firmware update, monitoring functions...etc. It is easy for you to install and configure devices over the network.

5.1.1 Install IDS-Tool

Step 1: Execute the Setup program, click “**start**” after selecting the folder for DS-Tool.

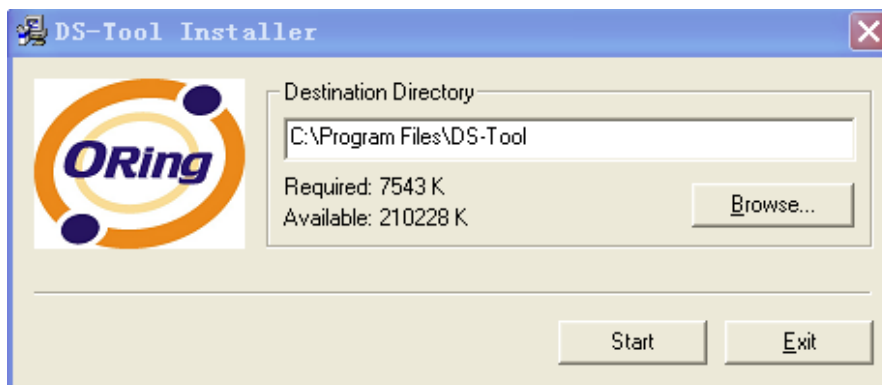


Figure 5-1



Step 2: When installation complete successfully, then click "OK".

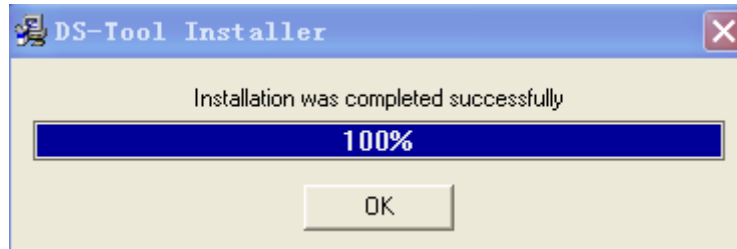


Figure 5-2

Step 3: Check for your selection.



Figure 5-3



5.1.2 Using DS-Tool

5.1.2.1 Explore device servers

DS-Tool will broadcast to the network and search all available DS devices in the network. The default IP address of device is **"192.168.10.2"**, and selects the searching device you wish to use and press **"Add"** button.

You can set static IP address or in DHCP client mode to get IP address automatically. Finally, click **"OK"** button to add the device.


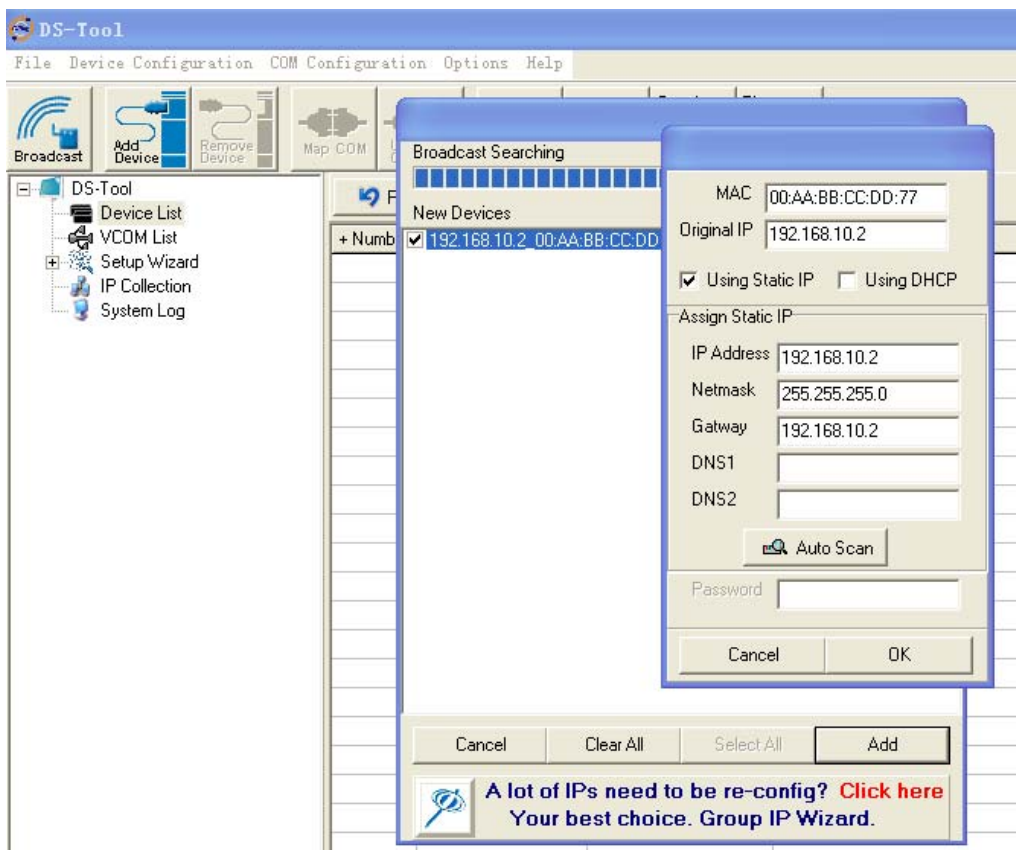


Figure 5-4

5.1.2.2 Configure device servers

General settings

This page includes the setting of device name, SNTP server and Auto IP Report.

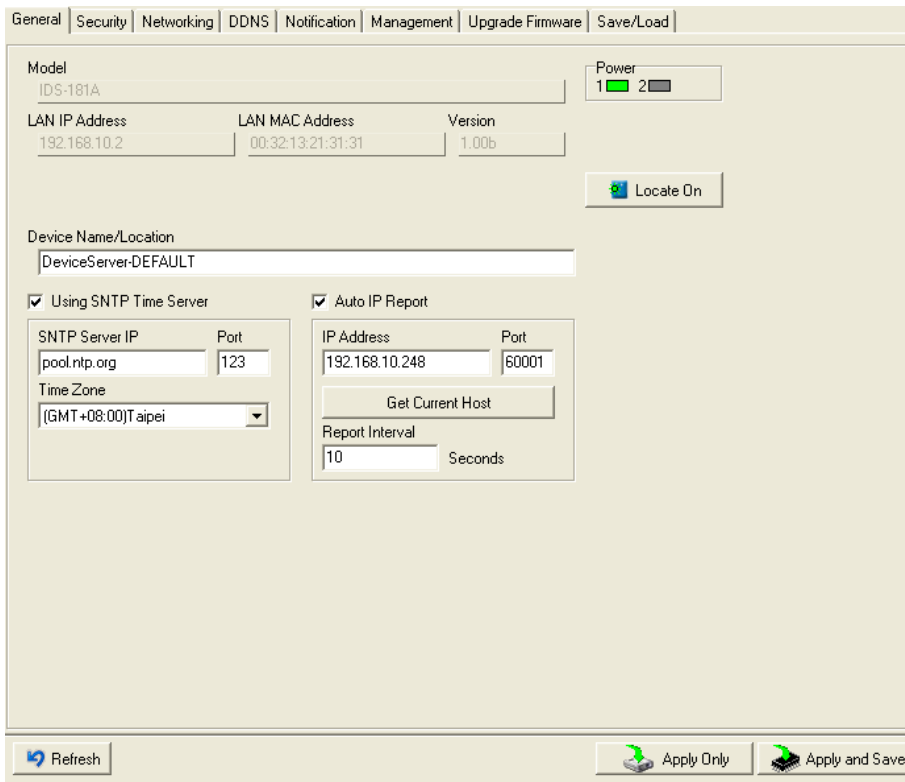

The screenshot displays the 'General' settings page for the IDS-181A device. The interface includes a navigation bar with tabs for General, Security, Networking, DDNS, Notification, Management, Upgrade Firmware, and Save/Load. The main content area shows the following settings:

- Model:** IDS-181A
- Power:** 1 (indicated by a green bar), 2 (indicated by a grey bar)
- LAN IP Address:** 192.168.10.2
- LAN MAC Address:** 00:32:13:21:31:31
- Version:** 1.00b
- Locate On:** A button with a location pin icon.
- Device Name/Location:** DeviceServer-DEFAULT
- Using SNTP Time Server:** Checked. Includes fields for SNTP Server IP (pool.ntp.org), Port (123), and Time Zone (GMT+08:00)Taipei.
- Auto IP Report:** Checked. Includes fields for IP Address (192.168.10.248), Port (60001), a Get Current Host button, and Report Interval (10 Seconds).

At the bottom of the page, there are buttons for Refresh, Apply Only, and Apply and Save.

Figure 5-5 General settings

The following table describes the labels in this screen.

Label	Description
Device Name/location	You can set the device name or related information. By clicking "Locate On" button you can locate the serial server's position.
Set SNTP	Input the SNTP server domain name or IP address, port and select the Time zone.



Set Auto IP Report	By Clicking the “Get current Host” button you will get your local IP, and then set the Report interval time. The device server will report its status periodically.
--------------------	--

Table 5-1 General settings

At IP collection option show the device server status. The report interval is 0 indicate disable this setting (default). But you can set the other IP or Port.

Security

Figure 5-6 Security

The following table describes the labels in this screen.

Label	Description
Accessible IP Setting	To prevent unauthorized access by setting host IP addresses and network masks.
Password setting	You can set the password to prevent unauthorized access from your server. Factory default is no password.

Table 5-2 Security

Network Setting

Device DS can connect the Network by wire a. You must assign a valid IP address for DS before attached in your network environment. Your network administrator should provide you the IP address and related settings. The IP address must be unique within the network (otherwise, DS will not have a valid connection to the network). You can choose from three possible “**IP configuration**” modes: Static, DHCP/BOOTP. The Factory Default IP address is “**192.168.10.2**”

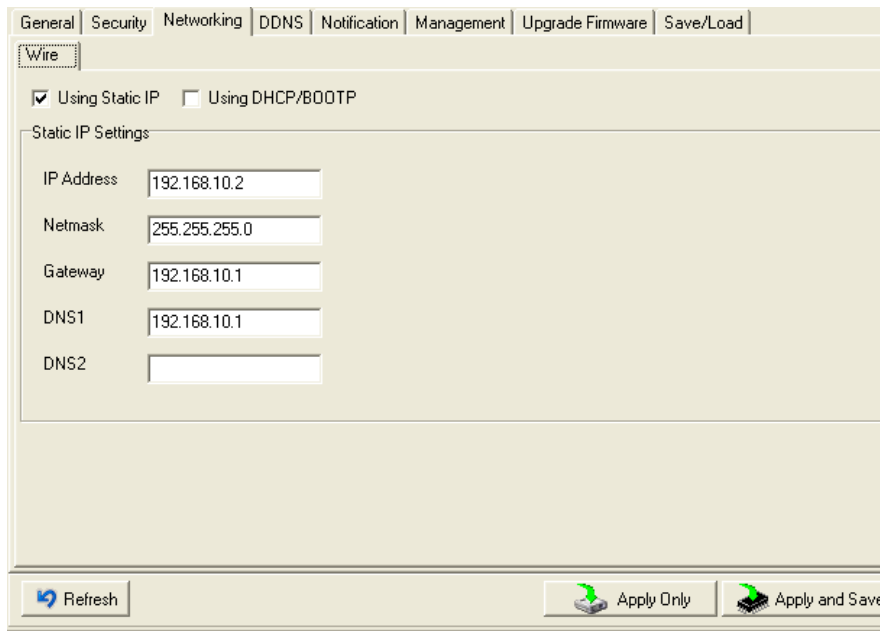


Figure 5-7 Network Setting

The following table describes the labels in this screen.

Label	Description
Using DHCP/BOOTP	IP Address automatically assigned by a DHCP server in your network.
Static IP Address	Manually assigning an IP address.
Subnet Mask	All devices on the network must have the same subnet mask to communicate on the



	network.
Gateway	Enter the IP address of the router in you network.
DNS Server	Enter the IP address of the DNS server, The DNS server translates domain names into IP address.

Table 5-3 Network setting


PPPoE

PPPoE (Point-to-Point Protocol over Ethernet), Device can use PPPoE mode to connect the Network. Input the “**username**” and “**Password**”, then click “**Connect**” button. If the device has been connected, the “**Link Status**” will become the “Link up” and device will get an IP address from PPPoE server. Click “**Disconnect**” button to disconnect the PPPoE connection.

Figure 5-8 PPPoE Setting

DDNS

The Dynamic DNS service allows you to alias a dynamic IP address to a static hostname, allowing your computer to be more easily accessed from various locations on the Internet.

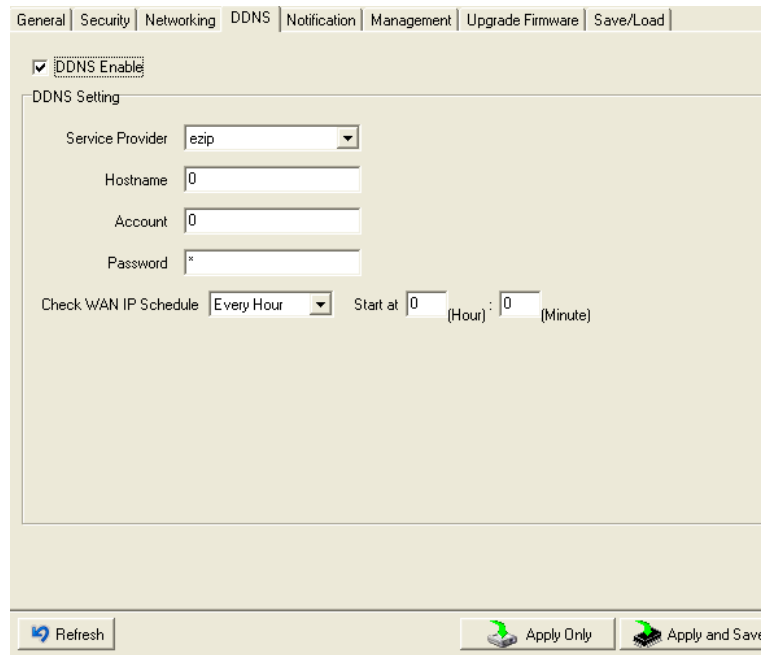

The screenshot shows a web-based configuration interface for DDNS. At the top, there is a navigation bar with tabs: General, Security, Networking, DDNS (selected), Notification, Management, Upgrade Firmware, and Save/Load. Below the navigation bar, there is a checkbox labeled "DDNS Enable" which is checked. Underneath, the "DDNS Setting" section contains the following fields:

- Service Provider: A dropdown menu with "ezip" selected.
- Hostname: A text input field containing "0".
- Account: A text input field containing "0".
- Password: A text input field with a "*" character, indicating it is masked.
- Check WAN IP Schedule: A dropdown menu with "Every Hour" selected.
- Start at: Two input fields for "Hour" and "Minute", both containing "0".

At the bottom of the form, there are three buttons: "Refresh" (with a circular arrow icon), "Apply Only" (with a green checkmark icon), and "Apply and Save" (with a green checkmark icon).

Figure 5-8 DDNS Setting



The following table describes the labels in this screen.

Label	Description
Service Provider	Choose the DDNS service Provider
Hostname	You must first apply an account from the DDNS service Provider such as www.dyndns.org, then register with the dynamic DNS service. Input the fixed hostname you got from the DDNS service.
Account mand Password	Input the Account and Password you have registered from the DDNS service Provider.
Check WAN IP Schedule	Device will check the IP address Status at interval time you set.

Table 5-4 DDNS setting

Notification

Specify the events that should be notified to the administrator. The events can be alarmed by E-mail, SNMP trap, or system log.


Figure 5-9 Notification

The following table describes the labels in this screen.

Label	Description
SNMP Trap	To notify events by SNMP trap.
Email Notification	To notify events by Email.
Syslog Notification	To notify events by Syslog.
Fault LED /Relay Settings	To notify events by Fault LED and relay..
Notify items	Events to be notified.
Apply	Apply current setting.
Apply and Save	Apply and save current setting.

Table 5-3 Notification

Management

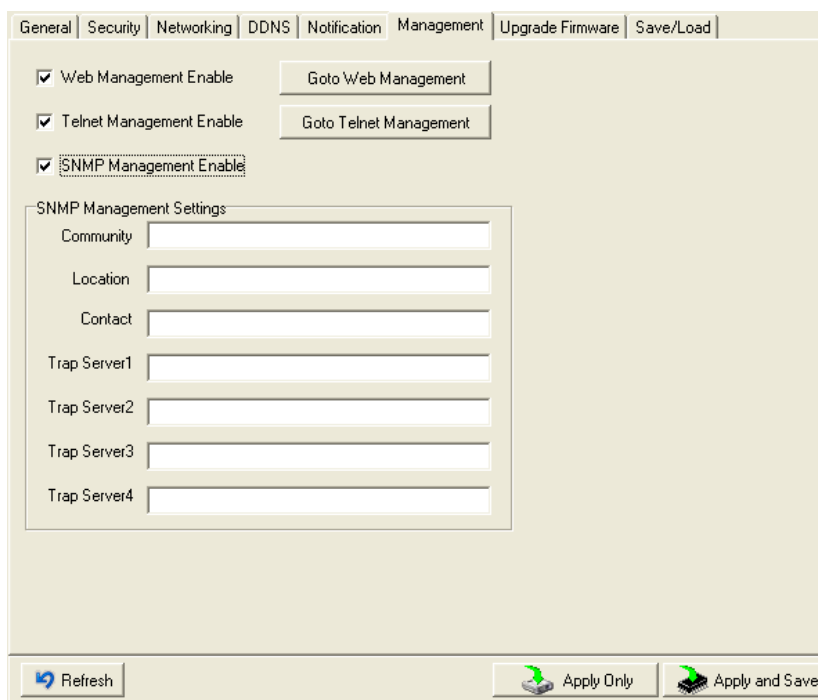

General | Security | Networking | DDNS | Notification | Management | Upgrade Firmware | Save/Load

Web Management Enable Goto Web Management

Telnet Management Enable Goto Telnet Management

SNMP Management Enable

SNMP Management Settings:

Community

Location

Contact

Trap Server1

Trap Server2

Trap Server3

Trap Server4

Figure 5-10 Management



The following table describes the labels in this screen.

Label	Description
Web Management Enable	To enable management from Web. Click " Goto Web Management " button to access web.
Telnet Management Enable	To enable management by Telnet.
SNMP Management Enable	To enable management by SNMP.
SNMP Management Settings	To configure SNMP related settings.

Table 5-4 Management

Upgrade Firmware

Figure 5-11 Upgrade Firmware

The following table describes the labels in this screen.

Label	Description
Browsing	Browse the file and upgrade
Upgrade	Enable the firmware upgrade.

Table 5-5 Upgrade Firmware

Save/Load

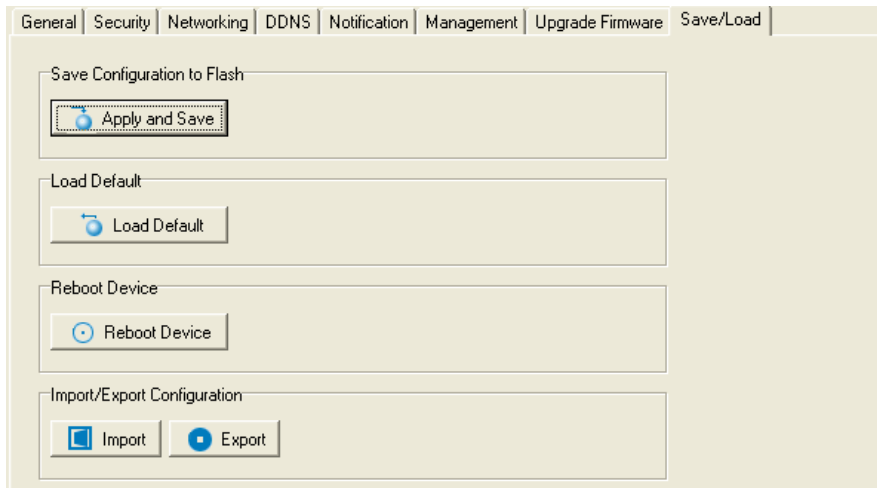


Figure 5-12 Save / Load

The following table describes the labels in this screen.

Label	Description
Save Configuration to Flash	Save current configuration into flash memory.
Load Default	Load default configuration except the network settings. If you want to load all factory default, you need to press " Reset " button on the device (Hardware restore).
Reboot Device	Reboot the device server (warm start).
Import Configuration	Restore the previous exported configuration.
Export Configuration	Exported current configuration to a file to backup the configuration.

Table 5-6 Save / Load



5.1.2.3 Configure serial port

Serial Settings

Serial Settings | Service Mode | Notification

port1

Port Alias

Baudrate Stop Bits Performance

Parity Flow Control

Data Bits Interface

Delimiter Settings

Serial to Ethernet | Ethernet to Serial

Delimiter 1

(HEX)

Enabled

Delimiter 2

(HEX)

Enabled

Delimiter 3

(HEX)

Enabled

Delimiter 4

(HEX)

Enabled

Flush Serial to Ethernet Data Buffer After

(0-65535) ms

The received data will be queuing in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush S2E data buffer" timeout, the data will also be sent.

Force TX interval time

(0-65535) ms data 1 interval time data 2 interval time data 3

The received data will be queuing in TX buffer until TX interval time is timeout or TX buffer is full (4K Bytes) , the data will also be sent. 0 is disable.

Figure 5-13 Serial Settings

The following table describes the labels in this screen.

Label	Description
Port Alias	Remark the port to hint the connected device.
Interface	RS232
Baud rate	110bps/300bps/1200bps/2400bps/4800bps/9600bps/19200bps/ 38400bps/57600bps/115200bps
Data Bits	5, 6, 7, 8
Stop Bits	1, 2 (1.5)
Parity	No, Even, Odd, Mark, Space
Flow Control	No, XON/XOFF, RTS/CTS, DTR/DSR



Performance	<p>Throughput: This mode optimized for highest transmission speed.</p> <p>Latency: This mode optimized for shortest response time.</p>
Serial to Ethernet	<p>Delimiter:</p> <p>You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option-"Flush Serial to Ethernet data buffer" times out. 0 means disable. Factory default is 0.</p> <p>Flush Data Buffer After:</p> <p>The received data will be queuing in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush S2E data buffer" timeout the data will also be sent. You can set the time from 0 to 65535 seconds.</p>
Ethernet to Serial	<p>Delimiter:</p> <p>You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option "Flush Ethernet to Serial data buffer" times out. 0 means disable. Factory default is 0.</p> <p>Flush Data Buffer After:</p> <p>The received data will be queuing in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flushE2S data buffer" timeout the data will also be sent. You can set the time from 0 to 65535 seconds.</p>



Force TX Interval Time	Force TX interval time is to specify the timeout when no data has been transmitted. When the timeout is reached or TX buffer is full (4K Bytes), the queued data will be sent. 0 means disable. Factory default value is 0.
------------------------	---

Table 5-7 Serial settings

Service Mode – Virtual COM Mode

In Virtual COM Mode, The driver establishes a transparent connection between host and serial device by mapping the Port of the serial server serial port to local COM port on the host computer. Virtual COM Mode also supports up to 5 simultaneous connections, so that multiple hosts can send or receive data by the same serial device at the same time.

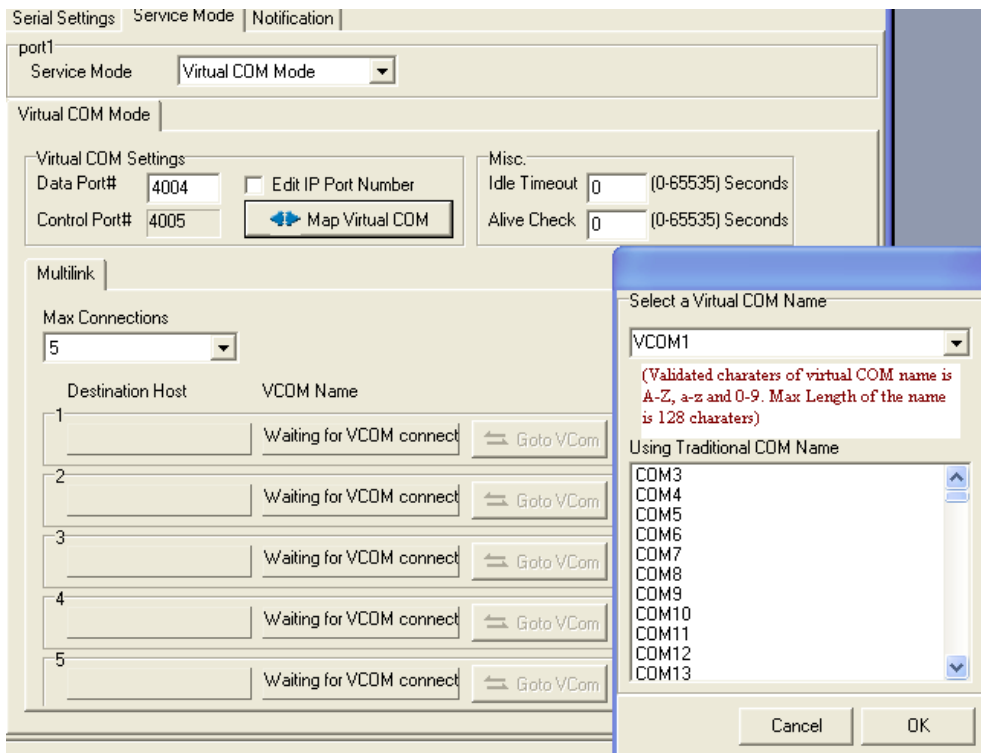


Figure 5-14 Virtual COM



The following table describes the labels in this screen.

Label	Description
Map Virtual COM	Select a Virtual COM Name to map on.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.

Table 5-8 Virtual COM

**Not allowed to mapping Virtual COM from web*

Service Mode – TCP Server Mode

In TCP Server Mode, DS is configured with a unique Port combination on a TCP/IP network. In this case, DS waits passively to be contacted by the device. After a connection is established, it can then proceed with data transmission. TCP Server mode also supports up to 5 simultaneous connections, so that multiple device can receive data from the same serial device at the same time.



Serial Settings | Service Mode | Notification |

port1

Service Mode

TCP Server Mode

TCP Server Settings

Data Port

Control Port

Misc.

Idle Timeout (0-65535) Seconds

Alive Check (0-65535) Seconds

Multilink

Max Connections

Destination Host

1

2

3

4

5

Figure 5-15 TCP Server mode

The following table describes the labels in this screen.

Label	Description
Data Port	Set the port number for data transmission.
Auto Scan	Scan the data port automatically.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.

Table 5-9 TCP Server mode

Service Mode – TCP Client Mode

In TCP Client Mode, device can establish a TCP connection with server by the method you have settled (Startup or any character). After the data has been transferred, device can disconnect automatically from the server by using the TCP alive check time or Idle time settings.

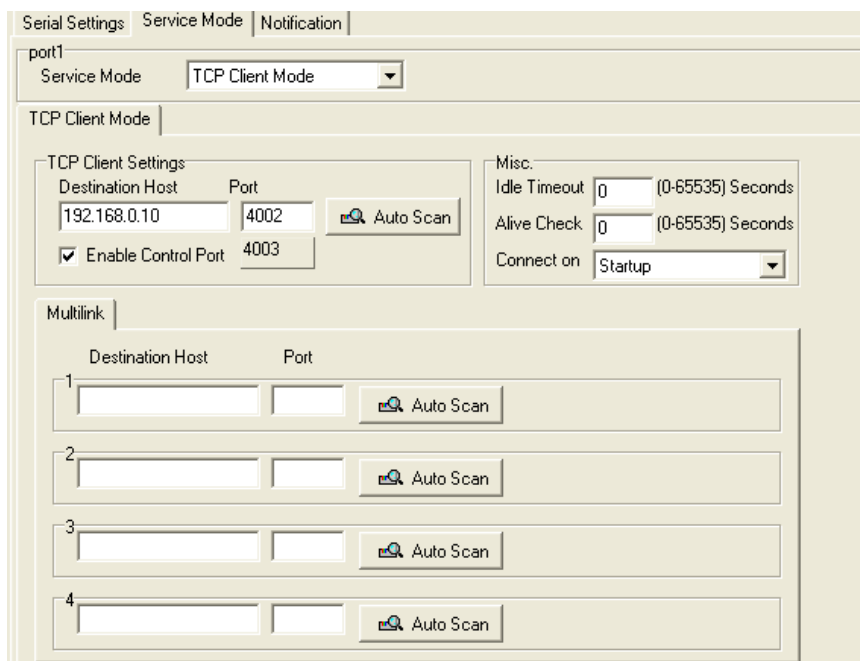


Figure 5-16 TCP Client mode

The following table describes the labels in this screen.

Label	Description
Destination Host	Set the IP address of host.
Port	Set the port number of data port.




Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Connect on Startup	The TCP Client will build TCP connection once the connected serial device is started.
Connect on Any Character	The TCP Client will build TCP connection once the connected serial device starts to send data.

Table 5-10 TCP Client mode

Service Mode – UDP Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can Uni-cast or Multi-cast data from the serial device server to host computers, and the serial device can also receive data from one or multiple host

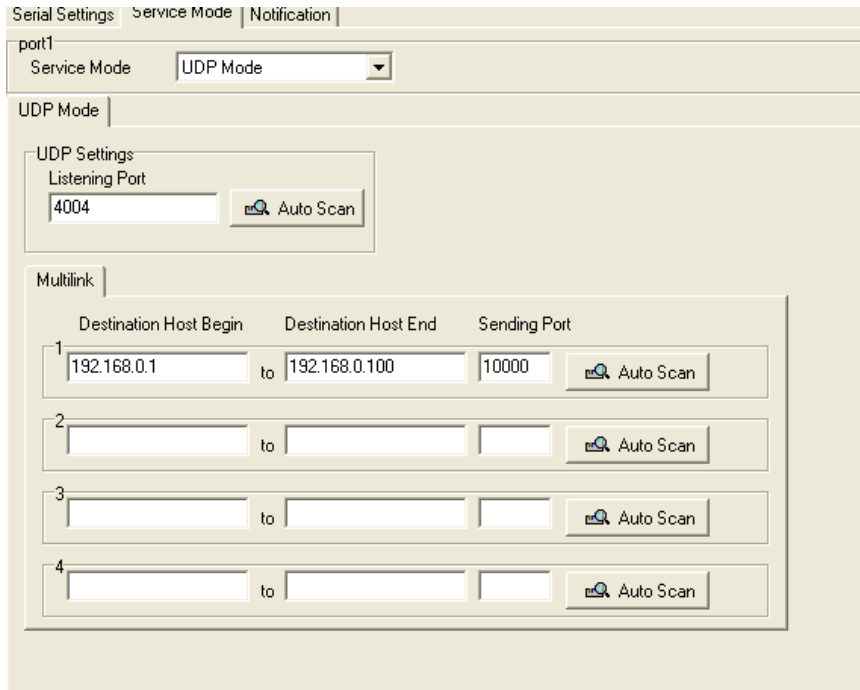

Serial Settings | Service Mode | Notification |

port1

Service Mode: UDP Mode

UDP Mode

UDP Settings

Listening Port: 4004 [Auto Scan]

Multilink

	Destination Host Begin	Destination Host End	Sending Port	
1	192.168.0.1	to 192.168.0.100	10000	[Auto Scan]
2		to		[Auto Scan]
3		to		[Auto Scan]
4		to		[Auto Scan]

Figure 5-17 UDP mode

Notification

Specify the events that should be noticed. The events can be noticed by E-mail, SNMP trap or system log.

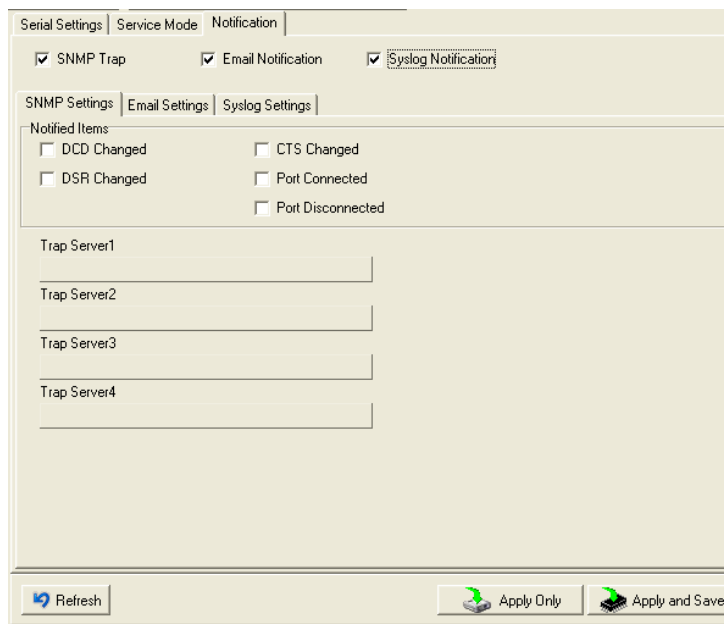


Figure 5-18 Notification

The following table describes the labels in this screen.

Label	Description
DCD changed	When DCD (Data Carrier Detect) signal changes, it indicates that the modem connection status has changed. Notification will be sent.
DSR changed	When DSR (Data Set Ready) signal changes, it indicates that the data communication equipment is powered off. A Notification will be sent.
CTS changed	When CTS (Clear To Send) signal changes, it indicates that the transmission between computer and DCE can proceed. A notification will be sent.
Port connected	In TCP Server Mode, when the device accepts an incoming TCP connection, this event will be trigger. In TCP Client Mode, when the device has connected to the remote host, this event will be trigger. In Virtual COM Mode, Virtual COM is ready to use. A notification will be sent.
Port disconnected	In TCP Server/Client Mode, when the device lost the TCP link, this event will be trigger. In Virtual COM Mode, When Virtual COM is not available, this event will be trigger. A notification will be sent.

Table 5-11 Notification

5.2 Configuration by Web Browser

5.2.1 CONNECT TO THE WEB PAGE

Step 1: Input the IP address of DS with “**https://192.168.10.2**” in the Address input box of IE.

Step 2: Click “**Yes**” button on the dialog box.



Figure 5-19 Certificates



Step 3: Input the name and password, then click "OK".

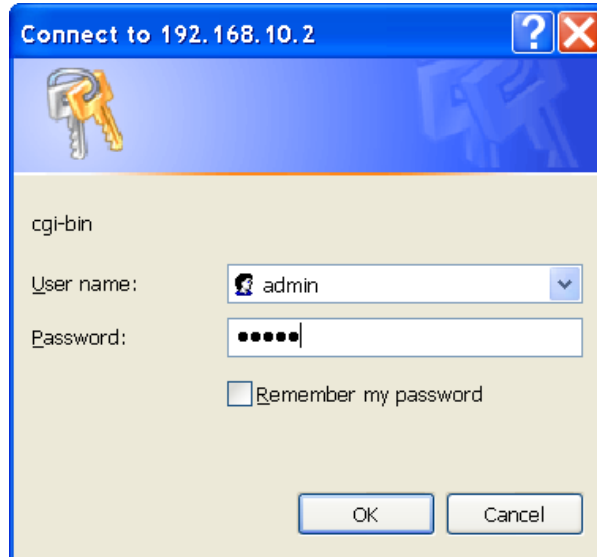


Figure 5-20 Certificates

**Only if password is set.*

Step 4: The system information will be shown as below.

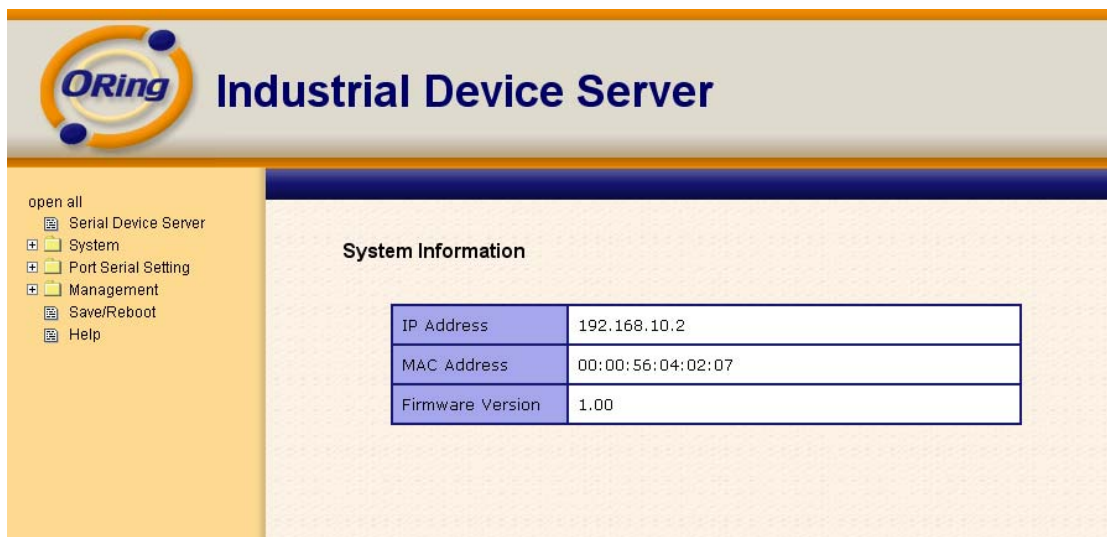


Figure 5-21 System information

5.2.1.1 System

Time (SNTP)



Figure 5-22 Time (SNTP)

The following table describes the labels in this screen.

Label	Description
Name	You can set the name of DS.
SNTP	Enable the SNTP server.
Time zone	After you set the SNTP enable, select the time zone you located.
Time server	Input SNTP server domain name or IP address and Port.
Console	Telnet Console (SSH) is included for security reasons. In some cases, you may need to disable this function to prevent unauthorized access from internet. The factory default is enable.

Table 5-12 Time (SNTP)



IP Configuration

You must assign a valid IP address for DS before attached in your network environment. Your network administrator should provide you with the IP address and related settings. The IP address must be unique and within the network (otherwise, DS will not have a valid connection to the network). You can choose from three possible “**IP configuration**” modes: Static, DHCP/BOOTP. The Factory Default IP address is “**192.168.10.2**”

IP Configuration	
IP Configuration	Static
IP Address	192.168.10.2
Netmask	255.255.255.0
Gateway	192.168.10.1
DNS Server 1	192.168.10.1
DNS Server 2	
Auto IP Report	
Auto Report to IP	
Auto Report to TCP Port	0
Auto Report Interval	0 seconds
<input type="button" value="Apply"/>	

Figure 5-23 IP configuration



The following table describes the labels in this screen.

Label	Description
DHCP/BOOTP	Obtain the IP address automatically from DHCP server.
Static IP Address	Assigning an IP address manually.
Subnet Mask	Set the subnet mask to communicate on the network.
Gateway	Enter the IP address of the router in you network.
DNS Server	Enter the IP address of the DNS server to translate domain names into IP address.
Auto IP Report	The device server will report its status periodically. At DS-Tool->IP collection option show the device server status. The report interval is 0 indicate disable this setting (default). But you can set the other IP or Port.

Table 5-13 IP configuration

PPPoE setting

PPPoE (Point-to-Point Protocol over Ethernet), Device can use PPPoE mode to connect the Network. Input the “**username**” and “Password”, then click “**Connect**” button. If the device has been connected, the “**Status**” will become the “**Link up**” and device will get an IP address from PPPoE server. Click “Return” button, return the “**IP Configuration**” default page.



Authentication

You can set the password to prevent unauthorized access from network. Input the "Old password" and "New password" to change the password. Factory default is no password.



The screenshot shows the 'User Authentication' configuration page. On the left is a navigation menu with options like 'Serial Device Server', 'System', 'Time(SNTP)', 'IP Configuration', 'DDNS Configuration', 'User Authentication', 'Port Serial Setting', 'Management', 'Save/Reboot', and 'Help'. The main content area is titled 'User Authentication' and contains three input fields: 'Old Password', 'New Password', and 'Confirm New Password'. Below these fields is an 'Apply' button.

Figure 5-24 Authentication

5.2.1.2 Port serial setting

Serial configuration



The screenshot shows the 'Serial Configuration' page. The navigation menu on the left is similar to the previous page but highlights 'Port Serial Setting'. The main content area is titled 'Serial Configuration' and contains a table of settings:

	Port1
Port Alias	port1
Interface	RS232
Baud Rate	38400
Data Bits	8
Stop Bits	1
Parity	None
Flow Control	None
Force TX Interval Time	0 ms
Performance	<input checked="" type="radio"/> Throughput <input type="radio"/> Latency

Below the table is an 'Apply' button.

Figure 5-25 Serial configuration



The following table describes the labels in this screen.

Label	Description
Port Alias	Remark the port to hint the connected device.
Interface	RS232
Baud rate	110bps/300bps/1200bps/2400bps/4800bps/9600bps/19200bps/ 38400bps/57600bps/115200bps
Data Bits	5, 6, 7, 8
Stop Bits	1, 2 (1.5)
Parity	No, Even, Odd, Mark, Space
Flow Control	No, XON/XOFF, RTS/CTS, DTR/DSR
Force TX Interval Time	Force TX interval time is to specify the timeout when no data has been transmitted. When the timeout is reached or TX buffer is full (4K Bytes), the queued data will be sent. 0 means disable. Factory default value is 0.
Performance	Throughput: This mode optimized for highest transmission speed. Latency: This mode optimized for shortest response time.
Apply	Activate settings on this page.

Table 5-14 Serial configuration

Port Profile

The screenshot shows the 'Port Profile' configuration page in the ORing Industrial Device Server web interface. The page is divided into a left sidebar and a main content area. The sidebar contains a navigation tree with the following items: 'open all', 'Serial Device Server', 'System' (with sub-items: Time(SNTP), IP Configuration, DDNS Configuration, User Authentication), 'Port Serial Setting' (with sub-items: Serial Configuration, Port Profile, Service Mode), 'Management' (with sub-items: Save/Reboot, Help). The main content area is titled 'Port Profile' and contains two sections for configuration. The first section is for 'Serial to Ethernet' mode, with fields for 'Local TCP Port' (4000), 'Command Port' (4001), 'Mode' (Serial to Ethernet), and 'Flush Data Buffer After' (0 ms). The second section is for 'Ethernet to Serial' mode, with fields for 'Mode' (Ethernet to Serial), 'Flush Data Buffer After' (0 ms), and 'Delimiter(Hex 0~ff)' for both directions (1: [], 2: [], 3: [], 4: []). An 'Apply' button is located at the bottom of the configuration area.

Figure 5-26 Port Profile

The following table describes the labels in this screen.

Label	Description
Serial to Ethernet	<p>Flush Data Buffer After:</p> <p>The received data will be queued in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush S2E data buffer" timeout, the data will also be sent. You can set the time from 0 to 65535 seconds.</p> <p>Delimiter:</p> <p>You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option "Flush Serial to Ethernet data buffer" times out. 0 means disable. Factory default is 0</p>
Ethernet to serial	<p>Flush Data Buffer After:</p> <p>The received data will be queued in the buffer until all the delimiters are matched. When the buffer is full (4K Bytes) or after "flush E2S data buffer" timeout, the data will also be sent. You can set the time from 0 to 65535 seconds.</p>



	<p>Delimiter:</p> <p>You can define max. 4 delimiters (00~FF, Hex) for each way. The data will be hold until the delimiters are received or the option “Flush Ethernet to Serial data buffer” times out. 0 means disable. Factory default is 0</p>
--	--

Table 5-15 Port Profile

Service Mode – Virtual COM Mode

In Virtual COM Mode, the driver establishes a transparent connection between host and serial device by mapping the Port of the serial server serial port to local COM port on the host computer. Virtual COM Mode also supports up to 5 simultaneous connections, so that multiple hosts can send or receive data by the same serial device at the same time.



Figure 5-27 Virtual COM mode

The following table describes the labels in this screen.

Label	Description
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the



	connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.

Table 5-16 Virtual COM mode

**Not allowed to mapping Virtual COM from web*

Service Mode – TCP Server Mode

In TCP Server Mode, DS is configured with a unique Port combination on a TCP/IP network. In this case, DS waits passively to be contacted by the device. After the device establishes a connection with the serial device, it can then proceed with data transmission. TCP Server mode also supports up to 5 simultaneous connections, so that multiple device can receive data from the same serial device at the same time.



Figure 5-28 TCP Server Mode

The following table describes the labels in this screen.

Label	Description
TCP Server Port	Set the port number for data transmission.
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Max Connection	The number of Max connection can support simultaneous connections are 5, default values is 1.

Table 5-17 TCP server mode

Service Mode – TCP Client Mode

In TCP Client Mode, device can establish a TCP connection with server by the method you set (Startup or any character). After the data has been transferred, device can disconnect automatically from the server by using the TCP alive check time or Idle timeout settings.



The screenshot shows the 'Service Mode' configuration page in the ORing Industrial Device Server web interface. The page title is 'Service Mode' and the URL is 'www.oring.com'. The left sidebar contains a navigation menu with the following items: open all, Serial Device Server, System, Time(SNTP), IP Configuration, DDNS Configuration, User Authentication, Port Serial Setting, Serial Configuration, Port Profile, Service Mode, Management, Save/Reboot, and Help. The main content area is titled 'Service Mode' and contains the following configuration fields:

- Port: Port1 (dropdown)
- Data Encryption: Enable Disable
- Service Mode: TCP Client Mode (dropdown)
- Destination Host: [] : []
- Idle Timeout: 0 (0~65535)seconds
- Alive Check: 0 (0~65535)seconds
- Connect on: Startup Any Character

Below these fields is a table for multiple destination hosts:

Destination Host	Port
1. []	[]
2. []	[]
3. []	[]
4. []	[]

An 'Apply' button is located at the bottom of the configuration area.

Figure 5-29 TCP client mode

The following table describes the labels in this screen.

Label	Description
Destination Host	Set the IP address of host and the port number of data port. .
Idle Timeout	When serial port stops data transmission for a defined period of time (Idle Timeout), the connection will be closed and the port will be freed and try to connect with other hosts. 0 indicate disable this function. Factory default value is 0. If Multilink is configured, only



	the first host connection is effective for this setting.
Alive Check	The serial device will send TCP alive-check package in each defined time interval (Alive Check) to remote host to check the TCP connection. If the TCP connection is not alive, the connection will be closed and the port will be freed. 0 indicate disable this function. Factory default is 0.
Connect on Startup	The TCP Client will build TCP connection once the connected serial device is started.
Connect on Any Character	The TCP Client will build TCP connection once the connected serial device starts to send data.

Table 5-18 TCP client mode

Service Mode – UDP Client Mode

Compared to TCP communication, UDP is faster and more efficient. In UDP mode, you can Uni-cast or Multi-cast data from the serial device server to host computers, and the serial device can also receive data from one or multiple host

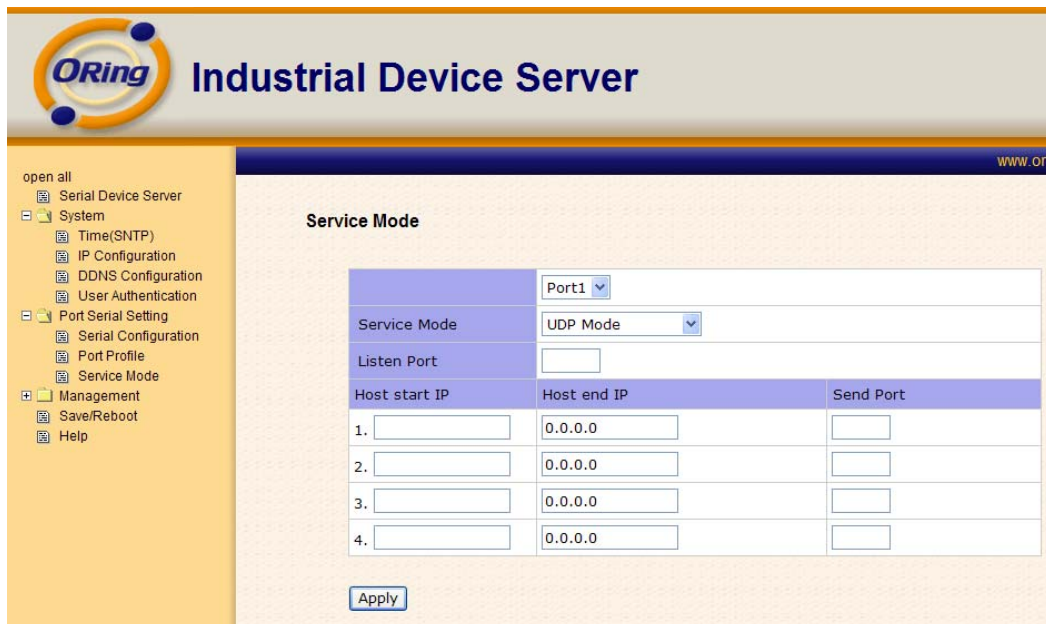


Figure 5-30 UDP client mode

5.2.1.3 Management

Access IP Control

Access IP Control Settings allow you to add or block the remote host IP addresses to prevent unauthorized access. If host's IP address is in the accessible IP table, then the host will be allowed to access the DS. You can choose one of the following cases by setting the parameter.

1. Only one host with a special IP address can access the device server, “**IP address /255.255.255.255**” (e.g., “**192.168.0.1/255.255.255.255**”).
2. Hosts on a specific subnet can access the device server. “**IP address/255.255.255.0**” (e.g., “**192.168.0.2/255.255.255.0**”).
3. Any host can access the device server. Disable this function by un-checking the “**Enable IP Filter**” checkbox



The screenshot displays the 'Access IP Control List' configuration page in the ORing Industrial Device Server web interface. The page features a sidebar menu on the left with various configuration options, and a main content area with a table for adding IP addresses. At the top of the main area, there is a checkbox labeled 'Enable IP Filtering (Not check this option will allow any IP to have accessibility)'. The table has four columns: 'No.', 'Activate the IP', 'IP Address', and 'Netmask'. There are 16 rows in the table, each with a checkbox in the 'Activate the IP' column and input fields for 'IP Address' and 'Netmask'. An 'Apply' button is located at the bottom left of the table.

No.	Activate the IP	IP Address	Netmask
1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
4	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
5	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
6	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
7	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
8	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
9	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
10	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
11	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
12	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
13	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
14	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
15	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
16	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>

Figure 5-31 Access IP



SMTP/SNMP Conf

Email Server configuration includes the mail server's IP address or domain. If the authentication is required, specify your name and password. There are 4 Email addresses that you can specify to receive the notification.

SNMP Server configuration includes the SNMP Trap Server IP address, Community, Location and Contact. There are 4 SNMP addresses you can specify to receive the notification.

SysLog server configuration includes the server IP and server Port. This option need to use with DS-Tool.

The screenshot shows the 'SMTP/SNMP Configuration' page in the ORing Industrial Device Server web interface. The page is divided into two main sections: 'E-mail Settings' and 'SNMP Trap Server'.

E-mail Settings:

- SMTP Server:** A text input field followed by a 'Port' field with the value '0'.
- My server requires authentication
- User Name:** A text input field.
- Password:** A text input field.
- E-mail Sender:** A text input field.
- E-mail Address 1:** A text input field.
- E-mail Address 2:** A text input field.
- E-mail Address 3:** A text input field.
- E-mail Address 4:** A text input field.

SNMP Trap Server:

- SNMP Server 1:** A text input field.
- SNMP Server 2:** A text input field.
- SNMP Server 3:** A text input field.
- SNMP Server 4:** A text input field.

The left sidebar contains a navigation menu with the following items:

- open all
- Serial Device Server
- System
 - Time(SNTP)
 - IP Configuration
 - DDNS Configuration
 - User Authentication
- Port Serial Setting
 - Serial Configuration
 - Port Profile
 - Service Mode
- Management
 - Access IP Control
 - SMTP/SNMP Conf.
 - System Event Conf.
 - Save/Reboot
 - Help

Figure 5-32 SMTP / SNMP conf

System Event Conf.

Specify the events that should be notified to the administrator. The events can be alarmed by E-mail, SNMP trap, or system log.



System Event Configuration

Device Event Notification

Hardware Reset (Cold Start)	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Software Reset (Warm Start)	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Login Failed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
IP Address Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Password Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Access IP Blocked	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Redundant Power Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog

Port Event Notification Port1

DCD Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
DSR Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
CTS Changed	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Port Connected	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog
Port Disconnected	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog

Fault Event Notification and Fault LED/Relay

Power 1 Fault	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay
Power 2 Fault	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay
Eth1 Link Down	<input type="checkbox"/> SMTP Mail	<input type="checkbox"/> SNMP Trap	<input type="checkbox"/> Syslog	<input type="checkbox"/> Fault LED/Relay

Apply

Figure 5-33 SMTP / SNMP conf

The following table describes the labels in this screen.

Label	Description
Hardware Reset (Cold Start)	This refers to starting the system from power off (contrast this with warm start). When performing a cold start, DS will automatically issue an Auto warning message by sending E-mail, log information or an SNMP trap after booting.



Software Reset (Warm Start)	This refers to restart the computer without turning the power off. When performing a warm start, DS will automatically send an E-mail, log information or SNMP trap after reboot.
Login Failed	When an unauthorized access from the Console or Web interface, a notification will be sent.
IP Address Changed	When IP address of device changed, a notification will be sent.
Password Changed	When password of device changed, a notification will be sent.
Access IP Blocked	When the host accesses the device with blocked IP addresses, a notification will be sent.
Redundant Power Change	When status of power changed, a notification will be sent.
Redundant Ethernet Change	When status of Ethernet port changed, a notification will be sent.
DCD changed	When DCD (Data Carrier Detect) signal changes, it indicates that the modem connection status has been changed. A Notification will be sent.
DSR changed	When DSR (Data Set Ready) signal changes, it indicates that the data communication equipment is powered off. A Notification will be sent.
CTS changed	When CTS (Clear To Send) signal changes, it indicates that the transmission between computer and DCE can proceed. A notification will be sent.
Port connected	In TCP Server Mode, when the device accepts an incoming TCP connection, this event will be trigger. In TCP Client Mode, when the device has connected to the remote host, this event will be trigger. In Virtual COM Mode, Virtual COM is ready to use. A notification will be sent.
Port disconnected	In TCP Server/Client Mode, when the device lost the TCP link, this event will be trigger. In Virtual COM Mode, When Virtual COM is not available, this event will be trigger. A notification will be sent.
Power 1 Fault	When Power 1 Fault, a notification will be sent and the Fault LED will be lighted.
Power 2 Fault	When Power 2 Fault, a notification will be sent and Fault LED will be lighted.

Eth link down	When Eth link down, a notification will be sent and Fault LED will be lighted.
---------------	--

Table 5-19 System event conf

5.2.1.4 Save/Reboot

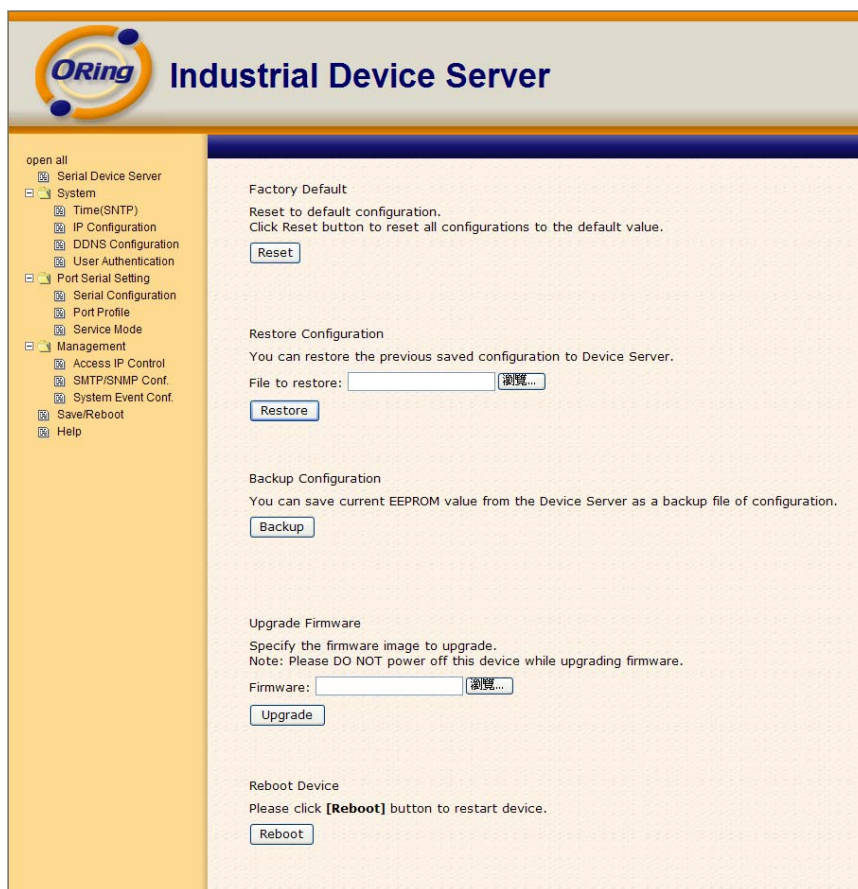


Figure 5-34 Save / Reboot



The following table describes the labels in this screen.

Label	Description
Factory Default	Load default configuration except settings of Network. If you want load all factory default, you should press "Reset" button about the five seconds on the device (Hardware restore).
Restore Configuration	Restore the previous exported configuration.
Backup Configuration	Export the current configuration to a file.
Upgrade Firmware	Upgrade to a new firmware with specified file.
Reboot Device	Reboot the device server (warm start).

Table 5-20 Save / Reboot

5.3 Configuration by SSH Console

5.3.1 Connect to DS

You can use SSH Tool (e.g., PUTTY) to access SSH console of DS. The SSH console interface is shown below.

```
login as: admin
admin@192.168.0.39.'s password:
*****
*** ORING Industrial Serial Device Server Commander ***
*****
-----
[ORING Industrial Serial Device Server Commander]
1. Overview
2. General Settings
3. Network Settings
4. Ports settings
5. Security(Accessible IP) Settings
6. Notification(Auto Warning) Settings
C. Change Password
L. Load Factory Default
S. Save configuration
R. Reboot
Q. Exit & Logout
Select one function (1-6,C,L,S,R,Q): █
```

Figure 5-35 SSH



Technical Specifications

ORing Device Server Model	IDS-181A	IDS-141A
Feature		
10/100 Base-T(X) Ports in RJ45 Auto MDI/MDIX	1	
Serial Ports		
RS-232 Serial port number	8	4
Connector	DB62 Female (provide DB62 to 8 ports DB9 cable)	DB62 Female (provide DB62 to 4 ports DB9 cable)
Operation Mode	RS-232	
Serial Baud Rate	110 bps to 115.2 Kbps	
Data Bits	7, 8	
Parity	odd, even, none, mark, space	
Stop Bits	1, 1.5, 2	
RS-232	TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND	
Flow Control	XON/XOFF, RTS/CTS, DTR/DSR	
Network Features		
Network Protocols	ICMP, IP, TCP, UDP, DHCP, BOOTP, SSH, DNS, SNMP V1/V2c, HTTPS, SMTP	
LED Indicators		
Power indicator	PWR 1(2) / Ready: Red On: Power is on and booting up. Red Blinking: Indicates an IP conflict, or DHCP or BOOTP server did not respond properly. Green On: Power is on and functioning Normally. Green Blinking: Located by Administrator.	
10/100TX RJ45 port indicator	Green for port Link/Act. Amber for port Link/Act at 100Mbps.	
Serial TX / RX LEDs:	Red: Serial port is receiving data Green: Serial port is transmitting data	
Power		
Redundant Input power	Dual DC inputs. 12-48VDC on 6-pin terminal block and power jack	
Power consumption (Typ.)	4.5 Watts	3.7 Watts
Overload current protection	Present	
Reverse polarity protection	Present on terminal block	
Physical Characteristic		
Enclosure	IP-30	
Dimension (W x D x H)	94.9 x 23 x 144.3 (mm)	
Weight (g)	358 g	355 g
Environmental		



Storage Temperature	-40 to 85°C (-40 to 185°F)
Operating Temperature	-10 to 60°C (14 to 140°F)
Operating Humidity	5% to 95% Non-condensing
Regulatory approvals	
EMI	FCC Part 15, CISPR (EN55022) class A
EMS	EN61000-4-2 (ESD), EN61000-4-3 (RS), EN61000-4-4 (EFT), EN61000-4-5 (Surge), EN61000-4-6 (CS), EN61000-4-8, EN61000-4-11
Shock	IEC60068-2-27
Free Fall	IEC60068-2-32
Vibration	IEC60068-2-6
Safety	EN60950-1
Warranty	5 years