




IEI Technology Corp.

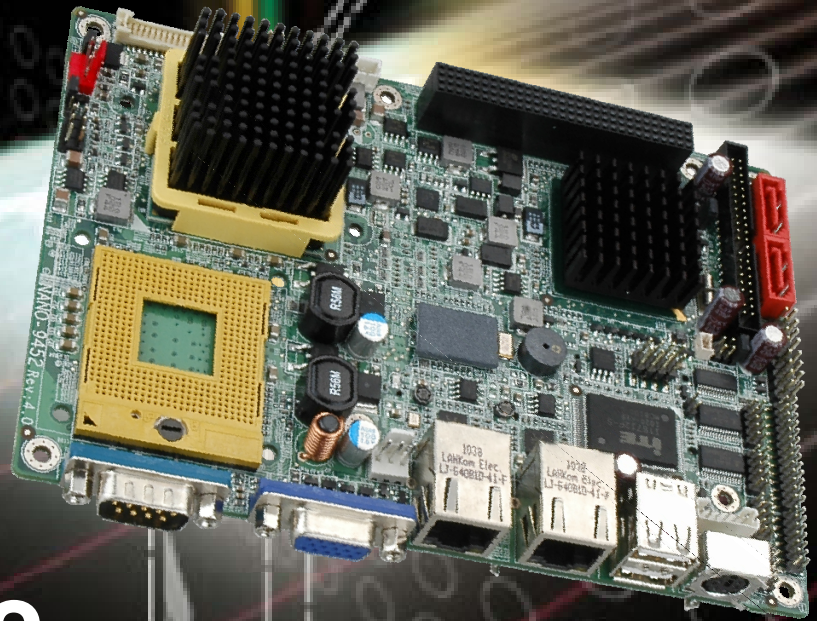

**MODEL:
NANO-9452**

**Socket 479 for Intel® Core™2 Duo, Core™ Duo, Core™ Solo EPIC
SBC with PCIe Mini, CRT, LVDS, TV-Out, PCIe GbE, USB 2.0, Dual
SATA and IDE, RoHS**

User Manual

Rev. 4.02 March 2012



Revision

Date	Version	Changes
March 2012	4.02	Minor revision to Figure 4-17: PCI-104 Slot Location
June 2011	4.01	Minor revisions to Chapter 4 Connector Pinouts
December 2010	4.00	Changed LAN chipset from Broadcom to Realtek RTL8111E Added J_ATXCTL1 and JSPI1 jumper setting
September 2010	1.12	Minor update
August 2008	1.11	Changed SATA II to SATA and 3.0 Gb/s to 1.5 Gb/s
March 2008	1.10	Intel® 945GM changed to Intel® 945GME
October 2007	1.01	Added "Hazardous Materials Disclosure" appendix
January 2007	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING!

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously. Warnings are easy to recognize. The word “warning” is written as “**WARNING**,” both capitalized and bold and is followed by text. The text is the warning message. A warning message is shown below:



WARNING:

This is an example of a warning message. Failure to adhere to warning messages may result in permanent damage to the NANO-9452 or personal injury to the user. Please take warning messages seriously.



CAUTION!

Cautionary messages should also be heeded to help reduce the chance of losing data or damaging the NANO-9452. Cautions are easy to recognize. The word “caution” is written as “**CAUTION**,” both capitalized and bold and is followed. The text is the cautionary message. A caution message is shown below:



CAUTION:

This is an example of a caution message. Failure to adhere to cautions messages may result in permanent damage to the NANO-9452. Please take caution messages seriously.

NANO-9452 EPIC Motherboard

A black triangle containing a yellow checkmark.

NOTE:

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes. Notes are easy to recognize. The word “note” is written as “**NOTE**,” both capitalized and bold and is followed by text. The text is the cautionary message. A note message is shown below:

A black triangle containing a yellow checkmark.

NOTE:

This is an example of a note message. Notes should always be read. Notes contain critical information about the NANO-9452. Please take note messages seriously.

Packing List

**NOTE:**

If any of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the NANO-9452 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

The items listed below should all be included in the NANO-9452 package.

- 1 x NANO-9452 single board computer
- 1 x IDE cable
- 1 x SATA power cable
- 2 x SATA cables
- 1 x KB/MS cable
- 1 x Mini jumper pack
- 1 x Utility CD
- 1 x QIG (quick installation guide)

Images of the above items are shown in **Chapter 3**.

Table of Contents

1 INTRODUCTION.....	1
1.1 INTRODUCTION.....	2
1.1.1 NANO-9452 Benefits.....	2
1.1.2 NANO-9452 Features	3
1.2 NANO-9452 OVERVIEW	3
1.2.1 NANO-9452 Overview Photo.....	3
1.2.2 NANO-9452 Peripheral Connectors and Jumpers	5
1.2.3 Technical Specifications.....	6
2 DETAILED SPECIFICATIONS	8
2.1 OVERVIEW.....	9
2.2 DIMENSIONS.....	9
2.2.1 Board Dimensions.....	9
2.2.2 External Interface Panel Dimensions	10
2.3 DATA FLOW	11
2.4 COMPATIBLE PROCESSORS	11
2.4.1 Compatible Processor Overview	11
2.4.2 Supported Processors	12
2.5 INTEL [®] 945GME NORTHBRIDGE CHIPSET.....	13
2.5.1 Intel [®] 945GME Overview	13
2.5.2 Intel [®] 945GME Memory Support.....	13
2.5.3 Intel [®] 945GME Integrated Graphics.....	14
2.5.3.1 Intel [®] 945GME Analog CRT Support.....	14
2.5.3.2 Intel [®] 945GME LVDS Support.....	15
2.5.3.3 Intel [®] 945GME TV Out Support	15
2.5.4 Intel [®] 945GME Direct Media Interface (DMI).....	15
2.6 INTEL [®] ICH7M SOUTHBRIDGE CHIPSET	16
2.6.1 Intel [®] ICH7M Overview.....	16
2.6.2 Intel [®] ICH7M Audio Codec '97 Controller	16
2.6.3 Intel [®] ICH7M IDE Interface.....	17
2.6.4 Intel [®] ICH7M Low Pin Count (LPC) Interface	17

2.6.5 Intel® ICH7M PCI Interface	17
2.6.6 Intel® ICH7M Real Time Clock.....	18
2.6.7 Intel® ICH7M SATA Controller.....	18
2.6.8 Intel® ICH7M USB Controller.....	18
2.7 PCIe BUS COMPONENTS	18
2.7.1 PCIe Bus Overview	18
2.7.2 Realtek RTL8111E GbE interface	18
2.7.3 Mini PCIe.....	19
2.8 LPC BUS COMPONENTS	19
2.8.1 LPC Bus Overview.....	19
2.8.2 BIOS Chipset.....	19
2.8.3 Super I/O chipset.....	20
2.8.3.1 Super I/O LPC Interface	20
2.8.3.2 Super I/O 16C550 UARTs	20
2.8.3.3 Super I/O Enhanced Hardware Monitor	21
2.8.3.4 Super I/O Fan Speed Controller.....	21
2.8.3.5 Super I/O Parallel Port	21
2.8.3.6 Super I/O Keyboard Controller.....	21
2.9 ENVIRONMENTAL AND POWER SPECIFICATIONS	22
2.9.1 System Monitoring	22
2.9.2 Operating Temperature and Temperature Control.....	23
2.9.3 Power Consumption.....	23
3 UNPACKING	24
3.1 ANTI-STATIC PRECAUTIONS	25
3.2 UNPACKING	25
3.2.1 Unpacking Precautions.....	25
3.3 UNPACKING CHECKLIST	26
3.3.1 Package Contents.....	26
3.3.2 Optional Items.....	27
4 CONNECTOR PINOUTS.....	29
4.1 PERIPHERAL INTERFACE CONNECTORS.....	30
4.1.1 NANO-9452 Layout	30
4.1.2 Peripheral Interface Connectors	31

NANO-9452 EPIC Motherboard

4.1.3 External Interface Panel Connectors.....	32
4.2 INTERNAL PERIPHERAL CONNECTORS	33
4.2.1 ATX Power Supply Enable Connector	33
4.2.2 Audio Connector	34
4.2.3 Compact Flash Socket.....	34
4.2.4 CPU Power Connector	36
4.2.5 Digital I/O Connector.....	37
4.2.6 Fan Connector	38
4.2.7 Front Panel Connector	39
4.2.8 IDE Connector.....	40
4.2.9 Infrared Interface Connector	42
4.2.10 Inverter Connector.....	43
4.2.11 Keyboard/Mouse Connector.....	43
4.2.12 LVDS LCD Connector	44
4.2.13 Mini PCIe Socket	45
4.2.14 Parallel Port Connector	47
4.2.15 PCI-104 Slot.....	48
4.2.16 SATA Drive Connectors	50
4.2.17 SATA Power Connector.....	51
4.2.18 Serial Port Connector (RS-232, RS-422 or RS-485)	52
4.2.19 Serial Port Connector (RS-232).....	53
4.2.20 SPI Flash Connector.....	54
4.2.21 TV Out Connector	55
4.2.22 USB Connectors.....	56
4.3 EXTERNAL PERIPHERAL INTERFACE CONNECTOR PANEL	57
4.3.1 Keyboard/Mouse Connector	57
4.3.2 LAN Connectors.....	58
4.3.3 Serial Port Connector.....	59
4.3.4 USB Connector	60
4.3.5 VGA Connector.....	61
5 INSTALLATION	62
5.1 ANTI-STATIC PRECAUTIONS	63
5.2 INSTALLATION CONSIDERATIONS.....	64
5.2.1 Installation Notices	64

5.2.2 Installation Checklist	65
5.3 CPU, CPU COOLING KIT AND DIMM INSTALLATION	66
5.3.1 Socket 479 CPU Installation.....	66
5.3.2 Cooling Kit CF-479B-RS Installation.....	68
5.3.3 SODIMM Installation	70
5.3.4 CF Card Installation.....	72
5.4 JUMPER SETTINGS	73
5.4.1 AT/ATX Power Select.....	74
5.4.2 CF Card Setup	75
5.4.3 Clear CMOS Jumper.....	76
5.4.4 COM 2 Function Select Jumper.....	77
5.4.5 LVDS Voltage Selection.....	78
5.4.6 VIO Voltage Selector Jumper.....	79
5.5 CHASSIS INSTALLATION.....	80
5.5.1 Airflow.....	80
5.5.2 Motherboard Installation.....	81
5.6 INTERNAL PERIPHERAL DEVICE CONNECTIONS.....	81
5.6.1 Peripheral Device Cables.....	81
5.6.2 IDE Cable Connection.....	82
5.6.3 5.1 Channel Audio Kit Installation	83
5.6.4 7.1 Channel Audio Kit Installation	84
5.6.5 SATA Drive Connection	86
5.7 EXTERNAL PERIPHERAL INTERFACE CONNECTION	87
5.7.1 VGA Monitor Connection	88
5.7.2 PS/2 Keyboard/Mouse Connection	89
6 BIOS SETUP	91
6.1 INTRODUCTION.....	92
6.1.1 Starting Setup.....	92
6.1.2 Using Setup	92
6.1.3 Getting Help.....	93
6.1.4 Unable to Reboot After Configuration Changes.....	93
6.1.5 BIOS Menu Bar.....	93
6.2 MAIN.....	94
6.3 ADVANCED.....	95

NANO-9452 EPIC Motherboard

6.3.1 CPU Configuration.....	97
6.3.2 IDE Configuration.....	98
6.3.2.1 IDE Master, IDE Slave.....	100
6.3.3 Super IO Configuration.....	104
6.3.4 Hardware Health Configuration.....	110
6.3.5 ACPI Configuration.....	111
6.3.5.1 General ACPI Configuration.....	112
6.3.6 APM Configuration.....	114
6.3.7 MPS Configuration.....	117
6.3.8 Remote Access Configuration.....	118
6.3.9 USB Configuration.....	121
6.4 PCI/PNP.....	124
6.5 BOOT.....	130
6.5.1 Boot Settings Configuration.....	130
6.5.2 Boot Device Priority.....	133
6.5.3 Hard Disk Drives.....	134
6.6 SECURITY.....	136
6.7 CHIPSET.....	137
6.7.1 Northbridge Configuration.....	138
6.7.1.1 Video Function Configuration.....	143
6.7.2 Southbridge Chipset Configuration.....	147
6.8 EXIT.....	149
7 DRIVER INSTALLATION.....	151
7.1 AVAILABLE SOFTWARE DRIVERS.....	152
7.2 DRIVER CD AUTO-RUN.....	152
7.3 CHIPSET DRIVER INSTALLATION.....	153
7.4 INTEL® GRAPHICS MEDIA ACCELERATOR DRIVER.....	156
7.5 REALTEK LAN DRIVER (FOR GbE LAN) INSTALLATION.....	160
7.6 REALTEK HD AUDIO DRIVER (ALC883) INSTALLATION.....	164
7.6.1 BIOS Setup.....	164
7.6.2 Driver Installation.....	164
7.7 REALTEK AC`97 AUDIO DRIVER (ALC665) INSTALLATION.....	167
7.7.1 BIOS Setup.....	167
7.7.2 Driver Installation.....	167

A BIOS OPTIONS	172
B TERMINOLOGY.....	177
C DIGITAL I/O INTERFACE.....	181
C.1 INTRODUCTION	182
C.2 DIO CONNECTOR PINOUTS.....	182
C.3 ASSEMBLY LANGUAGE SAMPLES.....	183
<i>C.3.1 Enable the DIO Input Function.....</i>	<i>183</i>
<i>C.3.2 Enable the DIO Output Function.....</i>	<i>183</i>
D WATCHDOG TIMER	184
E ADDRESS MAPPING	187
E.1 IO ADDRESS MAP	188
E.2 1 ST MB MEMORY ADDRESS MAP	188
E.3 IRQ MAPPING TABLE.....	189
E.4 DMA CHANNEL ASSIGNMENTS	189
F COMPATIBILITY.....	190
F.1 COMPATIBLE OPERATING SYSTEMS	191
F.2 COMPATIBLE PROCESSORS.....	191
F.3 COMPATIBLE MEMORY MODULES	192
G HAZARDOUS MATERIALS DISCLOSURE	193
G.1 HAZARDOUS MATERIALS DISCLOSURE TABLE FOR IPB PRODUCTS CERTIFIED AS ROHS COMPLIANT UNDER 2002/95/EC WITHOUT MERCURY	194
H AC'97 AUDIO CODEC	197
H.1 INTRODUCTION.....	198
<i>H.1.1 Accessing the AC'97 CODEC.....</i>	<i>198</i>
<i>H.1.2 Driver Installation.....</i>	<i>198</i>
H.2 SOUND EFFECT CONFIGURATION.....	199
<i>H.2.1 Accessing the Sound Effects Manager</i>	<i>199</i>
<i>H.2.2 Sound Effect Manager Configuration Options</i>	<i>200</i>

List of Figures

Figure 1-1: Mainboard	2
Figure 1-2: NANO-9452 Overview [Front View]	4
Figure 1-3: NANO-9452 Overview [Rear View].....	4
Figure 2-1: NANO-9452 Dimensions (mm)	9
Figure 2-2: External Interface Panel Dimensions (mm).....	10
Figure 2-3: Data Flow Block Diagram	11
Figure 2-4: 200-pin SO-DIMM Socket.....	14
Figure 4-1: Connector and Jumper Locations.....	30
Figure 4-2: Connector and Jumper Locations (Solder Side)	31
Figure 4-3: ATX Power Supply Enable Connector Location	33
Figure 4-4: Audio Connector Pinouts (10-pin).....	34
Figure 4-5: CF Card Socket Location	35
Figure 4-6: ATX Power Connector Location	37
Figure 4-7: DIO Connector Locations.....	38
Figure 4-8: +12V Fan Connector Location	39
Figure 4-9: Front Panel Connector Pinout Locations	40
Figure 4-10: Secondary IDE Device Connector Locations	41
Figure 4-11: Infrared Connector Pinout Locations	42
Figure 4-12: Inverter Connector Location	43
Figure 4-13: Keyboard/Mouse Connector Location	44
Figure 4-14: LVDS LCD Connector Pinout Locations.....	45
Figure 4-15: Mini PCIe Connector Pinout Locations.....	46
Figure 4-16: Parallel Port Connector Location	48
Figure 4-17: PCI-104 Slot Location	49
Figure 4-18: SATA Drive Connector Locations	51
Figure 4-19: SATA Power Connector Location	52
Figure 4-20: RS-232/422/485 Serial Port Connector Location.....	53
Figure 4-21: COM3 and COM4 Connector Pinout Locations	54
Figure 4-22: SPI Flash Jumper Pinout Locations.....	55
Figure 4-23: TV Connector Pinout Locations	55

Figure 4-24: USB Connector Pinout Locations	56
Figure 4-25: NANO-9452 External Peripheral Interface Connector	57
Figure 4-26: PS/2 Pinouts	58
Figure 4-27: RJ-45 Ethernet Connector.....	59
Figure 4-28: Serial Port Connector	60
Figure 4-29: VGA Connector	61
Figure 5-1: Make sure the CPU socket retention screw is unlocked	67
Figure 5-2: Lock the CPU Socket Retention Screw.....	68
Figure 5-3: IEI CF-479B-RS Cooling Kit.....	68
Figure 5-4: Cooling Kit Support Bracket.....	69
Figure 5-5: Connect the cooling fan cable.....	70
Figure 5-6: SODIMM Installation	71
Figure 5-7: CF Card Installation	73
Figure 5-8: Jumper Locations	73
Figure 5-9: CF Card Setup Jumper Location.....	75
Figure 5-10: CF Card Setup Jumper Location.....	75
Figure 5-11: Clear CMOS Jumper	77
Figure 5-12: COM 2 Function Select Jumper Location.....	78
Figure 5-13: LVDS Voltage Selection Jumper Pinout Locations	79
Figure 5-14: PCI-104 VIO Selector Jumper Pinout Locations.....	80
Figure 5-15: IDE Cable Connection.....	82
Figure 5-16: 5.1 Channel Audio Kit.....	84
Figure 5-17: 5.1 Channel Audio Kit.....	85
Figure 5-18: SATA Drive Cable Connection.....	86
Figure 5-19: SATA Power Drive Connection.....	87
Figure 5-20: VGA Connector	88
Figure 5-21: PS/2 Connector	89
Figure 6-1: Video Function Configuration	143
Figure 7-1: Introduction Screen	153
Figure 7-2: Available Drivers.....	153
Figure 7-3: Chipset Driver Installation Program.....	154
Figure 7-4: Chipset Driver Installation Welcome Screen.....	154
Figure 7-5: Chipset Driver Installation License Agreement.....	155
Figure 7-6: Chipset Driver Readme File Information	155
Figure 7-7: Chipset Driver Installation Complete	156

NANO-9452 EPIC Motherboard

Figure 7-8: Select the Operating System	156
Figure 7-9: VGA Driver	157
Figure 7-10: GMA Driver Readme File	157
Figure 7-11: GMA Driver File Extraction	158
Figure 7-12: GMA Driver Installation Welcome Screen	158
Figure 7-13: GMA Driver License Agreement	159
Figure 7-14: GMA Driver Installing Notice	159
Figure 7-15: GMA Driver Installation Complete.....	160
Figure 7-16: Access Windows Control Panel	161
Figure 7-17: Double Click the System Icon.....	161
Figure 7-18: Double Click the Device Manager Tab	162
Figure 7-19: Device Manager List	162
Figure 7-20: Search for Suitable Driver	163
Figure 7-21: Locate Driver Files	163
Figure 7-22: Location Browsing Window	164
Figure 7-23: 4-AUDIO\AC-KIT883HD\Windows Folder	165
Figure 7-24: HD Audio Driver Setup Extracting Files	165
Figure 7-25: HD Audio Driver Setup Welcome Screen	166
Figure 7-26: HD Audio Driver Installation Complete.....	166
Figure 7-27: CD 4-AUDIO\AC-KIT08R\Windows Folder	167
Figure 7-28: AC`97 Audio Driver Install Shield Wizard Starting	168
Figure 7-29: AC`97 Audio Driver Setup Preparation	168
Figure 7-30: AC`97 Audio Driver Welcome Screen	169
Figure 7-31: AC`97 Audio Driver Digital Signal	169
Figure 7-32: AC`97 Audio Driver Installation Begins	170
Figure 7-33: AC`97 Audio Driver Installation Complete.....	170

List of Tables

Table 1-1: Technical Specifications.....	7
Table 2-1: Processor Features	12
Table 2-2: Supported Processors	13
Table 2-3: Supported HDD Specifications.....	17
Table 2-4: Power Consumption.....	23
Table 3-1: Package List Contents	27
Table 3-2: Optional Items.....	28
Table 4-1: Peripheral Interface Connectors	32
Table 4-2: Rear Panel Connectors	32
Table 4-3: ATX Power Supply Enable Connector Pinouts	33
Table 4-4: Audio Connector Pinouts (10-pin)	34
Table 4-5: CF Card Socket Pinouts.....	36
Table 4-6: ATX Power Connector Pinouts	37
Table 4-7: DIO Connector Pinouts	38
Table 4-8: +12V Fan Connector Pinouts.....	39
Table 4-9: Front Panel Connector Pinouts.....	40
Table 4-10: Secondary IDE Connector Pinouts	42
Table 4-11: Infrared Connector Pinouts	42
Table 4-12: Inverter Connector Pinouts	43
Table 4-13: Keyboard/Mouse Connector Pinouts	44
Table 4-14: LVDS LCD Port Connector Pinouts	45
Table 4-15: Mini PCIe Socket Pinouts.....	47
Table 4-16: Parallel Port Connector Pinouts	48
Table 4-17: PCI-104 Slot Connector Pinouts	50
Table 4-18: SATA Drive Connector Pinouts.....	51
Table 4-19: SATA Power Connector Pinouts.....	52
Table 4-20: RS-232/RS-485 Serial Port Connector Pinouts.....	53
Table 4-21: COM3 and COM4.....	54
Table 4-22: SPI Flash Jumper Settings	55
Table 4-23: TV Port Connector Pinouts.....	56

NANO-9452 EPIC Motherboard

Table 4-24: USB Port Connector Pinouts.....	57
Table 4-25: Mini-DIN 6 PS/2 Connector Pinouts.....	58
Table 4-26: LAN Pinouts	59
Table 4-27: RJ-45 Ethernet Connector LEDs.....	59
Table 4-28: Serial Port Connector Pinouts	60
Table 4-29: USB Port Pinouts.....	61
Table 4-30: VGA Connector Pinouts.....	61
Table 5-1: Jumpers	74
Table 5-2: AT/ATX Power Select jumper settings	74
Table 5-3: CF Card Setup Jumper Settings	75
Table 5-4: Clear CMOS Jumper Settings.....	76
Table 5-5: COM 2 Function Select Jumper Settings	77
Table 5-6: LVDS Voltage Selection Jumper Settings.....	78
Table 5-7: PCI-104 VIO Selector Jumper Settings.....	79
Table 5-8: IEI Provided Cables	81
Table 6-1: BIOS Navigation Keys.....	93

BIOS Menus

Menu 1: Main	94
Menu 2: Advanced	96
Menu 3: CPU Configuration	97
Menu 4: IDE Configuration	98
Menu 5: IDE Master and IDE Slave Configuration	100
Menu 6: Super IO Configuration	105
Menu 7: Hardware Health Configuration	110
Menu 8: ACPI Configuration	111
Menu 9: General ACPI Configuration [Advanced\ ACPI Configuration]	112
Menu 10: Advanced Power Management Configuration	114
Menu 11: MPS Configuration	117
Menu 12: Remote Access Configuration [Advanced]	118
Menu 13: USB Configuration	122
Menu 14: PCI/PnP Configuration	125
Menu 15: Boot	130
Menu 16: Boot Settings Configuration	131
Menu 17: Boot Device Priority Settings	134
Menu 18: Hard Disk Drives	135
Menu 19: Security	136
Menu 20: Chipset	137
Menu 21: Northbridge Chipset Configuration	138
Menu 22: Southbridge Chipset Configuration	147
Menu 23: Exit	149

Chapter

1

Introduction

1.1 Introduction

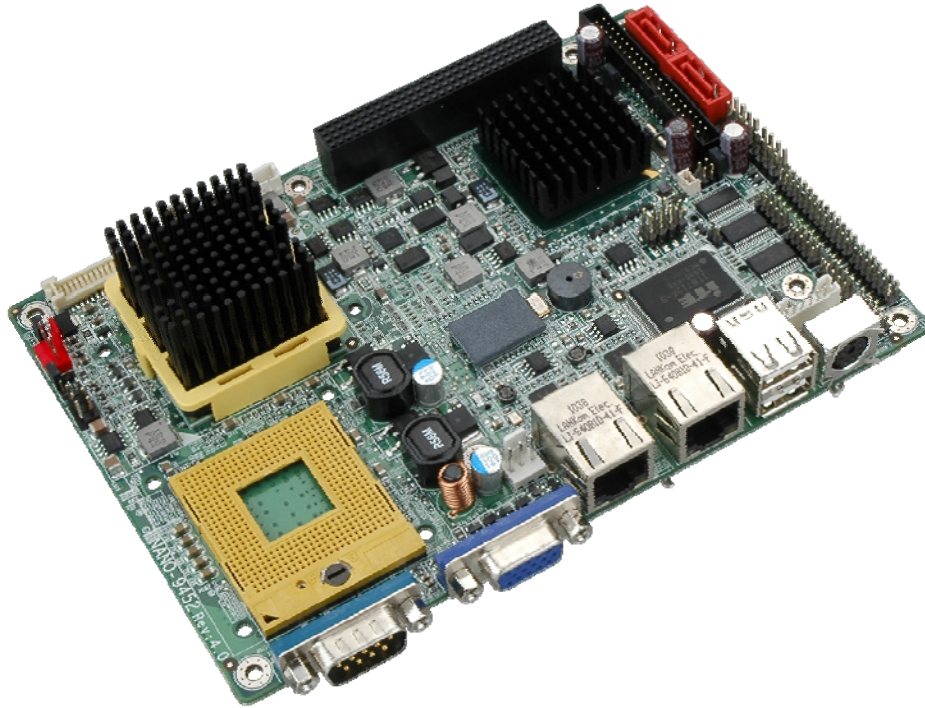


Figure 1-1: Mainboard

The NANO-9452 EPIC form factor CPU card is a Socket 479 Intel® Core Duo or Socket 479 Intel® Core Solo CPU platform. The NANO-9452 has a maximum front side bus (FSB) frequency of 667MHz and comes with a VGA interface and dual PCI Express (PCIe) Gigabit Ethernet (GbE). The NANO-9452 supports up to two, second-generation serial ATA (SATA) hard disk drives (HDD) with maximum transfer rates of 1.5 Gb/s and up to six USB 2.0 devices. The NANO-9452 also has a PCI-104 socket and a Mini PCI Express (PCIe) socket for system expansion. Multiple display support adds versatility to the system enabling system integrators and designers increased flexibility in selecting display panel options.

1.1.1 NANO-9452 Benefits

Some of the NANO-9452 benefits are listed below:

- Multiple display output options
- Storage flexibility with support for SATA drives, IDE drives and CompactFlash (CF) disks

NANO-9452 EPIC Motherboard

- Expandable system with PCI-104 and mini PCIe slots
- DDR2 support enables faster data transfers
- Multiple I/O interfaces provide connectivity to a broad range of external peripheral devices

1.1.2 NANO-9452 Features

Some of the NANO-9452 features are listed below.

- Support for Socket 479 Intel® Core™2 Duo or Core™ Solo CPUs
- Maximum FSB of 667MHz
- Supports one 200-pin 400/533/667 MHz 2.0 GB DDR2 SO-DIMM memory
- Two SATA drives with transfer rates of 1.5 Gb/s supported
- Two Ultra ATA 33 IDE HDDs supported
- Six USB 2.0 devices supported
- Dual PCIe GbE Ethernet connectivity
- Multiple display options including CRT, S-VIDEO, Composite output and dual-channel LVDS
- EPIC form factor
- RoHS compliant
- Supports AT and ATX power supplies

1.2 NANO-9452 Overview

1.2.1 NANO-9452 Overview Photo

The NANO-9452 has a wide variety of internal and external peripheral connectors. The peripheral connectors are connected to devices including PCI-104 devices, mini PCIe devices, storage devices, display devices and parallel communications devices. A labeled photo of the peripheral connectors on the front of the NANO-9452 is shown in **Figure 1-2**.

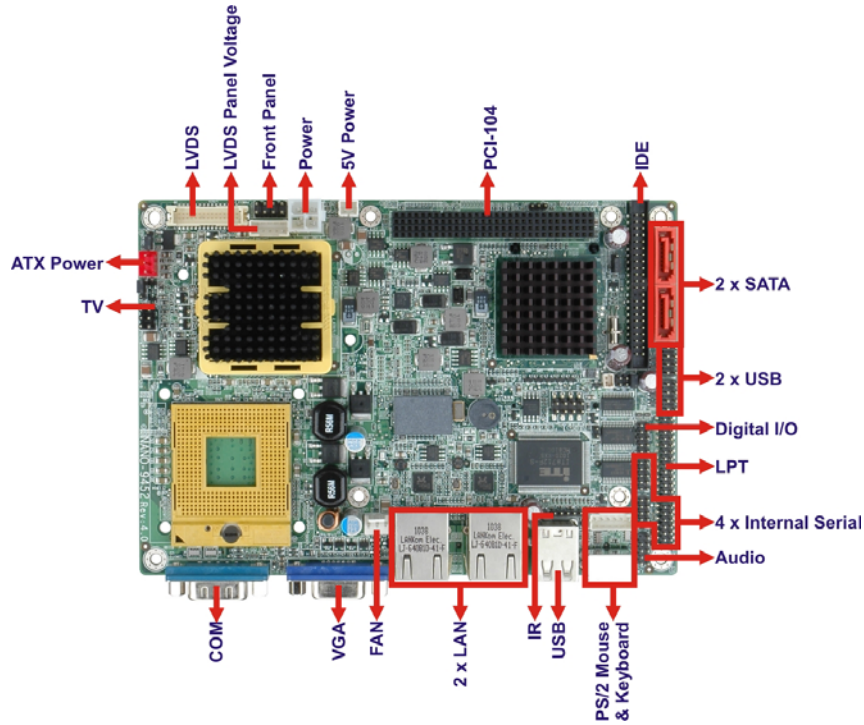


Figure 1-2: NANO-9452 Overview [Front View]

A labeled photo of the peripheral connectors on the back of the NANO-9452 is shown in Figure 1-2.

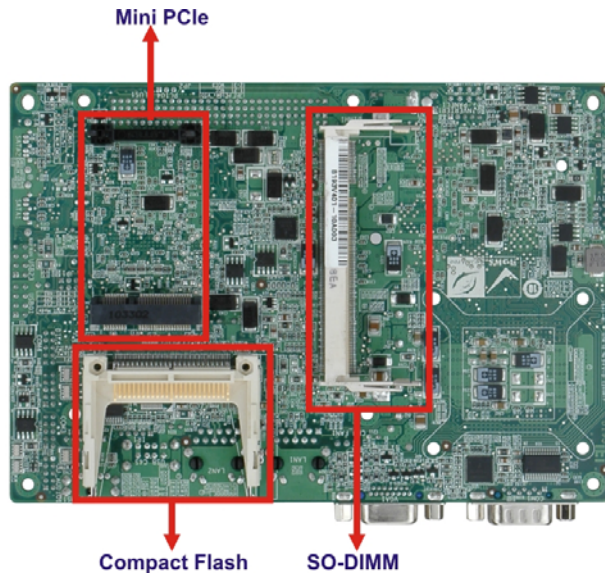


Figure 1-3: NANO-9452 Overview [Rear View]

NANO-9452 EPIC Motherboard

1.2.2 NANO-9452 Peripheral Connectors and Jumpers

The NANO-9452 has the following connectors on-board:

- 1 x 5 V ATX power connector
- 1 x +12 V ATX power connector
- 1 x ATX enable connector
- 1 x Audio connector
- 1 x Compact flash connector
- 1 x Digital input/output connector
- 1 x Fan connector
- 1 x Front panel connector
- 1 x IDE disk drive connector
- 1 x Infrared interface connector
- 1 x Inverter connector
- 1 x Keyboard and mouse connector
- 1 x LVDS connector
- 1 x Parallel port connector
- 1 x PCI-104 slot
- 1 x Mini PCIe card slot
- 2 x Serial ATA (SATA) drive connectors
- 1 x Serial port connector (internal COM 2 RS-232, RS-422, or RS-485)
- 2 x Serial port connectors (internal COM3 and COM4 RS-232)
- 2 x USB connectors

The NANO-9452 has the following external peripheral interface connectors on the board rear panel

- 2 x Ethernet connectors
- 1 x PS/2 keyboard or mouse connector
- 1 x Serial port connector
- 2 x USB port connectors
- 1 x VGA connector

The NANO-9452 has the following on-board jumpers:

- Clear CMOS

- LCD voltage selector
- CF card setting
- COM 2 port mode setting
- PC104+ VIO selector
- PC104+ SERIRQ# support

1.2.3 Technical Specifications

NANO-9452 technical specifications are listed in **Table 1-1**. See **Chapter 2** for details.

Specification	NANO-9452
Form Factor	EPIC
System CPU	Socket 479 Intel® Core™ 2 Duo Mobile Socket 479 Intel® Core™ Duo Socket 479 Intel® Core™ Solo
Front Side Bus	667MHz
System Chipset	Northbridge: Intel® 945GME Southbridge: Intel® ICH7M
Memory	One 200-pin SO-DIMM socket supports one 400/533/667 MHz DDR2 SO-DIMM with a maximum capacity of 2.0 GB
Display	CRT: Integrated in the Intel® 945GME to support CRT TV-Out: S-Video and composite output LVDS: Dual channel 18-bit / 24-bit LVDS LCD panel
BIOS	AMI BIOS
Audio	7.1 channel or 5.1 channel audio with an optional AC-KIT
LAN	Two Realtek PCIe GbE controllers
COM	Three RS-232 serial ports (two internal, one external) One RS-232, RS-422 or RS-485 serial port
USB2.0	Six USB 2.0 devices supported
IDE	One 44-pin IDE connects to two Ultra ATA33 devices

NANO-9452 EPIC Motherboard

Specification	NANO-9452
SATA	Two 1.5 Gb/s SATA drives supported
Keyboard/mouse	One PS/2 connector supports mouse and keyboard connectivity
Watchdog Timer	Software programmable 1-255 sec. by super I/O
Power Supply	12V only, AT and ATX supported
Temperature	0°C – 60°C (32°F - 140°F)
Humidity (operating)	5%~95% non-condensing
Dimensions (L x W)	165mm x 115mm
Weight (GW/NW)	800g/ 260g

Table 1-1: Technical Specifications



Chapter

2

Detailed Specifications

NANO-9452 EPIC Motherboard

2.1 Overview

This chapter describes the specifications and on-board features of the NANO-9452 in detail.

2.2 Dimensions

2.2.1 Board Dimensions

The dimensions of the board are listed below:

- Length: 165mm
- Width: 115mm

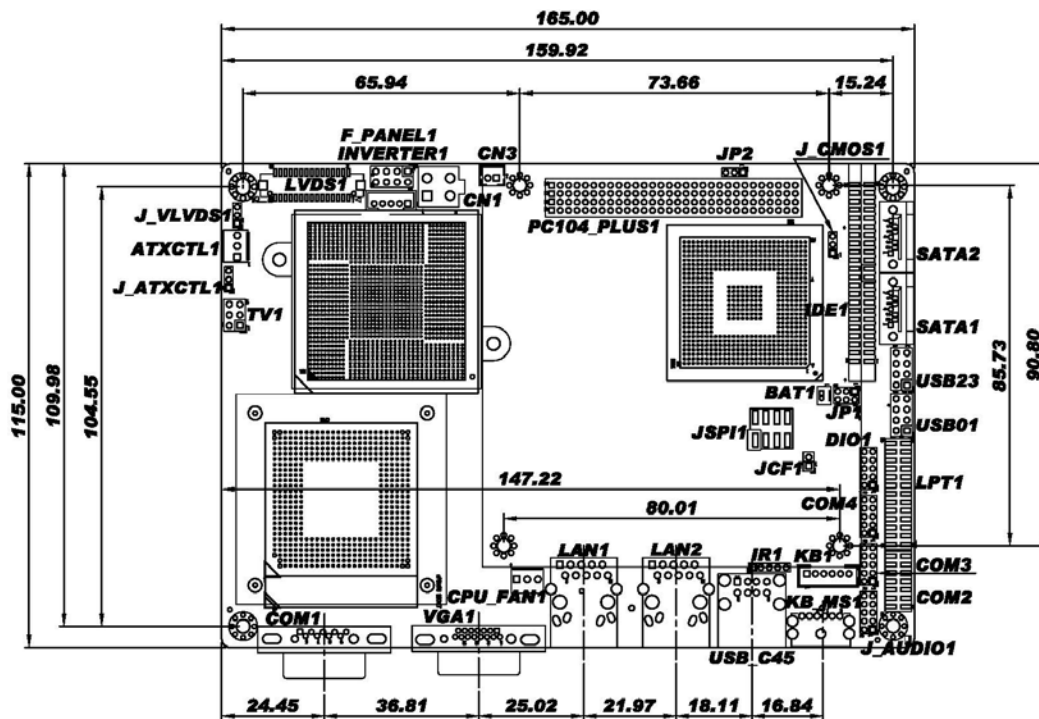


Figure 2-1: NANO-9452 Dimensions (mm)

2.2.2 External Interface Panel Dimensions

External peripheral interface connector panel dimensions are shown in **Figure 2-2**.

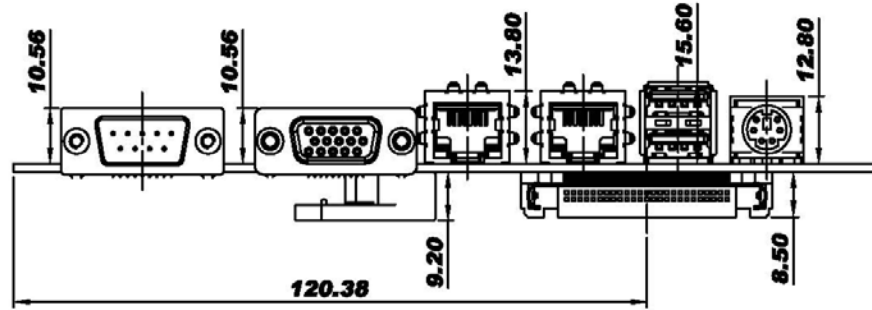


Figure 2-2: External Interface Panel Dimensions (mm)

NANO-9452 EPIC Motherboard

2.3 Data Flow

Figure 2-3 shows the data flow between the two on-board chipsets and other components installed on the motherboard and described in the following sections of this chapter.

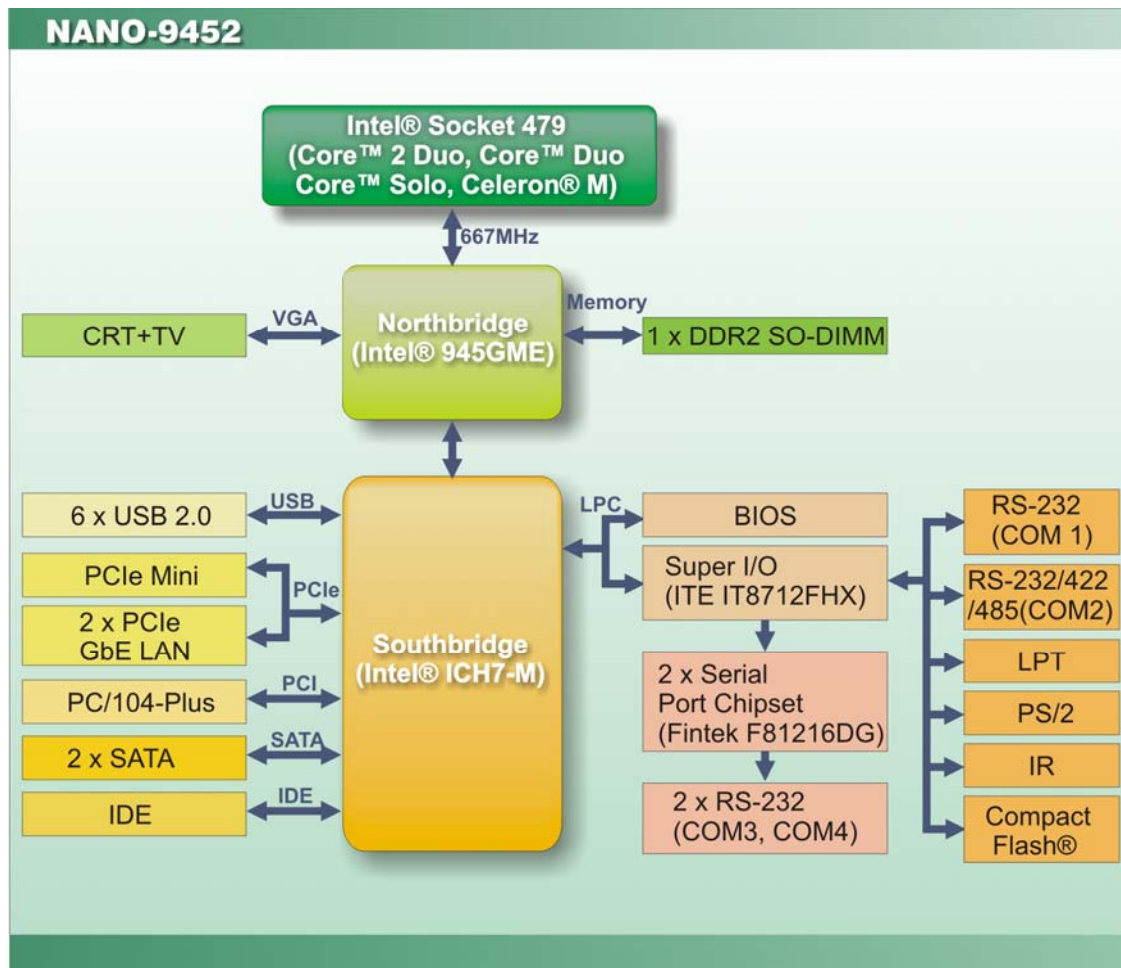


Figure 2-3: Data Flow Block Diagram

2.4 Compatible Processors

2.4.1 Compatible Processor Overview

The NANO-9452 supports the following socket 479 processors:

- Intel® Core™2 Duo Mobile processors
- Intel® Core™ Duo processors

- Intel® Core™ Solo processors
- Intel® Celeron® M (533 MHz FSB)

All three of the above processors communicate with the Intel® 945GME Northbridge chipset through a 667MHz front side bus (FSB). Features of the supported processors are listed in **Table 2-1**.

CPU Features	Core™2 Duo Mobile	Core™ Duo	Core™ Solo	Celeron® M (533 MHz FSB)
Dual core	Yes	Yes	No	No
Enhanced Halt State (C1E)	No	Yes	No	No
Enhanced Intel® SpeedStep® Technology	Yes	Yes	Yes	No
Execute Disable Bit	Yes	Yes	Yes	Yes
Intel® EM64T	Yes	No	No	No
Intel® Virtualization Technology	Yes	Yes	No	No

Table 2-1: Processor Features

2.4.2 Supported Processors

Specifications for the compatible processors are listed in **Table 2-2** below:

Family	CPU Speed	Processor #	Bus Speed	Mfg Tech	Cache Size
Core™2 Duo Mobile	2.33 GHz	T7600	667 MHz	65 nm	4 MB
	2.16 GHz	T7400	667 MHz	65 nm	4 MB
	2 GHz	T7200	667 MHz	65 nm	4 MB
	1.83 GHz	T5600	667 MHz	65 nm	2 MB
	1.66 GHz	T5500	667 MHz	65 nm	2 MB
Core™ Duo	2 GHz	T2500	667 MHz	65 nm	2 MB
	1.66 GHz	T2300E	667 MHz	65 nm	2 MB
Core™ Solo	1.83 GHz	T1400	667 MHz	65 nm	2 MB

NANO-9452 EPIC Motherboard

Family	CPU Speed	Processor #	Bus Speed	Mfg Tech	Cache Size
Celeron® M	1.86 GHz	440	533 MHz	65 nm	1 MB
	1.73 GHz	530	533 MHz	65 nm	1 MB

Table 2-2: Supported Processors

2.5 Intel® 945GME Northbridge Chipset

2.5.1 Intel® 945GME Overview

The Intel® 945GME Northbridge chipset has the Generation 3.1 Intel® Integrated Graphics Engine and the Intel® Graphics Media Accelerator 950 (Intel® GMA 950). The integrated graphics and memory controller hub (GMCH) facilitates the flow of information primarily between the following four interfaces:

- Front Side Bus (FSB)
- System Memory Interface
- Graphics Interface
- Direct Media Interface (DMI)

2.5.2 Intel® 945GME Memory Support



WARNING:

Only DDR2 memory module can be installed on the NANO-9452. Do not install DDR memory modules. If a DDR memory module is installed on the NANO-9452, the NANO-9452 may be irreparably damaged.

The Intel® 945GME Northbridge chipset on the NANO-945GME supports one DDR2 200-pin SO-DIMM with the following features:

- One 200-pin SO-DIMM only
- DDR2 only (**DO NOT** install a DDR SO-DIMM)
- Single-channel or dual-channel

- Capacities of 256 MB, 512 MB, 1.0 GB or 2.0 GB
- Transfer speeds of 400 MHz, 533 MHz, or 667 MHz
- 64-bit wide channel

The memory socket is shown in **Figure 2-4**.

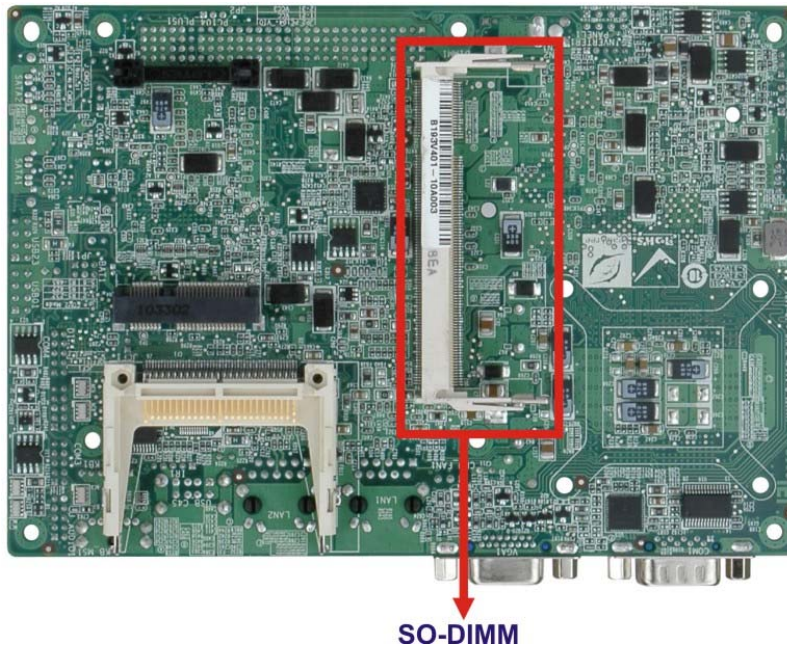


Figure 2-4: 200-pin SO-DIMM Socket

2.5.3 Intel® 945GME Integrated Graphics

The Intel® 945GME Northbridge chipset has an Intel® Gen. 3.5 integrated graphics engine that supports the following display devices:

- Analog CRT
- LVDS
- TV-Out
- S-DVO ports

2.5.3.1 Intel® 945GME Analog CRT Support

A DB-15 VGA connector on the external peripheral interface connector panel is interfaced to the Intel® 945GME graphics engine. The Intel® 945GME internal graphics engine, with

NANO-9452 EPIC Motherboard

an integrated 400MHz RAMDAC and hot plug CRT support, supports analog CRT monitors up to QXGA.

2.5.3.2 Intel® 945GME LVDS Support

A 30-pin LVDS crimp connector is interfaced to the Intel® 945GME graphics engine. The Intel® 945GME internal graphics engine supports LVDS displays with the following features:

- Dual-channel LVDS interface support, 2 x 18-bit panel up to QXGA (2048 x 1536)
- CPIS 1.5 compliant LVDS screens

2.5.3.3 Intel® 945GME TV Out Support

A 6-pin TV output connector is interfaced to the Intel® 945GME graphics engine. The Intel® 945GME internal graphics engine has the following TV output features:

- Three integrated 10-bit DACs
- Overscaling
- NTSC and PAL formats supported
- Supports RCA or S-VIDEO connectivity
- Supports HDTV with the following resolutions:
 - 480p
 - 720p
 - 1080i
 - 1080p

2.5.4 Intel® 945GME Direct Media Interface (DMI)

Intel® 945GME Northbridge GMCH is connected to the Intel® ICH7M Southbridge Chipset through the chip-to-chip Direct Media Interface (DMI). Features of the Intel® 945GME DMI are listed below:

- 2GB/s (1GB/s in each direction) bus speed
- 32-bit downstream address

2.6 Intel® ICH7M Southbridge Chipset

2.6.1 Intel® ICH7M Overview

The Intel® ICH7M Southbridge chipset is connected to the Intel® 945GME Northbridge GMCH through the chip-to-chip Direct Media Interface (DMI). Some of the features of the Intel® ICH7M are listed below.

- Complies with PCI Express Base Specification, Revision 1.0a
- Complies with PCI Local Bus Specification, Revision 2.3 and supports 33MHz PCI operations
- Supports ACPI Power Management Logic
- Contains:
 - Enhanced DMA controller
 - Interrupt controller
 - Timer functions
- Integrated SATA host controller with DMA operations interfaced to two SATA connectors on the NANO-9452
- Integrated IDE controller supports Ultra ATA 33
- Supports the six USB 2.0 devices on the NANO-9452 with four UHCI controllers and one EHCI controller
- Complies with System Management Bus (SMBus) Specification, Version 2.0
- Supports Audio Codec '97 (AC'97) Revision 2.3
- Supports Intel® High Definition Audio
- Contains Low Pin Count (LPC) interface
- Supports Firmware Hub (FWH) interface

2.6.2 Intel® ICH7M Audio Codec '97 Controller

The Audio Codec '97 (AC'97) controller integrated into the ICH7M complies with AC'97 and HD audio specifications. AC'97 can support 5.1 channels and HD can support 7.1 channel audio. The following add-on cards enable audio capabilities.

- AC-KIT08R – 5.1 channel audio kit
- AC-KIT883HD – 7.1 channel audio kit

NANO-9452 EPIC Motherboard

2.6.3 Intel® ICH7M IDE Interface

The integrated IDE interface on the ICH7M Southbridge supports two IDE hard disks and ATAPI devices. PIO IDE transfers up to 16MB/s and Ultra ATA transfers of 100MB/s. The integrated IDE interface is able to support the following IDE HDDs:

- **Ultra ATA/33**, with data transfer rates up to 33MB/s

Specification	Ultra ATA/33
IDE devices	2
PIO Mode	0 – 4
PIO Max Transfer Rate	16.6 MB/s
DMA/UDMA designation	UDMA 2
DMA/UDMA Max Transfer	33MB/s
Controller Interface	5V

Table 2-3: Supported HDD Specifications

2.6.4 Intel® ICH7M Low Pin Count (LPC) Interface

The ICH7M LPC interface complies with the LPC 1.1 specifications. The LPC bus from the ICH7M is connected to the following components:

- BIOS chipset
- Super I/O chipset

2.6.5 Intel® ICH7M PCI Interface

The PCI interface on the ICH7M is compliant with the PCI Revision 2.3 implementation. Some of the features of the PCI interface are listed below.

- PCI Revision 2.3 compliant
- 33MHz
- 5V tolerant PCI signals (except PME#)
- Integrated PCI arbiter supports up to seven PCI bus masters

2.6.6 Intel® ICH7M Real Time Clock

256 bytes of battery backed RAM is provided by the Motorola MC146818A real time clock (RTC) integrated into the ICH7M. The RTC operates on a 3V battery and 32.768KHz crystal. The RTC keeps track of the time and stores system data even when the system is turned off.

2.6.7 Intel® ICH7M SATA Controller

The integrated SATA controller on the ICH7M Southbridge supports two SATA drives on the NANO-9452 with independent DMA operations. SATA controller specifications are listed below.

- Supports two SATA drives
- Supports 1.5 Gb/s data transfer speeds
- Supports Serial ATA Specification, Revision 1.0a

2.6.8 Intel® ICH7M USB Controller

Up to six high-speed, full-speed or low-speed USB devices are supported by the ICH7M on the NANO-9452. High-speed USB 2.0, with data transfers of up to 480MB/s, is enabled with the ICH7M integrated Enhanced Host Controller Interface (EHCI) compliant host controller. USB full-speed and low-speed signaling is supported by the ICH7M integrated Universal Host Controller Interface (UHCI) controllers.

2.7 PCIe Bus Components

2.7.1 PCIe Bus Overview

The PCIe bus is connected to components listed below:

- Two PCIe GbE Realtek LAN chipsets
- One Mini PCIe socket

2.7.2 Realtek RTL8111E GbE interface

The Realtek RTL8111E (PCIe) GbE controller is a 10/100/1000BASE-T Ethernet LAN controller. The RTL8111E combines a triple-speed IEEE 802.3 compliant Media Access

NANO-9452 EPIC Motherboard

Controller (MAC) with a triple-speed Ethernet transceiver, a PCIe bus interface, and an on-chip buffer memory. Some of the RTL8111E controller features are listed below:

- Integrated 10/100/1000BASE-T transceiver
- Automatic Negotiation with Next Page capability
- PCIe v1.1
- IEEE 802.3u and IEEE 802.3ab compliant
- Wake on LAN support meeting ACPI requirements
- Supports Alert Standard Format 2.0 (ASF2.0)
- One-Time-Programmable (OTP) memory
- Serial EEPROM

2.7.3 Mini PCIe

The Mini PCIe socket supports Mini PCIe cards that are compliant with PCI Express Base Specification, Revision 1.0a. The Mini PCIe cards are easily installed into the socket. Mini PCIe cards are 30mm wide, 50.95mm long and 5mm high and come with a single 52-pin edge connector. Supported Mini PCIe components include wireless LAN cards,

2.8 LPC Bus Components

2.8.1 LPC Bus Overview

The LPC bus is connected to components listed below:

- BIOS chipset
- Super I/O chipset

2.8.2 BIOS Chipset

The BIOS chipset has a licensed copy of AMI BIOS installed on the chipset. Some of the BIOS features are listed below:

- AMI Flash BIOS
- SMIBIOS (DMI) compliant
- Console redirection function support
- PXE (Pre-boot Execution Environment) support
- USB booting support

-
-

2.8.3 Super I/O chipset

The iTE IT8712F Super I/O chipset is connected to the ICH7M Southbridge through the LPC bus. The iTE IT8712F is an LPC interface-based Super I/O device that comes with Environment Controller integration. Some of the features of the iTE IT8712F chipset are listed below:

- LPC Interface
- PC98/99/2001, ACPI and LANDesk Compliant
- Enhanced Hardware Monitor
- Fan Speed Controller
- SmartGuardian Controller
- Single +5V Power Supply
- Two 16C550 UARTs for serial port control
- One IEEE 1284 Parallel Port
- Floppy Disk Controller
- Keyboard Controller
- Watchdog Timer
- Serial IRQ Support
- Vbat & Vcch Support
- Single +5V Power Supply

Some of the Super I/O features are described in more detail below:

2.8.3.1 Super I/O LPC Interface

The LPC interface on the Super I/O complies with the Intel® Low Pin Count Specification Rev. 1.0. The LPC interface supports both LDRQ# and SERIRQ protocols as well as PCI PME# interfaces.

2.8.3.2 Super I/O 16C550 UARTs

The onboard Super I/O has two integrated 16C550 UARTs that can support the following:

- Two standard serial ports (COM1 and COM2)

NANO-9452 EPIC Motherboard

- IrDa 1.0 and ASKIR protocols

Another two chipsets connected to the LPC bus provided connectivity to another two serial port connectors (COM3 and COM4).

2.8.3.3 Super I/O Enhanced Hardware Monitor

The Super I/O Enhanced Hardware Monitor monitors three thermal inputs, VBAT internally, and eight voltage monitor inputs. These hardware parameters are reported in the BIOS and can be read from the BIOS Hardware Health Configuration menu.

2.8.3.4 Super I/O Fan Speed Controller

The Super I/O fan speed controller enables the system to monitor the speed of the fan. One of the pins on the fan connector is reserved for fan speed detection and interfaced to the fan speed controller on the Super I/O. The fan speed is then reported in the BIOS.

2.8.3.5 Super I/O Parallel Port

The Super I/O parallel port (LPT) supports standard mode, enhanced mode and high-speed mode parallel port devices. The LPT is compliant with the following LPT modes.

- Standard mode
 - Bi-directional SPP compliant
- Enhanced mode
 - EPP v1.7 compliant
 - EPP v1.9 compliant
- High-speed mode
 - ECP, IEEE 1284 compliant

2.8.3.6 Super I/O Keyboard Controller

The Super I/O keyboard controller can execute the 8042 instruction set. Some of the keyboard controller features are listed below:

- The 8042 instruction is compatible with a PS/2 keyboard and PS/2 mouse
- Gate A20 and Keyboard reset output

- Supports multiple keyboard power on events
- Supports mouse double-click and/or mouse move power on events

2.9 Environmental and Power Specifications

2.9.1 System Monitoring

Three thermal inputs on the NANO-9452 Super I/O Enhanced Hardware Monitor monitors the following temperatures:

- System temperature
- Power temperature
- CPU temperature

Eight voltage inputs on the NANO-9452 Super I/O Enhanced Hardware Monitor monitors the following voltages:

- Vcore
- +2.5V
- +3.3V
- +5.0V
- +12.0V
- DDR Vtt
- +1.5V
- 5VSB

The NANO-9152 Super I/O Enhanced Hardware Monitor also monitors the following voltages internally:

- VBAT

The NANO-9152 Super I/O Enhanced Hardware Monitor also monitors the following fan speeds:

- CPU Fan speed

The values for the above environmental parameters are all recorded in the BIOS Hardware Health Configuration menu.

NANO-9452 EPIC Motherboard

2.9.2 Operating Temperature and Temperature Control

The maximum and minimum operating temperatures for the NANO-9152 are listed below.

- Minimum Operating Temperature: 0°C (32°F)
- Maximum Operating Temperature: 60°C (140°F)

A cooling fan and heat sink must be installed on the CPU. Thermal paste must be smeared on the lower side of the heat sink before it is mounted on the CPU. Heat sinks are also mounted on the Northbridge and Southbridge chipsets to ensure the operating temperature of these chips remain low.

2.9.3 Power Consumption

Table 2-4 shows the power consumption parameters for the NANO-9152 running with a 2.0GHz Intel® Core® 2 Duo mobile processor with 1GB of 533MHz DDR2 memory.

Voltage	Current
+12V	3.01A

Table 2-4: Power Consumption

Chapter

3

Unpacking

NANO-9452 EPIC Motherboard

3.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the NANO-9452 may result in permanent damage to the NANO-9452 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the NANO-9452. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the NANO-9452, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:***- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring the NANO-9452, place it on an anti-static pad. This reduces the possibility of ESD damaging the NANO-9452.
- ***Only handle the edges of the PCB:***- When handling the PCB, hold the PCB by the edges.

3.2 Unpacking

3.2.1 Unpacking Precautions

When the NANO-9452 is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 3.1**.
- Make sure the packing box is facing upwards so the NANO-9452 does not fall out of the box.
- Make sure all the components shown in **Section 3.3** are present.






3.3 Unpacking Checklist


NOTE:

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the NANO-9452 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@iei.com.tw.

3.3.1 Package Contents

The NANO-9452 is shipped with the following components:

Quantity	Item and Part Number	Image
1	NANO-9452	
	HDTV Cable (P/N:32000-083701-RS)	
1	IDE cable (P/N: 32200-000009-RS)	
1	KB/MS cable (P/N: 32000-000138-RS)	
2	SATA cables (P/N: 32000-062800-RS)	

NANO-9452 EPIC Motherboard





Quantity	Item and Part Number	Image
1	SATA power cable (P/N: 32100-088600-RS)	
1	Mini jumper Pack	
1	Quick Installation Guide	
1	Utility CD	

Table 3-1: Package List Contents


3.3.2 Optional Items



NOTE:

The items listed in this section are optional items that must be ordered separately. Please contact your NANO-9452 vendor, distributor or reseller for more information or, contact iEi directly by sending an email to sales@iei.com.tw.

The following optional items are available for the NANO-9452.

Quantity	Item and Part Number	Image
1	USB cable (P/N: 32000-070300-RS)	





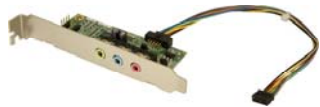
Quantity	Item and Part Number	Image
1	TV out cable (P/N: 19800-000056-RS)	
2	RS-232/422/485 cable (P/N: 32200-000077-RS)	
1	LPT cable (P/N: 32200-000017-RS)	
1	RS-232 cable (P/N: 32200-000049-RS)	
1	7.1 Channel HD audio kit with Realtek ALC883 supporting dual audio streams (P/N: AC-KIT-883HD)	
1	5.1 Channel audio kit with Realtek ALC655 (P/N: AC-KIT08R)	

Table 3-2: Optional Items

Chapter

4

Connector Pinouts

4.1 Peripheral Interface Connectors

Section 4.1.2 shows peripheral interface connector locations. Section 4.1.2 lists all the peripheral interface connectors seen in Section 4.1.2.

4.1.1 NANO-9452 Layout

Figure 4-1 shows the on-board peripheral connectors, rear panel peripheral connectors and on-board jumpers.

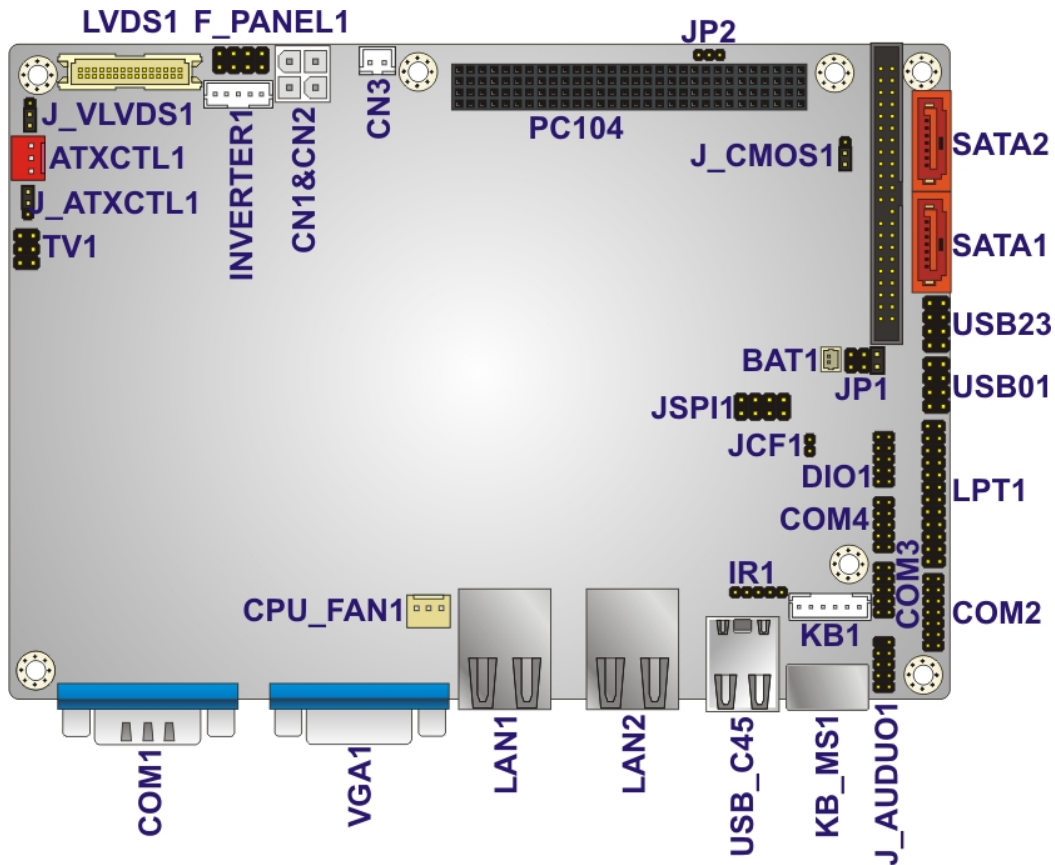


Figure 4-1: Connector and Jumper Locations

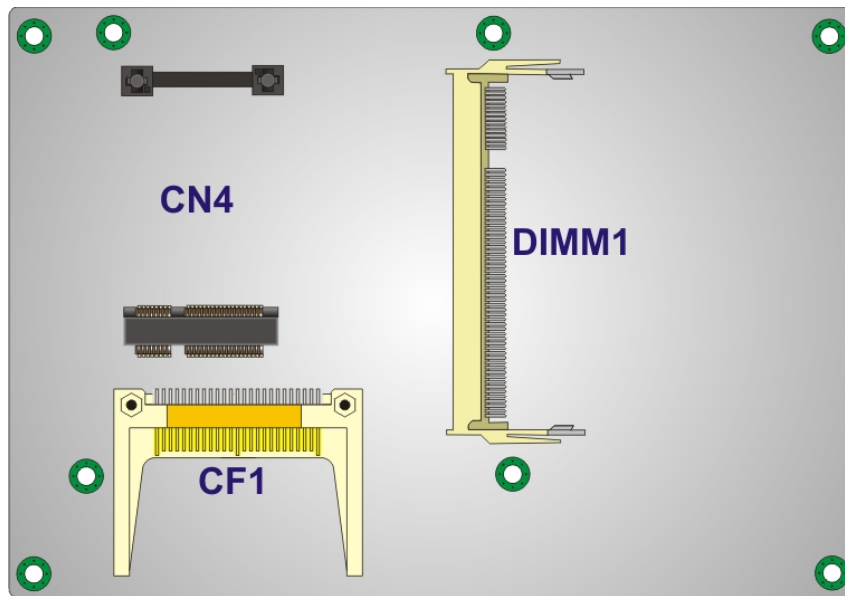


Figure 4-2: Connector and Jumper Locations (Solder Side)

4.1.2 Peripheral Interface Connectors

Table 4-1 shows a list of the peripheral interface connectors on the NANO-9452. Detailed descriptions of these connectors can be found below.

Connector	Type	Label
ATX power supply connector	3-pin wafer	ATXCTL1
Audio connector	14-pin header	J_AUDIO1
Compact Flash connector	50-pin header	CF1
CPU power connector	4-pin ATX connector	CN1 and CN2
Digital I/O connector	10-pin header	DIO1
Fan connector	3-pin wafer	CPU_FAN1
Front panel connector	8-pin header	F_PANEL1
IDE Interface connector	44-pin header	IDE1
Infrared connector	5-pin header	IR1
Inverter power connector	5-pin header	INVERTER1
Keyboard and mouse connector	6-pin wafer	KB1

Connector	Type	Label
LVDS connector	30-pin crimp	LVDS1
Parallel port connector	26-pin header	LPT1
PCI-104 slot	104-pin slot	PC104_PLUS1
PCIe Mini Card slot	52-pin slot	CN4
SATA drive connectors	7-pin SATA connector	SATA1, SATA2
SATA power connector	2-pin ATX connector	CN3
Serial port connector (RS-232, RS-422 or RS-485)	14-pin header	COM2
Serial port connector (RS-232)	10-pin header	COM3, COM4
SPI Flash Connector	8-pin header	JSPI1
TV out connector	6-pin header	TV1
USB connector	8-pin header	USB01, USB23

Table 4-1: Peripheral Interface Connectors

4.1.3 External Interface Panel Connectors

Table 4-2 lists the rear panel connectors on the NANO-9452. Detailed descriptions of these connectors can be found in **Section 4.3** on **page 57**

Connector	Type	Label
Ethernet connector	RJ-45	LAN1
Ethernet connector	RJ-45	LAN2
Keyboard and mouse connector	PS/2 connector	KB_MS1
RS-232 serial port connector	Male DB-9	COM1
USB port	USB port	USB_C45
VGA port connector	Female DB-15	VGA1

Table 4-2: Rear Panel Connectors

NANO-9452 EPIC Motherboard

4.2 Internal Peripheral Connectors

Internal peripheral connectors are found on the motherboard and are only accessible when the motherboard is outside of the chassis. This section has complete descriptions of all the internal, peripheral connectors on the NANO-9452.

4.2.1 ATX Power Supply Enable Connector

- CN Label:** ATXCTL1
- CN Type:** 3-pin wafer (1x3)
- CN Location:** See **Figure 4-3**
- CN Pinouts:** See **Table 4-3**

The ATX power supply enable connector enables the NANO-9452 to be connected to an ATX power supply. In default mode, the NANO-9452 can only use an AT power supply. To enable an ATX power supply the AT Power Select jumper must also be configured. Please refer to Chapter 3 for more details.

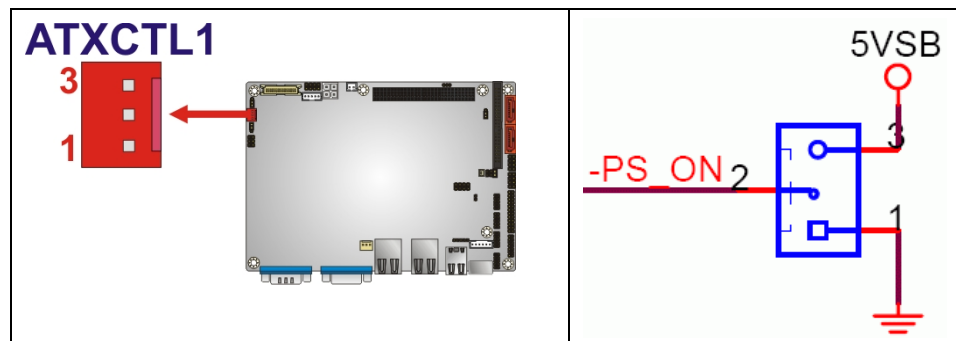


Figure 4-3: ATX Power Supply Enable Connector Location

PIN NO.	DESCRIPTION
1	GND
2	PS-ON
3	+5V Standby

Table 4-3: ATX Power Supply Enable Connector Pinouts

4.2.2 Audio Connector

- CN Label:** J_AUDIO1
- CN Type:** 9-pin header
- CN Location:** See **Figure 4-4**
- CN Pinouts:** See **Table 4-4**

An optional module can be connected to the 10-pin audio connector to provide the system with a high quality AC'97 or Azalia compatible codec that provides a complete integrated audio solution.

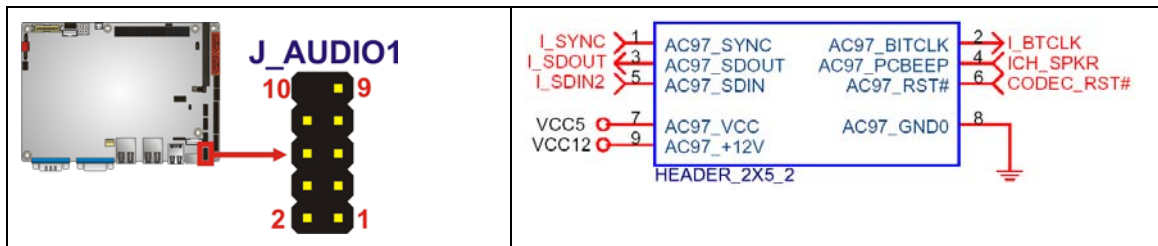


Figure 4-4: Audio Connector Pinouts (10-pin)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	AC97_SYNC	2	AC97_BITCLK
3	AC97_SDOOUT	4	AC97_PCBEEP
5	AC97_SDIN	6	AC97_RST#
7	AC97_VCC	8	AC97_GND
9	AC97_12V		

Table 4-4: Audio Connector Pinouts (10-pin)

4.2.3 Compact Flash Socket

- CN Label:** CF1 (solder side)
- CN Type:** 50-pin header (2x25)
- CN Location:** See **Figure 4-5**
- CN Pinouts:** See **Table 4-5**

NANO-9452 EPIC Motherboard

A CF Type I or Type II memory card is inserted to the CF socket on the solder side of the NANO-9452.

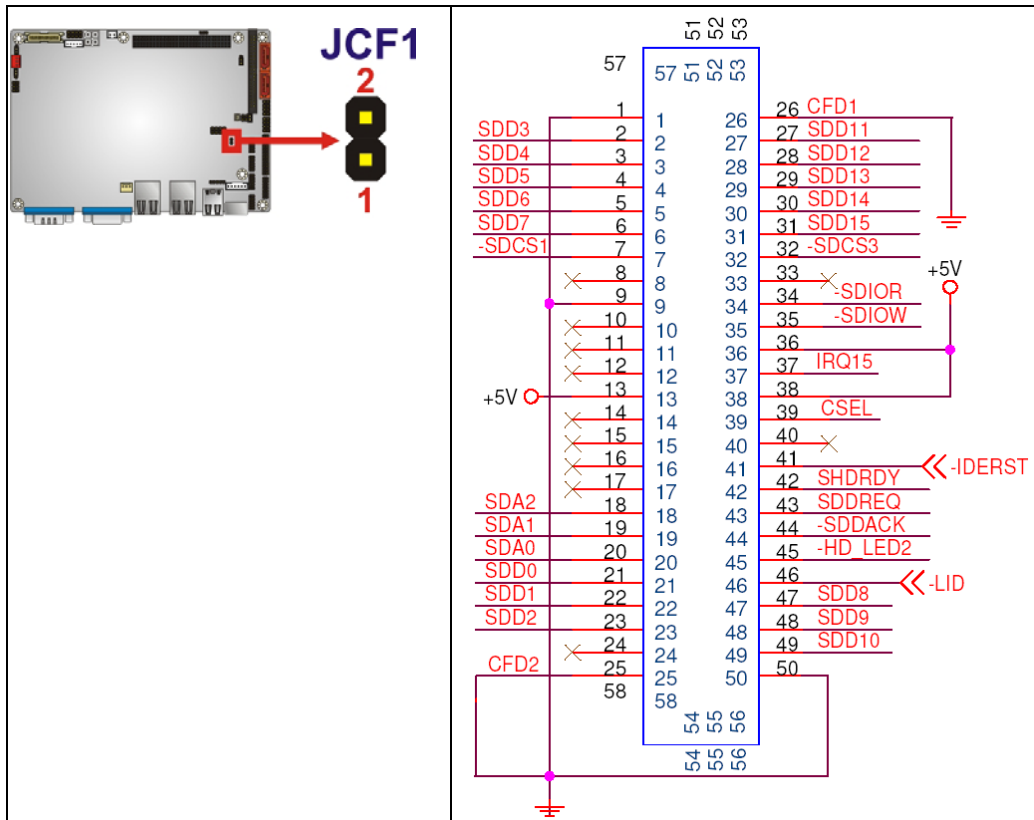


Figure 4-5: CF Card Socket Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	26	VCC-IN CHECK1
2	DATA 3	27	DATA 11
3	DATA 4	28	DATA 12
4	DATA 5	29	DATA 13
5	DATA 6	30	DATA 14
6	DATA 7	31	DATA 15
7	HDC_CS0#	32	HDC_CS1
8	N/C	33	N/C
9	GROUND	34	IOR#
10	N/C	35	IOW#
11	N/C	36	VCC_COM

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
12	N/C	37	IRQ15
13	VCC_COM	38	VCC_COM
14	N/C	39	CSEL
15	N/C	40	N/C
16	N/C	41	HDD_RESET
17	N/C	42	IORDY
18	SA2	43	SDREQ
19	SA1	44	SDACK#
20	SA0	45	HDD_ACTIVE#
21	DATA 0	46	66DET
22	DATA 1	47	DATA 8
23	DATA 2	48	DATA 9
24	N/C	49	DATA 10
25	VCC-IN CHECK2	50	GROUND

Table 4-5: CF Card Socket Pinouts

4.2.4 CPU Power Connector

- CN Label:** CN1 and CN2
- CN Type:** 4-pin ATX power connector (1x4)
- CN Location:** See **Figure 4-6**
- CN Pinouts:** See **Table 4-6**

The 4-pin +12V ATX power supply connector is connected to a +12V ATX power supply.

NANO-9452 EPIC Motherboard

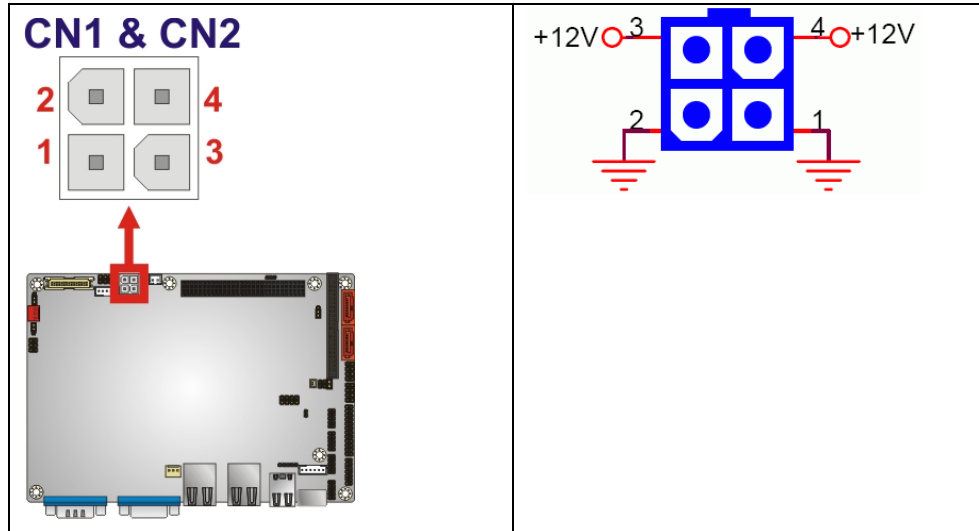


Figure 4-6: ATX Power Connector Location

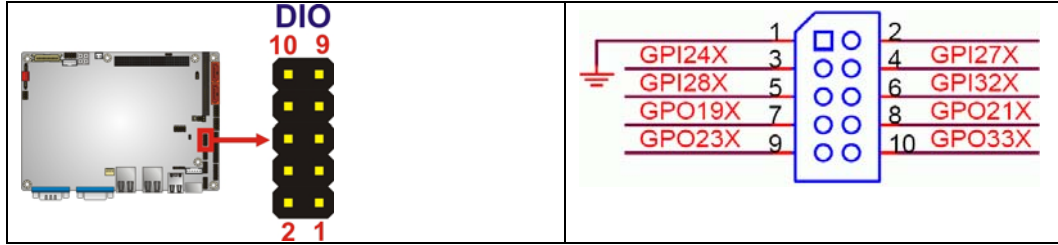
PIN NO.	DESCRIPTION
1	GND
2	GND
3	+12V
4	+12V

Table 4-6: ATX Power Connector Pinouts

4.2.5 Digital I/O Connector

- CN Label:** DIO1
- CN Type:** 10-pin header (2x5)
- CN Location:** See **Figure 4-7**
- CN Pinouts:** See **Table 4-7**

The digital input/output connector is managed through a Super I/O chip. The DIO connector pins are user programmable.


Figure 4-7: DIO Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

Table 4-7: DIO Connector Pinouts

4.2.6 Fan Connector

- CN Label:** CPU_FAN1
- CN Type:** 3-pin header
- CN Location:** See **Figure 4-8**
- CN Pinouts:** See **Table 4-8**

The cooling fan connector provides a 12V, 500mA current to a system cooling fan. The connector has a "rotation" pin to get rotation signals from fans and notify the system so the system BIOS can recognize the fan speed. Please note that only specified fans can issue the rotation signals.

NANO-9452 EPIC Motherboard

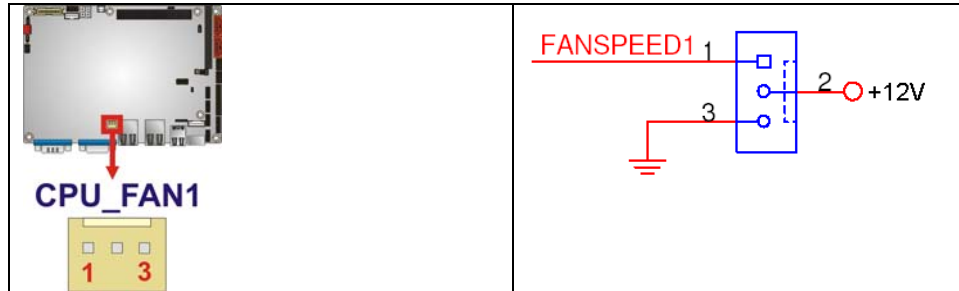


Figure 4-8: +12V Fan Connector Location

PIN NO.	DESCRIPTION
1	Fan Speed Detect
2	+12V
3	GND


Table 4-8: +12V Fan Connector Pinouts

4.2.7 Front Panel Connector

- CN Label:** F_PANEL1
- CN Type:** 8-pin header (2x4)
- CN Location:** See Figure 4-9
- CN Pinouts:** See Table 4-9

The front panel connector connects to external switches and indicators to monitor and controls the motherboard. These indicators and switches include:

- Power button
- Reset button
- Power LED
- HDD LED

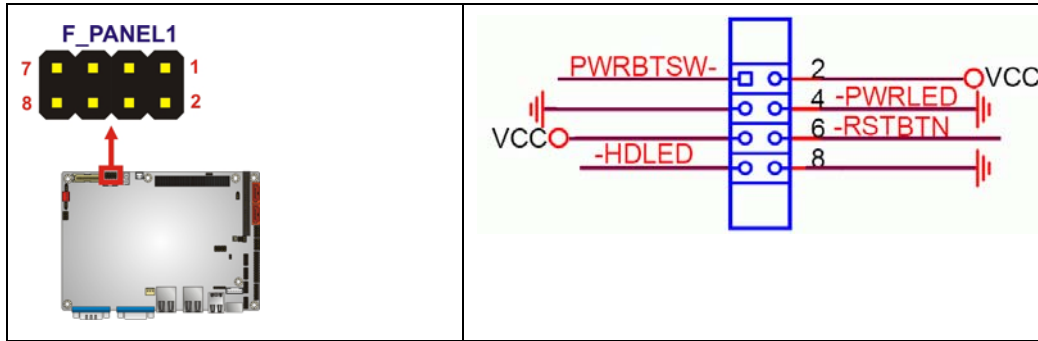
Figure 4-9: Front Panel Connector Pinout Locations

FUNCTION	PIN	DESCRIPTION	FUNCTION	PIN	DESCRIPTION
Power	1	PWRBTSW-	Power LED	2	VCC
Button	3	Ground		4	Ground
HDD LED	5	VCC	Reset	6	SYSRST-
	7	HDD LED-		8	GND

Table 4-9: Front Panel Connector Pinouts

4.2.8 IDE Connector

- CN Label:** KB1
- CN Type:** 44-pin header (2x22)
- CN Location:** See **Figure 4-10**
- CN Pinouts:** See **Table 4-10**

One 44-pin IDE device connector on the NANO-9452 supports connectivity to two hard disk drives.

NANO-9452 EPIC Motherboard

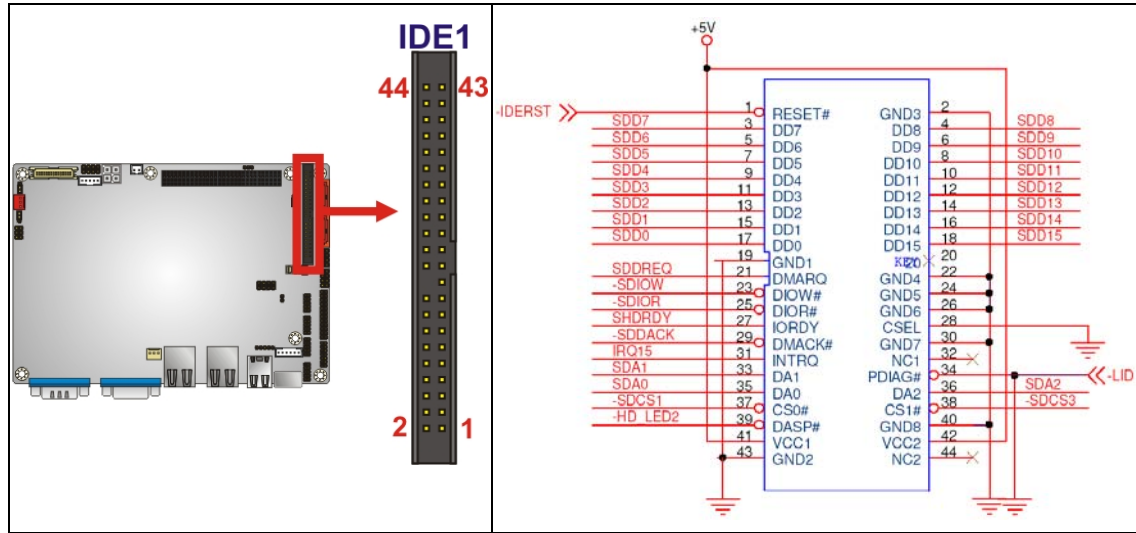


Figure 4-10: Secondary IDE Device Connector Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	RESET#	2	GROUND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GROUND	20	N/C
21	IDE DRQ	22	GROUND
23	IOW#	24	GROUND
25	IOR#	26	GROUND
27	IDE CHRDY	28	GROUND
29	IDE DACK	30	GROUND-DEFAULT
31	INTERRUPT	32	N/C
33	SA1	34	N/C
35	SA0	36	SA2
37	HDC CS0#	38	HDC CS1#
39	HDD ACTIVE#	40	GROUND

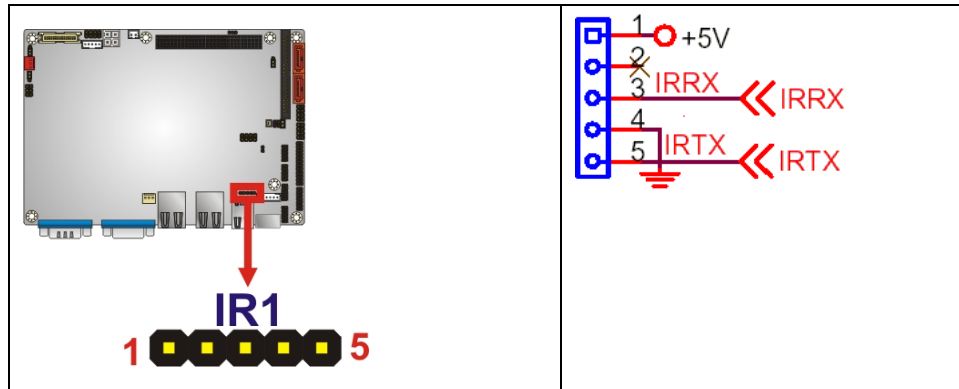
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
41	VCC	42	VCC
43	GROUND	44	N/C

Table 4-10: Secondary IDE Connector Pinouts

4.2.9 Infrared Interface Connector

- CN Label:** IR1
- CN Type:** 5-pin header (1x5)
- CN Location:** See **Figure 4-11**
- CN Pinouts:** See **Table 4-11**

The infrared interface connector supports both Serial Infrared (SIR) and Amplitude Shift Key Infrared (ASKIR) interfaces.


Figure 4-11: Infrared Connector Pinout Locations

PIN NO.	DESCRIPTION
1	VCC
2	NC
3	IR-RX
4	GND
5	IR-TX

Table 4-11: Infrared Connector Pinouts

NANO-9452 EPIC Motherboard

4.2.10 Inverter Connector

- CN Label:** INV1
- CN Type:** 5-pin connector
- CN Location:** See **Figure 4-12**
- CN Pinouts:** See **Table 4-12**

The backlight inverter connector provides power to an LCD panel.

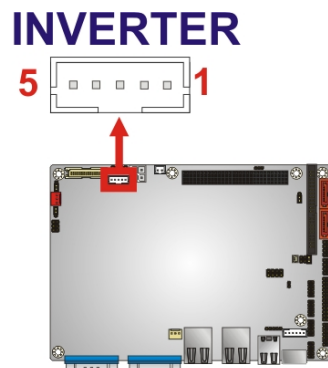


Figure 4-12: Inverter Connector Location

PIN	Description
1	Brightness
2	GND
3	+12V
4	GND
5	BL_EN

Table 4-12: Inverter Connector Pinouts

4.2.11 Keyboard/Mouse Connector

- CN Label:** KB1
- CN Type:** 6-pin header (1x6)
- CN Location:** See **Figure 4-13**
- CN Pinouts:** See **Table 4-13**

The keyboard and mouse connector can be connected to a standard PS/2 cable or PS/2 Y-cable to add keyboard and mouse functionality to the system.

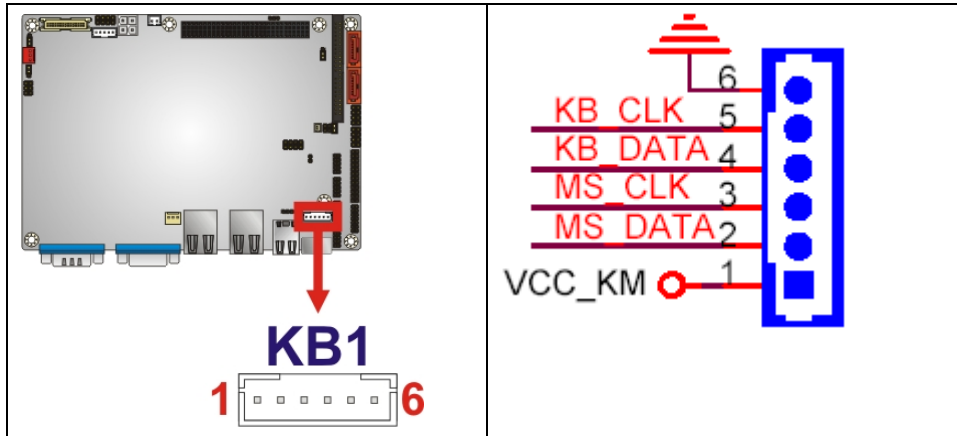


Figure 4-13: Keyboard/Mouse Connector Location

PIN NO.	DESCRIPTION
1	+5V KB DATA
2	MS DATA
3	MS CLK
4	KB DATA
5	KB CLK
6	GROUND

Table 4-13: Keyboard/Mouse Connector Pinouts

4.2.12 LVDS LCD Connector

- CN Label:** LVDS1
- CN Type:** 30-pin crimp (2x10)
- CN Location:** See **Figure 4-14**
- CN Pinouts:** See **Table 4-14**

The 30-pin LVDS LCD connector can be connected to single channel or dual channel, 18-bit / 24-bit LVDS panel.

NANO-9452 EPIC Motherboard

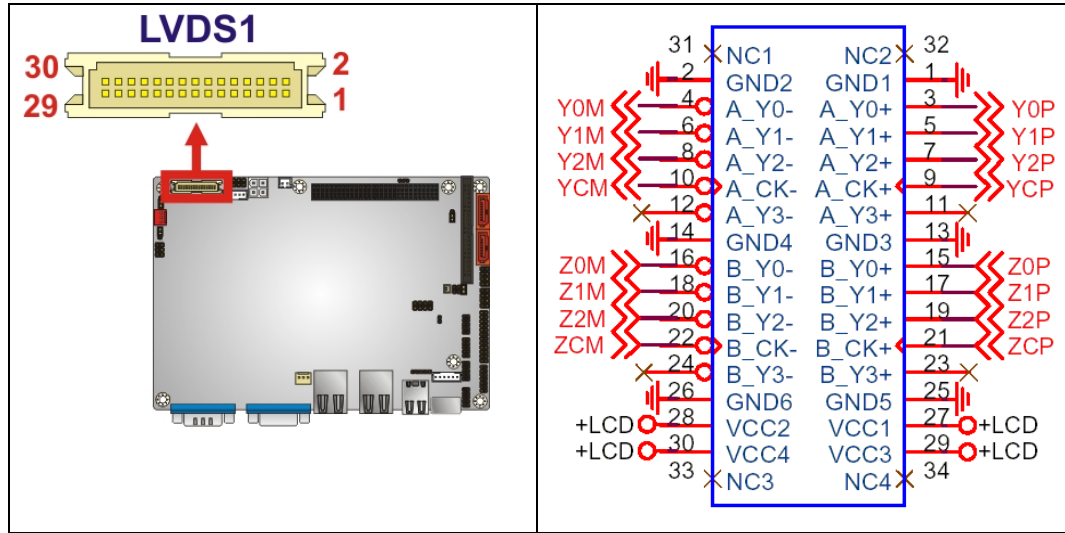


Figure 4-14: LVDS LCD Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GROUND	2	GROUND
3	LVDSA_Y0+	4	LVDSA_Y0-
5	LVDSA_Y1+	6	LVDSA_Y1-
7	LVDSA_Y2+	8	LVDSA_Y2-
9	LVDSA_CLK+	10	LVDSA_CLK-
11	LVDS_DAP3	12	LVDS_DAN3
13	GROUND	14	GROUND
15	LVDSB_Y0+	16	LVDSB_Y0-
17	LVDSB_Y1+	18	LVDSB_Y1-
19	LVDSB_Y2+	20	LVDSB_Y2-
21	LVDSB_CLK+	22	LVDSB_CLK-
23	LVDS_DBP3	24	LVDS_DBN3
25	GROUND	26	GROUND
27	VCC_LVDS	28	VCC_LVDS
29	VCC_LVDS	30	VCC_LVDS

Table 4-14: LVDS LCD Port Connector Pinouts

4.2.13 Mini PCIe Socket

CN Label: CN4

CN Type: 26-pin box header

CN Location: See

CN Pinouts: See

The 52-pin mini PCIe socket supports the latest PCIe extension cards such as wireless LAN cards and other compatible devices.

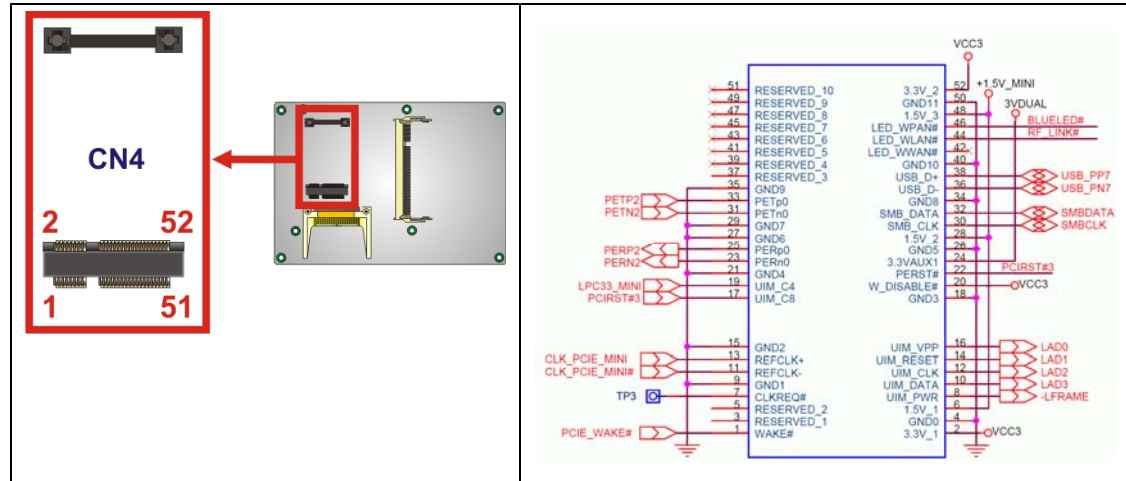


Figure 4-15: Mini PCIe Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	PCIE_WAKE#	2	VCC3
3	N/C	4	GND
5	N/C	6	1.5V
7	CLKREQ#	8	LFRAME#
9	GND	10	LAD3
11	CLK-	12	LAD2
13	CLK+	14	LAD1
15	GND	16	LAD0
17	PCIRST#	18	GND
19	LPC	20	VCC3
21	GND	22	PCIRST#
23	PERN2	24	3VDual
25	PERP2	26	GND
27	GND	28	1.5V

NANO-9452 EPIC Motherboard

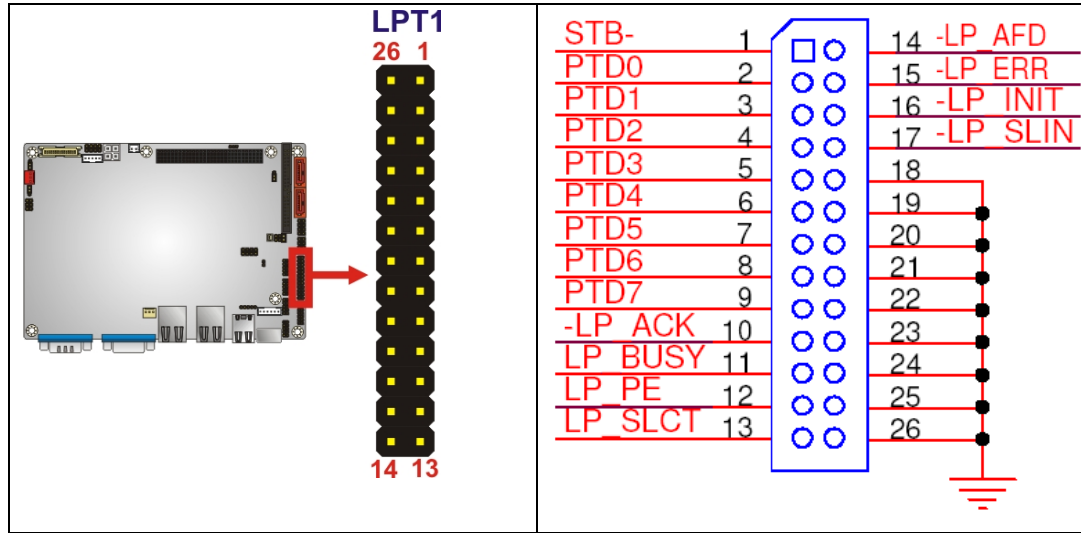
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
29	GND	30	SMBCLK
31	PETN2	32	SMBDATA
33	PETP2	34	GND
35	GND	36	USB D-
37	N/C	38	USB D+
39	N/C	40	GND
41	N/C	42	N/C
43	N/C	44	RF_LINK#
45	N/C	46	BLUELED#
47	N/C	48	1.5V
49	N/C	50	GND
51	N/C	52	VCC3

Table 4-15: Mini PCIe Socket Pinouts

4.2.14 Parallel Port Connector

- CN Label:** LPT1
- CN Type:** 26-pin box header
- CN Location:** See **Figure 4-16**
- CN Pinouts:** See **Table 4-16**

The 26-pin parallel port connector connects to a parallel port connector interface or some other parallel port device such as a printer.


Figure 4-16: Parallel Port Connector Location

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	STROBE#	2	DATA 0
3	DATA 1	4	DATA 2
5	DATA 3	6	DATA 4
7	DATA 5	8	DATA 6
9	DATA 7	10	ACKNOWLEDGE
11	BUSY	12	PAPER EMPTY
13	PRINTER SELECT	14	AUTO FORM FEED #
15	ERROR#	16	INITIALIZE
17	PRINTER SELECT LN#	18	GROUND
19	GROUND	20	GROUND
21	GROUND	22	GROUND
23	GROUND	24	GROUND
25	GROUND	26	NC

Table 4-16: Parallel Port Connector Pinouts

4.2.15 PCI-104 Slot

CN Label: PC104_PLUS1

CN Type: 120-pin PCI-104 slot

NANO-9452 EPIC Motherboard

CN Location: See Figure 4-17

CN Pinouts: See Table 4-17

The PCI-104 slot enables a PCI-104 compatible expansion module to be connected to the board.

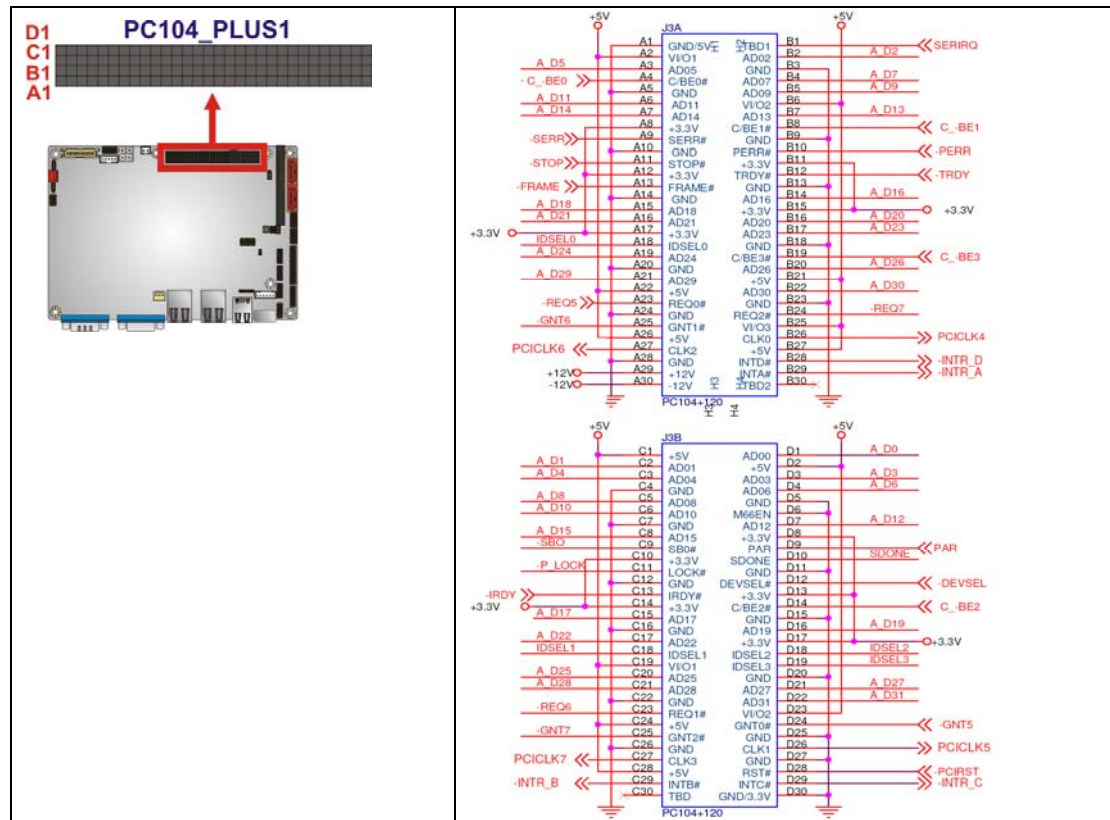


Figure 4-17: PCI-104 Slot Location

Pin No.	Column A	Column B	Column C	Column D
1	GND/5V	TBD1	5V	AD00
2	VI/O1	AD02	AD01	+5V
3	AD05	GND	AD04	AD03
4	C/BE0#	AD07	GND	AD06
5	GND	AD09	AD08	GND
6	AD11	VI/O2	AD10	M66EN
7	AD14	AD13	GND	AD12

Pin No.	Column A	Column B	Column C	Column D
8	+3.3V	C/BE1#	AD15	+3.3V
9	SERR#	GND	SB0#	PAR
10	GND	PERR#	+3.3V	SDONE
11	STOP#	+3.3V	LOCK#	GND
12	+3.3V	TRDY#	GND	DEVSEL#
13	FRAME#	GND	IRDY#	+3.3V
14	GND	AD16	+3.3V	C/BE2#
15	AD18	+3.3V	AD17	GND
16	AD21	AD20	GND	AD19
17	+3.3V	AD23	AD22	+3.3V
18	IDSEL0	GND	IDSEL1	IDSEL2
19	AD24	C/BE3#	VI/O1	IDSEL3
20	GND	AD26	AD25	GND
21	AD29	+5V	AD28	AD27
22	+5V	AD30	GND	AD31
23	REQ0#	GND	REQ1#	VI/O2
24	GND	REQ2#	+5V	GNT0#
25	GNT1#	VI/O3	GNT2#	GND
26	+5V	CLK0	GND	CLK1
27	CLK2	+5V	CLK3	GND
28	GND	INTD#	+5V	RST#
29	+12V	INTA#	INTB#	INTC#
30	-12V	TBD2	TBD	GND/3.3V

Table 4-17: PCI-104 Slot Connector Pinouts

4.2.16 SATA Drive Connectors

- CN Label:** SATA1 and SATA2
- CN Type:** 7-pin SATA drive connectors
- CN Location:** See **Figure 4-18**

NANO-9452 EPIC Motherboard

CN Pinouts: See Table 4-18

The two SATA drive connectors are each connected to a first generation SATA drive. First generation SATA drives transfer data at speeds as high as 150Mb/s.

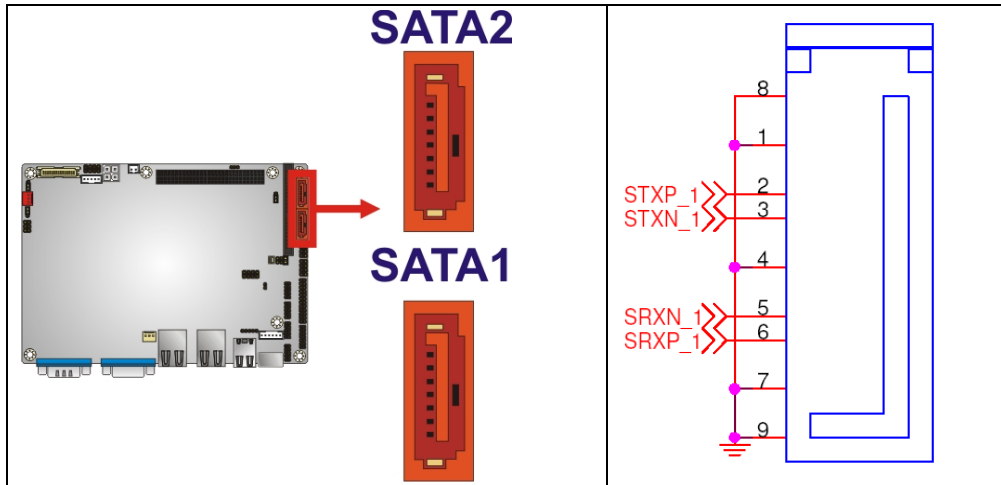


Figure 4-18: SATA Drive Connector Locations

PIN NO.	DESCRIPTION
1	GND
2	TX+
3	TX-
4	GND
5	RX-
6	RX+
7	GND

Table 4-18: SATA Drive Connector Pinouts

4.2.17 SATA Power Connector

CN Label: CN3
CN Type: 2-pin Wafer (1 x 2)
CN Location: See Figure 4-19
CN Pinouts: See Table 4-19

The 2-pin 5 V power is for a SATA drive.

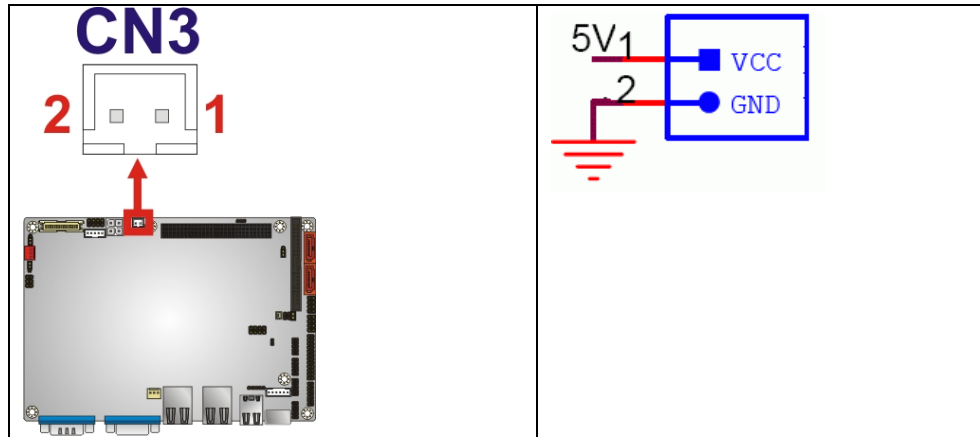


Figure 4-19: SATA Power Connector Location

PIN NO.	DESCRIPTION
1	5 V
2	GND

Table 4-19: SATA Power Connector Pinouts

4.2.18 Serial Port Connector (RS-232, RS-422 or RS-485)

- CN Label:** COM2
- CN Type:** 14-pin header (2x7)
- CN Location:** See **Figure 4-20**
- CN Pinouts:** See **Table 4-20**

The 14-pin serial port connector connects to the COM 2 serial communications channels. COM 2 is a multi function channel. In default mode COM 2 is an RS-232 serial communication channel but, with the COM 2 function select jumper, can be configured as either an RS-422 or RS-485 serial communications channel.

NANO-9452 EPIC Motherboard

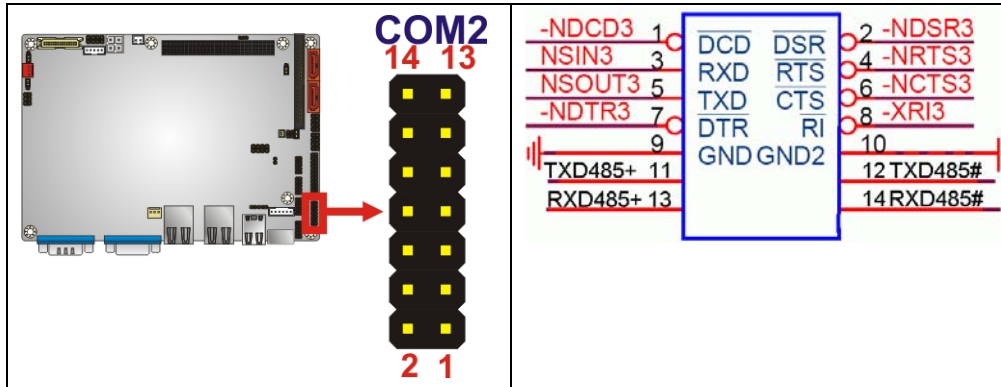


Figure 4-20: RS-232/422/485 Serial Port Connector Location

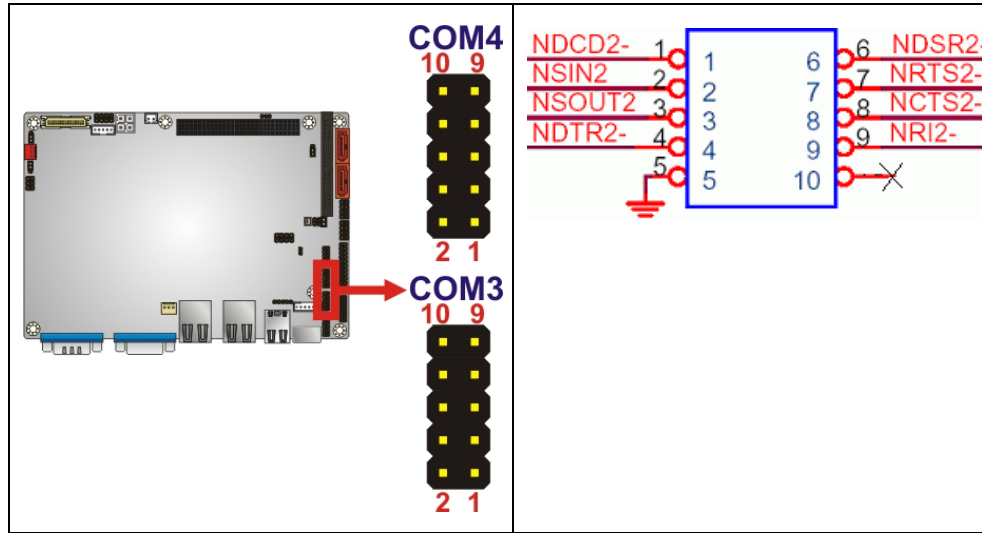
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	DCD	2	NDSR2
3	RXD	4	NRTS2
5	TXD	6	NCTS2
7	DTR	8	NRI2
9	GND	10	GND
11	TXD485+	12	TXD485#
13	RXD485+	14	RXD485#

Table 4-20: RS-232/RS-485 Serial Port Connector Pinouts

4.2.19 Serial Port Connector (RS-232)

- CN Label:** COM3 and COM4
- CN Type:** 10-pin header (2x5)
- CN Location:** See Figure 4-21
- CN Pinouts:** See Table 4-21

The 10-pin serial port connector provides a second RS-232 serial communications channel. The COM 2 serial port connector can be connected to external RS-232 serial port devices.


Figure 4-21: COM3 and COM4 Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	Data Carrier Direct (DCD)	2	Data Set Ready (DSR)
3	Receive Data (RXD)	4	Request To Send (RTS)
5	Transmit Data (TXD)	6	Clear To Send (CTS)
7	Data Terminal Ready (DTR)	8	Ring Indicator (RI)
9	Ground (GND)	10	NC

Table 4-21: COM3 and COM4

4.2.20 SPI Flash Connector

- Jumper Label:** JSPI1
- Jumper Type:** 8-pin header
- Jumper Settings:** See **Table 4-22**
- Jumper Location:** See **Figure 4-22**

The 8-pin SPI Flash connector is used to flash the BIOS.

Pin No.	Description	Pin No.	Description
1	SPI_VCC	2	GND

NANO-9452 EPIC Motherboard

Pin No.	Description	Pin No.	Description
3	SPI_CS	4	SPI_CLK
5	SPI_SO	6	SPI_SI
7	NC	8	NC

Table 4-22: SPI Flash Jumper Settings

The **SPI Flash** jumper location is shown in

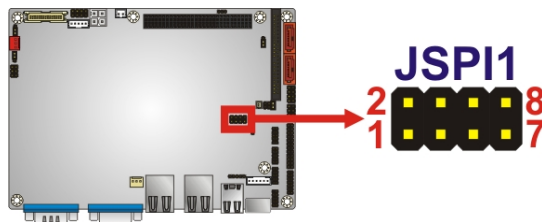


Figure 4-22: SPI Flash Jumper Pinout Locations

4.2.21 TV Out Connector

- CN Label:** TV1
- CN Type:** 6-pin header (2x3)
- CN Location:** See **Figure 4-23**
- CN Pinouts:** See **Table 4-23**

The 2x3 pin TV out connector connects to a TV output by using an S-Video or RCA connector. The TV out connector makes displaying media data on a television easier. HDTV resolutions up to 1080i / 1080P by component interface are also supported.

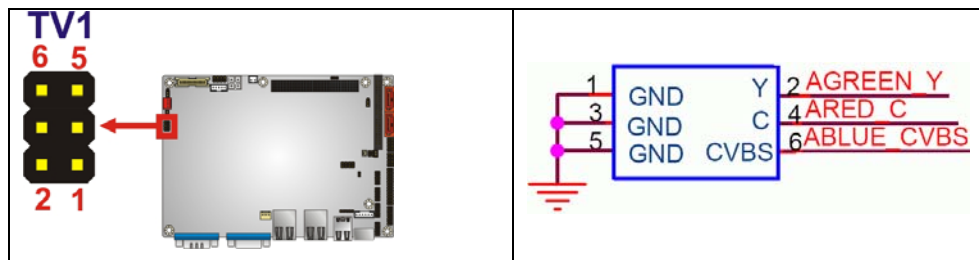


Figure 4-23: TV Connector Pinout Locations

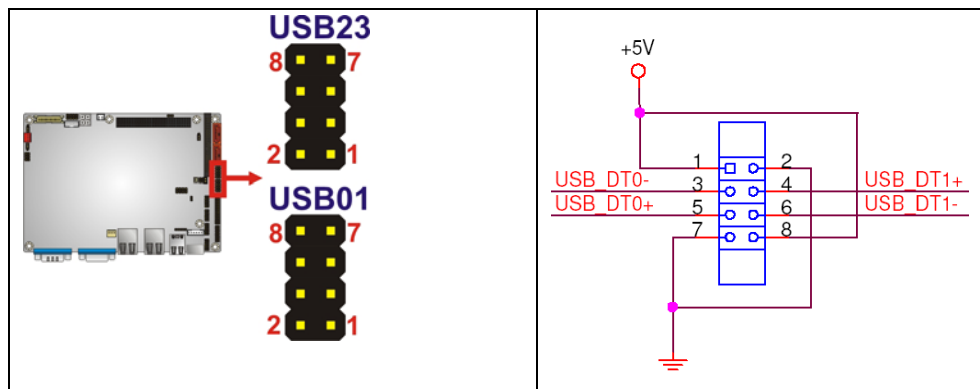
S-Video Connector			
PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	AGREEN_Y
3	GND	4	ARED_C
RCA Connector (only video signal)			
5	GND	6	ABLUE_CVBS

Table 4-23: TV Port Connector Pinouts

4.2.22 USB Connectors

- CN Label:** USB01 and USB23
- CN Type:** 8-pin header (2x4)
- CN Location:** See **Figure 4-24**
- CN Pinouts:** See **Table 4-24**

The 2x4 USB pin connectors each provide connectivity to two USB 1.1 or two USB 2.0 ports. Each USB connector can support two USB devices. Additional external USB ports are found on the rear panel. The USB ports are used for I/O bus expansion.


Figure 4-24: USB Connector Pinout Locations

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	2	GND
3	DATAN-	4	DATAM+
5	DATAN+	6	DATAM-

NANO-9452 EPIC Motherboard

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
7	GND	8	VCC

Table 4-24: USB Port Connector Pinouts

4.3 External Peripheral Interface Connector Panel

Figure 4-25 shows the NANO-9452 rear panel. The NANO-9452 rear panel consists of two RJ-45 Ethernet connectors, a PS/2 keyboard connector a USB port and a VGA connector. These connectors are accessible when the NANO-9452 is installed in a chassis.

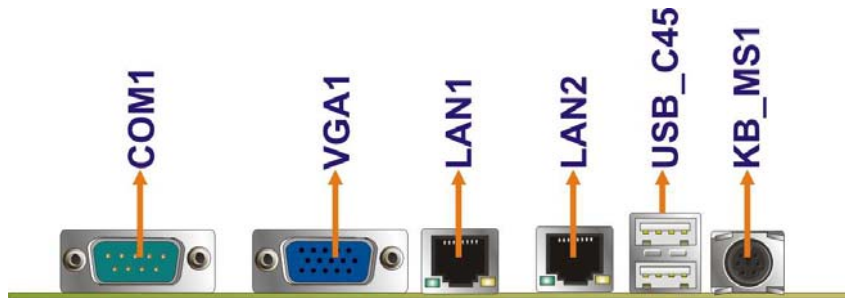
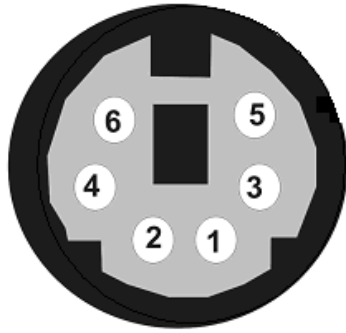


Figure 4-25: NANO-9452 External Peripheral Interface Connector

4.3.1 Keyboard/Mouse Connector

CN Label:	KB_MS1
CN Type:	Mini-DIN 6 PS/2
CN Location:	See Figure 4-25
CN Pinouts:	See Figure 4-26 and Table 4-25

The NANO-9452 CPU card has a mini-DIN 6 PS/2 connector on the mounting bracket for easy connection to a PS/2 keyboard or PS/2 mouse. The card comes with a cable to convert the mini-DIN 6 PS/2 into two mini-DIN 6 PS/2 connectors for keyboard and mouse connection.


Figure 4-26: PS/2 Pinouts

PIN	DESCRIPTION
1	KEYBOARD DATA
2	MOUSE DATA
3	GND
4	VCC
5	KEYBOARD CLOCK
6	MOUSE CLOCK

Table 4-25: Mini-DIN 6 PS/2 Connector Pinouts

4.3.2 LAN Connectors

CN Label: LAN1 and LAN2

CN Type: RJ-45

CN Location: See **Figure 4-25**

CN Pinouts: See **Table 4-26**

The NANO-9452 is equipped with two built-in GbE Ethernet controllers. The controllers can connect to the LAN through two RJ-45 LAN connectors. There are two LEDs on the connector indicating the status of LAN. The pin assignments are listed in the following table:

PIN	DESCRIPTION	PIN	DESCRIPTION
1	MDIA3-	5	MDIA1+
2	MDIA3+	6	MDIA2+

NANO-9452 EPIC Motherboard

PIN	DESCRIPTION	PIN	DESCRIPTION
3	MDIA2-	7	MDIA0-
4	MDIA1-	8	MDIA0+

Table 4-26: LAN Pinouts

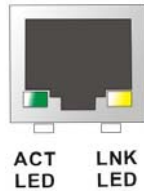


Figure 4-27: RJ-45 Ethernet Connector

The RJ-45 Ethernet connector has two status LEDs, one green and one yellow. The green LED indicates activity on the port and the yellow LED indicates the port is linked. See **Table 4-27**.

STATUS	DESCRIPTION	STATUS	DESCRIPTION
GREEN	Activity	YELLOW	Linked

Table 4-27: RJ-45 Ethernet Connector LEDs

4.3.3 Serial Port Connector

- CN Label:** COM1
- CN Type:** D-SUB Serial Port Connector
- CN Location:** See **Figure 4-25**
- CN Pinouts:** See **Figure 4-28, Table 4-28**

The NANO-9452 has an RS-232 serial port on the rear panel.

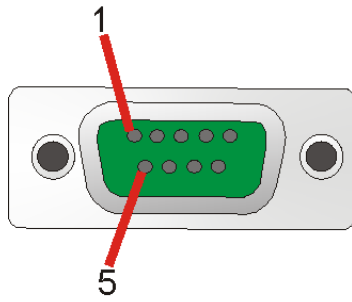


Figure 4-28: Serial Port Connector

COM1 pinouts are shown below.

PIN	Description	PIN	Description
1	DCD1	6	DSR1
2	RXD1	7	RTS1
3	TXD1	8	CTS1
4	DTR1	9	RI1
5	GROUND	10	

Table 4-28: Serial Port Connector Pinouts

4.3.4 USB Connector

- CN Label:** USB_C45
- CN Type:** USB port
- CN Location:** See **Figure 4-25**
- CN Pinouts:** See **Table 4-29**

The NANO-9452 has a one external USB 2.0 port. The port connects to both USB 2.0 and USB 1.1 devices.

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	USBV3L 5V	2	GND
3	USBP4N	4	USBP5P
5	USBP4P	6	USBP5N

NANO-9452 EPIC Motherboard

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
7	GND	8	USBV3L 5V

Table 4-29: USB Port Pinouts

4.3.5 VGA Connector

- CN Label:** VGA1
- CN Type:** 15-pin Female
- CN Location:** See **Figure 4-25**
- CN Pinouts:** See Figure 4-29 and Table 4-30

The NANO-9452 has a single 15-pin female connector for connectivity to standard display devices.

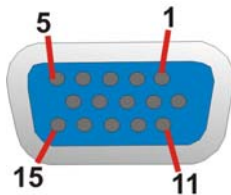


Figure 4-29: VGA Connector

PIN	DESCRIPTION	PIN	DESCRIPTION
1	RED	2	GREEN
3	BLUE	4	NC
5	GND	6	GND
7	GND	8	GND
9	VCC / NC	10	GND
11	NC	12	DDC DAT
13	HSYNC	14	VSYNC
15	DDCCLK		

Table 4-30: VGA Connector Pinouts

Chapter

5

Installation

NANO-9452 EPIC Motherboard

5.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the NANO-9452 may result in permanent damage to the NANO-9452 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the NANO-9452. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the NANO-9452, or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- ***Wear an anti-static wristband:*** - Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- ***Self-grounding:***- Before handling the board touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- ***Use an anti-static pad:*** When configuring the NANO-9452, place it on an anti-static pad. This reduces the possibility of ESD damaging the NANO-9452.
- ***Only handle the edges of the PCB:-:*** When handling the PCB, hold the PCB by the edges.

5.2 Installation Considerations



NOTE:

The following installation notices and installation considerations should be read and understood before the NANO-9452 is installed. All installation notices pertaining to the installation of the NANO-9452 should be strictly adhered to. Failing to adhere to these precautions may lead to severe damage of the NANO-9452 and injury to the person installing the motherboard.

5.2.1 Installation Notices



WARNING:

The installation instructions described in this manual should be carefully followed in order to prevent damage to the NANO-9452, NANO-9452 components and injury to the user.

Before and during the installation please **DO** the following:

- **Read the user manual:**
 - The user manual provides a complete description of the NANO-9452 installation instructions and configuration options.
- **Wear an electrostatic discharge cuff (ESD):**
 - Electronic components are easily damaged by ESD. Wearing an ESD cuff removes ESD from the body and helps prevent ESD damage.
- **Place the NANO-9452 on an antistatic pad:**
 - When installing or configuring the motherboard, place it on an antistatic pad. This helps to prevent potential ESD damage.
- **Turn all power to the NANO-9452 off:**
 - When working with the NANO-9452, make sure that it is disconnected from all power supplies and that no electricity is being fed into the system.

NANO-9452 EPIC Motherboard

Before and during the installation of the NANO-9452 **DO NOT**:

- Remove any of the stickers on the PCB board. These stickers are required for warranty validation.
- Use the product before verifying all the cables and power connectors are properly connected.
- Allow screws to come in contact with the PCB circuit, connector pins, or its components.

5.2.2 Installation Checklist

The following checklist is provided to ensure the NANO-9452 is properly installed.

- All the items in the packing list are present
- The CPU is installed
- The CPU cooling kit is properly installed
- A compatible memory module is properly inserted into the slot
- The CF Type I or CF Type II card is properly installed into the CF socket
- The jumpers have been properly configured
- The NANO-9452 is inserted into a chassis with adequate ventilation
- The correct power supply is being used
- The following devices are properly connected
 - IDE device
 - SATA drives
 - Keyboard and mouse cable
 - Audio kit
 - Power supply
 - USB cable
 - Serial port cable
 - Parallel port cable
- The following external peripheral devices are properly connected to the chassis:
 - VGA screen
 - Keyboard
 - Mouse
 - RS-232 serial communications device

5.3 CPU, CPU Cooling Kit and DIMM Installation



WARNING:

A CPU should never be turned on without the specified cooling kit being installed. If the cooling kit (heat sink and fan) is not properly installed and the system turned on, permanent damage to the CPU, NANO-9452 and other electronic components attached to the system may be incurred. Running a CPU without a cooling kit may also result in injury to the user.

The CPU, CPU cooling kit and DIMM are the most critical components of the NANO-9452. If one of these component is not installed the NANO-9452 cannot run.

5.3.1 Socket 479 CPU Installation



WARNING:

CPUs are expensive and sensitive components. When installing the CPU please be careful not to damage it in anyway. Make sure the CPU is installed properly and ensure the correct cooling kit is properly installed.

To install a socket 479 CPU onto the NANO-9452, follow the steps below:

NANO-9452 EPIC Motherboard

**WARNING:**

When handling the CPU, only hold it on the sides. DO NOT touch the pins at the bottom of the CPU.

- Step 1:** **Unlock the CPU retention screw.** When shipped, the retention screw of the CPU socket should be in the unlocked position. If it is not in the unlocked position, use a screwdriver to unlock the screw. See **Figure 5-1**.

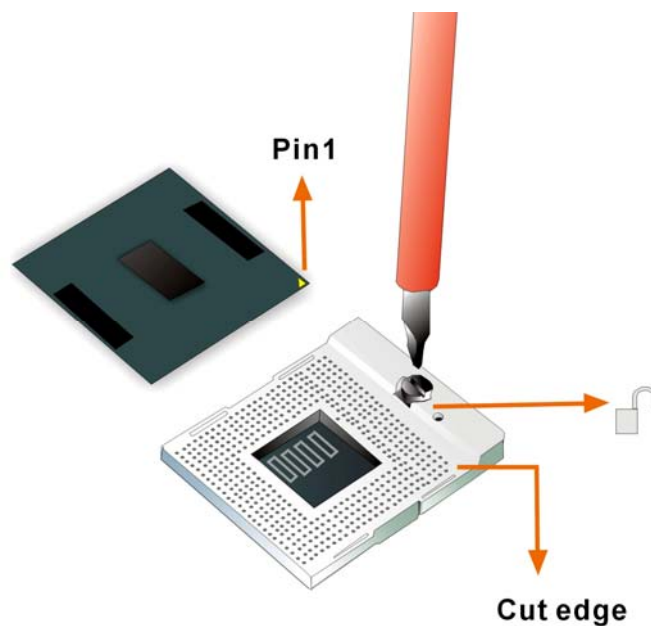


Figure 5-1: Make sure the CPU socket retention screw is unlocked

- Step 2:** **Inspect the CPU socket.** Make sure there are no bent pins and make sure the socket contacts are free of foreign material. If any debris is found, remove it with compressed air.
- Step 3:** **Correctly Orientate the CPU.** Make sure the IHS (integrated heat sink) side is facing upwards.
- Step 4:** **Correctly position the CPU.** Match the Pin 1 mark with the cut edge on the CPU socket. See **Figure 5-1**.

Step 5: **Align the CPU pins.** Carefully align the CPU pins with the holes in the CPU socket.

Step 6: **Insert the CPU.** Gently insert the CPU into the socket. If the CPU pins are properly aligned, the CPU should slide into the CPU socket smoothly.

Step 7: **Lock the retention screw.** Rotate the retention screw into the locked position.

See **Figure 5-2.**

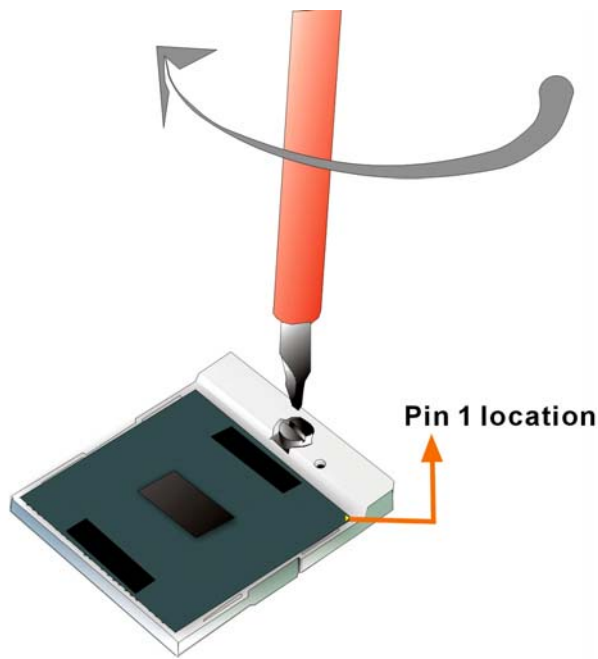


Figure 5-2: Lock the CPU Socket Retention Screw

5.3.2 Cooling Kit CF-479B-RS Installation



Figure 5-3: IEI CF-479B-RS Cooling Kit

NANO-9452 EPIC Motherboard

An IEI Socket 479 CPU cooling kit can be purchased separately. The cooling kit comprises a CPU heat sink and a cooling fan.



WARNING:

Do not wipe off (accidentally or otherwise) the pre-sprayed layer of thermal paste on the bottom of the [Fan model#] heat sink. The thermal paste between the CPU and the heat sink is important for optimum heat dissipation.

To install the CF-479B-RS cooling kit, please follow the steps below.

- Step 1:** Place the cooling kit onto the CPU. Make sure the CPU cooling fan cable can be properly routed when the cooling kit is installed.
- Step 2:** Properly align the cooling kit. Make sure its four spring screw fasteners can pass through the pre-drilled holes on the PCB.
- Step 3:** Secure the cooling kit. From the solder side of the PCB, align the support bracket to the screw threads on heat sink that were inserted through the PCB holes. (See **Figure 5-4**)

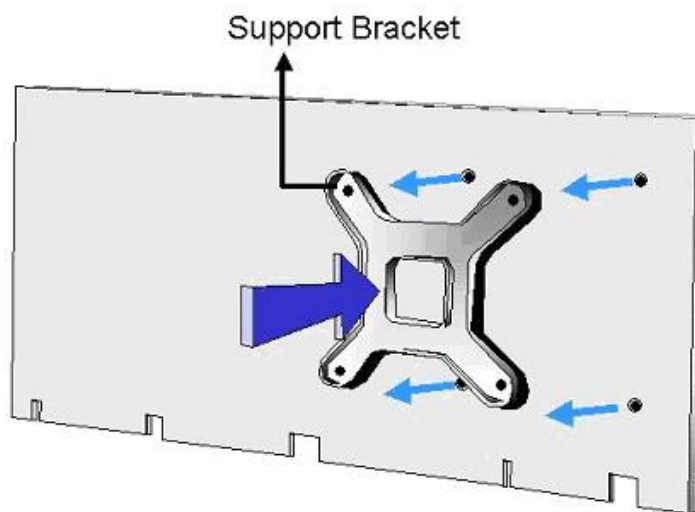


Figure 5-4: Cooling Kit Support Bracket

Step 4: Tighten the screws. Use a screwdriver to tighten the four screws. Tighten each nut a few turns at a time and do not over-tighten the screws.

Step 5: Connect the fan cable. Connect the cooling kit fan cable to the fan connector on the motherboard. Carefully route the cable and avoid heat generating chips and fan blades. See **Figure 5-5**.

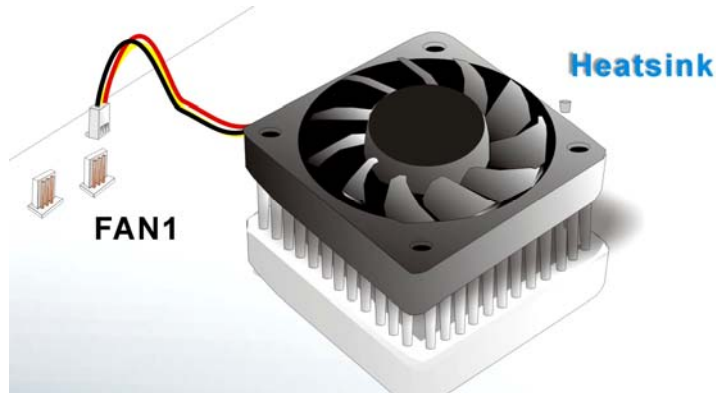


Figure 5-5: Connect the cooling fan cable

5.3.3 SODIMM Installation



WARNING:

Using incorrectly specified SODIMM may cause permanently damage the NANO-9452. Please make sure the purchased SODIMM complies with the memory specifications of the NANO-9452. SODIMM specifications compliant with the NANO-9452 are listed in **Chapter 2**.

To install a SODIMM into a SODIMM socket, please follow the steps below and refer **Figure 5-6**.

NANO-9452 EPIC Motherboard

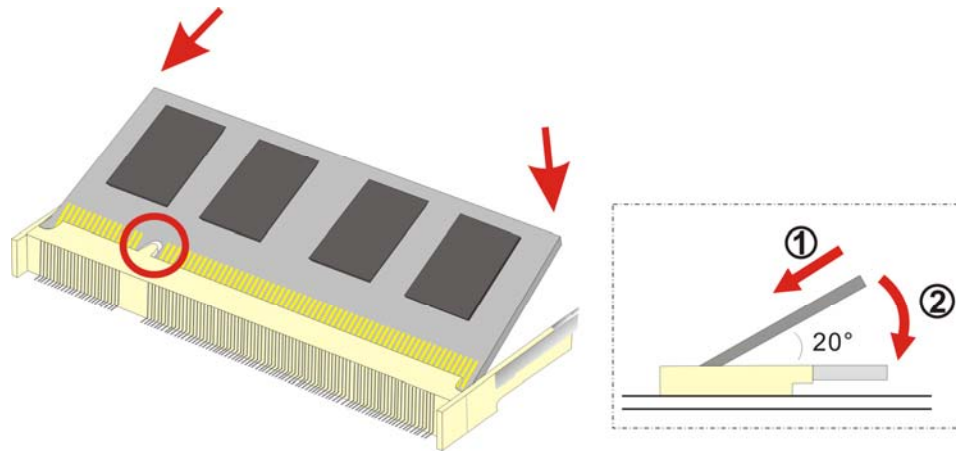


Figure 5-6: SODIMM Installation

- Step 1:** Locate the SODIMM socket. Place the NANO-9452 on an anti-static pad with the solder side facing up.
- Step 2:** Align the SODIMM with the socket. The SODIMM must be oriented in such a way that the notch in the middle of the SODIMM must be aligned with the plastic bridge in the socket.
- Step 3:** Insert the SODIMM. Push the SODIMM chip into the socket at an angle. (See Figure 5-6)
- Step 4:** Open the SODIMM socket arms. Gently pull the arms of the SODIMM socket out and push the rear of the SODIMM down. (See Figure 5-6)
- Step 5:** Secure the SODIMM. Release the arms on the SODIMM socket. They clip into place and secure the SODIMM in the socket.

5.3.4 CF Card Installation

**NOTE:**

The NANO-9452 can support both CF Type I cards and CF Type II cards. For the complete specifications of the supported CF cards please refer to **Chapter 2**.

To install the CF card (Type 1 or Type 2) onto the NANO-9452, please follow the steps below:

- Step 1:** **Locate the CF card socket.** Place the NANO-9452 on an anti-static pad with the solder side facing up. Locate the CF card.
- Step 2:** **Align the CF card.** Make sure the CF card is properly aligned with the CF socket.
- Step 3:** **Insert the CF card.** Gently insert the CF card into the socket making sure the socket pins are properly inserted into the socket. See **Figure 5-7**.

NANO-9452 EPIC Motherboard

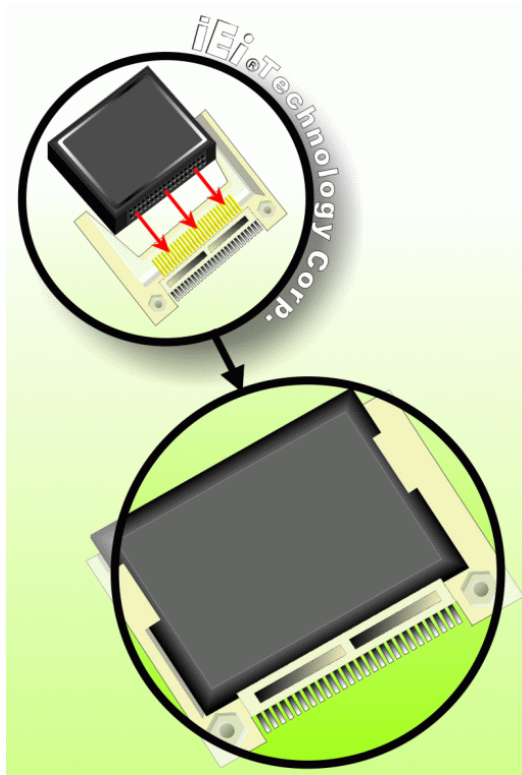


Figure 5-7: CF Card Installation

5.4 Jumper Settings



NOTE:

A jumper is a metal bridge used to close an electrical circuit. It consists of two or three metal pins and a small metal clip (often protected by a plastic cover) that slides over the pins to connect them. To CLOSE/SHORT a jumper means connecting the pins of the jumper with the plastic clip and to OPEN a jumper means removing the plastic clip from a jumper.

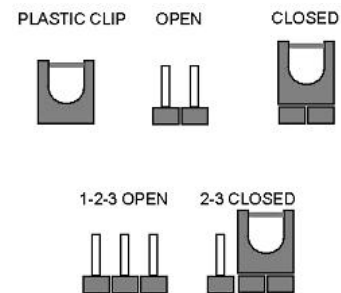


Figure 5-8: Jumper Locations

Before the NANO-9452 is installed in the system, the jumpers must be set in accordance with the desired configuration. The jumpers on the NANO-9452 are listed in **Table 5-1**.

Description	Label	Type
AT/ATX power select	J_ATXCTL1	3-pin header
CF card setup	JCF1	2-pin header
Clear CMOS	J_CMOS1	3-pin header
COM 2 function select	JP1	5-pin header
LVDS voltage selection	J_VLVDS1	3-pin header
VIO Voltage select	JP2	3-pin header

Table 5-1: Jumpers

5.4.1 AT/ATX Power Select

- Jumper Label:** J_ATXCTL1
- Jumper Type:** 3-pin header
- Jumper Settings:** See **Table 5-2**
- Jumper Location:** See **Figure 5-8**

The AT/ATX Power Select jumper specifies the systems power mode as AT or ATX.

AT/ATX Power Select jumper settings are shown in **Table 5-2**.

AT power Select	Description	
Short 1 - 2	ATX mode	Default
Short 2 - 3	AT mode	

Table 5-2: AT/ATX Power Select jumper settings

The location of the AT/ATX Power Select jumper is shown in **Figure 5-8**.

NANO-9452 EPIC Motherboard

J_ATXCTL1

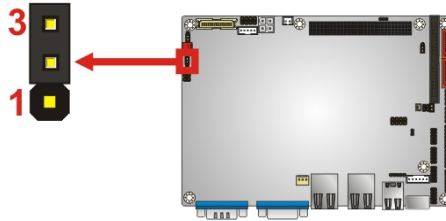


Figure 5-9: CF Card Setup Jumper Location

5.4.2 CF Card Setup

- Jumper Label:** JCF1
- Jumper Type:** 2-pin header
- Jumper Settings:** See **Table 5-3**
- Jumper Location:** See **Figure 5-10**

The CF Card Setup jumper sets the CF Type I card or CF Type II cards as either the slave device or the master device. CF Card Setup jumper settings are shown in **Table 5-3**.

AT Power Select	Description	
Open	Slave	Default
Closed	Master	

Table 5-3: CF Card Setup Jumper Settings

The CF Card Setup jumper location is shown in **Figure 5-10**.

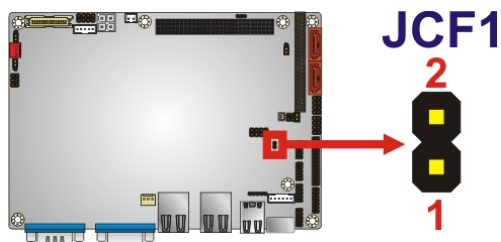


Figure 5-10: CF Card Setup Jumper Location

5.4.3 Clear CMOS Jumper

Jumper Label:	J_CMOS1
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-4
Jumper Location:	See Figure 5-11

If the NANO-9452 fails to boot due to improper BIOS settings, the clear CMOS jumper clears the CMOS data and resets the system BIOS information. To do this, use the jumper cap to close pins 2 and 3 for a few seconds then reinstall the jumper clip back to pins 1 and 2.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS jumper settings are shown in **Table 5-4**.

AT Power Select	Description	
Short 1 - 2	Keep CMOS Setup	Default
Short 2 - 3	Clear CMOS Setup	

Table 5-4: Clear CMOS Jumper Settings

The location of the clear CMOS jumper is shown in **Figure 5-11** below.

NANO-9452 EPIC Motherboard

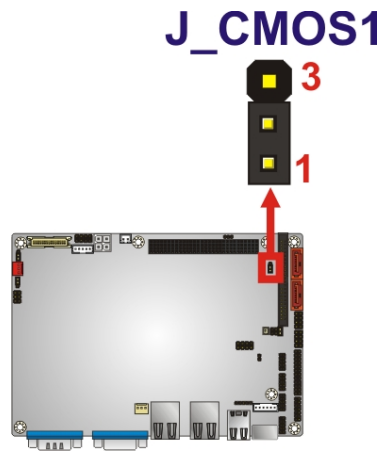


Figure 5-11: Clear CMOS Jumper

5.4.4 COM 2 Function Select Jumper

- Jumper Label:** JP1
- Jumper Type:** 3-pin header
- Jumper Settings:** See **Table 5-5**
- Jumper Location:** See **Figure 5-12**

The COM 2 Function Select jumper sets the communication protocol used by the second serial communications port (COM 2) as RS-232, RS-422 or RS-485. The COM 2 Function Select settings are shown in **Figure 5-12**.

COM 2 Function Select	Description	
Short 1-2	RS-232	Default
Short 3-4	RS-422	
Short 5-6	RS-485	

Table 5-5: COM 2 Function Select Jumper Settings

The COM 2 Function Select jumper location is shown in **Table 5-5**.

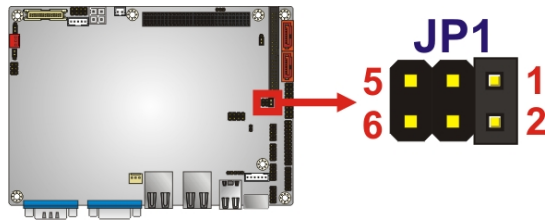


Figure 5-12: COM 2 Function Select Jumper Location

5.4.5 LVDS Voltage Selection



WARNING:

Permanent damage to the screen and NANO-9452 may occur if the wrong voltage is selected with this jumper. Please refer to the user guide that came with the monitor to select the correct voltage.

- Jumper Label:** J_LVDS1
- Jumper Type:** 3-pin header
- Jumper Settings:** See **Table 5-6**
- Jumper Location:** See **Figure 5-13**

The **LVDS Voltage Selection** jumper allows the LVDS screen voltage to be set. The **LVDS Voltage Selection** jumper settings are shown in **Table 5-6**.

AT Power Select	Description	
Short 1-2	+3.3V LVDS	Default
Short 2-3	+5V LVDS	

Table 5-6: LVDS Voltage Selection Jumper Settings

The LVDS Voltage Selection jumper location is shown in **Figure 5-13**.

NANO-9452 EPIC Motherboard

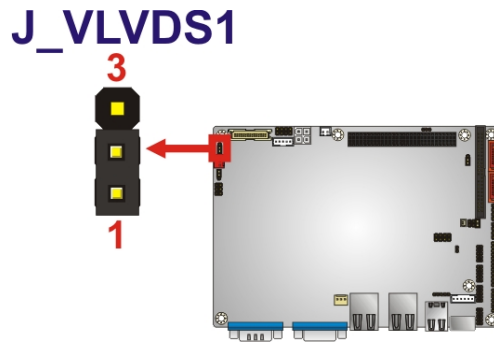


Figure 5-13: LVDS Voltage Selection Jumper Pinout Locations

5.4.6 VIO Voltage Selector Jumper

Jumper Label:	JP2
Jumper Type:	3-pin header
Jumper Settings:	See Table 5-7
Jumper Location:	See Figure 5-14

The **VIO Voltage Selector** jumper allows the PCI-104 voltage to be set. The **VIO Voltage Select** jumper settings are shown in **Table 5-6**.

AT Power Select	Description
Short 1-2	5 V
Short 2-3	3.3 V

Table 5-7: PCI-104 VIO Selector Jumper Settings

The **VIO Voltage Select** jumper location is shown in **Figure 5-13**.

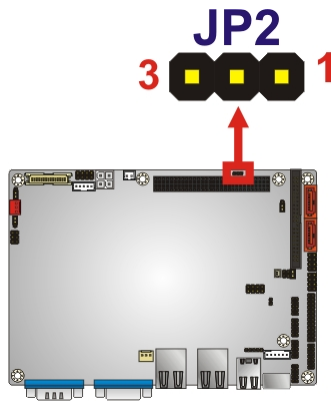


Figure 5-14: PCI-104 VIO Selector Jumper Pinout Locations

5.5 Chassis Installation

5.5.1 Airflow



WARNING:

Airflow is critical to the cooling of the CPU and other onboard components. The chassis in which the NANO-9452 must have air vents to allow cool air to move into the system and hot air to move out.

The NANO-9452 must be installed in a chassis with ventilation holes on the sides allowing airflow to travel through the heat sink surface. In a system with an individual power supply unit, the cooling fan of a power supply can also help generate airflow through the board surface.



NOTE:

IEI has a wide range of backplanes available. Please contact your NANO-9452 vendor, reseller or an IEI sales representative at sales@iei.com.tw or visit the IEI website (<http://www.ieworld.com.tw>) to find out more about the available chassis.

5.5.2 Motherboard Installation

To install the NANO-9452 motherboard into the chassis please refer to the reference material that came with the chassis.

5.6 Internal Peripheral Device Connections

5.6.1 Peripheral Device Cables

The cables listed in **Table 5-8** are shipped with the NANO-9452.

Quantity	Type
1	IDE Cable
1	KB/MS cable
2	SATA drive cables
1	SATA drive power cable

Table 5-8: IEI Provided Cables

Optional cables are listed below:

- USB cable
- TV out cable
- RS-232/422/485 cable
- LPT cable
- RS-232 cable
- 7.1 channel audio kit

- 5.1 channel audio kit

5.6.2 IDE Cable Connection

The IDE flat cable connects to the NANO-9452 to one or two IDE devices. To connect an IDE HDD to the NANO-9452 please follow the instructions below.

Step 1: Locate the IDE connector. The location/s of the IDE device connector/s is/are shown in **Chapter 3**..

Step 2: Insert the connector. Connect the IDE cable connector to the onboard connector. See Figure 5-15. A key on the front of the cable connector ensures it can only be inserted in one direction.

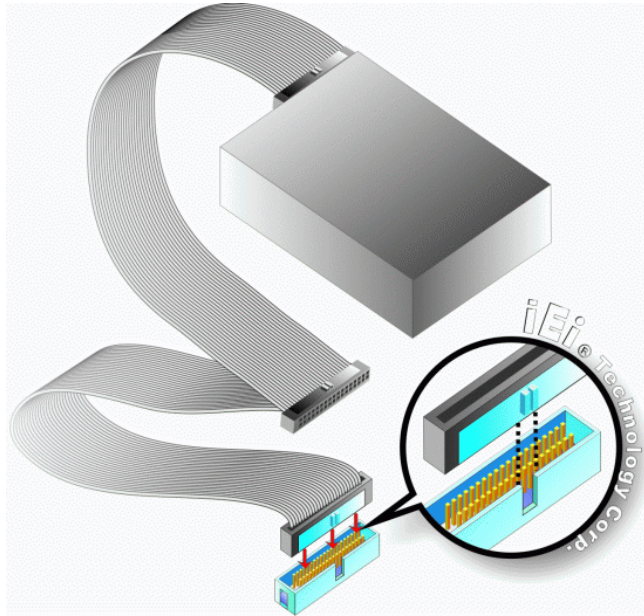


Figure 5-15: IDE Cable Connection

Step 3: Connect the cable to an IDE device. Connect the two connectors on the other side of the cable to one or two IDE devices. Make sure that pin 1 on the cable corresponds to pin 1 on the connector

NANO-9452 EPIC Motherboard

5.6.3 5.1 Channel Audio Kit Installation



NOTE:

This is an optional item that must be ordered separately. For further information please contact the nearest NANO-9452 distributor, reseller or vendor or contact an iEi sales representative directly. Send any queries to sales@iei.com.tw.

The optional 5.1 channel audio kit connects to the 10-pin audio connector on the NANO-9452. The audio kit consists of three audio jacks. One audio jack, Mic In, connects to a microphone. The remaining two audio jacks, Line-In and Line-Out, connect to two speakers. To install the audio kit, please refer to the steps below:

- Step 1: Connect the audio kit cable.** The audio kit is shipped with a cable that connects the audio kit to the NANO-9452. Connect the cable to the connector on the back of the audio kit. Make sure the pins are properly aligned (i.e. pin 1 connects to pin 1).
- Step 2: Locate the audio connector.** The location of the 10-pin audio connector is shown in **Chapter 3**.
- Step 3: Align pin 1.** Align pin 1 on the onboard connector with pin 1 on the audio kit cable connector. Pin 1 on the audio kit cable connector is indicated with a white dot. See **Figure 5-16**.

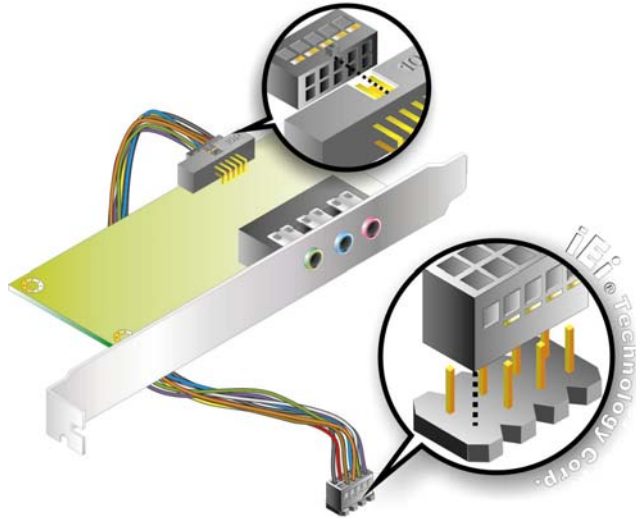


Figure 5-16: 5.1 Channel Audio Kit

- Step 4:** **Mount the audio kit onto the chassis.** Once the audio kit is connected to the NANO-9452, secure the audio kit bracket to the system chassis.
- Step 5:** **Connect the audio devices.** Connect one speaker to the line-in audio jack, one speaker to the line-out audio jack and a microphone to the mic-in audio jack.
- Step 6:** **Install the driver.** If the 5.1 channel audio kit is used, the ALC655 Realtek codec driver must be installed. Refer to **Chapter 7** for driver installation instructions.

5.6.4 7.1 Channel Audio Kit Installation



NOTE:

This is an optional item that must be ordered separately. For further information please contact the nearest NANO-9452 distributor, reseller or vendor or contact an iEi sales representative directly. Send any queries to sales@iei.com.tw.

The optional 7.1 channel audio kit connects to the 10-pin audio connector on the NANO-9452. The audio kit consists of five audio jacks. One audio jack, Mic In, connects to

NANO-9452 EPIC Motherboard

a microphone. The remaining four audio jacks, Line-In, Front-Out, Rear-Out, and Center Subwoofer, connect to speakers. To install the audio kit, please refer to the steps below:

- Step 1: Connect the audio kit cable.** The audio kit is shipped with a cable that connects the audio kit to the NANO-9452. Connect the cable to the connector on the back of the audio kit. Make sure the pins are properly aligned (i.e. pin 1 connects to pin 1).
- Step 2: Locate the audio connector.** The location of the 10-pin audio connector is shown in **Chapter 3**.
- Step 3: Align pin 1.** Align pin 1 on the onboard connector with pin 1 on the audio kit cable connector. Pin 1 on the audio kit cable connector is indicated with a white dot. See **Figure 5-16**.

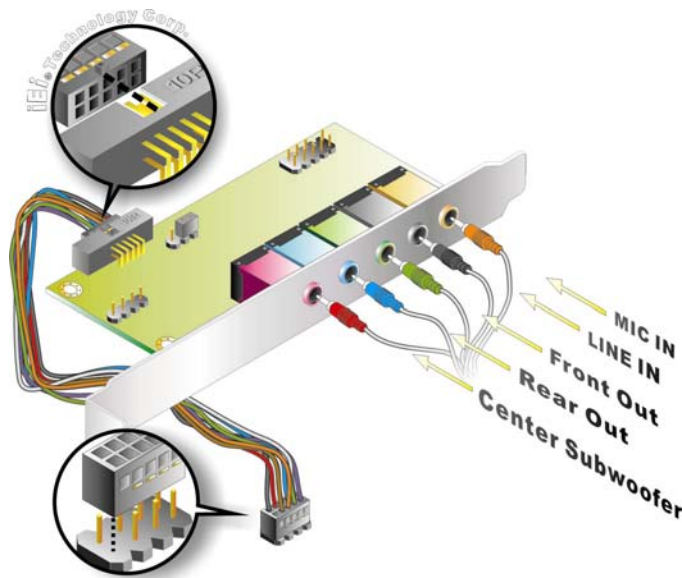


Figure 5-17: 5.1 Channel Audio Kit

- Step 4: Mount the audio kit onto the chassis.** Once the audio kit is connected to the NANO-9452, secure the audio kit bracket to the system chassis.
- Step 5: Connect the audio devices.** Connect one speaker to the line-in audio jack, one speaker to the line-out audio jack and a microphone to the mic-in audio jack.

Step 6: Install the driver. If the 5.1 channel audio kit is used, the ALC655 Realtek codec driver must be installed. Refer to **Chapter 7** for driver installation instructions.

5.6.5 SATA Drive Connection

The NANO-9452 is shipped with two SATA drive cables and one SATA drive power cable. To connect the SATA drives to the connectors, please follow the steps below.

Step 1: Locate the connectors. The locations of the SATA drive connectors are shown in **Chapter 3**.

Step 2: Insert the cable connector. Press the clip on the connector at the end of the SATA cable and insert the cable connector into the onboard SATA drive connector. See **Figure 5-18**.

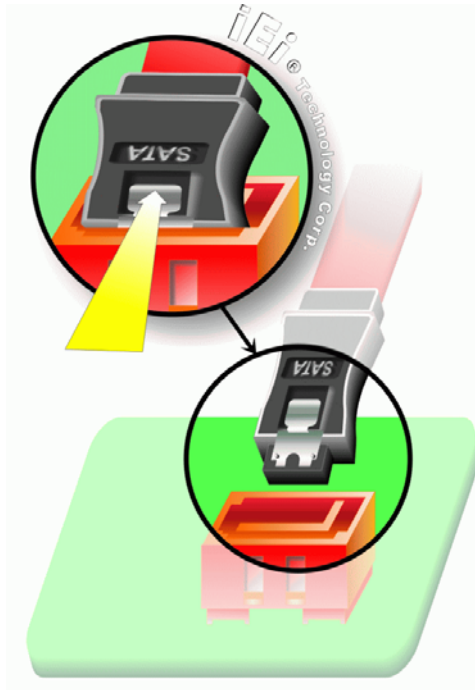


Figure 5-18: SATA Drive Cable Connection

Step 3: Connect the cable to the SATA disk. Connect the connector on the other end of the cable to the connector at the back of the SATA drive. See **Figure 5-19**.

NANO-9452 EPIC Motherboard

Step 4: Connect the **SATA power cable**. Connect the SATA power connector to the back of the SATA drive. See **Figure 5-19**.



Figure 5-19: SATA Power Drive Connection

5.7 External Peripheral Interface Connection

The following external peripheral devices can be connected to the external peripheral interface connectors.

- Serial port devices
- VGA monitors
- Parallel port devices
- RJ-45 Ethernet cable connectors
- Mouse and keyboard

To install these devices, connect the corresponding cable connector from the actual device to the corresponding NANO-9452 external peripheral interface connector making sure the pins are properly aligned.

5.7.1 VGA Monitor Connection

The NANO-9452 has a single female DB-15 connector on the external peripheral interface panel. The DB-15 connector is connected to a CRT or VGA monitor. To connect a monitor to the NANO-9452, please follow the instructions below.

- Step 1:** **Locate the female DB-15 connector.** The location of the female DB-15 connector is shown in **Chapter 3**.
- Step 2:** **Align the VGA connector.** Align the male DB-15 connector on the VGA screen cable with the female DB-15 connector on the external peripheral interface.
- Step 3:** **Insert the VGA connector** Once the connectors are properly aligned with the insert the male connector from the VGA screen into the female connector on the NANO-9452. See **Figure 5-20**.

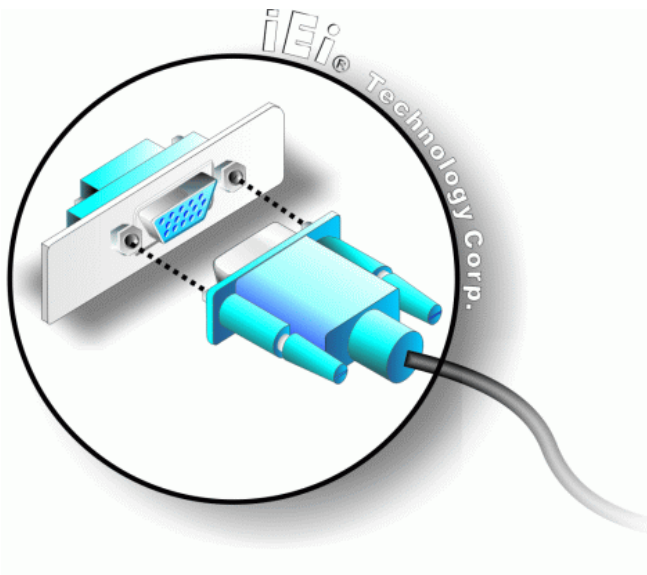


Figure 5-20: VGA Connector

- Step 4:** **Secure the connector.** Secure the DB-15 VGA connector from the VGA monitor to the external interface by tightening the two retention screws on either side of the connector.

NANO-9452 EPIC Motherboard

5.7.2 PS/2 Keyboard/Mouse Connection

The NANO-9452 has a single PS/2 connector on the external peripheral interface panel. The PS/2 connector is connected to a keyboard and a mouse through the keyboard and mouse cable that was shipped with the system. To connect a keyboard and mouse to the NANO-9452, please follow the instructions below.

Step 1: **Locate the PS/2 connector.** The location of the PS/2 connector is shown in Chapter 3.

Step 2: **Align the PS/2 connector.** Align the PS/2 connector on the keyboard and mouse cable with the PS/2 connector on the external peripheral interface.

Step 3: **Insert the PS/2 connector** Once the connectors are properly, insert the PS/2 connector from the keyboard and mouse cable into the PS/2 connector on the NANO-9452. See **Figure 5-21**.

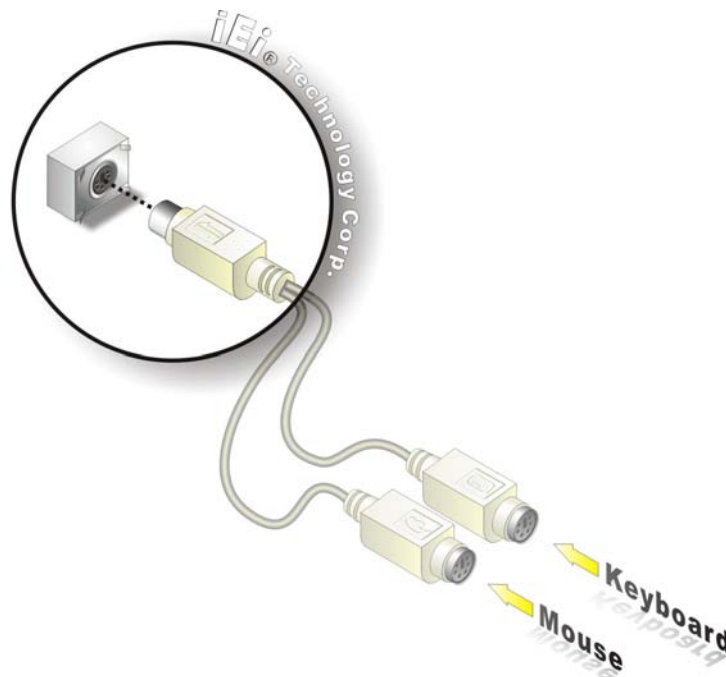


Figure 5-21: PS/2 Connector

Step 4: Connect the keyboard and mouse. Once the cable is connected to the NANO-9452 PS/2 connector. Connect the keyboard and mouse to their respective PS/2 connector on the keyboard and mouse cable.



CAUTION:

The keyboard and mouse cable has a specific connector for the mouse and a specific connector for the keyboard. The cable is marked. Please make sure the devices are connected to the correct connector.

Chapter

6

BIOS Setup

6.1 Introduction

A licensed copy of AMI BIOS is preprogrammed into the ROM BIOS. The BIOS setup program allows users to modify the basic system configuration. This chapter describes how to access the BIOS setup program and the configuration options that may be changed.

6.1.1 Starting Setup

The AMI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DELETE** key as soon as the system is turned on or
2. Press the **DELETE** key when the “**Press Del to enter SETUP**” message appears on the screen.

If the message disappears before the **DELETE** key is pressed, restart the computer and try again.

6.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **Esc** to quit. Navigation keys are shown in.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
Page Up key	Increase the numeric value or make changes
Page Dn key	Decrease the numeric value or make changes

NANO-9452 EPIC Motherboard

Key	Function
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 /F3 key	Change color from total 16 colors. F2 to select color forward.
F10 key	Save all the CMOS changes, only for Main Menu

Table 6-1: BIOS Navigation Keys

6.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

6.1.4 Unable to Reboot After Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the jumper described in **Chapter 5**.

6.1.5 BIOS Menu Bar


The **menu bar** on top of the BIOS screen has the following main items:

- **Main** Changes the basic system configuration.
- **Advanced** Changes the advanced system settings.
- **PCIPnP** Changes the advanced PCI/PnP Settings
- **Boot** Changes the system boot configuration.
- **Security** Sets User and Supervisor Passwords.
- **Chipset** Changes the chipset settings.
- **Power** Changes power management settings.
- **Exit** Selects exit options and loads default settings

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

6.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered. The **Main** menu gives an overview of the basic system information.

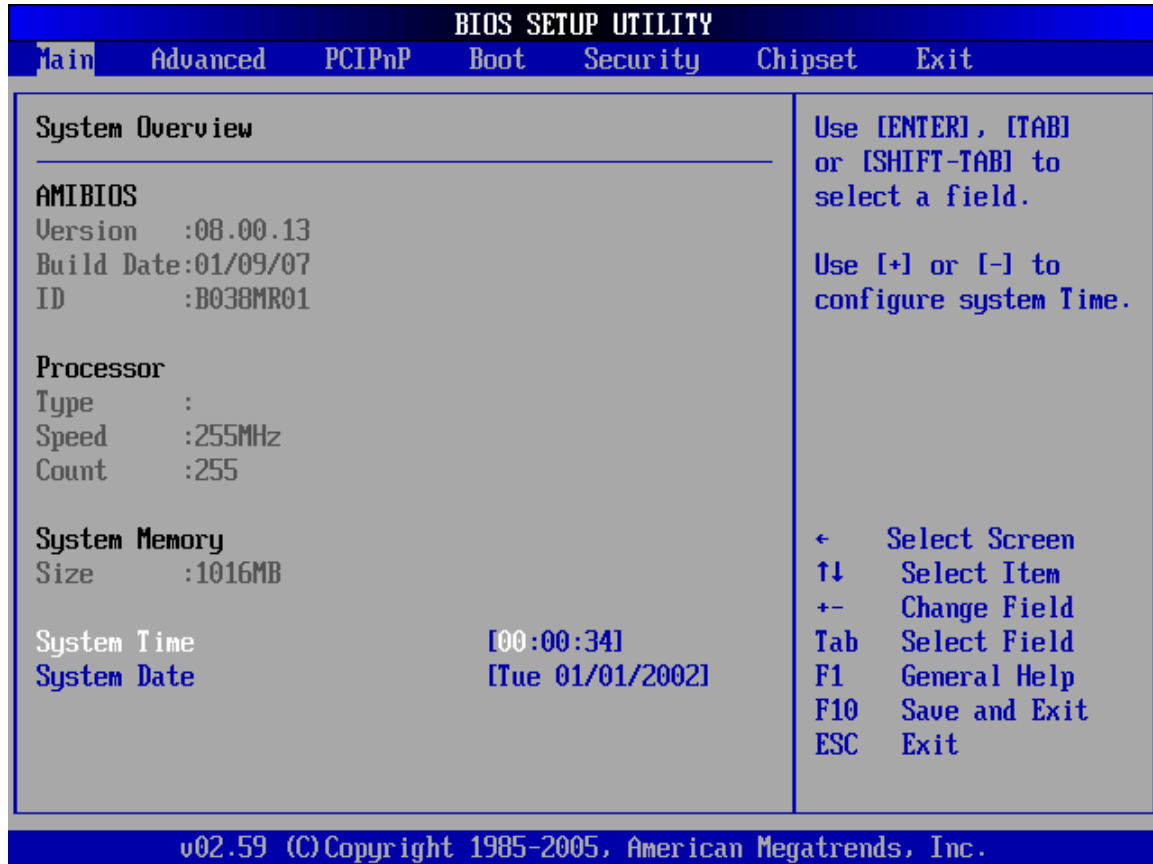

BIOS Menu 1: Main

→ System Overview

The **System Overview** lists a brief summary of different system components. The fields in **System Overview** cannot be changed. The items shown in the system overview include:

- **AMI BIOS:** Displays auto-detected BIOS information
 - **Version:** Current BIOS version
 - **Build Date:** Date the current BIOS version was made
 - **ID:** Installed BIOS ID
- **Processor:** Displays auto-detected CPU specifications

NANO-9452 EPIC Motherboard

- **Type:** Names the currently installed processor
- **Speed:** Lists the processor speed
- **Count:** The number of CPUs on the motherboard
- **System Memory:** Displays the auto-detected system memory.
 - **Size:** Lists memory size

The **System Overview** field also has two user configurable fields:

→ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

→ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

6.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING:

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

-
- **CPU Configuration** (see **Section 6.3.1**)
 - **IDE Configuration** (see **Section 6.3.2**)
 - **SuperIO Configuration** (see **Section 6.3.3**)
 - **Hardware Health Configuration** (see **Section 6.3.4**)
 - **ACPI Configuration** (see **Section 6.3.5**)
 - **APM Configuration** (See **Section 6.3.6**)
 - **MPS Configuration** (see **Section 6.3.6**)

- Remote Access Configuration (see Section 6.3.8)
- USB Configuration (see Section 6.3.8)




BIOS Menu 2: Advanced

NANO-9452 EPIC Motherboard

6.3.1 CPU Configuration

Use the **CPU Configuration** menu (BIOS Menu 3) to view detailed CPU specifications and configure the CPU.

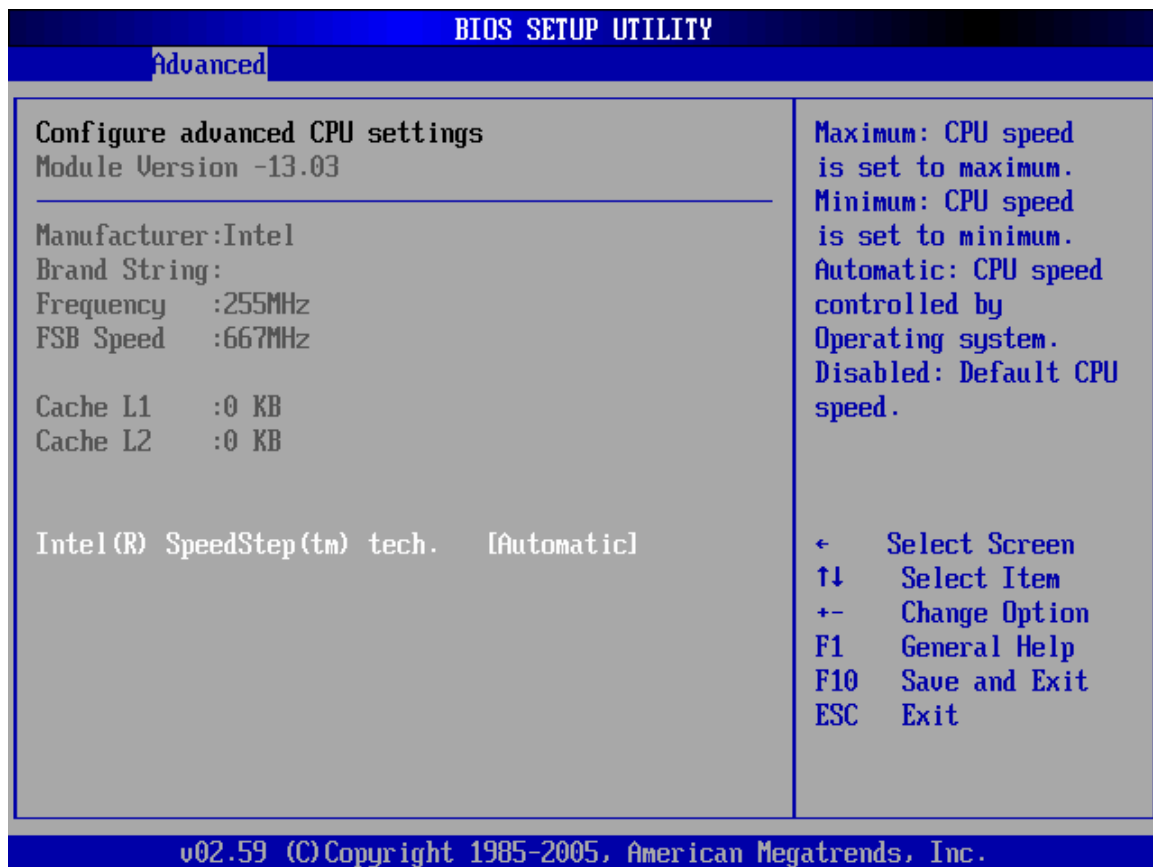

BIOS Menu 3: CPU Configuration

The **CPU Configuration** menu (**BIOS Menu 3**) lists the following CPU details:


- **Manufacturer:** Lists the name of the CPU manufacturer
- **Brand String:** Lists the brand name of the CPU being used
- **Frequency:** Lists the CPU processing speed
- **FSB Speed:** Lists the FSB speed
- **Cache L1:** Lists the CPU L1 cache size
- **Cache L2:** Lists the CPU L2 cache size

The following **CPU Configuration** menu items can be configured.

- Intel® SpeedStep™ tech.

6.3.2 IDE Configuration

Use the **IDE Configuration** menu (**BIOS Menu 4**) to change and/or set the configuration of the IDE devices installed in the system.

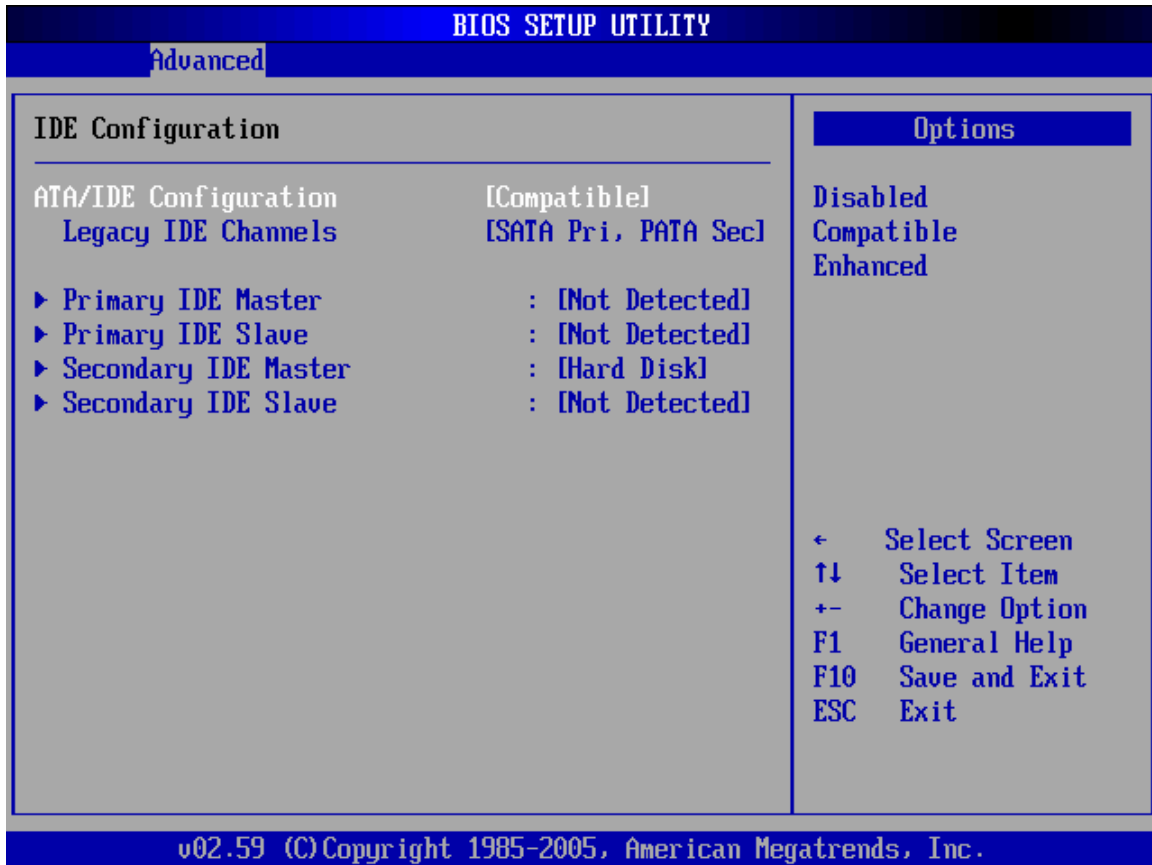

BIOS Menu 4: IDE Configuration

- ➔ **ATA/IDE Configurations [Compatible]**
 - ➔ **Disabled** (Default)
 - ➔ **Compatible**
 - ➔ **Enhanced**

NANO-9452 EPIC Motherboard

→ Legacy IDE Channels [PATA Pri, SATA Sec]

- SATA Only
- PATA Pri, SATA Sec **DEFAULT**
- PATA Pri., PATA Sec

→ IDE Master and IDE Slave


When entering setup, BIOS auto detects the presence of IDE devices. BIOS displays the status of the auto detected IDE devices. The following IDE devices are detected and are shown in the **IDE Configuration** menu:

- Primary IDE Master
- Primary IDE Slave
- Secondary IDE Master
- Secondary IDE Slave

The **IDE Configuration** menu (**BIOS Menu 4**) allows changes to the configurations for the IDE devices installed in the system. If an IDE device is detected, and one of the above listed four BIOS configuration options are selected, the IDE configuration options shown in **Section 6.3.2.1** appear.

6.3.2.1 IDE Master, IDE Slave

Use the **IDE Master** and **IDE Slave** configuration menu to view both primary and secondary IDE device details and configure the IDE devices connected to the system.

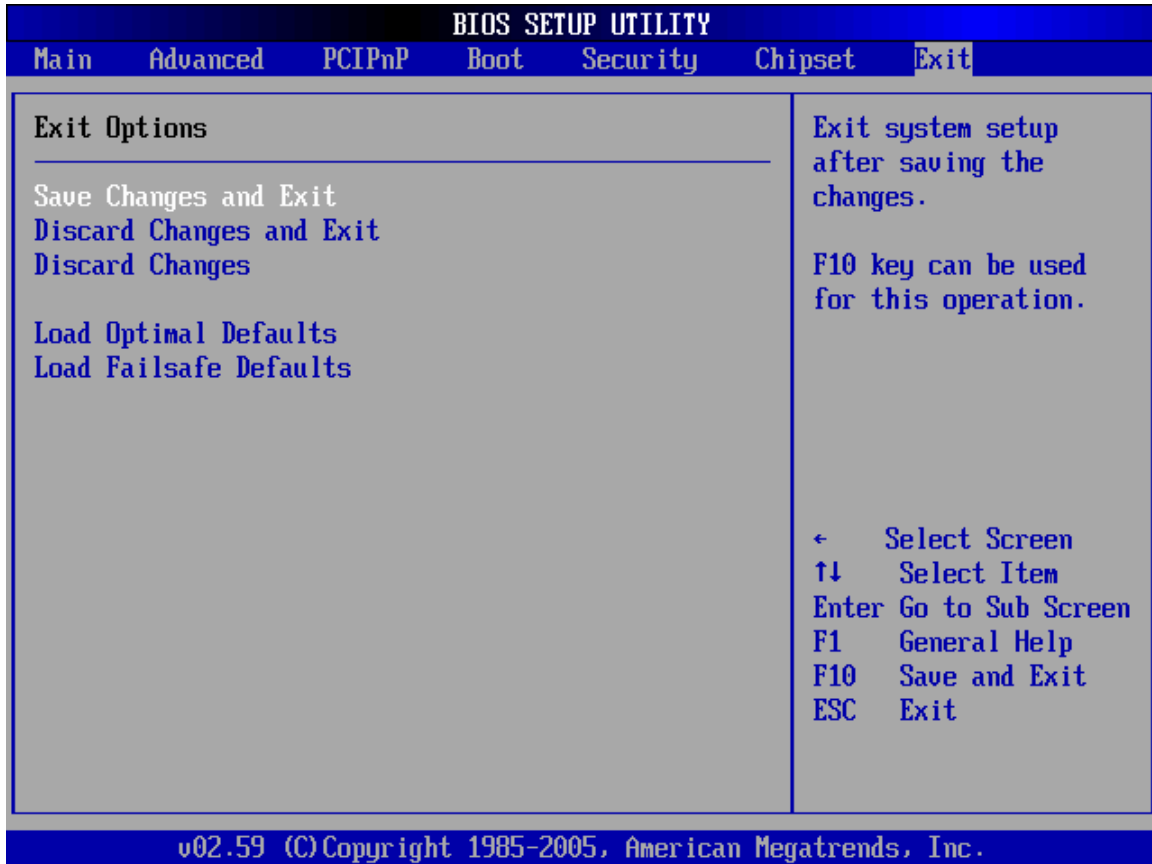

BIOS Menu 5: IDE Master and IDE Slave Configuration

➔ Auto-Detected Drive Parameters

The “grayed-out” items in the left frame are IDE disk drive parameters automatically detected from the firmware of the selected IDE disk drive. The drive parameters are listed as follows:

- **Device:** Lists the device type (e.g. hard disk, CD-ROM etc.)
- **Type:** Indicates the type of devices a user can manually select
- **Vendor:** Lists the device manufacturer
- **Size:** List the storage capacity of the device.

NANO-9452 EPIC Motherboard

- **LBA Mode:** Indicates whether the LBA (Logical Block Addressing) is a method of addressing data on a disk drive is supported or not.
- **Block Mode:** Block mode boosts IDE drive performance by increasing the amount of data transferred. Only 512 bytes of data can be transferred per interrupt if block mode is not used. Block mode allows transfers of up to 64 KB per interrupt.
- **PIO Mode:** Indicates the PIO mode of the installed device.
- **Async DMA:** Indicates the highest Asynchronous DMA Mode that is supported.
- **Ultra DMA:** Indicates the highest Synchronous DMA Mode that is supported.
- **S.M.A.R.T.:** Indicates whether or not the Self-Monitoring Analysis and Reporting Technology protocol is supported.
- **32Bit Data Transfer:** Enables 32-bit data transfer.

→ Type [Auto]

Use the **Type** BIOS option select the type of device the AMIBIOS attempts to boot from after the Power-On Self-Test (POST) is complete.

- | | | |
|---|----------------------------|---|
| → | Not Installed | BIOS is prevented from searching for an IDE disk drive on the specified channel. |
| → | Auto DEFAULT | The BIOS auto detects the IDE disk drive type attached to the specified channel. This setting should be used if an IDE hard disk drive is attached to the specified channel. |
| → | CD/DVD | The CD/DVD option specifies that an IDE CD-ROM drive is attached to the specified IDE channel. The BIOS does not attempt to search for other types of IDE disk drives on the specified channel. |
| → | ARMD | This option specifies an ATAPI Removable Media Device. These include, but are not limited to: <ul style="list-style-type: none"> → ZIP → LS-120 |

→ LBA/Large Mode [Auto]

Use the **LBA/Large Mode** option to disable or enable BIOS to auto detects LBA (Logical Block Addressing). LBA is a method of addressing data on a disk drive. In LBA mode, the maximum drive capacity is 137 GB.

- Disabled** BIOS is prevented from using the LBA mode control on the specified channel.
- Auto** **DEFAULT** BIOS auto detects the LBA mode control on the specified channel.

→ Block (Multi Sector Transfer) [Auto]

Use the **Block (Multi Sector Transfer)** to disable or enable BIOS to auto detect if the device supports multi-sector transfers.

- Disabled** BIOS is prevented from using Multi-Sector Transfer on the specified channel. The data to and from the device occurs one sector at a time.
- Auto** **DEFAULT** BIOS auto detects Multi-Sector Transfer support on the drive on the specified channel. If supported the data transfer to and from the device occurs multiple sectors at a time.

→ PIO Mode [Auto]

Use the **PIO Mode** option to select the IDE PIO (Programmable I/O) mode program timing cycles between the IDE drive and the programmable IDE controller. As the PIO mode increases, the cycle time decreases.

- Auto** **DEFAULT** BIOS auto detects the PIO mode. Use this value if the IDE disk drive support cannot be determined.
- 0** PIO mode 0 selected with a maximum transfer rate of 3.3MBps
- 1** PIO mode 1 selected with a maximum transfer rate of 5.2MBps
- 2** PIO mode 2 selected with a maximum transfer rate of 8.3MBps

NANO-9452 EPIC Motherboard

- 3 PIO mode 3 selected with a maximum transfer rate of 11.1MBps
- 4 PIO mode 4 selected with a maximum transfer rate of 16.6MBps
(This setting generally works with all hard disk drives manufactured after 1999. For other disk drives, such as IDE CD-ROM drives, check the specifications of the drive.)

→ DMA Mode [Auto]

Use the **DMA Mode** BIOS selection to adjust the DMA mode options.

- **Auto** **DEFAULT** BIOS auto detects the DMA mode. Use this value if the IDE disk drive support cannot be determined.
- **SWDMA0** Single Word DMA mode 0 selected with a maximum data transfer rate of 2.1MBps
- **SWDMA1** Single Word DMA mode 1 selected with a maximum data transfer rate of 4.2MBps
- **SWDMA2** Single Word DMA mode 2 selected with a maximum data transfer rate of 8.3MBps
- **MWDMA0** Multi Word DMA mode 0 selected with a maximum data transfer rate of 4.2MBps
- **MWDMA1** Multi Word DMA mode 1 selected with a maximum data transfer rate of 13.3MBps
- **MWDMA2** Multi Word DMA mode 2 selected with a maximum data transfer rate of 16.6MBps
- **UDMA1** Ultra DMA mode 0 selected with a maximum data transfer rate of 16.6MBps
- **UDMA1** Ultra DMA mode 1 selected with a maximum data transfer rate of 25MBps
- **UDMA2** Ultra DMA mode 2 selected with a maximum data transfer rate of 33.3MBps
- **UDMA3** Ultra DMA mode 3 selected with a maximum data transfer

rate of 44MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

→ **UDMA4**

Ultra DMA mode 4 selected with a maximum data transfer rate of 66.6MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

→ **UDMA5**

Ultra DMA mode 5 selected with a maximum data transfer rate of 99.9MBps (To use this mode, it is required that an 80-conductor ATA cable is used.)

→ **S.M.A.R.T [Auto]**

Use the **S.M.A.R.T** option to auto-detect, disable or enable Self-Monitoring Analysis and Reporting Technology (SMART) on the drive on the specified channel. **S.M.A.R.T** predicts impending drive failures. The **S.M.A.R.T** BIOS option enables or disables this function.

→ **Auto** **DEFAULT** BIOS auto detects HDD SMART support.

→ **Disabled** Prevents BIOS from using the HDD SMART feature.

→ **Enabled** Allows BIOS to use the HDD SMART feature

→ **32Bit Data Transfer [Enabled]**

Use the **32Bit Data Transfer** BIOS option to enables or disable 32-bit data transfers.


→ **Disabled** Prevents the BIOS from using 32-bit data transfers.

→ **Enabled** **DEFAULT** Allows BIOS to use 32-bit data transfers on supported hard disk drives.

6.3.3 Super IO Configuration

Use the **Super IO Configuration** menu (**BIOS Menu 6**) to set or change the configurations for the FDD controllers, parallel ports and serial ports.

NANO-9452 EPIC Motherboard

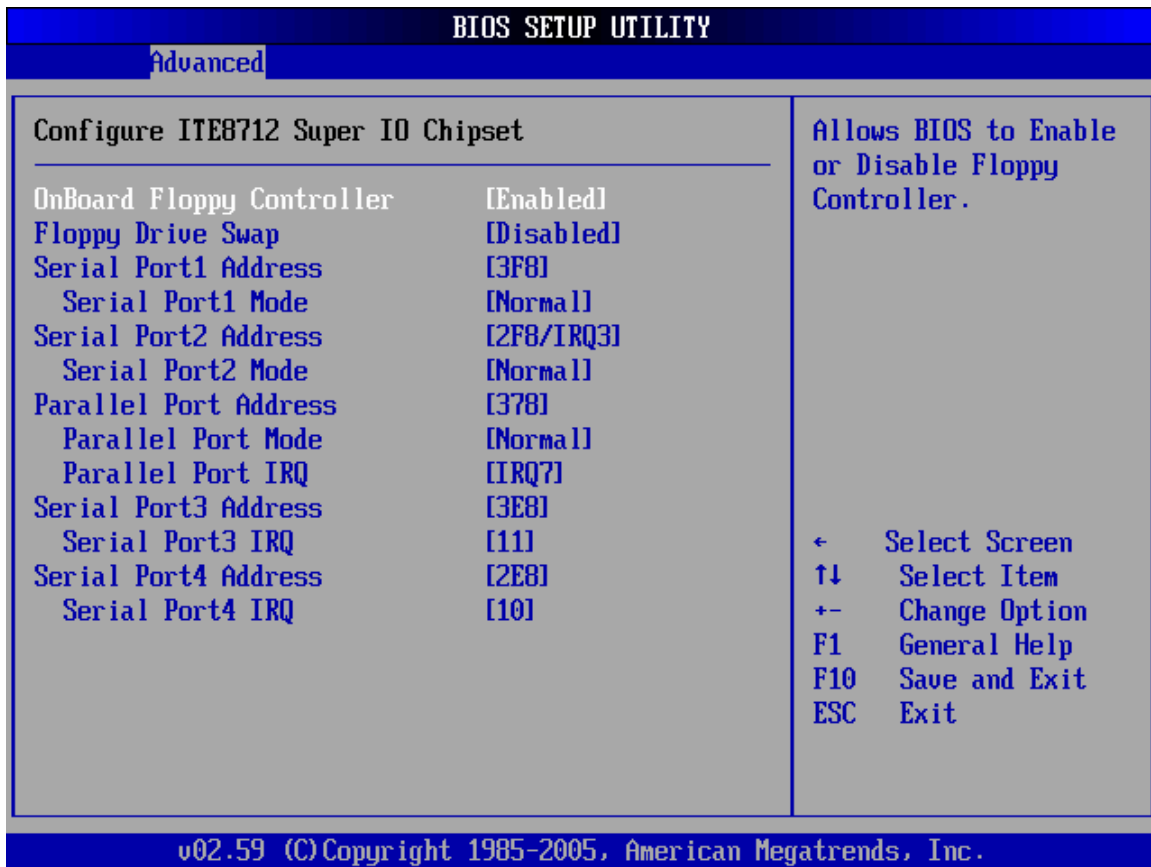

BIOS Menu 6: Super IO Configuration

→ OnBoard Floppy Controller [Enabled]

Use the **OnBoard Floppy Controller** to enable or disable the floppy controller. If a floppy disk is not being used in the system, disabling this option frees up system resources that can be redirected elsewhere in the system.

- **Disabled** Allows BIOS to disable the floppy controller
- **Enabled** DEFAULT Allows BIOS to enable the floppy controller

→ Floppy Drive Swap [Disabled]

Use the **Floppy Drive Swap** option to designate drive A as drive B and drive B as drive A.

- **Disabled** DEFAULT Cannot designate A or B to a floppy drive without

changing the physical connection

→ **Enabled**

Can designate A or B to a floppy drive without changing the physical connection

→ **Serial Port1 Address [3F8/IRQ4]**

Use the **Serial Port1 Address** option to select the Serial Port 1 base address.

→ **Disabled**

No base address is assigned to Serial Port 1

→ **3F8/IRQ4** **DEFAULT**

Serial Port 1 I/O port address is 3F8 and the interrupt address is IRQ4

→ **3E8/IRQ4**

Serial Port 1 I/O port address is 3E8 and the interrupt address is IRQ4

→ **2E8/IRQ3**

Serial Port 1 I/O port address is 2E8 and the interrupt address is IRQ3

→ **Serial Port1 Mode [Normal]**

Use the **Serial Port1 Mode** option to select the transmitting and receiving mode for the first serial port.

→ **Normal**

(Default) Serial Port 1 mode is normal

→ **IrDA**

Serial Port 1 mode is IrDA

→ **ASK IR**

Serial Port 1 mode is ASK IR

→ **Serial Port2 Address [2F8/IRQ3]**

Use the **Serial Port2 Address** option to select the Serial Port 2 base address.

→ **Disabled**

No base address is assigned to Serial Port 2

→ **2F8/IRQ3** **DEFAULT**

Serial Port 2 I/O port address is 3F8 and the interrupt address is IRQ3

→ **3E8/IRQ4**

Serial Port 2 I/O port address is 3E8 and the interrupt address is IRQ4

NANO-9452 EPIC Motherboard

→ **2E8/IRQ3** Serial Port 2 I/O port address is 2E8 and the interrupt address is IRQ3

→ Serial Port2 Mode [Normal]

Use the **Serial Port2 Mode** option to select the Serial Port2 operational mode.

→ **Normal** **DEFAULT** Serial Port 2 mode is normal

→ **IrDA** Serial Port 2 mode is IrDA

→ **ASK IR** Serial Port 2 mode is ASK IR

→ Parallel Port Address [Disabled]

Use the **Parallel Port Address** option to select the parallel port base address.

→ **Disabled** **DEFAULT** No base address is assigned to the Parallel Port

→ **378** Parallel Port I/O port address is 378

→ **278** Parallel Port I/O port address is 278

→ **3BC** Parallel Port I/O port address is 3BC

→ Parallel Port Mode [Normal]

Use the **Parallel Port Mode** option to select the mode the parallel port operates in.

→ **Normal** **DEFAULT** The normal parallel port mode is the standard mode for parallel port operation.

→ **Bi-directional** Parallel port outputs are 8-bits long. Inputs are accomplished by reading 4 of the 8 bits on the status register.

→ **EPP** The parallel port operates in the enhanced parallel port mode (EPP). The EPP mode supports bi-directional communication between the system and the parallel port device and the transmission rates between the two are much faster than the

Normal mode.

➔ **ECP+EPP**

The parallel port operates in the extended capabilities port (ECP) mode. The ECP mode supports bi-directional communication between the system and the parallel port device and the transmission rates between the two are much faster than the Normal mode

The parallel port is also be compatible with EPP devices described above

➔ **Parallel Port IRQ [IRQ7]**

Use the **Parallel Port IRQ** option to set the parallel port interrupt address.

➔ **IRQ5** IRQ5 is assigned as the parallel port interrupt address

➔ **IRQ7** **DEFAULT** IRQ7 is assigned as the parallel port interrupt address

➔ **Serial Port3 Address [3E8]**

Use the **Serial Port3 Address** option to select the base addresses for serial port 3

➔ **Disabled** No base address is assigned to serial port 3

➔ **3E8** **DEFAULT** Serial port 3 I/O port address is 3E8

➔ **2E8** Serial port 3 I/O port address is 2E8

➔ **2E0** Serial port 3 I/O port address is 2E0

➔ **Serial Port3 IRQ [11]**

Use the **Serial Port3 IRQ** option to select the interrupt address for serial port 3.

➔ **4** Serial port 3 IRQ address is 4

➔ **9** Serial port 3 IRQ address is 9

➔ **10** Serial port 3 IRQ address is 10

➔ **11** **DEFAULT** Serial port 3 IRQ address is 11

NANO-9452 EPIC Motherboard

→ Serial Port4 Address [2E8]

Use the **Serial Port4 IRQ** option to select the interrupt address for serial port 4.

- **Disabled** No base address is assigned to serial port 3
- **3E8** Serial port 4 I/O port address is 3E8
- **2E8** **DEFAULT** Serial port 4 I/O port address is 2E8
- **2E0** Serial port 4 I/O port address is 2E0


→ Serial Port4 IRQ [10]

Use the **Serial Port4 IRQ** option to select the interrupt address for serial port 4.

- **3** **DEFAULT** Serial port 4 IRQ address is 3
- **9** Serial port 4 IRQ address is 9
- **10** **DEFAULT** Serial port 4 IRQ address is 10
- **11** Serial port 4 IRQ address is 11

6.3.4 Hardware Health Configuration

The **Hardware Health Configuration** menu (**BIOS Menu 7**) shows the operating temperature, fan speeds and system voltages.

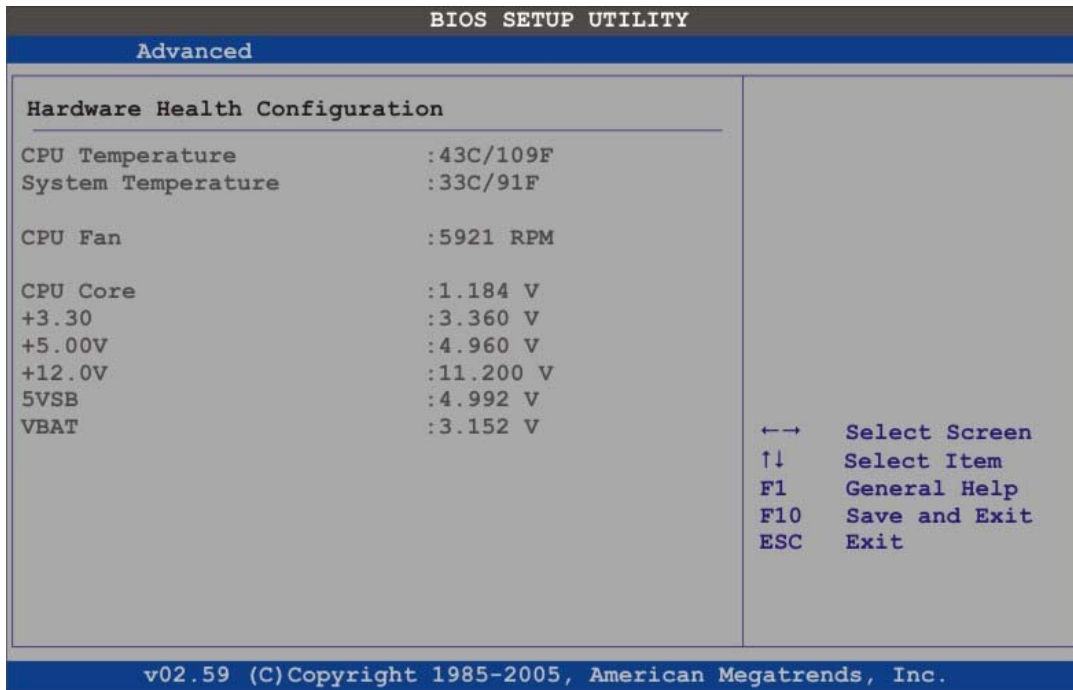

BIOS Menu 7: Hardware Health Configuration

→ Hardware Health Monitoring

Use the **Hardware Health Configuration** menu (**BIOS Menu 7**) monitor system environmental parameters. The following health parameters are monitored.


- **Temperature monitoring:** The following system temperatures are monitored:
 - CPU Temperature
 - System Temperature
- **Fan Speed Monitoring:** The following system fan speeds are monitored:
 - System FAN Speed
- **Voltage Monitoring:** The following system voltages are monitored:
 - CPU Core
 - +3.30V
 - +5.00V

NANO-9452 EPIC Motherboard

- +12.0V
- 5VSB
- VBAT

6.3.5 ACPI Configuration

The **ACPI Configuration** menu (**BIOS Menu 8**) configures the Advanced Configuration and Power Interface (ACPI) and Power Management (APM) options.

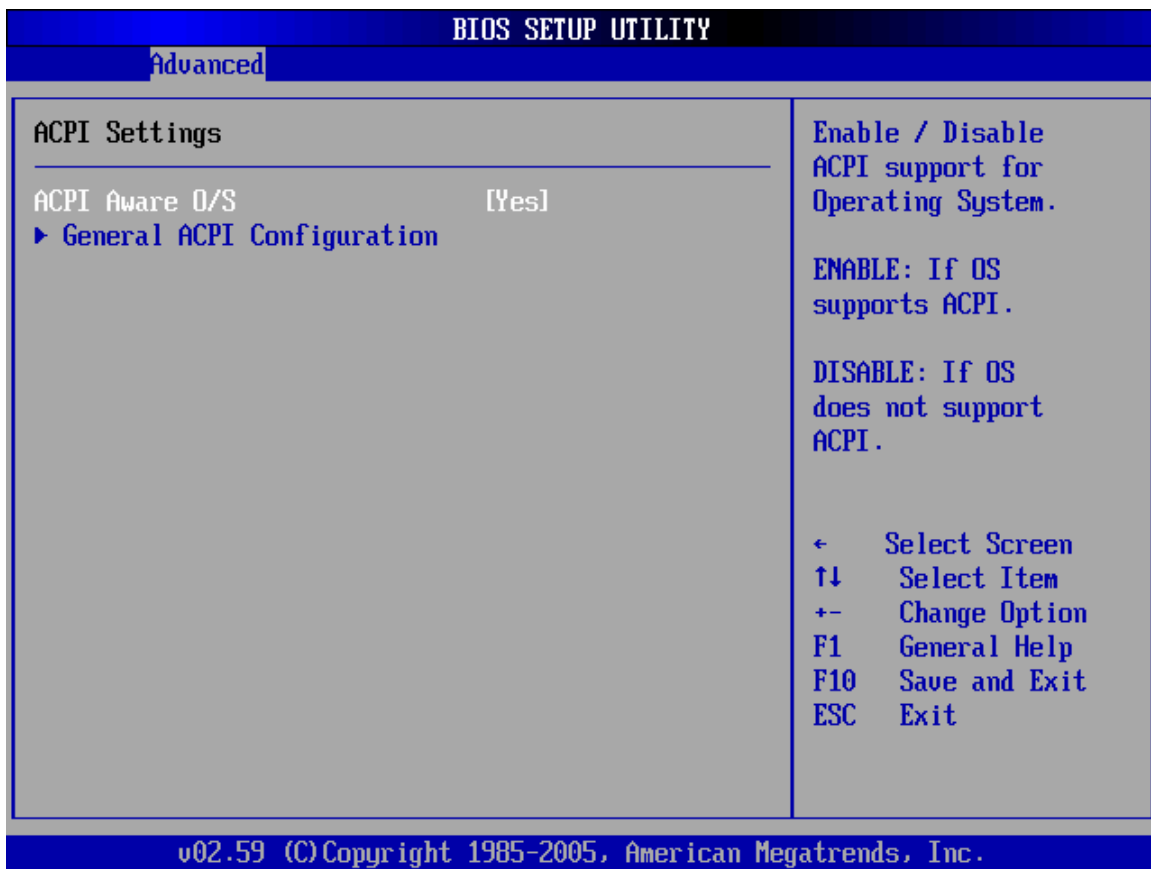

BIOS Menu 8: ACPI Configuration


→ ACPI Aware O/S [Yes]

Use the **ACPI Aware O/S** option to enable the system to configure ACPI power saving options. ACPI can only be implemented if the system OS complies with the ACPI standard. Windows 98, Windows 2000, and Windows XP all comply with ACPI.

- **No** Disables the ACPI support for the OS. This selection should be disabled if the OS does not support ACPI
- **Yes DEFAULT** Enables the ACPI support for the operating system. This selection should be enabled if the OS does support ACPI

6.3.5.1 General ACPI Configuration

Use the **General ACPI Configuration** menu (**BIOS Menu 9**) to select the ACPI state when the system is suspended.

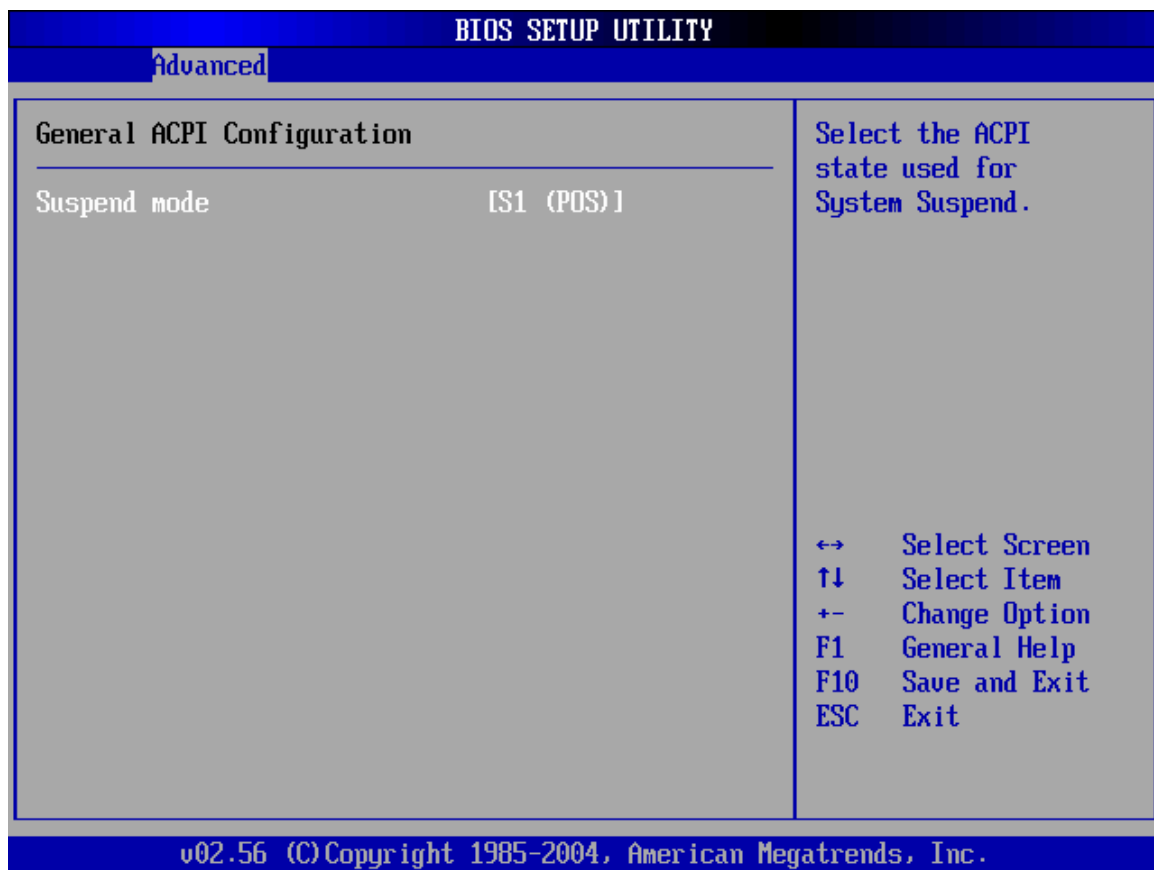

BIOS Menu 9: General ACPI Configuration [Advanced\ACPI Configuration]

- **Suspend Mode [S1(POS)]**

Use the **Suspend Mode** option to specify the sleep state the system enters when it is not being used.

NANO-9452 EPIC Motherboard

- ➔ **S1 (POS) DEFAULT** The system enters S1(POS) sleep state. The system appears off. The CPU is stopped; RAM is refreshed; the system is running in a low power mode.
- ➔ **S3 (STR)** The system enters a S3(STR) sleep state. The CPU has no power; RAM is in slow refresh; the power supply is in a reduced power mode.
- ➔ **Auto** The BIOS automatically selects a sleep state for the system.


➔ **Repost Video on S3 Resume [No]**

Use the **Repost Video on S3 Resume** to determine whether the VGA BIOS post will be invoked after the system is roused from an S3 (STR) suspend state.

- ➔ **No DEFAULT** The VGA BIOS post is not invoked
- ➔ **Yes** The VGA BIOS post is invoked

6.3.6 APM Configuration

The **APM Configuration** menu (**BIOS Menu 10**) allows the advanced power management options to be configured.

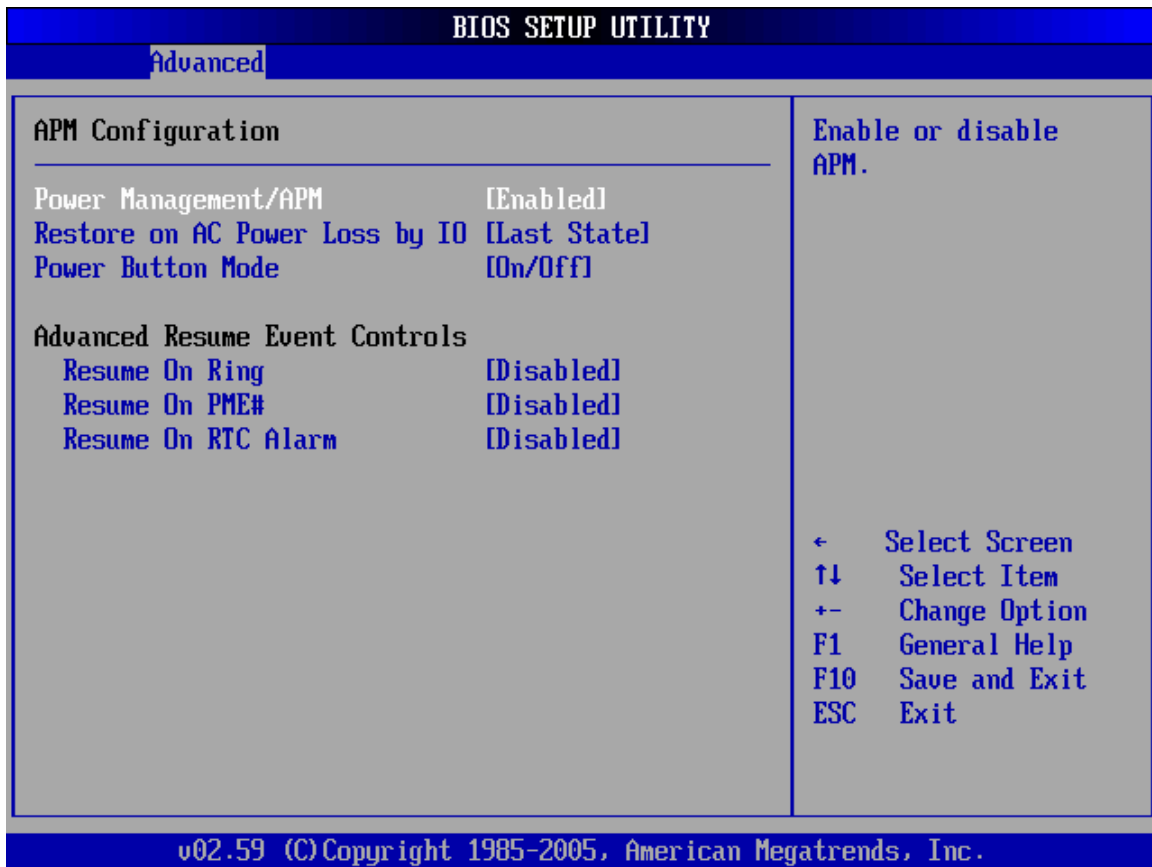

BIOS Menu 10: Advanced Power Management Configuration

➔ Power Management/APM [Enabled]

Use the **Power Management/APM** BIOS option to enable access to the advanced power management features. If this option is disabled, the only other option on the screen is the **Power Button Mode**.

- ➔ **Disabled** Disables the Advanced Power Management (APM) feature
- ➔ **Enabled** (Default) Enables the APM feature

NANO-9452 EPIC Motherboard

→ Restore on AC Power Loss [Power Off]

Use the **Restore on AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off** The system remains turned off
- **Power On** (Default) The system turns on
- **Last State** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ Power Button Mode [On/Off]

Use the **Power Button Mode** BIOS to specify how the power button functions.

- **On/Off** (Default) When the power button is pressed the system is either turned on or off
- **Suspend** When the power button is pressed the system goes into suspend mode

→ Resume on Ring [Disabled]

Use the **Resume on Ring** BIOS option to enable activity on the RI (ring in) modem line to rouse the system from a suspend or standby state. That is, the system will be roused by an incoming call on a modem.

- **Disabled** (Default) Wake event not generated by an incoming call
- **Enabled** Wake event generated by an incoming call

→ Resume on PME# [Disabled]

Use the **Resume on PME#** BIOS option to enable activity on the PCI PME (power management event) controller to rouse the system from a suspend or standby state.

- **Disabled** (Default) Wake event not generated by PCI PME controller activity
- **Enabled** Wake event generated by PCI PME controller activity

→ **Resume On RTC Alarm [Disabled]**

Use the **Resume On RTC Alarm** option to specify the time the system should be roused from a suspended state.

→ **Disabled** (Default) The real time clock (RTC) cannot generate a wake event

→ **Enabled** If selected, the following appears with values that can be selected:

→ **RTC Alarm Date (Days)**


→ **System Time**

After setting the alarm, the computer turns itself on from a suspend state when the alarm goes off.

NANO-9452 EPIC Motherboard

6.3.7 MPS Configuration

Use the **MPS Configuration** menu (**BIOS Menu 11**) to select the multi-processor table.

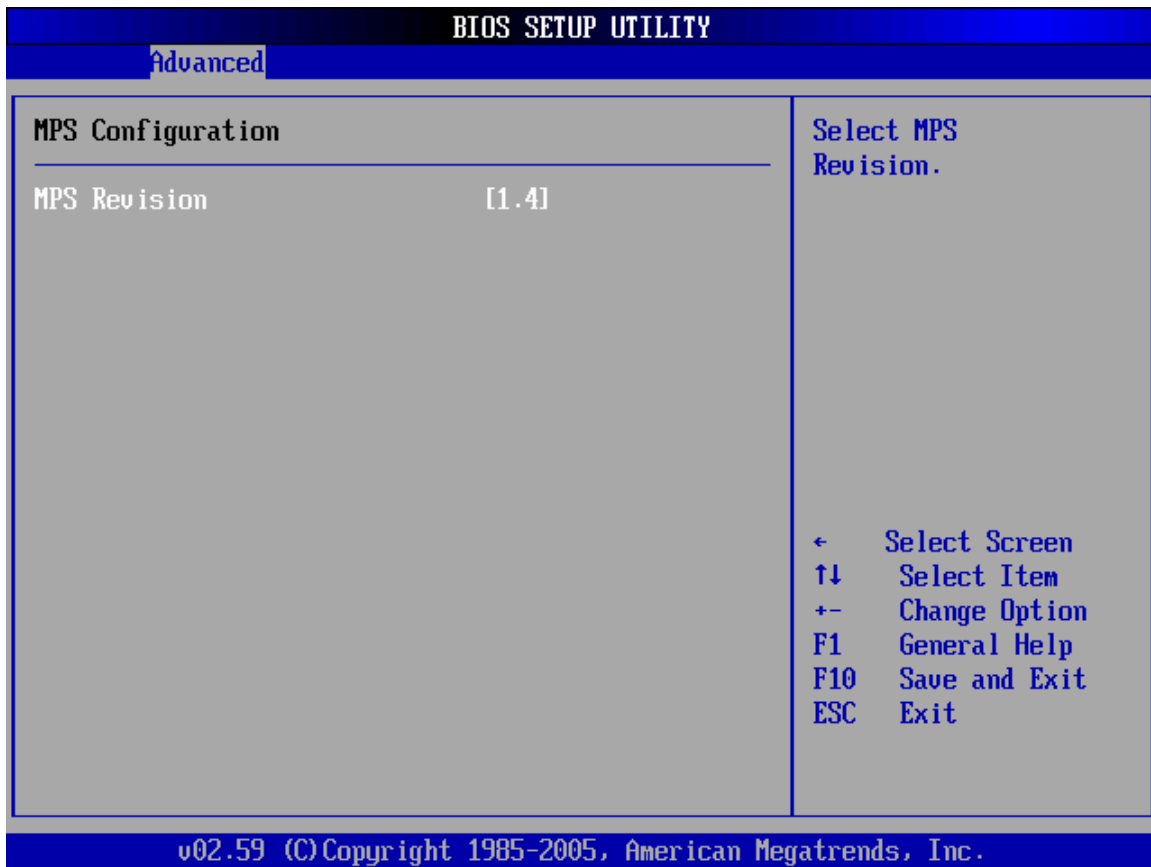

BIOS Menu 11: MPS Configuration


→ MPS Revision [1.4]

Use the **Multiprocessor Specification (MPS) for OS** option to specify the MPS version to be used.

- 1.1 MPS version 1.1 is used
- 1.4 **DEFAULT** MPS version 1.4 is used

6.3.8 Remote Access Configuration

Use the **Remote Access Configuration** menu (**BIOS Menu 12**) to configure remote access parameters. The **Remote Access Configuration** is an AMIBIOS feature and allows a remote host running a terminal program to display and configure the BIOS settings.

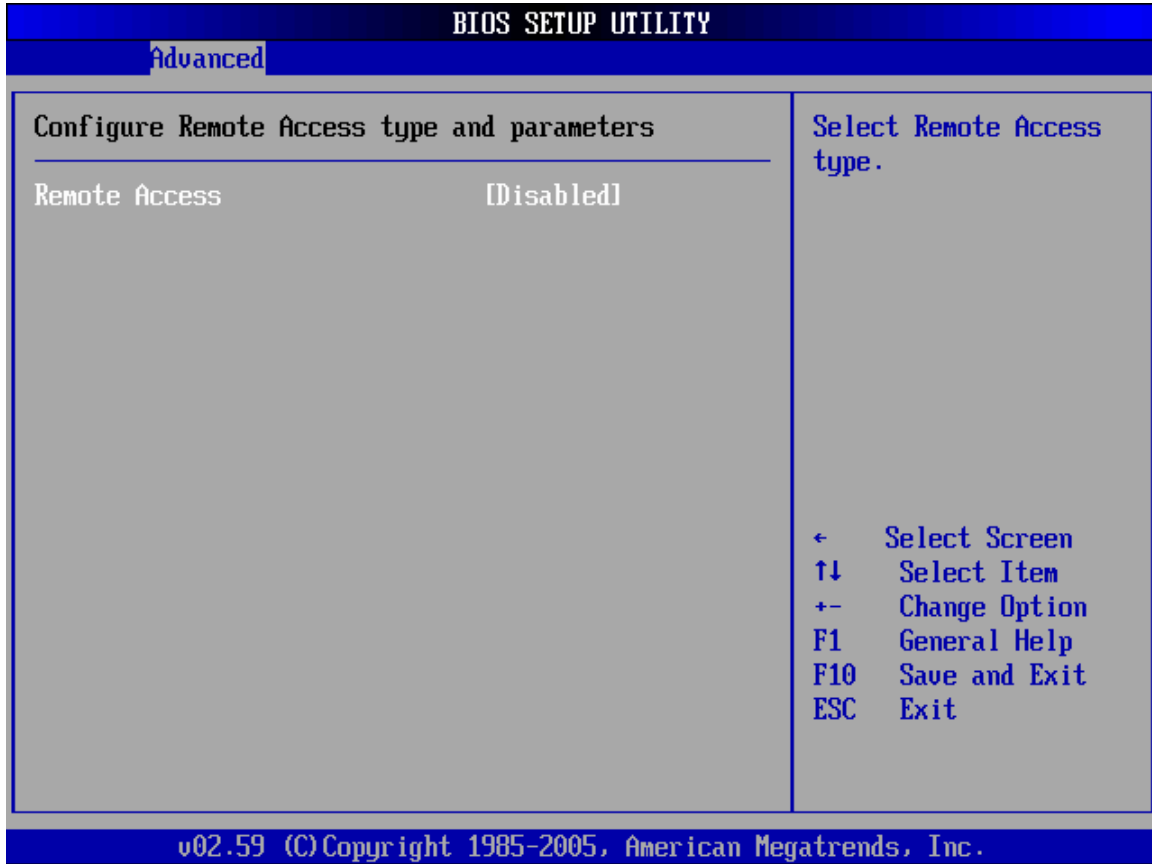

BIOS Menu 12: Remote Access Configuration [Advanced]

→ Remote Access [Disabled]

Use the **Remote Access** option to enable or disable access to the remote functionalities of the system.

- **Disabled** **DEFAULT** Remote access is disabled.
- **Enabled** Remote access configuration options shown below

appear:

- **Serial Port Number**
- **Serial Port Mode**
- **Flow Control**
- **Redirection after BIOS POST**
- **Terminal Type**
- **VT-UTF8 Combo Key Support**

These configuration options are discussed below.

→ **Serial Port Number [COM1]**

Use the **Serial Port Number** option allows to select the serial port used for remote access.

- **COM1** **DEFAULT** System is remotely accessed through COM1
- **COM2** System is remotely accessed through COM2

NOTE: Make sure the selected COM port is enabled through the Super I/O configuration menu.

→ **Base Address, IRQ [2F8h,3]**

The **Base Address, IRQ** option cannot be configured and only shows the interrupt address of the serial port listed above.

→ **Serial Port Mode [115200 8,n,1]**

Use the **Serial Port Mode** option to select baud rate through which the console redirection is made. The following configuration options are available

- 115200 8,n,1 **DEFAULT**
- 57600 8,n,1
- 38400 8,n,1

- 19200 8,n,1
- 09600 8,n,1



NOTE:

Identical baud rate setting must be set on the host (a management computer running a terminal software) and the slave

→ **Flow Control [None]**

Use the **Flow Control** option to report the flow control method for the console redirection application.

- **None** **DEFAULT** No control flow,
- **Hardware** Hardware is set as the console redirection
- **Software** Software is set as the console redirection

→ **Redirection After BIOS POST [Always]**

Use the **Redirection After BIOS POST** option to specify when console redirection should occur.

- **Disabled** The console is not redirected after POST
- **Boot Loader** Redirection is active during POST and during Boot Loader
- **Always** **DEFAULT** Redirection is always active (Some Oses may not work if set to Always)

→ **Terminal Type [ANSI]**

Use the **Terminal Type** BIOS option to specify the remote terminal type.

- **ANSI** **DEFAULT** The target terminal type is ANSI
- **VT100** The target terminal type is VT100

NANO-9452 EPIC Motherboard

→ **VT-UTF8** The target terminal type is VT-UTF8

→ **VT-UTF8 Combo Key Support [Disabled]**

Use the **VT-UFT8 Combo Key Support** option to enable additional keys that are not provided by VT100 for the PC 101 keyboard.

The VT100 Terminal Definition is the standard convention used to configure and conduct emergency management tasks with UNIX-based servers. VT100 does not support all keys on the standard PC 101-key layout, however. The VT-UTF8 convention makes available additional keys that are not provided by VT100 for the PC 101 keyboard.

→ **Disabled** **DEFAULT** Disables the VT-UTF8 terminal keys

→ **Enabled** Enables the VT-UTF8 combination key. Support for ANSI/VT100 terminals


→ **Sredir Memory Display Delay [Disabled]**

Use the **Sredir Memory Display Delay** option to select the delay before memory information is displayed. Configuration options are listed below

- No Delay **DEFAULT**
- Delay 1 sec
- Delay 2 sec
- Delay 4 sec

6.3.9 USB Configuration

Use the **USB Configuration** menu (**BIOS Menu 13**) to read USB configuration information and configure the USB settings.

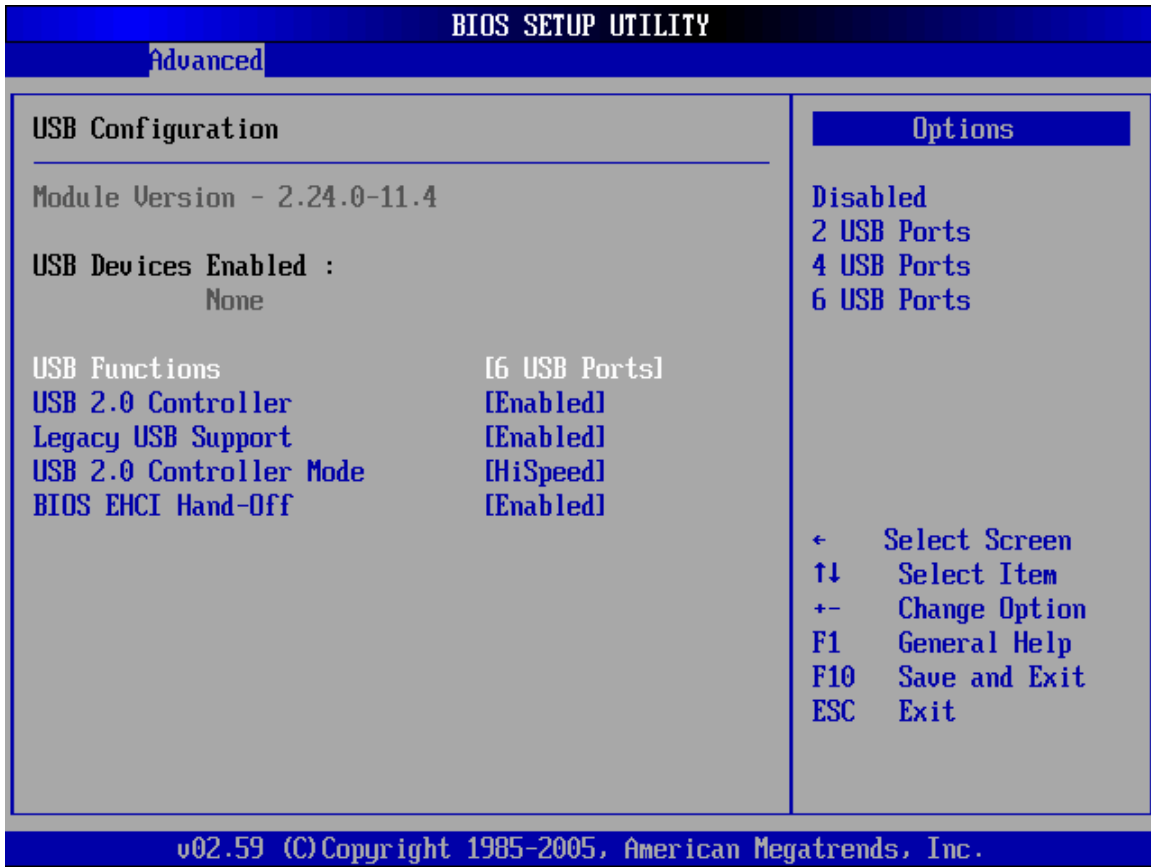
BIOS Menu 13: USB Configuration
→ USB Function [6 USB ports]

Use the **USB Function** BIOS option to enable or disable a specified number of USB ports. If only two USB ports are being used, disabling the remaining six USB frees up system resources that can be redirected elsewhere.

- **Disabled** USB function support disabled
- **2 USB Ports** Two USB ports are enabled
- **4 USB Ports** Four USB ports are enabled
- **6 USB Ports** **DEFAULT** Six USB ports are enabled

→ **Enabled** **DEFAULT** Systems with OSes that do not support EHCI cannot use the EHCI handoff functionality.

6.4 PCI/PnP

Use the **PCI/PnP** menu (**BIOS Menu 13**) to configure advanced PCI and PnP settings.



WARNING:

Setting wrong values for the BIOS selections in the PCIPnP BIOS menu may cause the system to malfunction.

NANO-9452 EPIC Motherboard

BIOS SETUP UTILITY		
Main	Advanced	PCIPnP
Advanced PCI/PnP Settings ▲ Clear NURAM during System Boot.		
WARNING: Setting wrong values in below sections may cause system to malfunction.		
Clear NURAM	[No]	
Plug & Play O/S	[No]	
PCI Latency Timer	[64]	
Allocate IRQ to PCI VGA	[Yes]	
Palette Snooping	[Disabled]	
PCI IDE BusMaster	[Enabled]	
OffBoard PCI/ISA IDE Card	[Auto]	
IRQ3	[Available]	
IRQ4	[Available]	
IRQ5	[Available]	
IRQ7	[Available]	
IRQ9	[Available]	
IRQ10	[Available]	
IRQ11	[Available]	
◀ Select Screen ↑↓ Select Item +- Change Option F1 General Help F10 Save and Exit ESC Exit		
v02.59 (C) Copyright 1985-2005, American Megatrends, Inc.		

BIOS SETUP UTILITY		
Main	Advanced	PCIPnP
OffBoard PCI/ISA IDE Card [Auto] ▲ Size of memory block to reserve for legacy ISA devices.		
IRQ3	[Available]	
IRQ4	[Available]	
IRQ5	[Available]	
IRQ7	[Available]	
IRQ9	[Available]	
IRQ10	[Available]	
IRQ11	[Available]	
IRQ14	[Available]	
IRQ15	[Available]	
DMA Channel 0	[Available]	
DMA Channel 1	[Available]	
DMA Channel 3	[Available]	
DMA Channel 5	[Available]	
DMA Channel 6	[Available]	
DMA Channel 7	[Available]	
Reserved Memory Size	[Disabled]	
◀ Select Screen ↑↓ Select Item +- Change Option F1 General Help F10 Save and Exit ESC Exit		
v02.59 (C) Copyright 1985-2005, American Megatrends, Inc.		

BIOS Menu 14: PCI/PnP Configuration

→ Clear NVRAM [No]

Use the **Clear NVRAM** option to specify if the NVRAM (Non-Volatile RAM) is cleared when the power is turned off.

- **No** **DEFAULT** System does not clear NVRAM during system boot
- **Yes** System clears NVRAM during system boot

→ Plug & Play O/S [No]

Use the **Plug & Play O/S** BIOS option to specify whether system plug and play devices are configured by the operating system or the BIOS.

- **No** **DEFAULT** If the operating system does not meet the Plug and Play specifications, this option allows the BIOS to configure all the devices in the system.
- **Yes** This setting allows the operating system to change the interrupt, I/O, and DMA settings. Set this option if the system is running Plug and Play aware operating systems.

→ PCI Latency Timer [64]

Use the **PCI Latency Timer** option to specify the PCI latency time. The latency time is measured in units of PCI clock cycles for the PCI device latency timer register. Configuration options are:

- 32
- 64 **DEFAULT**
- 96
- 128
- 160
- 192
- 224
- 248

NANO-9452 EPIC Motherboard

→ Allocate IRQ to PCI VGA [Yes]

Use the **Allocate IRQ to PCI VGA** option to restrict the system from giving the VGA adapter card an interrupt address.

- **Yes** (Default) Assigns an IRQ to a PCI VGA card if card requests IRQ
- **No** Does not assign IRQ to a PCI VGA card even if the card requests an IRQ

→ Palette Snooping [Disabled]

Use the **Palette Snooping** option to enable or disable the palette snooping function.

- **Disabled** **DEFAULT** Unless the VGA card manufacturer requires palette snooping to be enabled, this option should be disabled.
- **No/Enabled** PCI devices are informed that an ISA based Graphics device is installed in the system so the ISA based Graphics card functions correctly. This does not necessarily indicate a physical ISA adapter card. The graphics chipset can be mounted on a PCI card. Always check with the adapter card manual first, before modifying the default settings in the BIOS.

→ PCI IDE BusMaster [Disabled]

Use the **PCI IDE BusMaster** BIOS option to enable or prevent PCI IDE busmastering.

- **Disabled** **DEFAULT** Busmastering is prevented
- **No/Enabled** IDE controller on the PCI local bus has mastering capabilities

→ OffBoard PCI/ISA IDE Card [Auto]

Use the **OffBoard PCI/ISA IDE Card** BIOS option to select the **OffBoard PCI/ISA IDE Card**.

- **Auto** **DEFAULT** The location of the Off Board PCI IDE adapter card is automatically detected by the AMIBIOS.
- **PCI Slot 1** PCI Slot 1 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 1.
- **PCI Slot 2** PCI Slot 2 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 2.
- **PCI Slot 3** PCI Slot 3 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 3.
- **PCI Slot 4** PCI Slot 4 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 4.
- **PCI Slot 5** PCI Slot 5 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 5.
- **PCI Slot 6** PCI Slot 6 is selected as the location of the OffBoard PCI IDE adapter card. Only select this slot if the adapter card is installed in PCI Slot 6.

→ **IRQ# [Available]**

Use the **IRQ#** address to specify what IRQs can be assigned to a particular peripheral device.

- **Available** **DEFAULT** The specified IRQ is available to be used by PCI/PnP devices
- **Reserved** The specified IRQ is reserved for use by Legacy ISA devices

Available IRQ addresses are:

NANO-9452 EPIC Motherboard

- IRQ3
- IRQ4
- IRQ5
- IRQ7
- IRQ9
- IRQ10
- IRQ 11
- IRQ 14
- IRQ 15

→ DMA Channel# [Available]

Use the **DMA Channel#** option to assign a specific DMA channel to a particular PCI/PnP device.

- **Available** **DEFAULT** The specified DMA is available to be used by PCI/PnP devices
- **Reserved** The specified DMA is reserved for use by Legacy ISA devices

Available DMA Channels are:

- DM Channel 0
- DM Channel 1
- DM Channel 3
- DM Channel 5
- DM Channel 6
- DM Channel 7

→ Reserved Memory Size [Disabled]


Use the **Reserved Memory Size** BIOS option to specify the amount of memory that should be reserved for legacy ISA devices.

- **Disabled** **DEFAULT** No memory block reserved for legacy ISA devices
- **16K** 16KB reserved for legacy ISA devices

- ➔ 32K 32KB reserved for legacy ISA devices
- ➔ 64K 54KB reserved for legacy ISA devices

6.5 Boot

Use the **Boot** menu (**BIOS Menu 15**) to configure system boot options.

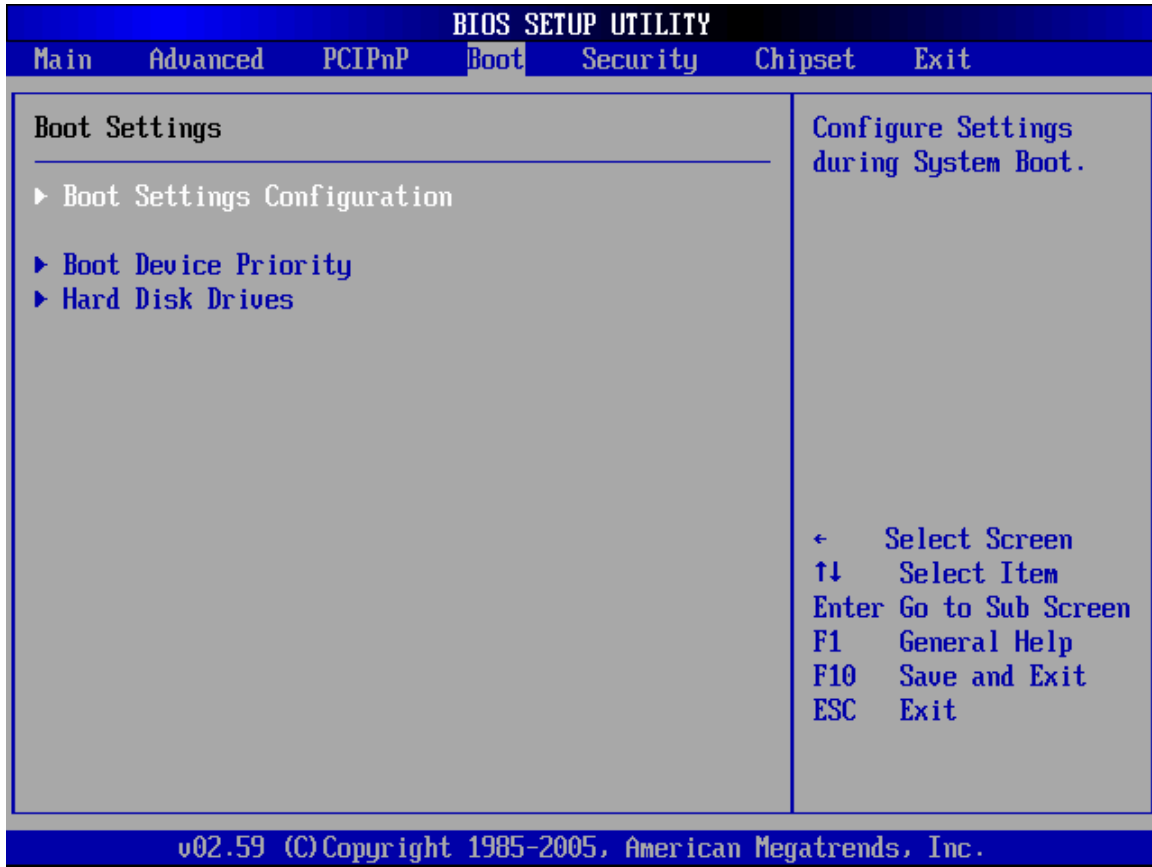


BIOS Menu 15: Boot

6.5.1 Boot Settings Configuration

Use the **Boot Settings Configuration** menu (**BIOS Menu 15**) to configure advanced system boot options.

NANO-9452 EPIC Motherboard

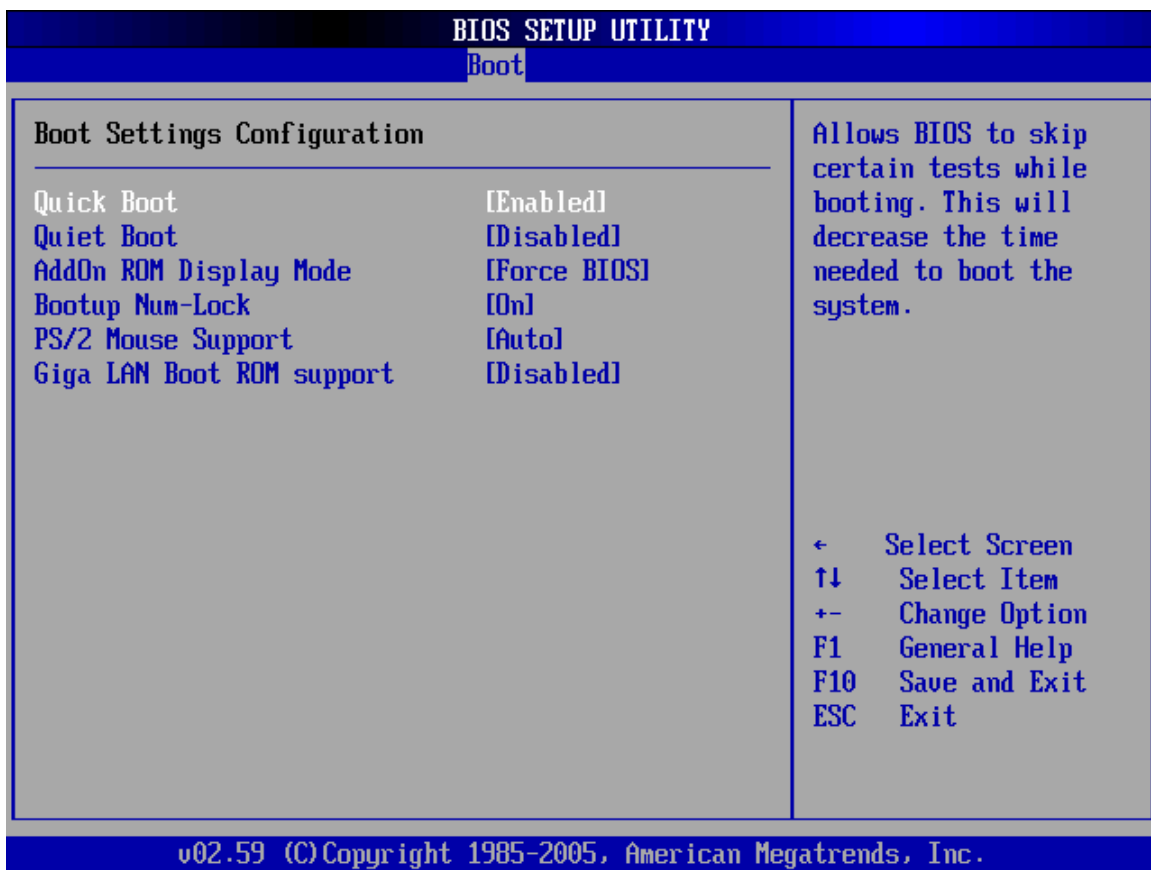

BIOS Menu 16: Boot Settings Configuration

→ Quick Boot [Enabled]

Use the **Quick Boot** BIOS option to make the computer speed up the boot process.

- **Disabled** No POST procedures are skipped
- **Enabled** **DEFAULT** Some POST procedures are skipped to decrease the system boot time

→ Quiet Boot [Disabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** **DEFAULT** Normal POST messages displayed
- **Enabled** OEM Logo displayed instead of POST messages

→ AddOn ROM Display Mode [Force BIOS]

Use the **AddOn ROM Display Mode** option to allow add-on ROM (read-only memory) messages to be displayed.

- Force BIOS** **DEFAULT** The system forces third party BIOS to display during system boot.
- Keep Current** The system displays normal information during system boot.

→ Bootup Num-Lock [On]

Use the **Bootup Num-Lock** BIOS option to specify if the number lock setting must be modified during boot up.

- Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.
- On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

→ PS/2 Mouse Support [Enabled]

Use the **PS/2 Mouse Support** option adjusts PS/2 mouse support capabilities.

- Disabled** PS/2 mouse support is disabled and prevented from using system resources.
- Enabled** **DEFAULT** Allows the system to use a PS/2 mouse.
- Auto** The system auto-adjusts PS/2 mouse support.

NANO-9452 EPIC Motherboard

→ Giga LAN Boot Support [Disabled]


Use the **Giga LAN Boot Support** option to enable the system to be booted from a remote system.

- **Disabled** (Default) Cannot be booted from a remote system through the LAN
- **Enabled** (Default) Can be booted from a remote system through the LAN

6.5.2 Boot Device Priority

Use the **Boot Device Priority** menu (**BIOS Menu 17**) to specify the boot sequence from the available devices. Possible boot devices may include:

- 1st FLOPPY DRIVE
- HDD
- CD/DVD

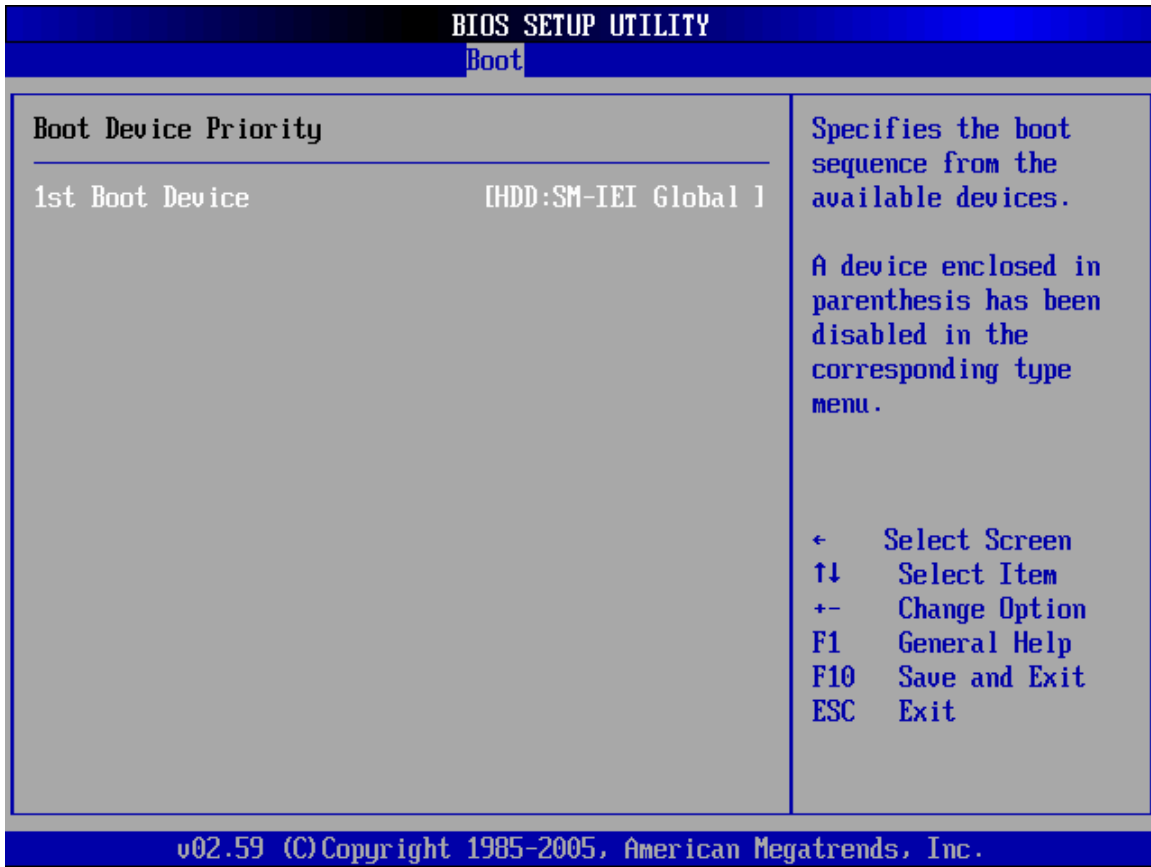

BIOS Menu 17: Boot Device Priority Settings

6.5.3 Hard Disk Drives

Use the **Hard Disk Drives** menu to specify the boot sequence of the available HDDs.

When the menu is opened, the HDDs connected to the system are listed as shown below:

- 1st Drive [HDD: PM-(part number)]
- 2nd Drive [HDD: PS-(part number)]
- 3rd Drive [HDD: SM-(part number)]
- 4th Drive [HDD: SM-(part number)]


NANO-9452 EPIC Motherboard



NOTE:

Only the drives connected to the system are shown. For example, if only two HDDs are connected only “1st Drive” and “2nd Drive” are listed.


The boot sequence from the available devices is selected. If the “1st Drive” option is selected a list of available HDDs is shown. Select the first HDD the system boots from. If the “1st Drive” is not used for booting this option may be disabled.

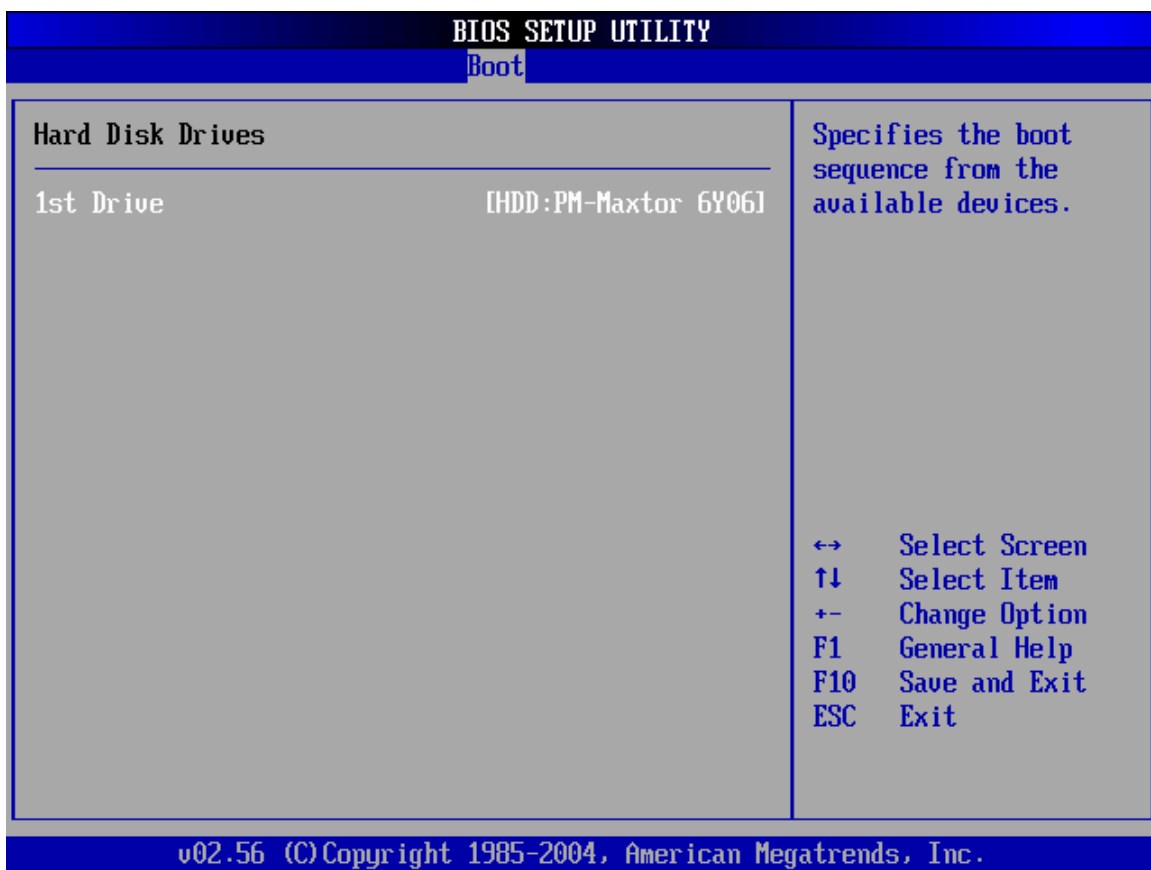

BIOS Menu 18: Hard Disk Drives

6.6 Security

Use the **Security** menu (**BIOS Menu 19**) to set system and user passwords.

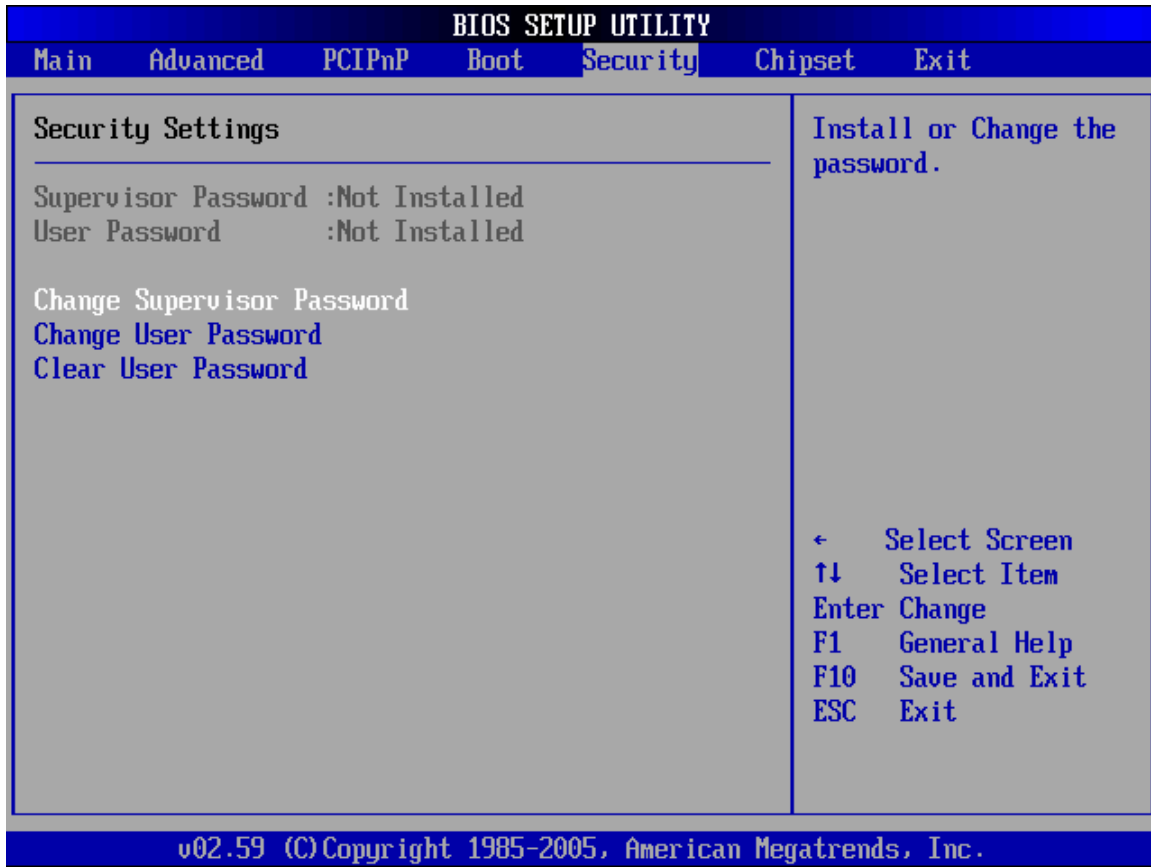

BIOS Menu 19: Security

→ Change Supervisor Password

Use the **Change Supervisor Password** to set or change a supervisor password. The default for this option is **Not Installed**. If a supervisor password must be installed, select this field and enter the password. After the password has been added, **Install** appears next to **Change Supervisor Password**.

→ Change User Password

Use the **Change User Password** to set or change a user password. The default for this option is **Not Installed**. If a user password must be installed, select this field and enter the

NANO-9452 EPIC Motherboard

password. After the password has been added, **Install** appears next to **Change User Password**.

6.7 Chipset

Use the **Chipset** menu (**BIOS Menu 20**) to access the Northbridge and Southbridge configuration menus.



WARNING:


Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.



BIOS Menu 20: Chipset

6.7.1 Northbridge Configuration

Use the **Northbridge Configuration** menu (**BIOS Menu 20**) to configure the Northbridge chipset.

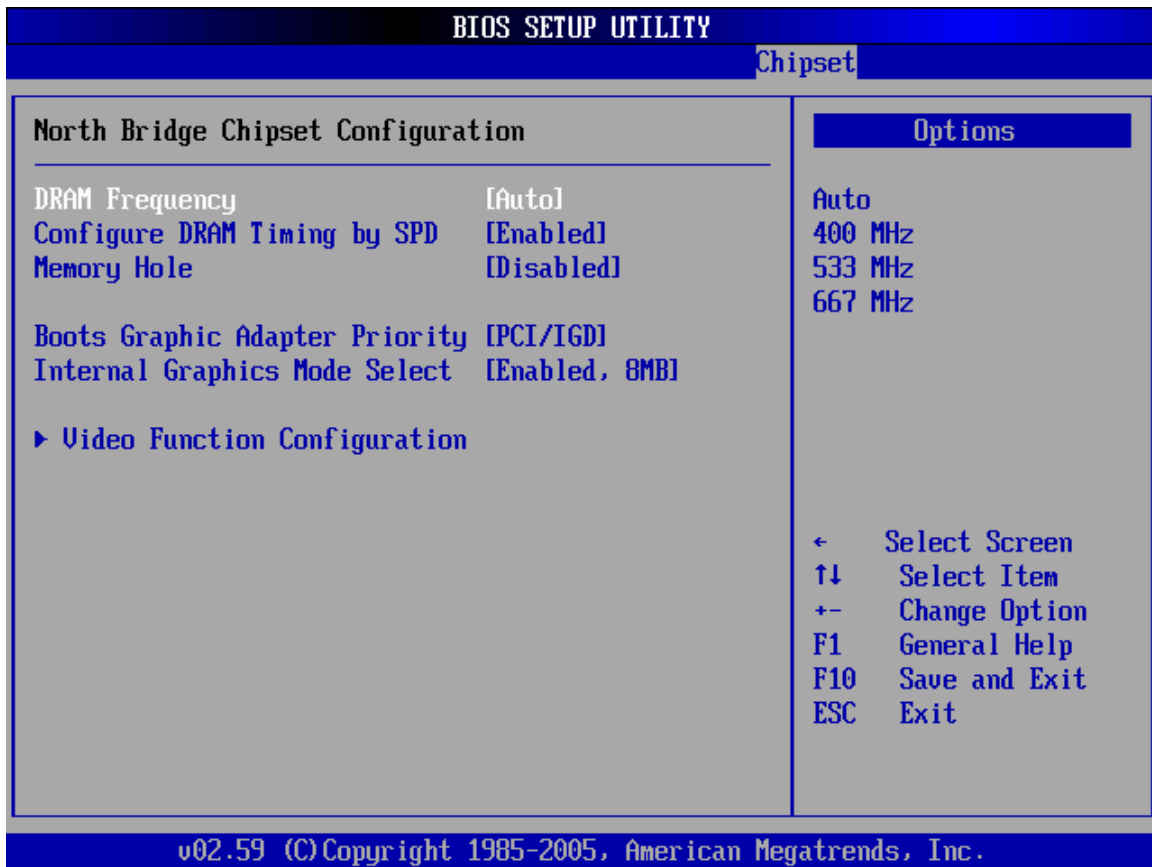

BIOS Menu 21:Northbridge Chipset Configuration

→ DRAM Frequency [Auto]

Use the **DRAM Frequency** option to specify the DRAM frequency or allow the system to automatically detect the DRAM frequency.

- **200MHz** Sets the DRAM frequency to 200MHz
- **266MHz** Sets the DRAM frequency to 266MHz
- **333MHz** Sets the DRAM frequency to 333MHz

NANO-9452 EPIC Motherboard

→ **Auto** **DEFAULT** Automatically selects the DRAM frequency

→ **Configure DRAM Timing by SPD [Enabled]**

Use the **Configure DRAM Timing by SPD** option to determine if the system uses the SPD (Serial Presence Detect) EEPROM to configure the DRAM timing. The SPD EEPROM contains all necessary DIMM specifications including the speed of the individual components such as CAS and bank cycle time as well as valid settings for the module and the manufacturer's code. The SPD enables the BIOS to read the spec sheet of the DIMMs on boot-up and then adjust the memory timing parameters accordingly.

→ **Disabled** DRAM timing parameters are manually set using the DRAM sub-items

→ **Enabled** **DEFAULT** DRAM timing parameter are set according to the DRAM Serial Presence Detect (SPD)

If the **Configure DRAM Timing by SPD** option is disabled, the following configuration options appear.

- DRAM CAS# Latency [3]
- DRAM RAS# to CAS# Delay [5 DRAM Clocks]
- DRAM RAS# Precharge [5 DRAM Clocks]
- DRAM RAS# Activate to Precharge [15 DRAM Clocks]

→ **DRAM CAS# Latency [3]**

Use the **CAS Latency Time** configuration option to set the Column Address Strobe (CAS) delay time. (To be able to change this configuration option the **DRAM Latency Timing** configuration option must be set to "**Manual**") The following configuration options are available

- 5 nanoseconds
- 4 nanoseconds
- 3 nanoseconds **DEFAULT**

→ DRAM RAS# to CAS# Delay [5 DRAM Clocks]

Use the **DRAM RAS# to CAS# Delay** option to specify the number of clock cycles must elapse between sending a RAS (row address strobe) signal and the CAS (column address strobe) signal. A pause is required between the RAS signal and the CAS signal to ensure the memory is correctly addressed. (To be able to change this configuration option the **Configure DRAM Timing by SPD** configuration option must be set to “**Disabled**”) Configuration options are listed below:

- 2 DRAM Clocks
- 3 DRAM Clocks
- 4 DRAM Clocks
- 5 DRAM Clocks **DEFAULT**

→ DRAM RAS# Precharge [3 DRAM Clocks]

Use the **DRAM RAS# Precharge** option to set the speed at which the RAM terminates the access of one row and start accessing another. (To be able to change this configuration option the **DRAM RAS# Precharge** configuration option must be set to “**Manual**”) The following configuration options are available

- 2 DRAM Clocks
- 3 DRAM Clocks
- 4 DRAM Clocks
- 5 DRAM Clocks

→ DRAM RAS# Activate to Precharge [15 DRAM Clocks]

Use the **DRAM RAS# Activate to Precharge** option to specify the length of the delay between the activation and precharge commands for the RAS signal. That is how long after activation can the access cycle be started again. This influences row activation time that is considered when memory has hit the last column in a specific row, or when an entirely different memory location is requested. (To be able to change this configuration option the **Configure DRAM Timing by SPD** configuration option must be set to “**Disabled**”) The following configuration options are available:

- 4 DRAM Clocks
- 5 DRAM Clocks

NANO-9452 EPIC Motherboard

- 6 DRAM Clocks
- 7 DRAM Clocks
- 8 DRAM Clocks
- 9 DRAM Clocks
- 10 DRAM Clocks
- 11 DRAM Clocks
- 12 DRAM Clocks
- 13 DRAM Clocks
- 14 DRAM Clocks
- 15 DRAM Clocks **DEFAULT**

→ DRAM CAS# Latency [By SPD]

Use the **DRAM CAS# Latency** option to set the CAS (Column Address Strobe) latency. The CAS latency is the number of clock cycles (or Ticks, denoted with T) between the receipt of a "read" command and when the RAM chip actually starts reading. The BIOS options are as follows:

- By SPD (Default)
- 2T
- 2.5T
- 3T

→ Memory Hole [Disabled]

Use the **Memory Hole** option to reserve memory space between 15MB and 16MB for ISA expansion cards that require a specified area of memory to work properly. If an older ISA expansion card is used, please refer to the documentation that came with the card to see if it is necessary to reserve the space.

- **Disabled** **DEFAULT** Memory is not reserved for ISA expansion cards
- **15MB – 16MB** Between 15MB and 16MB of memory is reserved for ISA expansion cards

→ Boots Graphics Adapter [PEG/PCI]

Use the **Boots Graphics Adapter** option to select the graphics controller used as the primary boot device. Select either an integrated graphics controller (IGD) or a combination of PCI graphics controller, a PCI express (PEG) controller or an IGD. Configuration options are listed below:

- IGD
- PEG/IGD
- PEG/PCI **DEFAULT**
- PCI/PEG
- PCI/IGD

→ Internal Graphics Mode Select [Enable, 8MB]

Use the **Internal Graphic Mode Select** option to specify the amount of system memory that can be used by the Internal graphics device.

- Disable**
- Enable, 1MB** 1MB of memory used by internal graphics device
- Enable, 8MB** **DEFAULT** 8MB of memory used by internal graphics device

NANO-9452 EPIC Motherboard

6.7.1.1 Video Function Configuration

Use the **Video Function Configuration** menu to configure the video device connected to the system.

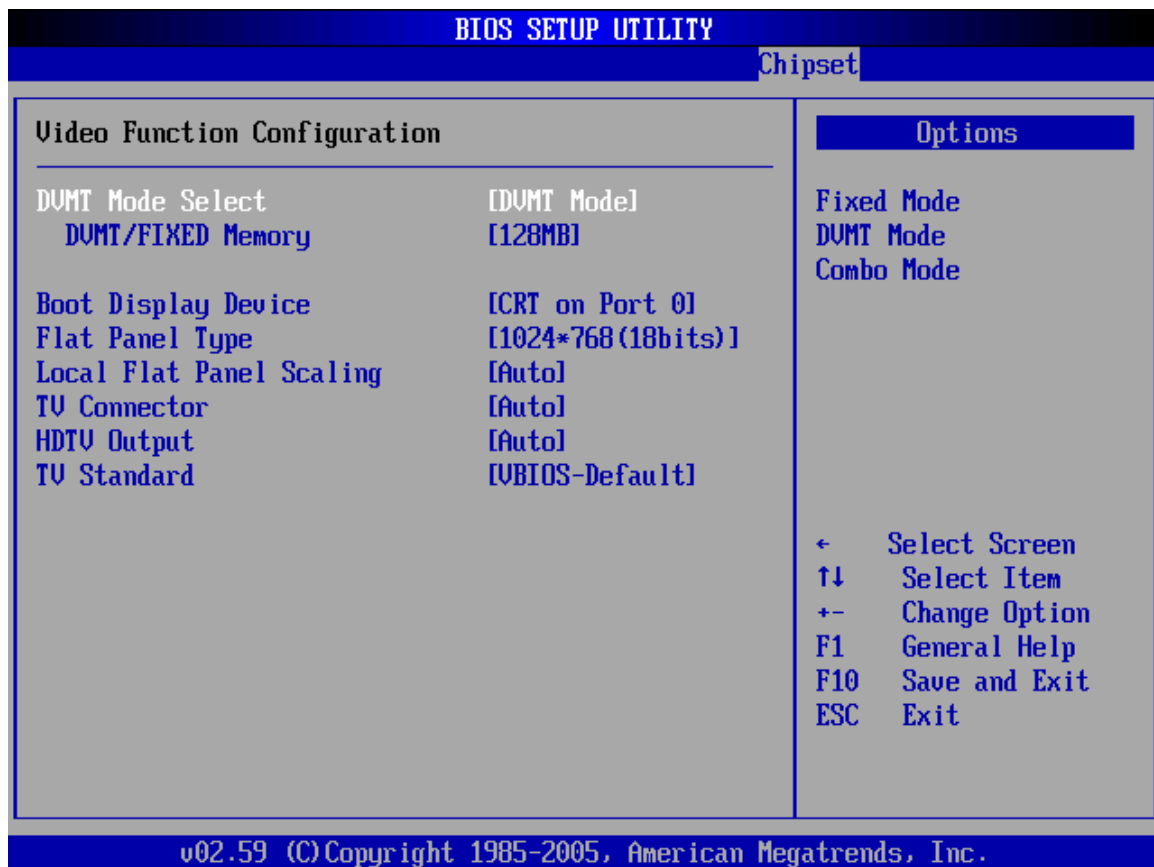


Figure 6-1: Video Function Configuration

➔ DVMT Mode Select [DVMT Mode]

Use the **DVMT Mode Select** option to select the Intel® Dynamic Video Memory Technology (DVMT) operating mode.

- ➔ **Fixed Mode** A fixed portion of graphics memory is reserved as graphics memory.
- ➔ **DVMT Mode** **DEFAULT** Graphics memory is dynamically allocated according to the system and graphics needs.

→ **Combo Mode**

A fixed portion of graphics memory is reserved as graphics memory. If more memory is needed, graphics memory is dynamically allocated according to the system and graphics needs.

→ **DVMT/FIXED Memory**

Use the **DVMT/FIXED Memory** option to specify the maximum amount of memory that can be allocated as graphics memory. This option can only be configured for if **DVMT Mode** or **Fixed Mode** is selected in the **DVMT Mode Select** option. If **Combo Mode** is selected, the maximum amount of graphics memory is 128MB. Configuration options are listed below.

- 64MB
- 128MB **DEFAULT**

→ **Boot Display Device**

Use the **Boot Display Device** option to select the display device used by the system when it boots. Configuration options are listed below.

- Auto
- CRT on Port 0 **DEFAULT**
- LFP on Port 2
- LFP on Port 3
- DFP on Port 2
- DFP on Port 3
- TV on Port 2
- TV on Port 3

→ **Flat Panel Type [Type 1]**

Use the **Flat Panel Type** option to select the type of flat panel connected to the system. Configuration options are listed below.

- Type 1
- Type 2

NANO-9452 EPIC Motherboard

- Type 3
- Type 4
- Type 5
- Type 6
- Type 7
- Type 8
- Type 9

→ Local Flat Panel Scaling [Auto]

Use the **Local Flat Panel Scaling** option to select the method of scaling for the flat panel screen attached to the system.

- | | | | |
|---|-----------------------|----------------|----------------------|
| → | Auto | DEFAULT | Scaling is automatic |
| → | Forced Scaling | | Scaling is forced |
| → | Disabled | | Scaling is disabled |

→ TV Connector [Auto]

Use the **TC Connector** option to select the connector that is used to connect the system to the television. The configuration options are listed below.

- | | | |
|---|-----------------------|----------------|
| ▪ | Auto | DEFAULT |
| ▪ | Composite | |
| ▪ | Component | |
| ▪ | Composite & RGB | |
| ▪ | S-Video | |
| ▪ | SCART Composite | |
| ▪ | SCART Compos. & RGB | |
| ▪ | SCART Compos. & S-Vdo | |
| ▪ | SMPTE253 Compon. RGB | |

→ HDTV Output [Auto]

Use the **HDTV Output** option to select the number of vertical lines in each frame, the method the HDTV connected to the system scans and the frequency of the frames.

The two scanning types can be selected interlaced (i) or progressive (p). Interlaced scanning divides and presents each video frame as two fields. The first field presents the odd lines and the second field presents the even lines. In progressive scanning, the image is refreshed from top to bottom, one line after the other.

Configuration options are listed below:

Option	Scan Type	Vertical Lines	Frame Frequency
Auto	Auto	Auto	Auto
480i60	Interlaced	240 per field (480 per frame)	60 frames per second
480p60	Progressive	480 per frame	60 frames per second
576i50	Interlaced	283 per field (576 per frame)	50 frames per second
576p50	Progressive	576 per frame	50 frames per second
720p60	Progressive	720 per frame	60 frames per second
1080i50	Interlaced	540 per field (1080 per frame)	50 frames per second
1080i60	Interlaced	540 per field (1080 per frame)	60 frames per second
1080p24	Progressive	1080 per frame	24 frames per second

➔ **TV Standard [Auto]**


Use the **TV Standard** option to select the standard of the television connected to the system. The configuration options are listed below.

- VBIOS-Default **DEFAULT**
- NTSC
- PAL
- SECAM
- SMPTE295M
- ITU-R television
- SMPTE295M
- SMPTE296M
- ETA-770.2

NANO-9452 EPIC Motherboard

6.7.2 Southbridge Chipset Configuration

The **Southbridge Chipset Configuration** menu (**BIOS Menu 22**) the Southbridge chipset to be configured.

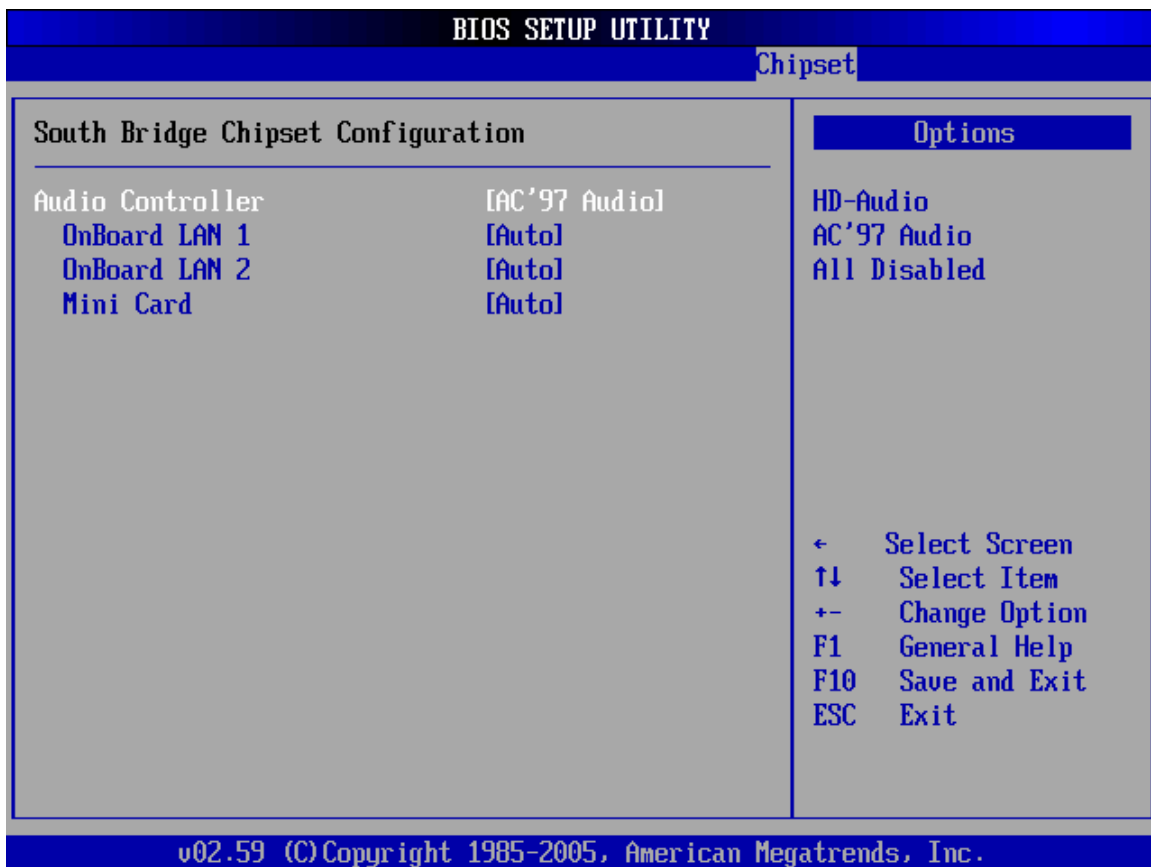

BIOS Menu 22:Southbridge Chipset Configuration

→ Audio Controller [AC'97 Audio]

The **Audio Controller** option allows selection of the audio controller to use.

- **Azalia** DEFAULT The Intel® High Definition Audio controller is enabled
- **AC'97 Audio** The on-board AC'97 controller is enabled
- **All Disabled** All audio controllers are disabled

→ OnBoard LAN1 [Auto]

The **OnBoard LAN1** option enables or disables the on-board LAN1.

- Auto** DEFAULT The on-board LAN1 controller is automatically detected and enabled
- Enabled** The on-board LAN1 controller is manually enabled
- Disabled** The on-board LAN1 controller is manually disabled

→ On-board LAN2 [Auto]

The **On-board LAN2** option enables or disables the on-board LAN2.

- Auto** DEFAULT The on-board LAN2 controller is automatically detected and enabled
- Enabled** The on-board LAN2 controller is manually enabled
- Disabled** The on-board LAN2 controller is manually disabled

→ Mini Card [Auto]


The **Mini Card** option enables or disables the PCI Express Mini Card.

- Auto** DEFAULT The PCI Express Mini Card is automatically detected and enabled
- Enabled** The PCI Express Mini Card is manually enabled
- Disabled** The PCI Express Mini Card is manually disabled

NANO-9452 EPIC Motherboard

6.8 Exit

Use the **Exit** menu (**BIOS Menu 23**) to load default BIOS values, optimal failsafe values and to save configuration changes.

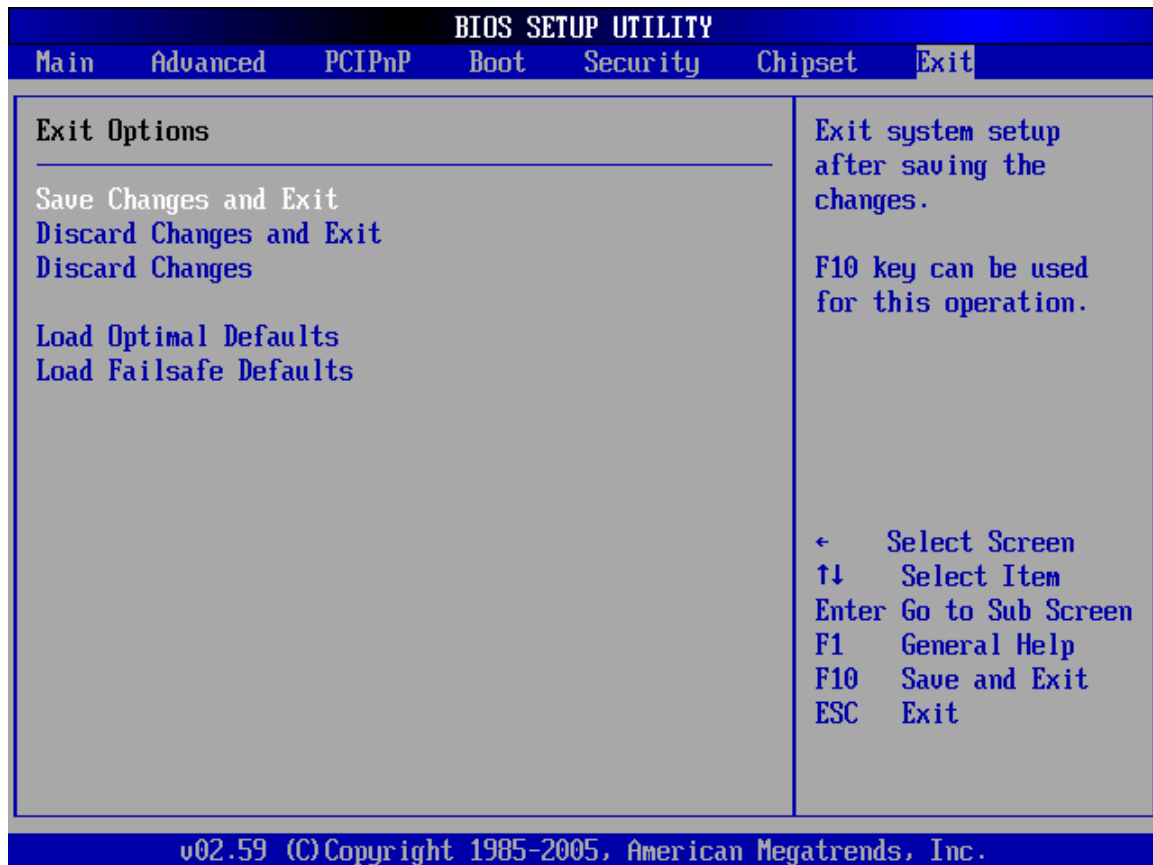

BIOS Menu 23:Exit

→ Save Changes and Exit

Use the **Save Changes and Exit** option to save the changes made to the BIOS options and to exit the BIOS configuration setup program.

→ Discard Changes and Exit

Use the **Discard Changes and Exit** option to exit the BIOS configuration setup program without saving the changes made to the system.

→ **Discard Changes**

Use the **Discard Changes** option to discard the changes and remain in the BIOS configuration setup program.

→ **Load Optimal Defaults**

Use the **Load Optimal Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F9 key can be used for this operation.**

→ **Load Failsafe Defaults**

Use the Load Failsafe Defaults option to load failsafe default values for each of the parameters on the Setup menus. F8 key can be used for this operation.

Chapter

7

Driver Installation

7.1 Available Software Drivers



NOTE:

The content of the CD may vary throughout the life cycle of the product and is subject to change without prior notice. You may visit the IEI website or contact technical support for the latest updates.

The following drivers can be installed on the system.

- Chipset driver
- VGA driver
- LAN driver

Installation instructions are given below.

7.2 Driver CD Auto-run

All the drivers for the NANO-9452 are on the CD that came with the system. To install the drivers, please follow the steps below.

Step 1: Insert the CD into a CD drive connected to the system.

Step 2: The starts up automatically

Step 3: Select NANO-9452 from the initial menu shown in **Figure 7-1**.

NANO-9452 EPIC Motherboard

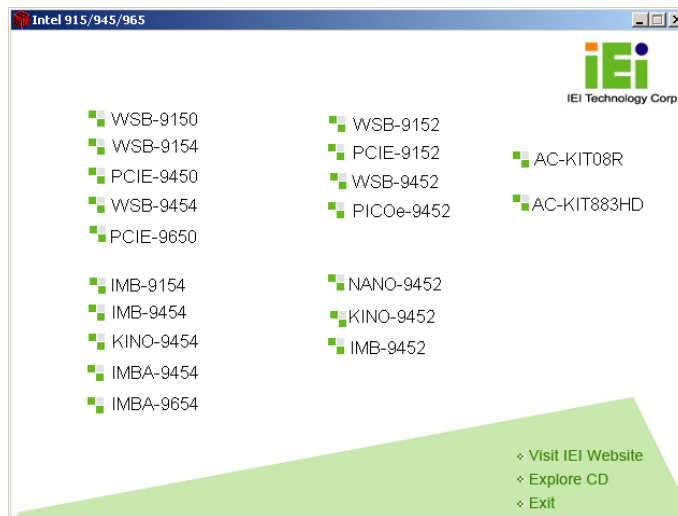


Figure 7-1: Introduction Screen

Step 4: A new screen with a list of available drivers appears (**Figure 7-2**).



Figure 7-2: Available Drivers

Step 5: Select the driver to install from the list in **Figure 7-2**.

7.3 Chipset Driver Installation

To install the chipset driver, please follow the steps below:

Step 1: Select the INF driver from the list in **Figure 7-2**.

Step 2: A new window opens (Figure 7-3).

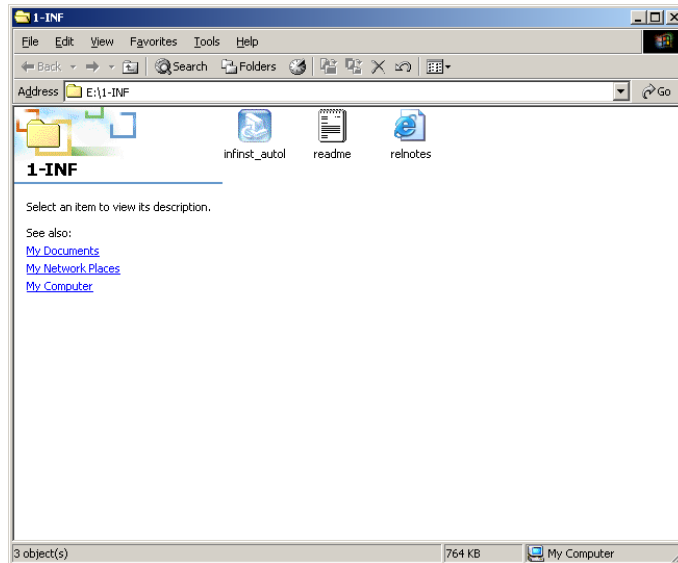


Figure 7-3: Chipset Driver Installation Program

Step 3: Double click the `infinst_Autol` icon in Figure 7-3.

Step 4: The welcome screen in Figure 7-4 appears.

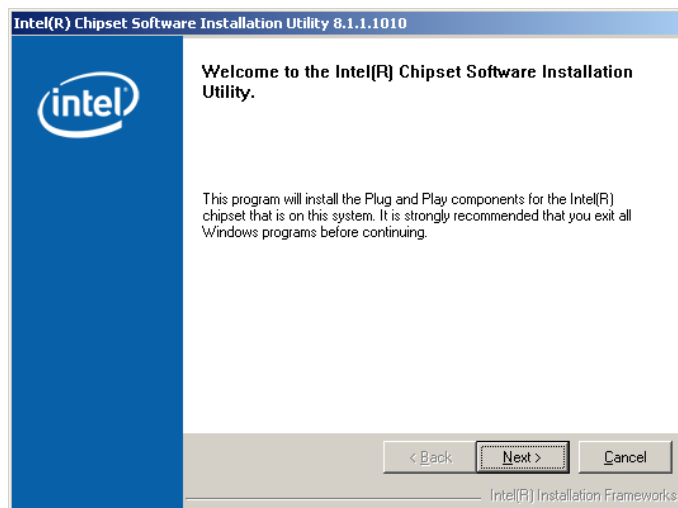


Figure 7-4: Chipset Driver Installation Welcome Screen

Step 5: Click **NEXT** in Figure 7-4 to continue the installation process.

Step 6: The license agreement in Figure 7-5 appears.

NANO-9452 EPIC Motherboard

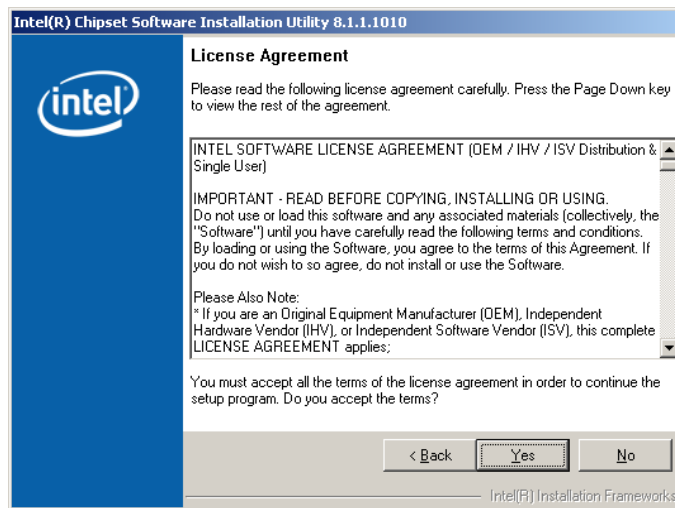


Figure 7-5: Chipset Driver Installation License Agreement

Step 7: Click **YES** to continue the setup.

Step 8: The Readme file in **Figure 7-6** appears.

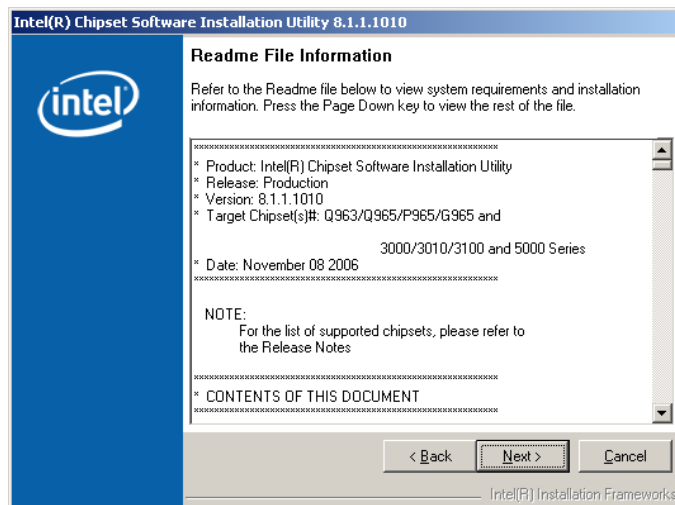


Figure 7-6: Chipset Driver Readme File Information

Step 9: Click **NEXT** in **Figure 7-6** to start the driver installation.

Step 10: After the driver installation process is complete, a confirmation screen (**Figure 7-7**) appears.

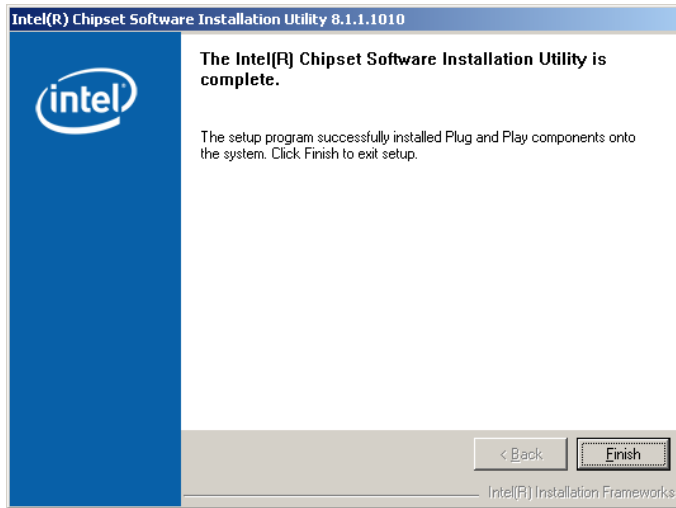


Figure 7-7: Chipset Driver Installation Complete

7.4 Intel® Graphics Media Accelerator Driver

To install the chipset driver, please follow the steps below:

Step 1: Select the VGA driver from the list in **Figure 7-2**.

Step 2: A new window opens (**Figure 7-8**).

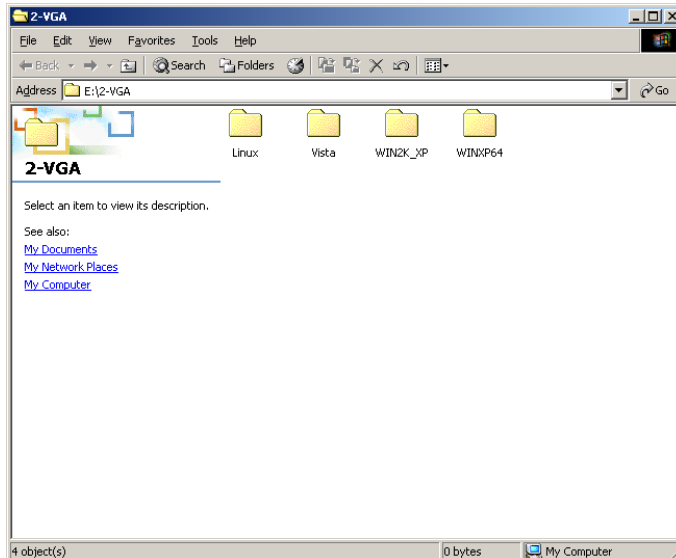


Figure 7-8: Select the Operating System

Step 3: Select the operating system from those shown in **Figure 7-8**.

NANO-9452 EPIC Motherboard

Step 4: A new window appears (**Figure 7-9**).

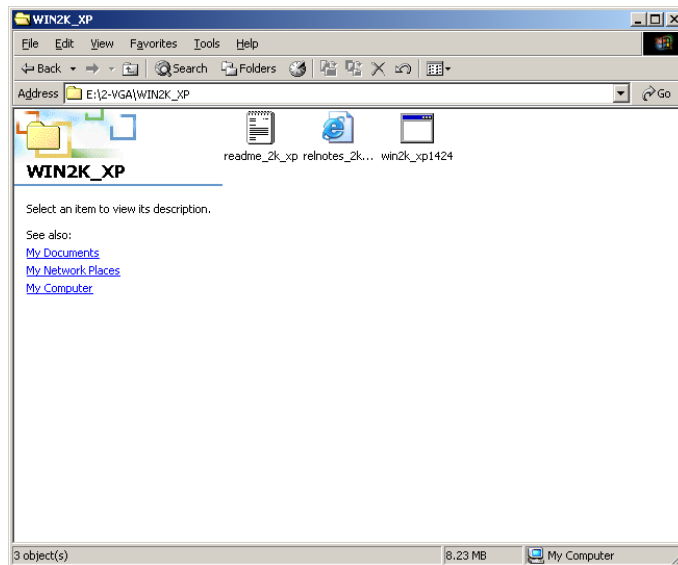


Figure 7-9: VGA Driver

Step 5: Click the installation program icon in **Figure 7-9**.

Step 6: The Readme information file shown in **Figure 7-10** appears.

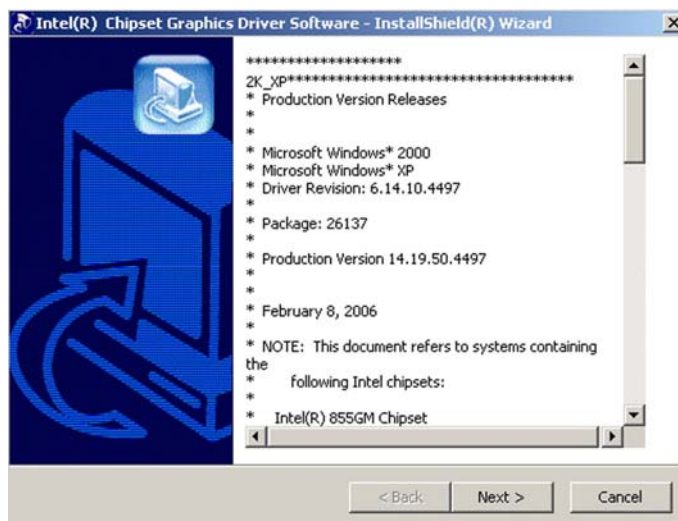


Figure 7-10: GMA Driver Readme File

Step 7: Click **NEXT** to extract the GMA driver files. See **Figure 7-11**.

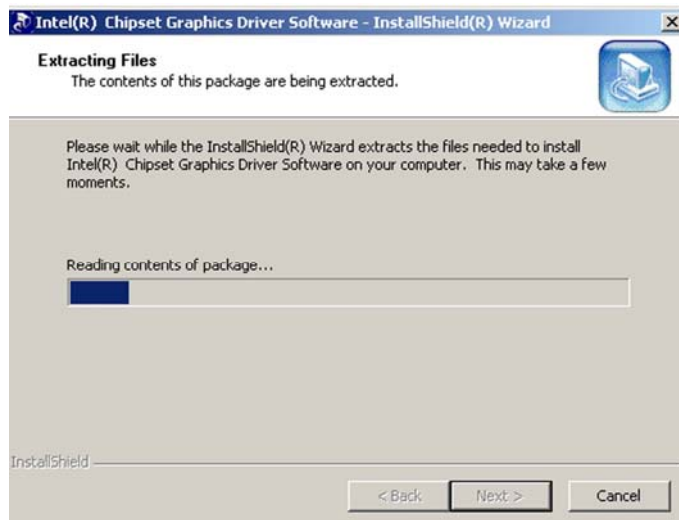


Figure 7-11: GMA Driver File Extraction

Step 8: The welcome screen shown in **Figure 7-12** appears.

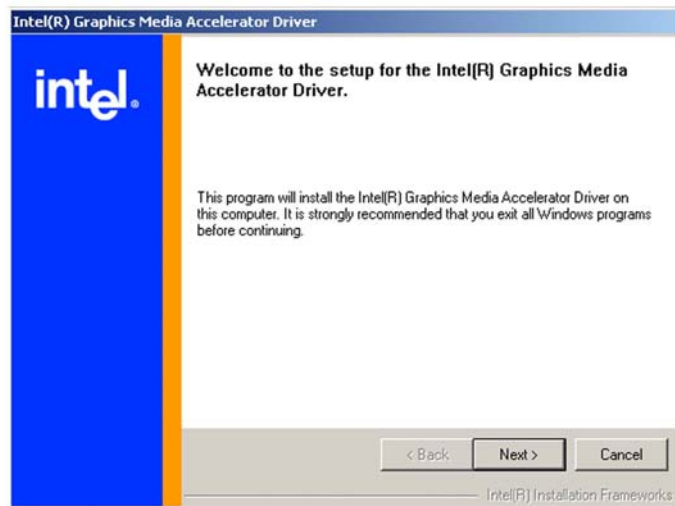


Figure 7-12: GMA Driver Installation Welcome Screen

Step 9: To continue the installation process, click **NEXT**.

Step 10: The license agreement in **Figure 7-13** appears.

NANO-9452 EPIC Motherboard

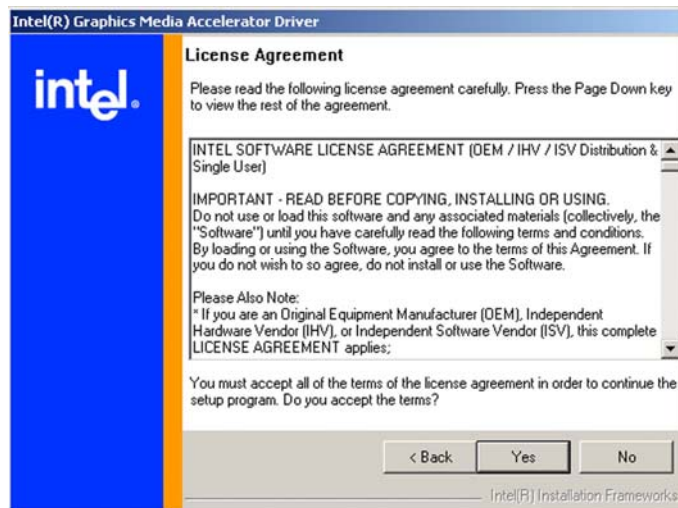


Figure 7-13: GMA Driver License Agreement

Step 11: Click the **YES** in **Figure 7-13** to continue.

Step 12: The installation notice shown in **Figure 7-14** appears.



Figure 7-14: GMA Driver Installing Notice

Step 13: A confirmation screen shown in **Figure 7-15** appears.

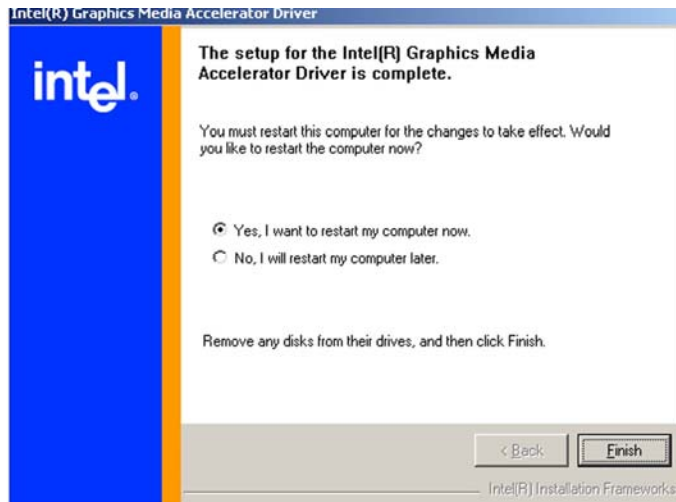


Figure 7-15: GMA Driver Installation Complete

Step 14: After selecting when to restart the computer in **Figure 7-15**, click **FINISH**.

7.5 Realtek LAN Driver (for GbE LAN) Installation

To install the Realtek LAN driver, please follow the steps below.

Step 1: Open **Windows Control Panel** (**Figure 7-16**).

NANO-9452 EPIC Motherboard

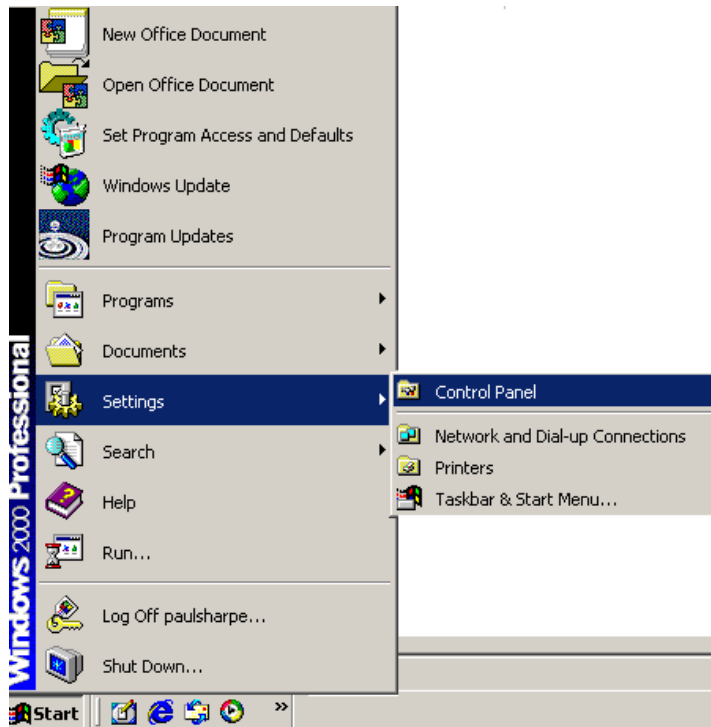


Figure 7-16: Access Windows Control Panel

Step 2: Double click the **System** icon (Figure 7-17).

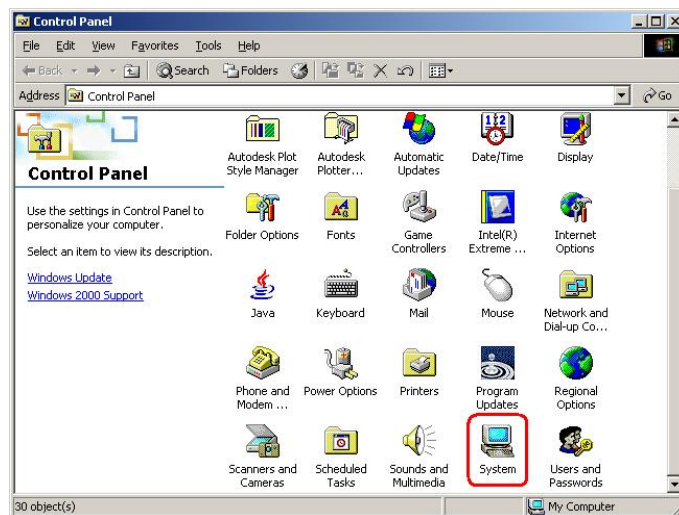


Figure 7-17: Double Click the System Icon

Step 3: Double click the **Device Manager** tab (Figure 7-18).

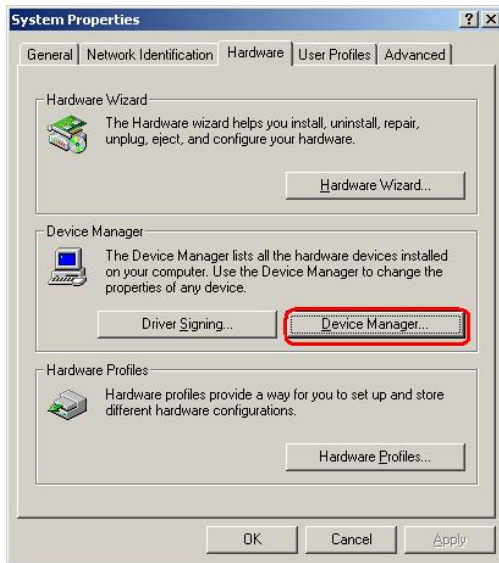


Figure 7-18: Double Click the Device Manager Tab

Step 4: A list of system hardware devices appears (Figure 7-19).

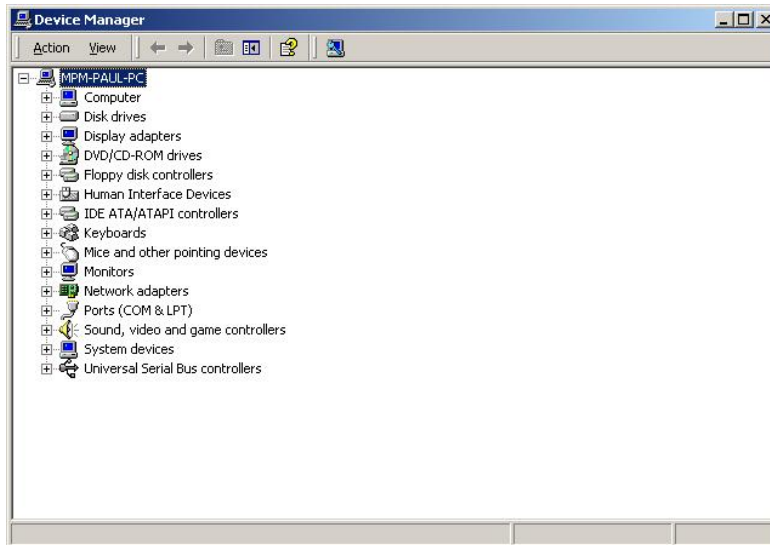


Figure 7-19: Device Manager List

Step 5: Double click the listed device that has question marks next to it. (This means Windows does not recognize the device).

Step 6: The **Device Driver Wizard** appears (Figure 7-20). Click **NEXT** to continue.

NANO-9452 EPIC Motherboard



Figure 7-20: Search for Suitable Driver

Step 7: Select “Specify a Location” in the Locate Driver Files window (Figure 7-21).

Click **NEXT** to continue.



Figure 7-21: Locate Driver Files

Step 8: Select the proper OS folder in the directory.

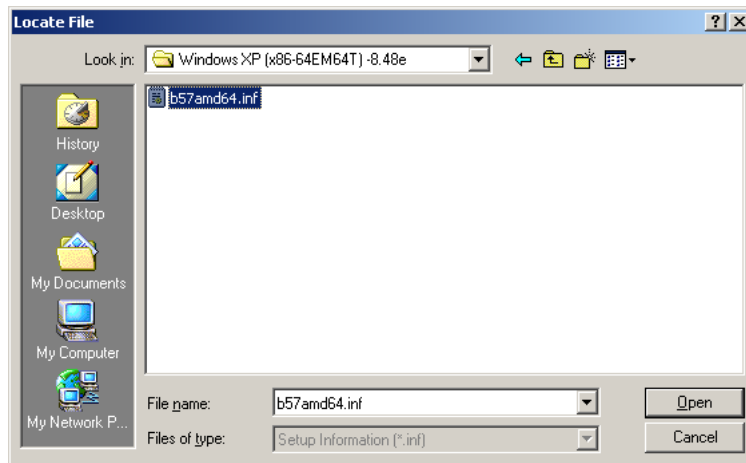


Figure 7-22: Location Browsing Window

Step 9: Click **OK** to continue. A driver files location menu window appears. Click **NEXT** to continue. The driver is installed.

7.6 Realtek HD Audio Driver (ALC883) Installation

To install the Realtek High Definition (HD) Audio driver, please follow the steps below.

7.6.1 BIOS Setup

Step 1: Enter the BIOS setup. To do this, reboot the system and press **DEL** during POST.

Step 2: Go to the Southbridge Configuration menu. Set the **Audio Controller** option to [Azalia]. See **Chapter 6** for details.

Step 3: Press **F10** to save the changes and exit the BIOS setup. The system reboots.

7.6.2 Driver Installation

Step 1: Insert the CD that came with the package.

Step 2: From the main driver menu, navigate to **X:\4-AUDIO\AC-KIT883HD\Windows** (or other appropriate OS). **X:** represents the system CD drive. A new window appears showing the folder contents (**Figure 6-26**).

NANO-9452 EPIC Motherboard

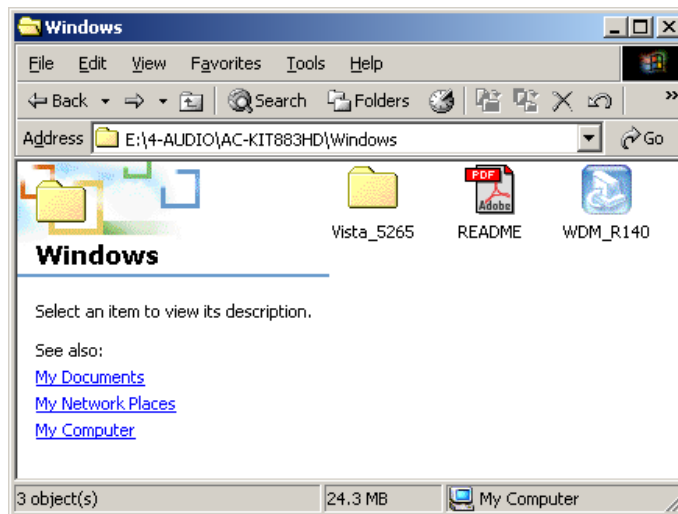


Figure 7-23: 4-AUDIO\AC-KIT883HD\Windows Folder

Step 3: Double-click the **WDM_R140** icon to begin the driver installation process.

Step 4: Once the **WDM_R140** icon is double clicked, the contents of the installation package are extracted. See **Figure 7-24**.

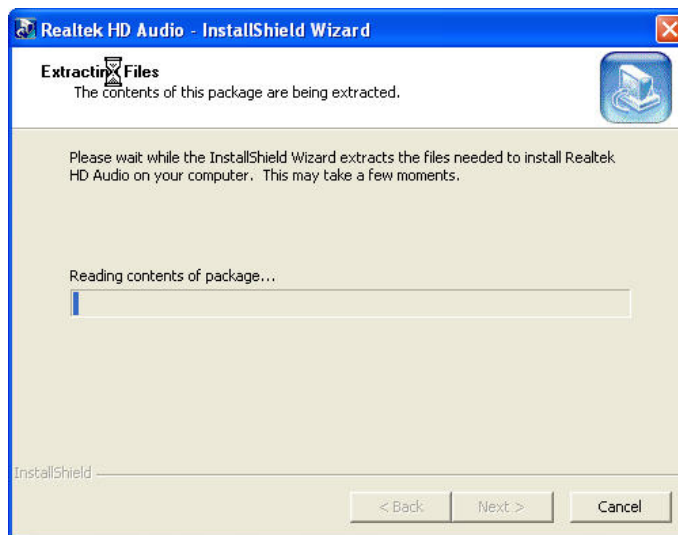


Figure 7-24: HD Audio Driver Setup Extracting Files

Step 5: The **Welcome** screen appears. Click **NEXT**. See **Figure 7-25**.

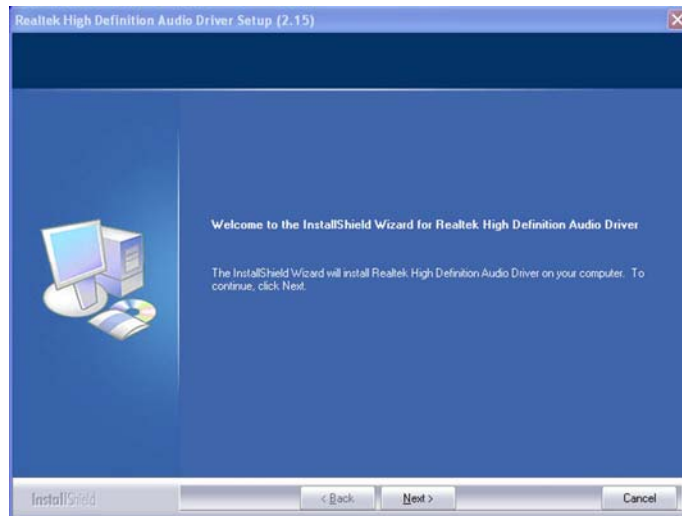


Figure 7-25: HD Audio Driver Setup Welcome Screen

Step 6: The driver is automatically installed.

Step 7: After the driver installation process is complete, a confirmation screen shown in **Figure 7-26** appears.

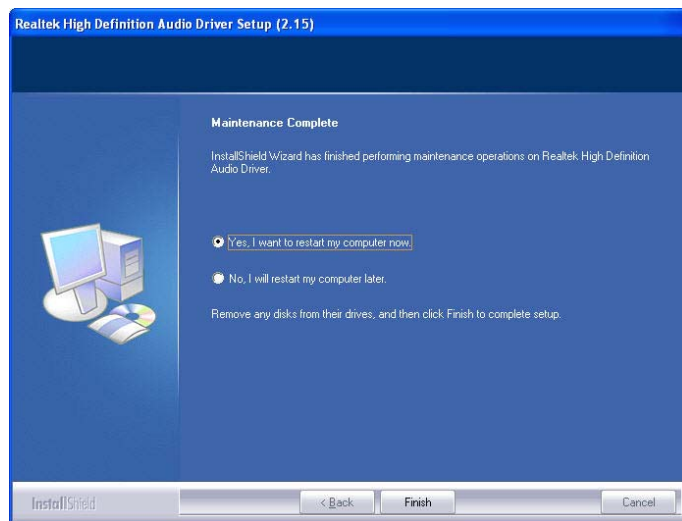


Figure 7-26: HD Audio Driver Installation Complete

Step 8: The confirmation screen shown in **Figure 7-26** allows you to restart the computer immediately after the installation is complete or to restart the computer later. For the settings to take effect the computer must be restarted. Once you have decided when to restart the computer, click the “Finish” button.

NANO-9452 EPIC Motherboard

7.7 Realtek AC`97 Audio Driver (ALC665) Installation

To install the Realtek AC`97 audio driver, please follow the steps below.

7.7.1 BIOS Setup

- Step 1:** Enter the BIOS setup. To do this, reboot the system and press **DEL** during POST.
- Step 2:** Go to the Southbridge Configuration menu. Set the **Audio Controller** option to [AC`97]. See **Section** Error! Reference source not found. for details.
- Step 3:** Press **F10** to save the changes and exit the BIOS setup. The system reboots.

7.7.2 Driver Installation

- Step 1:** Insert the CD that came with the package.
- Step 2:** From the main driver menu, navigate to **X:\4-AUDIO\AC-KIT08R\Windows** (or other appropriate OS). **X:** represents the system CD drive. A new window appears showing the folder contents (**Figure 7-27**).

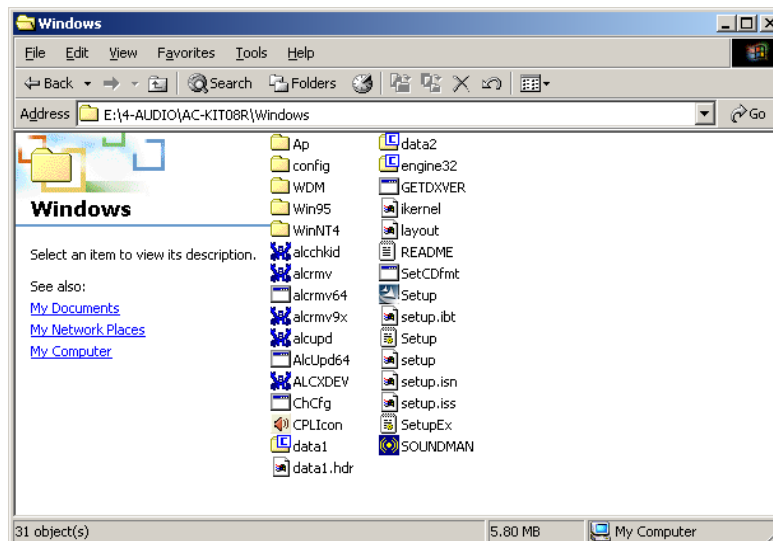


Figure 7-27: CD 4-AUDIO\AC-KIT08R\Windows Folder

- Step 3:** Double-click the **Setup.exe** file to begin the driver installation process.

Step 4: Once you double click the **Setup** icon, the install shield wizard for the audio driver starts. See **Figure 7-28**.



Figure 7-28: AC`97 Audio Driver Install Shield Wizard Starting

Step 5: The Realtek Audio Setup prepares the install shield to guide you through the rest of the setup process. See **Figure 7-25**.

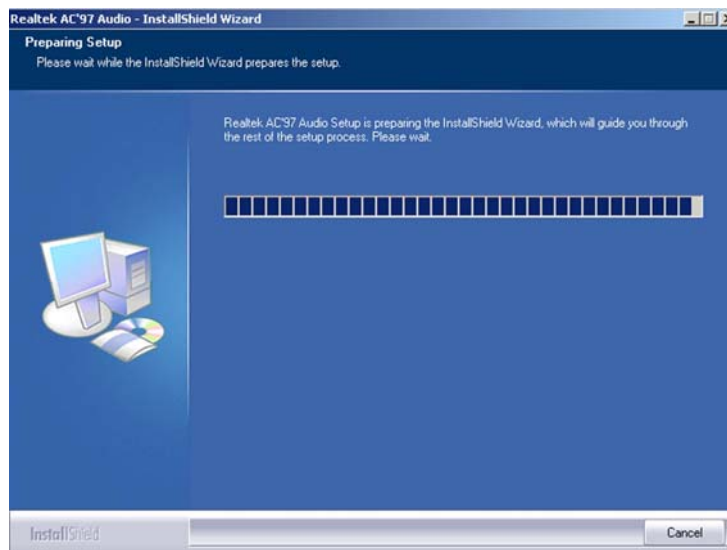


Figure 7-29: AC`97 Audio Driver Setup Preparation

Step 6: After the install shield is prepared, the welcome screen shown in **Figure 7-30** appears. To continue the installation process, click the **"NEXT"** button. The install shield starts to configure the new software as shown in Error! Reference source not found..

NANO-9452 EPIC Motherboard

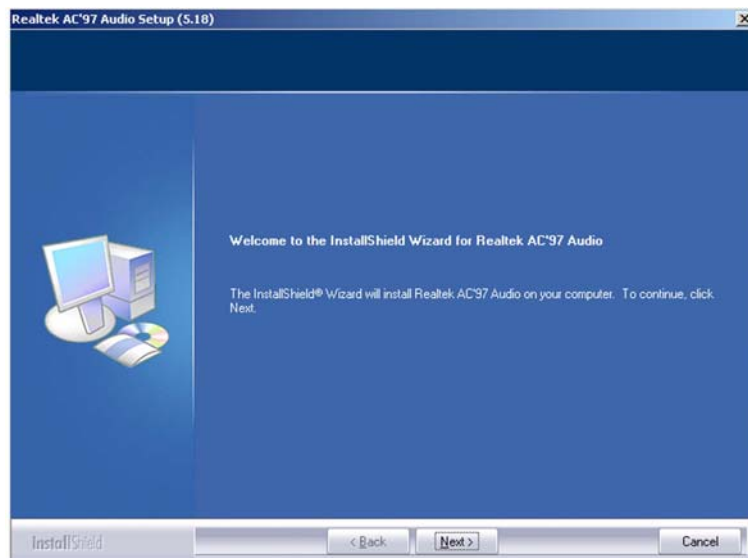


Figure 7-30: AC`97 Audio Driver Welcome Screen

Step 7: At this stage the “Digital Signal Not Found” screen appears (Figure 7-31). To continue the installation process, click the “YES” button.



Figure 7-31: AC`97 Audio Driver Digital Signal

Step 8: After clicking the “Yes” button in Figure 7-31, the installation of the driver begins (Figure 7-32).

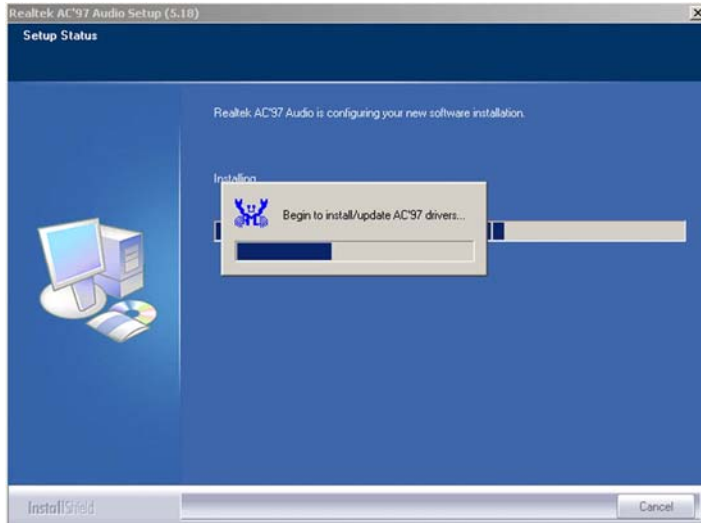


Figure 7-32: AC`97 Audio Driver Installation Begins

Step 9: After the driver installation process is complete, a confirmation screen shown in **Figure 7-33** appears.

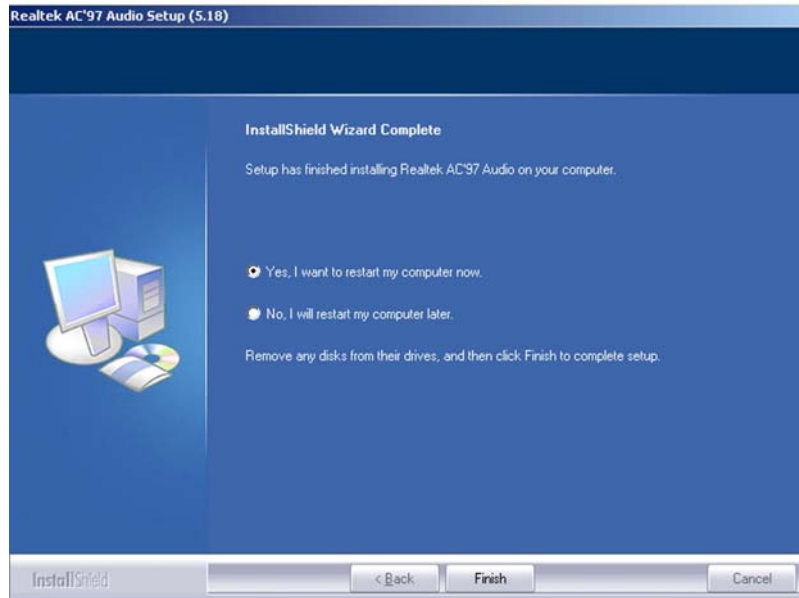


Figure 7-33: AC`97 Audio Driver Installation Complete

Step 10: The confirmation screen shown in **Figure 7-33** allows you to restart the computer immediately after the installation is complete or to restart the computer

NANO-9452 EPIC Motherboard

later. For the settings to take effect the computer must be restarted. Once you have decided when to restart the computer, click the **“FINISH”** button.

Appendix

A

BIOS Options

NANO-9452 EPIC Motherboard

Below is a list of BIOS configuration options in the BIOS chapter.

System Overview	94
System Time [xx:xx:xx]	95
System Date [xx/xx/xx]	95
ATA/IDE Configurations [Compatible]	98
Legacy IDE Channels [PATA Pri, SATA Sec]	99
IDE Master and IDE Slave	99
Auto-Detected Drive Parameters	100
Type [Auto]	101
ZIP	101
LS-120	101
LBA/Large Mode [Auto]	102
Block (Multi Sector Transfer) [Auto]	102
PIO Mode [Auto]	102
DMA Mode [Auto]	103
S.M.A.R.T [Auto]	104
32Bit Data Transfer [Enabled]	104
OnBoard Floppy Controller [Enabled]	105
Floppy Drive Swap [Disabled]	105
Serial Port1 Address [3F8/IRQ4]	106
Serial Port1 Mode [Normal]	106
Serial Port2 Address [2F8/IRQ3]	106
Serial Port2 Mode [Normal]	107
Parallel Port Address [Disabled]	107
Parallel Port Mode [Normal]	107
Parallel Port IRQ [IRQ7]	108
Serial Port3 Address [3E8]	108
Serial Port3 IRQ [11]	108
Serial Port4 Address [2E8]	109
Serial Port4 IRQ [10]	109
Hardware Health Monitoring	110
ACPI Aware O/S [Yes]	111
Suspend Mode [S1(POS)]	112
Repost Video on S3 Resume [No]	113

Power Management/APM [Enabled].....	114
Restore on AC Power Loss [Power Off]	115
Power Button Mode [On/Off].....	115
Resume on Ring [Disabled]	115
Resume on PME# [Disabled]	115
Resume On RTC Alarm [Disabled].....	116
RTC Alarm Date (Days).....	116
System Time	116
MPS Revision [1.4].....	117
Remote Access [Disabled].....	118
Serial Port Number	119
Serial Port Mode.....	119
Flow Control	119
Redirection after BIOS POST.....	119
Terminal Type.....	119
VT-UTF8 Combo Key Support	119
Serial Port Number [COM1].....	119
Base Address, IRQ [2F8h,3].....	119
Serial Port Mode [115200 8,n,1].....	119
Flow Control [None].....	120
Redirection After BIOS POST [Always]	120
Terminal Type [ANSI].....	120
VT-UTF8 Combo Key Support [Disabled].....	121
Sredir Memory Display Delay [Disabled].....	121
USB Function [6 USB ports]	122
USB 2.0 Controller [Enabled].....	123
Legacy USB Support [Enabled].....	123
USB2.0 Controller Mode [HiSpeed].....	123
BIOS EHCI Handoff	123
Clear NVRAM [No].....	126
Plug & Play O/S [No].....	126
PCI Latency Timer [64]	126
Allocate IRQ to PCI VGA [Yes].....	127
Palette Snooping [Disabled]	127
PCI IDE BusMaster [Disabled]	127

NANO-9452 EPIC Motherboard

OffBoard PCI/ISA IDE Card [Auto]	127
IRQ# [Available].....	128
DMA Channel# [Available]	129
Reserved Memory Size [Disabled]	129
Quick Boot [Enabled]	131
Quiet Boot [Disabled]	131
AddOn ROM Display Mode [Force BIOS]	132
Bootup Num-Lock [On]	132
PS/2 Mouse Support [Enabled].....	132
Giga LAN Boot Support [Disabled]	133
Change Supervisor Password	136
Change User Password.....	136
DRAM Frequency [Auto]	138
Configure DRAM Timing by SPD [Enabled]	139
DRAM CAS# Latency [3].....	139
DRAM RAS# to CAS# Delay [5 DRAM Clocks].....	140
DRAM RAS# Precharge [3 DRAM Clocks].....	140
DRAM RAS# Activate to Precharge [15 DRAM Clocks]	140
DRAM CAS# Latency [By SPD].....	141
Memory Hole [Disabled].....	141
Boots Graphics Adapter [PEG/PCI]	142
Internal Graphics Mode Select [Enable, 8MB]	142
DVMT Mode Select [DVMT Mode].....	143
DVMT/FIXED Memory	144
Boot Display Device	144
Flat Panel Type [Type 1].....	144
Local Flat Panel Scaling [Auto]	145
TV Connector [Auto].....	145
HDTV Output [Auto].....	145
TV Standard [Auto]	146
Audio Controller [AC`97 Audio]	147
OnBoard LAN1 [Auto].....	148
On-board LAN2 [Auto].....	148
Mini Card [Auto].....	148
Save Changes and Exit	149



Discard Changes and Exit.....	149
Discard Changes.....	150
Load Optimal Defaults.....	150
Load Failsafe Defaults.....	150

Appendix

B

Terminology

AC '97	Audio Codec 97 (AC'97) refers to a codec standard developed by Intel® in 1997.
ACPI	Advanced Configuration and Power Interface (ACPI) is an OS-directed configuration, power management, and thermal management interface.
AHCI	Advanced Host Controller Interface (AHCI) is a SATA Host controller register-level interface.
ATA	The Advanced Technology Attachment (ATA) interface connects storage devices including hard disks and CD-ROM drives to a computer.
ARMD	An ATAPI Removable Media Device (ARMD) is any ATAPI device that supports removable media, besides CD and DVD drives.
ASKIR	Amplitude Shift Keyed Infrared (ASKIR) is a form of modulation that represents a digital signal by varying the amplitude ("volume") of the signal. A low amplitude signal represents a binary 0, while a high amplitude signal represents a binary 1.
BIOS	The Basic Input/Output System (BIOS) is firmware that is first run when the computer is turned on and can be configured by the end user
CODEC	The Compressor-Decompressor (CODEC) encodes and decodes digital audio data on the system.
CompactFlash®	CompactFlash® is a solid-state storage device. CompactFlash® devices use flash memory in a standard size enclosure. Type II is thicker than Type I, but a Type II slot can support both types.
CMOS	Complimentary metal-oxide-conductor is an integrated circuit used in chips like static RAM and microprocessors.
COM	COM refers to serial ports. Serial ports offer serial communication to expansion devices. The serial port on a personal computer is usually a male DB-9 connector.
DAC	The Digital-to-Analog Converter (DAC) converts digital signals to analog signals.
DDR	Double Data Rate refers to a data bus transferring data on both the rising and falling edges of the clock signal.

NANO-9452 EPIC Motherboard

DMA	Direct Memory Access (DMA) enables some peripheral devices to bypass the system processor and communicate directly with the system memory.
DIMM	Dual Inline Memory Modules are a type of RAM that offer a 64-bit data bus and have separate electrical contacts on each side of the module.
DIO	The digital inputs and digital outputs are general control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.
EHCI	The Enhanced Host Controller Interface (EHCI) specification is a register-level interface description for USB 2.0 Host Controllers.
EIDE	Enhanced IDE (EIDE) is a newer IDE interface standard that has data transfer rates between 4.0 MBps and 16.6 MBps.
EIST	Enhanced Intel® SpeedStep Technology (EIST) allows users to modify the power consumption levels and processor performance through application software. The application software changes the bus-to-core frequency ratio and the processor core voltage.
FSB	The Front Side Bus (FSB) is the bi-directional communication channel between the processor and the Northbridge chipset.
GbE	Gigabit Ethernet (GbE) is an Ethernet version that transfers data at 1.0 Gbps and complies with the IEEE 802.3-2005 standard.
GPIO	General purpose input
HDD	Hard disk drive (HDD) is a type of magnetic, non-volatile computer storage device that stores digitally encoded data.
ICH	The Input/Output Control Hub (ICH) is an Intel® Southbridge chipset.
IrDA	Infrared Data Association (IrDA) specify infrared data transmission protocols used to enable electronic devices to wirelessly communicate with each other.
L1 Cache	The Level 1 Cache (L1 Cache) is a small memory cache built into the system processor.
L2 Cache	The Level 2 Cache (L2 Cache) is an external processor memory cache.

LCD	Liquid crystal display (LCD) is a flat, low-power display device that consists of two polarizing plates with a liquid crystal panel in between.
LVDS	Low-voltage differential signaling (LVDS) is a dual-wire, high-speed differential electrical signaling system commonly used to connect LCD displays to a computer.
POST	The Power-on Self Test (POST) is the pre-boot actions the system performs when the system is turned-on.
RAM	Random Access Memory (RAM) is volatile memory that loses data when power is lost. RAM has very fast data transfer rates compared to other storage like hard drives.
SATA	Serial ATA (SATA) is a serial communications bus designed for data transfers between storage devices and the computer chipsets. The SATA bus has transfer speeds up to 1.5 Gbps and the SATA II bus has data transfer speeds of up to 3.0 Gbps.
S.M.A.R.T	Self Monitoring Analysis and Reporting Technology (S.M.A.R.T) refers to automatic status checking technology implemented on hard disk drives.
UART	Universal Asynchronous Receiver-transmitter (UART) is responsible for asynchronous communications on the system and manages the system's serial communication (COM) ports.
UHCI	The Universal Host Controller Interface (UHCI) specification is a register-level interface description for USB 1.1 Host Controllers.
USB	The Universal Serial Bus (USB) is an external bus standard for interfacing devices. USB 1.1 supports 12Mbps data transfer rates and USB 2.0 supports 480Mbps data transfer rates.
VGA	The Video Graphics Array (VGA) is a graphics display system developed by IBM.

Appendix

C

Digital I/O Interface

C.1 Introduction

The DIO connector on the NANO-9452 is interfaced to GPIO ports on the IT8712F Super I/O chipset. The DIO has both 4-bit digital inputs and 4-bit digital outputs. The digital inputs and digital outputs are generally control signals that control the on/off circuit of external devices or TTL devices. Data can be read or written to the selected address to enable the DIO functions.



NOTE:

For further information, please refer to the datasheet for the IT8712F Super I/O chipset.

C.2 DIO Connector Pinouts

The following table describes how the DIO connector pins are connected to the Super I/O GPIO port 1.

Pin	Description	Super I/O Pin	Super I/O Pin Description
1	Ground	N/A	N/A
2	VCC	N/A	N/A
3	Output 3	GP27	General purpose I/O port 2 bit 7.
4	Output 2	GP26	General purpose I/O port 2 bit 6.
5	Output 1	GP25	General purpose I/O port 2 bit 5.
6	Output 0	GP24	General purpose I/O port 2 bit 4.
7	Input 3	GP23	General purpose I/O port 2 bit 3.
8	Input 2	GP22	General purpose I/O port 2 bit 2
9	Input 1	GP21	General purpose I/O port 2 bit 1
10	Input 0	GP20	General purpose I/O port 2 bit 0

C.3 Assembly Language Samples

C.3.1 Enable the DIO Input Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O input functions is listed below.

MOV	AX, 6F08H	Sets the digital port as input
INT	15H	Initiates the INT 15H BIOS call

C.3.2 Enable the DIO Output Function

The BIOS interrupt call INT 15H controls the digital I/O. An assembly program to enable digital I/O output functions is listed below.

MOV	AX, 6F09H	Sets the digital port as output
MOV	BL, 09H	
INT	15H	Initiates the INT 15H BIOS call



Appendix

D

Watchdog Timer

NANO-9452 EPIC Motherboard



NOTE:

The following discussion applies to DOS environment. IEI support is contacted or the IEI website visited for specific drivers for more sophisticated operating systems, e.g., Windows and Linux.

The Watchdog Timer is provided to ensure that standalone systems can always recover from catastrophic conditions that cause the CPU to crash. This condition may have occurred by external EMIs or a software bug. When the CPU stops working correctly, Watchdog Timer either performs a hardware reset (cold boot) or a Non-Maskable Interrupt (NMI) to bring the system back to a known state.

A BIOS function call (INT 15H) is used to control the Watchdog Timer.

INT 15H:

AH – 6FH Sub-function:	
AL – 2:	Sets the Watchdog Timer's period.
BL:	Time-out value (Its unit-second is dependent on the item "Watchdog Timer unit select" in CMOS setup).

Table D-1: AH-6FH Sub-function

Call sub-function 2 to set the time-out period of Watchdog Timer first. If the time-out value is not zero, the Watchdog Timer starts counting down. When the timer value reaches zero, the system resets. To ensure that this reset condition does not occur, calling sub-function 2 must periodically refresh the Watchdog Timer. However, the watchdog timer is disabled if the time-out value is set to zero.

A tolerance of at least 10% must be maintained to avoid unknown routines within the operating system (DOS), such as disk I/O that can be very time-consuming.

**NOTE:**

When exiting a program it is necessary to disable the Watchdog Timer, otherwise the system resets.

Example program:

```
; INITIAL TIMER PERIOD COUNTER
```

```
;
```

```
W_LOOP:
```

```
    MOV    AX, 6F02H    ;setting the time-out value
    MOV    BL, 30      ;time-out value is 48 seconds
    INT    15H
```

```
;
```

```
; ADD THE APPLICATION PROGRAM HERE
```

```
;
```

```
    CMP    EXIT_AP, 1    ;is the application over?
    JNE    W_LOOP       ;No, restart the application
```

```
    MOV    AX, 6F02H    ;disable Watchdog Timer
    MOV    BL, 0        ;
    INT    15H
```

```
;
```

```
; EXIT ;
```

Appendix

E

Address Mapping

E.1 IO Address Map

I/O address Range	Description
000-01F	DMA Controller
020-021	Interrupt Controller
040-043	System time
060-06F	Keyboard Controller
070-07F	System CMOS/Real time Clock
080-09F	DMA Controller
0A0-0A1	Interrupt Controller
0C0-0DF	DMA Controller
0F0-0FF	Numeric data processor
1F0-1F7	Primary IDE Channel
2F8-2FF	Serial Port 2 (COM2)
378-37F	Parallel Printer Port 1 (LPT1)
3B0-3BB	Graphics Controller
3C0-3DF	Graphics Controller
3F6-3F6	Primary IDE Channel
3F7-3F7	Standard floppy disk controller
3F8-3FF	Serial Port 1 (COM1)

Table E-1: IO Address Map

E.2 1st MB Memory Address Map

Memory address	Description
00000-9FFFF	System memory
A0000-BFFFF	VGA buffer
F0000-FFFFF	System BIOS
1000000-	Extend BIOS

Table E-2: 1st MB Memory Address Map

E.3 IRQ Mapping Table

IRQ0	System Timer	IRQ8	RTC clock
IRQ1	Keyboard	IRQ9	ACPI
IRQ2	Available	IRQ10	LAN
IRQ3	COM2	IRQ11	LAN/USB2.0/SATA
IRQ4	COM1	IRQ12	PS/2 mouse
IRQ5	SMBus Controller	IRQ13	FPU
IRQ6	FDC	IRQ14	Primary IDE
IRQ7	Available	IRQ15	Secondary IDE

Table E-3: IRQ Mapping Table

E.4 DMA Channel Assignments

Channel	Function
0	Available
1	Available
2	Floppy disk (8-bit transfer)
3	Available
4	Cascade for DMA controller 1
5	Available
6	Available
7	Available

Table E-4: IRQ Mapping Table

Appendix

F

Compatibility

NANO-9452 EPIC Motherboard



NOTE:

The compatible items described here have been tested by the IEI R&D team and found to be compatible with the NANO-9452

F.1 Compatible Operating Systems

The following operating systems have been successfully run on the NANO-9452.

- MS-DOS 6.22
- Microsoft Windows Server 2003 (32-bit)
- Microsoft Windows Server 2003 (64-bit)
- Microsoft Windows Vista (32-bit)
- Microsoft Windows Vista (64-bit)
- Microsoft Windows XP (32-bit)
- Microsoft Windows XP (64-bit)
- Microsoft Windows 2000
- WinPOS (XPE)
- QNX Neutrino ver. 6.2.1
- Fedora Core 7
- Mandriva Linux 2006
- Mandriva Linux 2007

F.2 Compatible Processors

The following Socket AM2 processors have been successfully tested on the NANO-9452

CPU	Model Number	Frequency	L2 Cache
AMD Athlon™ 64 X2 Dual-Core	5200+	2.6 GHz	2 MB
AMD Athlon™ 64 X2 Dual-Core	5000+	2.6 GHz	1 MB
AMD Athlon™ 64 X2 Dual-Core	4800+	2.4 GHz	1 MB
AMD Athlon™ 64 X2 Dual-Core	4200+	2.1 GHz	1 MB
AMD Athlon™ 64 X2 Dual-Core	3400+	1.8 GHz	1 MB
AMD Athlon™ 64	3500+	2.2 GHz	512 KB

CPU	Model Number	Frequency	L2 Cache
AMD Athlon™ 64	3200+	2.0 GHz	512 KB
AMD Sempron™	3600+	2.0 GHz	256 KB

F.3 Compatible Memory Modules


NOTE:

The memory modules listed below have been tested on the NANO-9452 other memory modules that comply with the specifications may also work on the NANO-9452 but have not been tested.

The following memory modules have been successfully tested on the NANO-9452.

Manufacturer	Model No.	Capacity	Speed
CORSAIR	64M8CFEG PS0900702	1 GB	667 MHz
CORSAIR	64M8CFEG EL1000617	512 MB	667 MHz
Kingston	KHX5400D2K2/1G	512 MB	667 MHz
Kingston	KVR667D2E5/512	512 MB	667 MHz
Kingston	KVR800D2E5K2/1G	512 MB	800 MHz
Twinmos	ELPIDA E5116AB-5C-E	256MB	PC2-4300 U-DIMM/CL4
Elixir	N2TU51280AF-37B	512MB	PC2-4200U
Apacer	ELPIDA E5108AG-8E-E	1GB	PC2-5300
KINGSTEK	KST3216533-612MP	256MB	533 MHz
KINGSTEK	Elixir N2TU51280AE-37B	512MB	533 MHz
KINGSTEK	KST648533-612LA	1GB	533 MHz
KINGSTEK	KKEA88B4LAUG-37DX	512MB	533 MHz
Hynix	Hy5PS56821 FP-C4	256MB	533 MHz
Hynix	Hy5PS12821 PH-C4	512MB	533 MHz

Appendix

G

Hazardous Materials Disclosure

G.1 Hazardous Materials Disclosure Table for IPB Products Certified as RoHS Compliant Under 2002/95/EC Without Mercury

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the table on the next page.

NANO-9452 EPIC Motherboard

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	X	O	O	O	O	X
Display	X	O	O	O	O	X
Printed Circuit Board	X	O	O	O	O	X
Metal Fasteners	X	O	O	O	O	O
Cable Assembly	X	O	O	O	O	X
Fan Assembly	X	O	O	O	O	X
Power Supply Assemblies	X	O	O	O	O	X
Battery	O	O	O	O	O	O
<p>O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006</p> <p>X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006</p>						

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
壳体	X	O	O	O	O	X
显示	X	O	O	O	O	X
印刷电路板	X	O	O	O	O	X
金属螺帽	X	O	O	O	O	O
电缆组装	X	O	O	O	O	X
风扇组装	X	O	O	O	O	X
电力供应组装	X	O	O	O	O	X
电池	O	O	O	O	O	O

O: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。
X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

Appendix

H

AC'97 Audio Codec

H.1 Introduction

The motherboard comes with an onboard Realtek ALC655 CODEC. The ALC655 is a 16-bit, full-duplex AC'97 Rev. 2.3 compatible six-channel audio CODEC that provides three pairs of stereo outputs with 5-bit volume control, a mono output, and multiple stereo and mono inputs, along with flexible mixing, gain, and mute functions.

H.1.1 Accessing the AC' 97 CODEC

The CODEC is accessed through the phone jacks on the rear panel of the motherboard.

The phone jacks include:

- LINE IN
- LINE OUT
- MIC IN

H.1.2 Driver Installation

The driver installation has been described in **Section** Error! Reference source not found..

After rebooting, the sound effect configuration utility appears in the **Windows Control Panel (Figure H-1)**. If the peripheral speakers are properly connected, sound effects should be heard.

NANO-9452 EPIC Motherboard

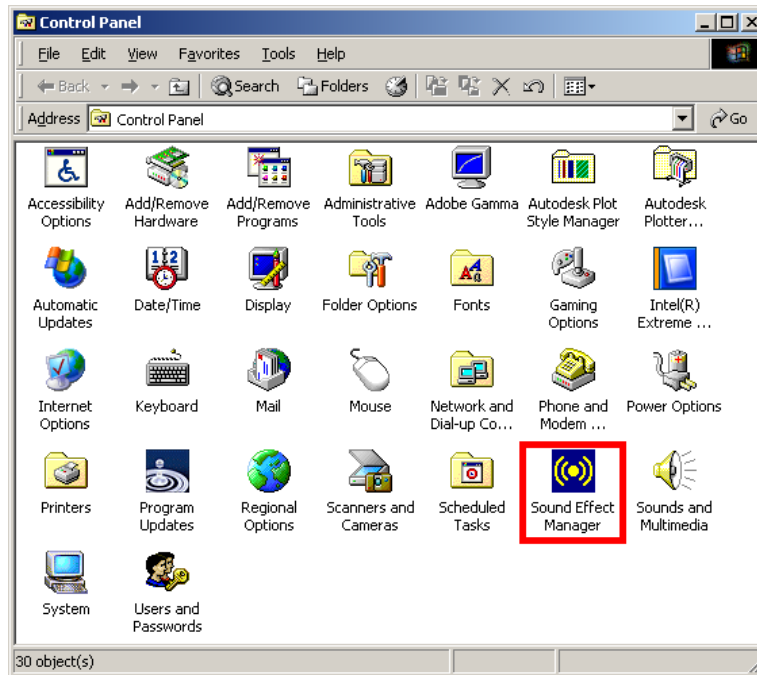


Figure H-1: Control Panel Sound Effect Manager

H.2 Sound Effect Configuration

H.2.1 Accessing the Sound Effects Manager

Follow the steps below to access the **Sound Effect Manager**.

Step 1: Install the ALC655 audio CODEC driver.

Step 2: Click the Sound Effect Manager icon in the system task bar (**Figure H-2**).




Figure H-2: Sound Effect Manager Icon [Task Bar]

Step 3: The sound effect manager appears (**Figure H-3**).

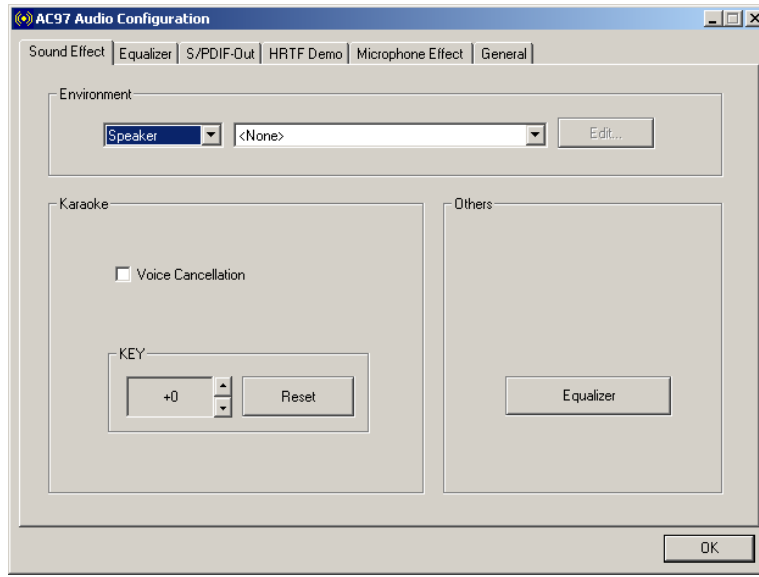


Figure H-3: Sound Effects Manager (ALC655)



NOTE:

The Sound Effect Manager shown in **Figure H-3** is for the Realtek ALC655 audio Codec. Different Codecs may have different sound manager appearances.

The following section describes the different configuration options in the Sound Effect Manager.

H.2.2 Sound Effect Manager Configuration Options

The **Sound Effects Manager** enables configuration of the items listed below. To configure these items click the corresponding menu tab in the **Sound Effects Manager** (**Figure H-3**).



NOTE:

The Karaoke Mode is configured in the Sound Effect menu. To access Karaoke configuration settings, click on the Sound Effect menu tab.

NANO-9452 EPIC Motherboard

- Sound Effect
- Karaoke Mode
- Equalizer
- Speaker Configuration
- Speaker Test
- S/PDIF-In
- S/PDIF-Out
- Connector Sensing
- HRTF Demo
- Microphone Effect
- General



NOTE:

Not all Realtek Sound Effect Managers have all the above listed options. The Sound Effect Manager loaded onto the system may only have some of the options listed above.

Below is a brief description of the available configuration options in the **Sound Effects Manager**.

- **Sound Effect** - Select a sound effect from the 23 listed options in the drop down menu. Selected sound effect properties can be edited. Click **EDIT** to edit the sound effect.
- **Karaoke Mode - Karaoke Mode** is accessed in the Sound Effect tab. The **Voice Cancellation** disables the vocal part of the music being played. The **Key adjustment** up or down arrow icons enable users to define a key that fits a certain vocal range.
- **Equalizer Selection** - Preset equalizer settings enable easy audio range settings. Ten frequency bands can be configured.
- **Speaker Configuration** - Multi-channel speaker settings are configured in this menu. Configurable options include:
 - Headphone
 - Channel mode for stereo speaker output
 - Channel mode for 4 speaker output

- Channel mode for 5.1 speaker output
- Synchronize the phone jack switch with speakers settings
- **Speaker Test** - Each speaker connected to the system is tested individually to see if the 4-channel or 6-channel audio operates properly.
- **S/PDIF-In & S/PDIF-Out** - S/PDIF is used to transmit digital and analog audio signals with either a 48 or 44.1kHz sample rate.
- **HRTF Demo** - Adjust HRTF (Head Related Transfer Functions) 3D positional audio before running 3D applications.
- **Microphone Effect** - Microphone noise suppression is enabled in this menu.
- **General** - General information about the installed AC'97 audio configuration utility is listed here.

Index

+

+12V ATX power supply connector.....	36
location and pinouts	36

A

ACPI	111, 112
Advanced Power Management	114
airflow	80
ALC655.....	198
anti-static precautions.....	25, 63
anti-static pad	25, 63
anti-static wristband.....	25, 63
handling.....	25, 63
self-grounding.....	25, 63
ASKIR interface	42
AT power select jumper	33
ATA flat cable	83, 84
ATX 12V power connector.....	5
ATX power supply enable connector	33
location and pinouts	33
Audio Codec '97	16
audio connector	5, 34
location and pinouts	34

B

BIOS 19, 92, 93, 94, 95, 96, 97, 98, 99, 100, 104, 105, 110, 111, 112, 114, 117, 118, 120, 121, 122, 124, 125, 130, 131, 132, 133, 134, 135, 136, 137, 138, 147, 149	
BIOS chipset.....	18, 19

C

cables.....	81
CF card	35, 72
installation.....	72
location and pinouts.....	35
setup jumper	75
socket	35
CF card setup jumper	75
location	75
settings	75
chassis	80
installation.....	80
chipset.....	13
northbridge	13
chipset driver.....	153, 156
clear CMOS jumper	6, 76
location	76
settings	76
CMOS	76
clear CMOS jumper	76
codec	16
AC'97.....	16
COM 2.....	52
COM 2 function select	77
connector location and pinouts.....	52
RS-232, RS-422 or RS-485.....	52
COM 2 function select jumper	52, 77
location	77
settings	77
CompactFlash.....	35
socket location and pinouts	35

heat sink69

I

 IDE connector, 40-pin5
 IDE connector, 44-pin40
 location and pinouts40
 IDE device82, 83, 84, 85
 ATA flat cable.....83, 84
 connector.....82, 83, 85
 IDE flat cable82
 IDE flat cable82
 IDE interface17
 infrared interface.....42
 Amplitude Shift Key Infrared.....42
 ASKIR.....42
 Serial Infrared.....42
 SIR.....42
 infrared interface connector5, 42
 location and pinouts42
 installation checklist65
IrDA106, 107

J

 jumper73
 AT power select33
 CF card setup75
 clear CMOS76
 COM 2 function select77
 jumper configuration73
 LVDS voltage selection78
 PCI-104 VIO Selector79

K

 keyboard 44, 87, 89
 keyboard connector5
 keyboard controller21
 keyboard/mouse connector44
 location and pinouts.....44

L
LED
 HDD39
 power.....39
 LPC bus 18, 19
 LPC interface 17, 20
 LVDS display.....78
 voltage select.....78
 LVDS LCD connector.....44
 location and pinouts.....44
 LVDS panel44
 18-bit.....44
 24-bit.....44
 dual channel44
 single channel.....44
 LVDS voltage selection jumper78
 location78
 settings78

M

 memory module installation70
 memory support13
 motherboard.....81
 installation.....81
 mouse 44, 87

NANO-9452 EPIC Motherboard

N

northbridge chipset 13

P

parallel port21, 107, 108

parallel port connector46, 47

location and pinouts46, 47

parallel port connector5

parallel port device.....87

PCI Express GbE controller.....18

PCI interface17

PCI-104 slot49

location and pinouts49

PCI-104 VIO Selector jumper79

PCI-104 voltage selection jumper

location55, 79

settings79

peripheral connectors33

peripheral device cables81

power button39

Power Button Mode 115

power LED39

power supply33, 36, 52

AT power supply33

ATX power supply33, 36, 52

processors 12

PS/2 cable44

PS/2 connector5, 89

PS/2 keyboard57, 89

connection89

PS/2 mouse57

R

real time clock18

reset button39

RJ-45 Ethernet connector 5, 59

RJ-45 LAN connectors.....58

RS-232 52, 53

COM 2 location and pinouts 52, 53

COM 3 location and pinouts52

COM 4 location and pinouts52

connector location and pinouts..... 52, 53

serial port devices.....53

RS-232 serial port.....59

RS-232 serial port devices.....53

RS-42252

COM 2 location and pinouts52

RS-485 52, 53

COM 2 location and pinouts52

S

Safety Precautions..... 191

SATA2

controller.....18

SATA drive.....86

cables86

connection86

power cable86

SATA drive connector..... 5, 51

location and pinouts.....51

SATA drives.....51

serial port connector 5, 52, 53

location and pinouts..... 52, 53

serial port devices87

serial ports20

SIR interface42

SiS964147

socket 479 CPU

 cooling kit68

 cooling kit installation68

 installation.....66

SODIMM70

 installation.....70

 specifications.....70

Sound Effect Configuration.....199

Sound Effects Manager199

Super I/O chipset.....19, 20

system voltages 110

T

technical specifications.....6

temperature 110

TV out connector55

 location and pinouts55

U

unpacking25

 unpacking checklist26

 unpacking precautions25

USB 2, 56, 57, 121, 122, 123

controller.....18

devices56

port.....56

USB 1.156

USB 2.056

USB 1.1.....56

USB 2.0..... 56, 123

USB 2.0 port60

USB connector, internal 5, 56

 location and pinouts.....56

V

VGA88

VGA connector..... 5, 57, 61

VGA monitor..... 87, 88

 connection88

W

warranty validation.....65

Y

Y-cable44