



MODEL:
PUZZLE-IN001

1U Network Appliance with 8th Gen. Intel® Core™ i3, Pentium®, Celeron® and Intel® Xeon® E Processor, DDR4, Eight GbE Ports, Two PCIe Slots, M.2, PCIe Mini, Redundant PSU, Rack Mount, and RoHS Compliant

User Manual

Revision

Date	Version	Changes
November 23, 2018	1.00	Initial release

Copyright

COPYRIGHT NOTICE

The information in this document is subject to change without prior notice in order to improve reliability, design and function and does not represent a commitment on the part of the manufacturer.

In no event will the manufacturer be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

TRADEMARKS

All registered trademarks and product names mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Manual Conventions



WARNING

Warnings appear where overlooked details may cause damage to the equipment or result in personal injury. Warnings should be taken seriously.



CAUTION

Cautionary messages should be heeded to help reduce the chance of losing data or damaging the product.



NOTE

These messages inform the reader of essential but non-critical information. These messages should be read carefully as any directions or instructions contained therein can help avoid making mistakes.

Table of Contents

1 INTRODUCTION.....	1
1.1 OVERVIEW.....	2
1.2 MODEL VARIATIONS	2
1.3 FEATURES.....	3
1.4 FRONT PANEL.....	3
1.5 REAR PANEL.....	4
1.6 TECHNICAL SPECIFICATIONS	4
1.7 DIMENSIONS.....	6
2 UNPACKING	7
2.1 ANTI-STATIC PRECAUTIONS	8
2.2 UNPACKING PRECAUTIONS.....	8
2.3 PACKING LIST.....	9
2.4 OPTIONAL ITEMS	10
3 INSTALLATION	11
3.1 INSTALLATION PRECAUTIONS	12
3.2 TOP COVER REMOVAL	12
3.3 DIMM INSTALLATION	13
3.4 HDD INSTALLATION.....	15
3.5 PCIe EXPANSION CARD INSTALLATION	17
3.6 IEI NETWORKING MODULE INSTALLATION	20
3.7 M.2 MODULE INSTALLATION.....	22
3.8 PCIe MINI CARD INSTALLATION	23
3.8.1 <i>Half-size PCIe Mini Card Installation</i>	24
3.9 LAN CONNECTION.....	24
3.10 CONSOLE CONNECTION.....	25
3.11 MOUNTING THE SYSTEM	26
3.12 POWER-ON PROCEDURE.....	26
3.13 AVAILABLE DRIVERS	27
3.13.1 <i>Driver Download</i>	28

3.14 MAINTENANCE.....	29
3.14.1 Power Supply Unit Replacement	30
3.14.2 Jumper Settings.....	31
3.14.2.1 Clear CMOS.....	31
3.14.2.2 Flash Descriptor Security Override Jumper.....	32
4 BIOS	34
4.1 INTRODUCTION.....	35
4.1.1 Starting Setup.....	35
4.1.2 Using Setup	35
4.1.3 Getting Help.....	36
4.1.4 Unable to Reboot after Configuration Changes	36
4.1.5 BIOS Menu Bar.....	36
4.2 MAIN.....	37
4.3 ADVANCED	38
4.3.1 CPU Configuration	39
4.3.2 Trusted Computing.....	40
4.3.3 iWDD H/W Monitor.....	41
4.3.3.1 Smart Fan Mode Configuration	42
4.3.4 IT8528 Super IO Configuration.....	44
4.3.4.1 Serial Port 1 Configuration	44
4.3.5 Serial Port Console Redirection	45
4.3.5.1 Legacy Console Redirection Settings	47
4.3.6 NVMe Configuration.....	48
4.4 CHIPSET	49
4.4.1 System Agent (SA) Configuration	50
4.4.1.1 Memory Configuration	51
4.4.1.2 Graphics Configuration.....	51
4.4.1.3 PEG Port Configuration.....	53
4.4.2 PCH-IO Configuration	54
4.4.2.1 PCI Express Configuration	55
4.4.2.2 SATA and RST Configuration.....	57
4.4.2.3 HD Audio Configuration.....	59
4.5 SECURITY.....	60
4.6 BOOT.....	61

PUZZLE-IN001

4.7 SAVE & EXIT	63
5 INTERFACE CONNECTORS	64
5.1 PERIPHERAL INTERFACE CONNECTORS.....	65
5.2 INTERNAL PERIPHERAL CONNECTORS	66
5.2.1 ATX Power Connector (ATX1).....	67
5.2.1 ATX PSU SMBus Connector (CN3).....	67
5.2.2 CPU Power Connector (CPU12V1).....	68
5.2.3 Chassis Intrusion Connector (CHASSIS1).....	68
5.2.4 DIO Connector (DIO1).....	68
5.2.5 EC Debug Connector (CN1).....	68
5.2.6 Fan Connectors (CPU_FAN1/2/3/4).....	69
5.2.7 LCM Connector (CN2)	69
5.2.1 LAN LED Connector (LED_LAN1/2/3/4/5/6/7/8)	70
5.2.1 M.2 Slot (M2_1).....	70
5.2.2 PCIe Mini Card Slot (MPCIE1).....	71
5.2.1 Power Button Connector (PWR_BTN2)	72
5.2.2 SATA Connector (PCIEX1_SLOT1).....	72
5.2.3 SPI Flash Connector (JSP11).....	73
5.2.4 SPI Flash Connector - EC (JSP12)	73
5.2.5 TPM Connector (TPM1).....	74
5.2.6 USB 2.0 Connector (USB1)	74
5.2.7 USB DOM Connector (USB_DOM1).....	75
A REGULATORY COMPLIANCE	76
B SAFETY PRECAUTIONS	81
B.1 SAFETY PRECAUTIONS.....	82
B.1.1 General Safety Precautions	82
B.1.2 Anti-static Precautions	82
B.1.3 Product Disposal	83
B.2 MAINTENANCE AND CLEANING PRECAUTIONS	84
B.2.1 Maintenance and Cleaning.....	84
B.2.2 Cleaning Tools.....	84
C HAZARDOUS MATERIALS DISCLOSURE	86

List of Figures

Figure 1-1: PUZZLE-IN001 Series.....	2
Figure 1-2: PUZZLE-IN001 Front Panel.....	3
Figure 1-3: PUZZLE-IN001 Rear Panel.....	4
Figure 1-4: Physical Dimensions (millimeters).....	6
Figure 3-1: Top Cover Removal	13
Figure 3-2: DIMM Slot Locations.....	14
Figure 3-3: HDD Bracket Retention Screws.....	15
Figure 3-4: Secure HDD to the Bracket	16
Figure 3-5: HDD Installation	16
Figure 3-6: Expansion Slot Module Retention Screws	17
Figure 3-7: Disconnect the Expansion Slot Module.....	18
Figure 3-8: Blank Bracket Screw.....	18
Figure 3-9: PCIe Expansion Card Installation.....	19
Figure 3-10: Expansion Slot Module Installation	20
Figure 3-11: Networking Module Slot Cover Screws	21
Figure 3-12: Networking Module Installation.....	21
Figure 3-13: PCIe Mini Slot Location	23
Figure 3-14: RJ-45 Ethernet Connector.....	24
Figure 3-15: Rack Mounting Bracket Installation	26
Figure 3-16: Power-on.....	27
Figure 3-17: IEL Resource Download Center.....	27
Figure 3-18: Clear CMOS Button Location.....	32
Figure 3-19: Flash Descriptor Security Override Jumper Location	33

List of Tables

Table 1-1: PUZZLE-IN001 Model Variations	2
Table 1-2: Technical Specifications.....	6
Table 3-1: LAN Pinouts	24
Table 3-2: RJ-45 Ethernet Connector LEDs	25
Table 3-3: RJ-45 Serial Port Pinouts.....	25
Table 3-4: Flash Descriptor Security Override Jumper Settings.....	32
Table 4-1: BIOS Navigation Keys	36
Table 5-1: Peripheral Interface Connectors	67
Table 5-2: ATX Power Connector Pinouts	67
Table 5-3: ATX PSU SMBus Connector (CN3) Pinouts.....	67
Table 5-4: CPU Power Connector (CPU12V1) Pinouts.....	68
Table 5-5: Chassis Intrusion Connector (CHASSIS1) Pinouts.....	68
Table 5-6: DIO Connector (DIO1) Pinouts	68
Table 5-7: EC Debug Connector (CN1) Pinouts.....	69
Table 5-8: Fan Connectors (CPU_FAN1/2/3/4) Pinouts.....	69
Table 5-10: LCM Connector (CN2) Pinouts	69
Table 5-11: LAN LED Connector (LED_LAN1/2/3/4/5/6/7/8) Pinouts.....	70
Table 5-12: M.2 Slot (M2_1) Pinouts	71
Table 5-13: PCIe Mini Card Slot (MPCIE1) Pinouts	72
Table 5-14: Power Button Connector (PWR_BTN2) Pinouts.....	72
Table 5-15: SATA 6Gb/s Connector (PCIEX1_SLOT1) Pinouts.....	73
Table 5-16: SPI Flash Connector (JSPI1) Pinouts	73
Table 5-17: SPI Flash Connector - EC (JSPI2) Pinouts.....	74
Table 5-18: TPM Connector (TPM1) Pinouts.....	74
Table 5-19: USB 2.0 Connector (USB1) Pinouts.....	74
Table 5-20: USB DOM Connector (USB_DOM1) Pinouts.....	75

Chapter

1

Introduction

1.1 Overview



Figure 1-1: PUZZLE-IN001 Series

The PUZZLE-IN001 is a 1 U network appliance series powered by the 8th generation Intel® Xeon®, Core™ i3, Pentium® or Celeron® processor. It is optimized to host VNFs (Virtual Network Functions) and is ideal for SD-WAN.

The PUZZLE-IN001 supports 8 copper GbE ports for high-speed network applications, and it is equipped with a PCIe x8 slot and a PCIe x4 slot for upgrading with expansion cards, such as NIC cards or accelerator cards.

Multiple storage interfaces for fast and stable data transmission are offered through two SATA 6Gb/s connectors and one PCIe Mini slot that supports mSATA module.

1.2 Model Variations

The model variations of the PUZZLE-IN001 are listed below.

PUZZLE-IN001	CPU	Memory	SSD
-R	Support 8th gen Intel® Xeon®, Core™ i3, Pentium® or Celeron®	N/A	N/A
-i3T/R	Intel® Core™ i3-8100T	N/A	N/A
-i3T/16G/R	Intel® Core™ i3-8100T	16 GB	256 GB
-XE/R	Intel® Xeon® E-2136	N/A	N/A
-XE/16G/R	Intel® Xeon® E-2136	16 GB	256 GB

Table 1-1: PUZZLE-IN001 Model Variations

PUZZLE-IN001

1.3 Features

The PUZZLE-IN001 features are listed below:

- Powered by 8th gen Intel® Xeon®, Core™ i3, Pentium® or Celeron® processor
- Support two 2400 MHz DDR4 ECC/non-ECC RDIMMs (system max. 32 GB)
- Support two 2.5" SATA SSD/HDD
- Support up to eight GbE connections via Intel® I211 controllers
- Upgradable with future expansion cards by one PCIe x8 slot, one PCIe x4 slot, one M.2 B-key slot and one PCIe Mini card slot
- One RJ-45 RS-232 serial port
- Supports two USB 3.0 ports
- 1U chassis for rack mounting
- RoHS compliant

1.4 Front Panel

The overview of the front panel is shown in **Figure 1-2**.

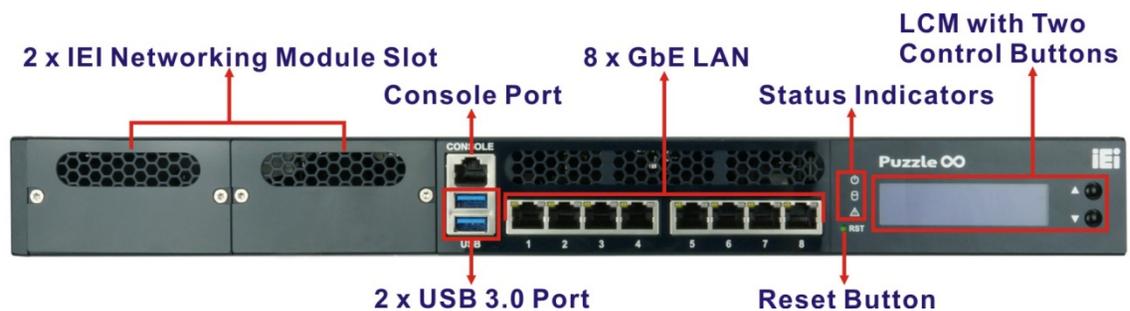


Figure 1-2: PUZZLE-IN001 Front Panel

The states of the LED indicators located on the front panel are listed below.

Power LED	Off	The system is turned off.
	Blue	The system is turned on.
HDD Status LED	Off	No HDD activity
	Blinking Blue	HDD activity
Alert LED	Off	No alert
	Red	Alert message

1.5 Rear Panel

An overview of the PUZZLE-IN001 rear panel is shown in **Figure 1-3** below.

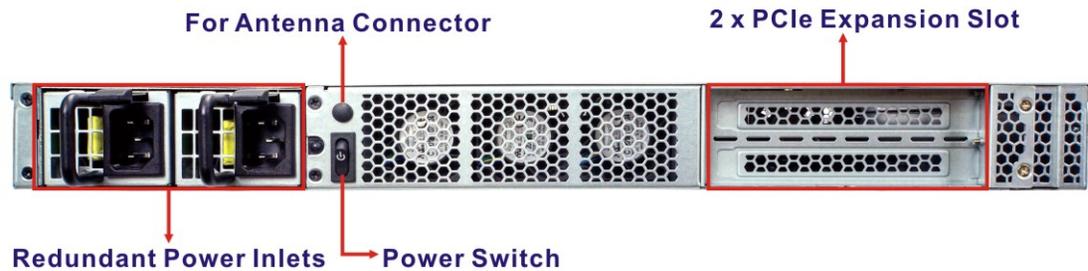


Figure 1-3: PUZZLE-IN001 Rear Panel

1.6 Technical Specifications

The PUZZLE-IN001 technical specifications are listed in **Table 1-2**.

System	
Form Factor	1U
CPU (SoC)	8 th gen Intel® Xeon®, Core™ i3, Pentium® or Celeron® processor XE SKU: 8 th gen Intel® Xeon® E-2136 processor i3T SKU: 8 th gen Intel® Core™ i3-8100T processor
Chipset	Intel® C246
Memory	Two 288-pin 2400 MHz DDR4 ECC/non-ECC RDIMM slots (system max. 32 GB) (16G SKUs are pre-installed with two 8 GB memory modules)
Networking	Intel® I211-AT Ethernet controller 8 x Copper 1GbE LAN port 2 x PCIe slot for IEI networking module
Network Acceleration and Security	Intel® AES New Instructions Intel® Software Guard Extensions (Intel® SGX) Intel® Memory Protection Extensions (Intel® MPX) Intel® Trusted Execution Technology
Storage	2 x 2.5" SATA 6Gb/s HDD/SSD bay

PUZZLE-IN001

USB DOM	1 x USB DOM (internal)
QTS	QTS Gateway security
Expansion	
PCIe	1 x PCIe x4 slot 1 x PCIe x8 slot
PCIe Mini	1 x Full-size/Half-size PCIe Mini slot (PCIe & SATA, USB 2.0)
M.2	1 x M.2 B-key 2260/2280 slot (PCIe and USB 2.0 signals)
I/O and Indicators	
Console	1 x RJ-45 RS-232
USB	2 x USB 3.0 port (external) 4 x USB 2.0 internal pin-header (8-pin, p=2.54)
Indicator	LCM (with two control buttons) Power status (blue) HDD status (green) Alert LED (programmable, red)
Switch/Button	Power switch (rear panel) Reset button (front panel)
TPM	1 x TPM 2.0 (2x10 pin header)
Antenna Connector	1 x Knockout hole for antenna connector
Power	
Power Input	100 V ~ 240 V, 5 A ~ 2.5 A, 60 Hz ~ 50 Hz
Type/Watt	300 W redundant power
Thermal Solution	1 x Passive heat sink for CPU 3 x Smart fan for CPU 1 x Smart fan for system
Environmental and Mechanical	
Mounting	1U rack mount
Operating Temperature	0°C~40°C (32°F~104°F)
Storage Temperature	-10°C~50°C (14°F~122°F)
Operating Humidity	5%~90%, non-condensing

Safety	CE, FCC
Weight	7 kg
Physical Dimensions	430 mm x 426 mm x 44.2 mm (W x D x H)
Operating System	Linux Ubuntu 16.04

Table 1-2: Technical Specifications

1.7 Dimensions

The physical dimensions are shown below:

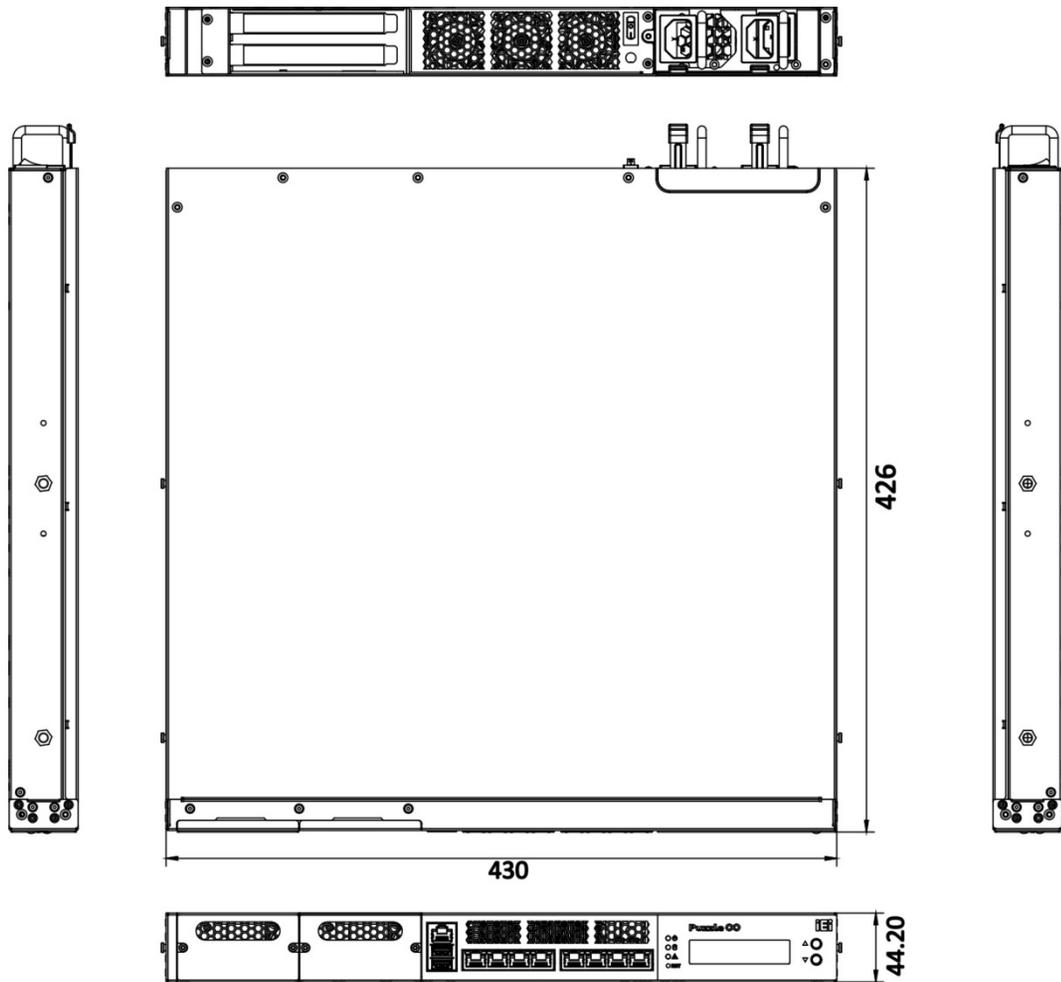


Figure 1-4: Physical Dimensions (millimeters)

Chapter

2

Unpacking

2.1 Anti-static Precautions



WARNING:

Failure to take ESD precautions during installation may result in permanent damage to the PUZZLE-IN001 and severe injury to the user.

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PUZZLE-IN001. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PUZZLE-IN001 or any other electrical component is handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging the board.
- **Self-grounding:** Before handling the board, touch any grounded conducting material. During the time the board is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring the PUZZLE-IN001, place it on an anti-static pad. This reduces the possibility of ESD damaging the PUZZLE-IN001.

2.2 Unpacking Precautions

When the PUZZLE-IN001 is unpacked, please do the following:

- Follow the anti-static precautions outlined in **Section 2.1**.
- Make sure the packing box is facing upwards so the PUZZLE-IN001 does not fall out of the box.
- Make sure all the components shown in **Section 2.3** are present.

PUZZLE-IN001

2.3 Packing List



NOTE:

If some of the components listed in the checklist below are missing, please do not proceed with the installation. Contact the IEI reseller or vendor you purchased the PUZZLE-IN001 from or contact an IEI sales representative directly. To contact an IEI sales representative, please send an email to sales@ieiworld.com.

The PUZZLE-IN001 is shipped with the following components:

Quantity	Item	Image
1	PUZZLE-IN001	
2	Power cord	
2	Rack mounting bracket	
6	Mounting bracket screw (M4*6)	
1	USB to console cable (only for SKUs with memory)	
1	RS-232 to console cable (only for SKUs without memory)	

2.4 Optional Items

The following table lists the optional items that can be purchased separately.

Optional Item	Image
Slide rail (P/N: RAIL-B02)	
USB to console cable (P/N: 32013-004000-100-RS)	
RS-232 to console cable (P/N: 32005-005100-100-RS)	
20-pin Infineon TPM 2.0 module, software management tool, firmware v5.5 (P/N: TPM-IN02-R20)	

Chapter

3

Installation

3.1 Installation Precautions

During installation, be aware of the precautions below:

- **Read the user manual:** The user manual provides a complete description of the PUZZLE-IN001, installation instructions and configuration options.
- **DANGER! Disconnect Power:** Power to the PUZZLE-IN001 must be disconnected during the installation process. Failing to disconnect the power may cause severe injury to the body and/or damage to the system.
- **Qualified Personnel:** The PUZZLE-IN001 must be installed and operated only by trained and qualified personnel. Maintenance, upgrades, or repairs may only be carried out by qualified personnel who are familiar with the associated dangers.
- **Air Circulation:** Make sure there is sufficient air circulation when installing the PUZZLE-IN001. The PUZZLE-IN001's cooling vents must not be obstructed by any objects. Blocking the vents can cause overheating of the PUZZLE-IN001. Leave at least 5 cm of clearance around the PUZZLE-IN001 to prevent overheating.
- **Grounding:** The PUZZLE-IN001 should be properly grounded. The voltage feeds must not be overloaded. Adjust the cabling and provide external overcharge protection per the electrical values indicated on the label attached to the back of the PUZZLE-IN001.

3.2 Top Cover Removal

Before installing or maintaining the internal components, the top cover must be removed from the PUZZLE-IN001. Follow the steps below to complete the task.

Step 1: Remove the five retention screws indicated in **Figure 3-1**.

Step 2: Slide the top cover towards the rear side and gently lift the top cover (**Figure 3-1**).

PUZZLE-IN001



Figure 3-1: Top Cover Removal

3.3 DIMM Installation

**CAUTION:**

For dual channel configuration, always install two identical memory modules that feature the same capacity, timings, voltage, number of ranks and the same brand.

To install the DIMM module, please follow the steps below.

Step 1: Remove the top cover from the PUZZLE-IN001. Please follow the instruction described in **Section 3.2**.

Step 2: Locate the DIMM slots on the motherboard.

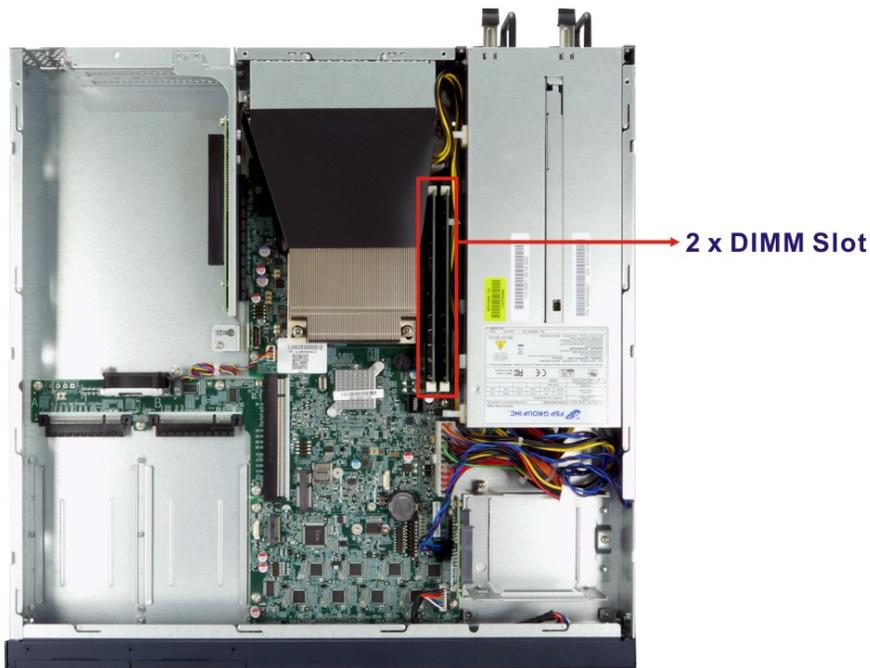


Figure 3-2: DIMM Slot Locations

- Step 3:** Open the DIMM socket handles. Open the two handles outwards as far as they can.
- Step 4:** Align the DIMM so the notch on the memory lines up with the notch on the memory socket.
- Step 5:** Once aligned, press down until the DIMM is properly seated. Clip the two handles into place.
- Step 6:** To remove a DIMM, push both handles outward. The memory module is ejected by a mechanism in the socket.

PUZZLE-IN001

3.4 HDD Installation

The PUZZLE-IN001 allows installation of two 2.5" SATA HDD/SSD. To install HDDs into the system, please follow the steps below.

Step 1: Remove the top cover from the PUZZLE-IN001. Please follow the instruction described in **Section 3.2**.

Step 2: Remove the HDD bracket from the system. To do this, remove the three retention screws indicated below and disconnect the SATA connector module from the motherboard.

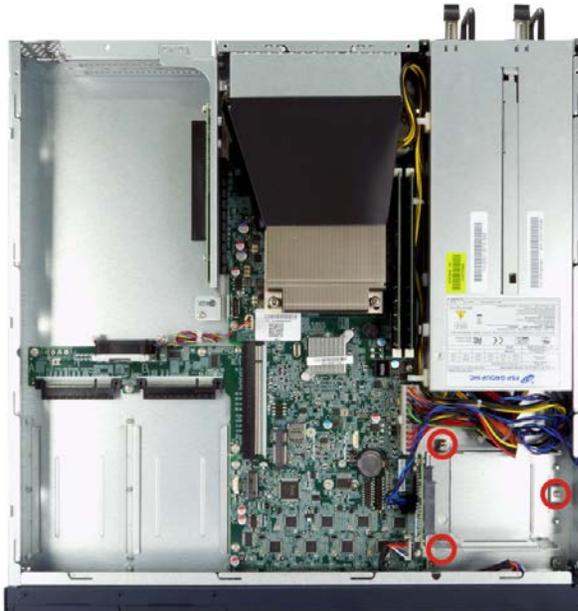


Figure 3-3: HDD Bracket Retention Screws

Step 3: Insert an HDD into the bracket until the HDD is properly connected to the SATA connector. Secure the HDD with four retention screws (M3*4). See **Figure 3-5**.



Figure 3-4: Secure HDD to the Bracket

Step 4: Re-connect the SATA connector module to the motherboard. Make sure the two positioning studs on the chassis go through the two small holes on the HDD bracket (**Figure 3-5**). Secure the bracket to the chassis with three screws removed previously.



Figure 3-5: HDD Installation

Step 5: Re-install and secure the top cover to the system.

PUZZLE-IN001

3.5 PCIe Expansion Card Installation

The PUZZLE-IN001 allows installation of one PCIe x4 card and one PCIe x8 card. To install a PCIe expansion card, please follow the steps below.

Step 1: Remove the top cover from the PUZZLE-IN001 (refer to **Section 3.2**).

Step 2: Remove the four expansion slot module retention screws indicated below.



Figure 3-6: Expansion Slot Module Retention Screws

Step 3: Push the expansion slot module with strength to disconnect the module from the edge connector of the motherboard.

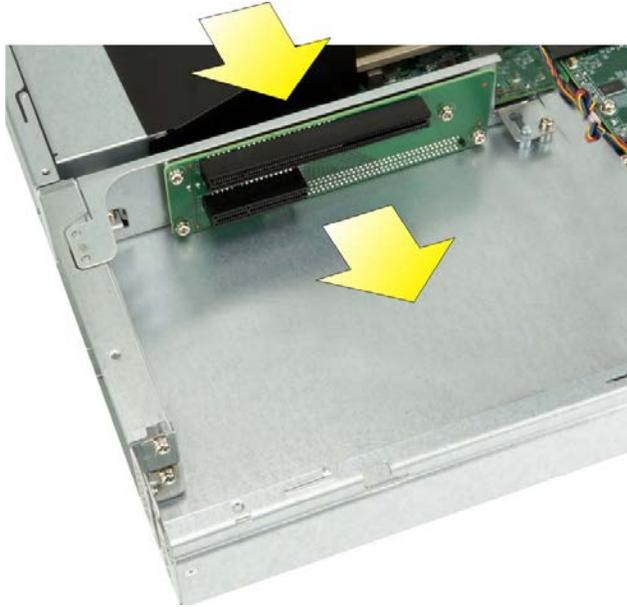


Figure 3-7: Disconnect the Expansion Slot Module

Step 4: Remove the blank bracket panel that aligns with the PCIe slot for installing the expansion card. Save the bracket screw.



Figure 3-8: Blank Bracket Screw

PUZZLE-IN001

Step 5: Align the expansion card to the PCIe slot. Press gently, but firmly, to seat the expansion card correctly in the slot. Install the bracket screw to secure the card to the expansion slot module.



Figure 3-9: PCIe Expansion Card Installation

Step 6: Place the expansion slot module back to the original position by hooking the slotted hole into the positioning stud in the chassis (**Figure 3-10 A**). Push the connector of the expansion slot module into the edge connector to install it.

During installation, ensure that

1. the connector on the slot module is properly aligned and connected to the edge connector;
2. the two studs on the side is going through the two holes in the chassis;
3. the slot module tab is going under the chassis tab.

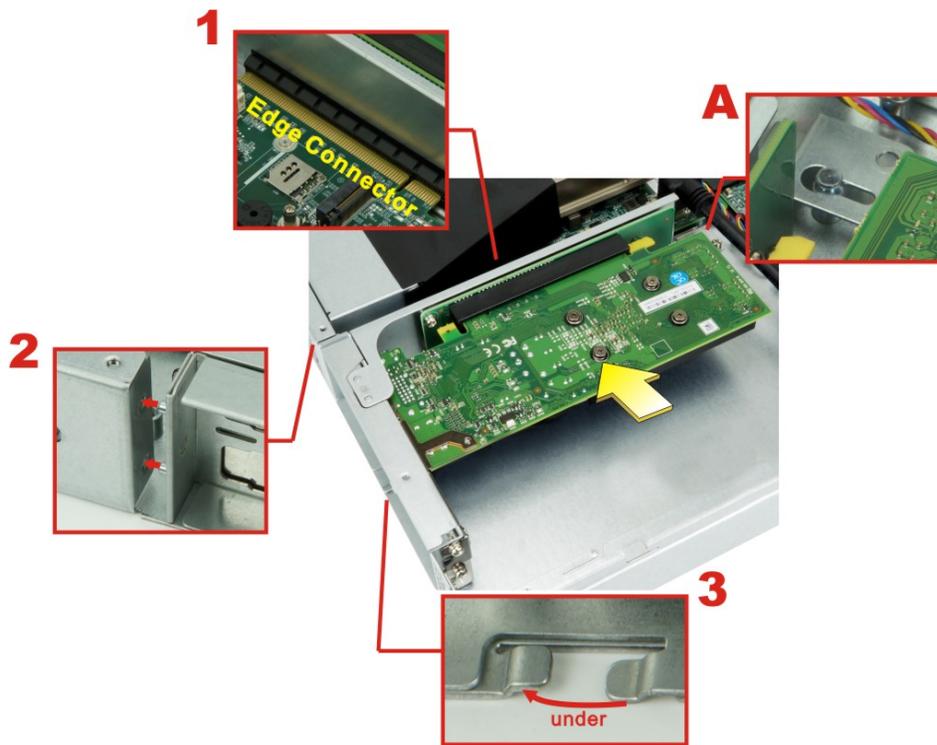


Figure 3-10: Expansion Slot Module Installation

Step 7: Secure the expansion slot module with the four retention screws previously removed.

3.6 IEI Networking Module Installation

The PUZZLE-IN001 allows installation of two IEI PuIM networking modules. To install a networking module, please follow the steps below.

Step 1: Remove the top cover from the PUZZLE-IN001. Please follow the instruction described in **Section 3.2**.

Step 2: Identify which slot is compatible with the networking module to be installed (refer to the following table and Figure 3-11). The slot marked with “A” must be installed with a networking module with an “A” mark; so does the “B” slot. **NOTE:** All marks are printed on the PCB board.

PUZZLE-IN001

Slot / PCIe Signals	A (One PCIe x8 + Two PCIe x4)	B (Two PCIe x4 + Four PCIe x2)
Supported Networking Module	PuIM-10G4SF-XL710 PuIM-10G4SF-MLX PuIM-25G2SF-MLX	PuIM-1G4T-I211 PuIM-10G4SF-MLX PuIM-1G8T-BMC5720 PuIM-10G4T-AQC107

Step 3: Remove the two Torx (star) screws indicated below to remove the slot cover. Save the slot cover screws.



Figure 3-11: Networking Module Slot Cover Screws

Step 4: Slide an IEI networking module into the slot until the module is seated in the slot correctly and securely. Install the previously-removed Torx screws to secure the module to the chassis.



Figure 3-12: Networking Module Installation

Step 5: Re-install the top cover.

3.7 M.2 Module Installation


**NOTE:**

The M.2 B-key slot is configured as SATA device by default. To change the M.2 slot to PCIe device, go to **Chipset → PCH-IO Configuration** BIOS menu and configure the **M.2 B Key (M2_1) device selection** BIOS option (see Section 4.4.2).

The M.2 slot is keyed in the B position and provides mounting screw position for 2260-size/2280-size M.2 module. To install an M.2 module, please follow the steps below.

Step 1: Remove the top cover from the PUZZLE-IN001. See **Section 3.2**.

Step 2: Locate the M.2 slot on the motherboard.

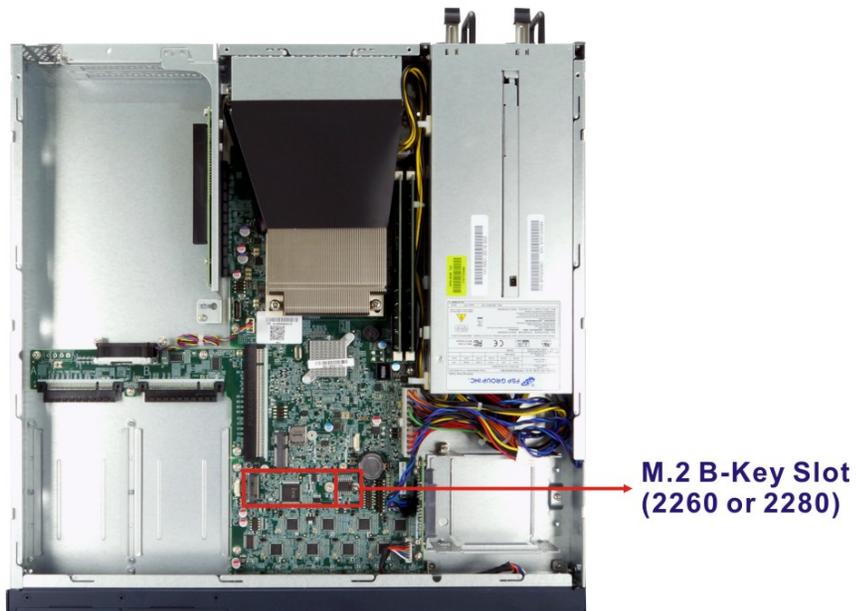

Step 3: Remove the on-board retention screw. **NOTE:** For 2280-size module installation, the screw and the standoff for the 2260 module must also be removed to avoid interference.

PUZZLE-IN001

Step 4: Line up the notch on the module with the notch on the slot. Slide the M.2 module into the socket at an angle of about 20°.

Step 5: Push the M.2 module down and secure it with the previously removed retention screw.

3.8 PCIe Mini Card Installation

The PUZZLE-IN001 has one full-size/half-size PCIe Mini slot on the motherboard. To install a full-size module, follow the instructions below.

Step 1: Remove the top cover from the PUZZLE-IN001. See **Section 3.2**.

Step 2: Locate the PCIe Mini slot on the motherboard (Figure 3-13).

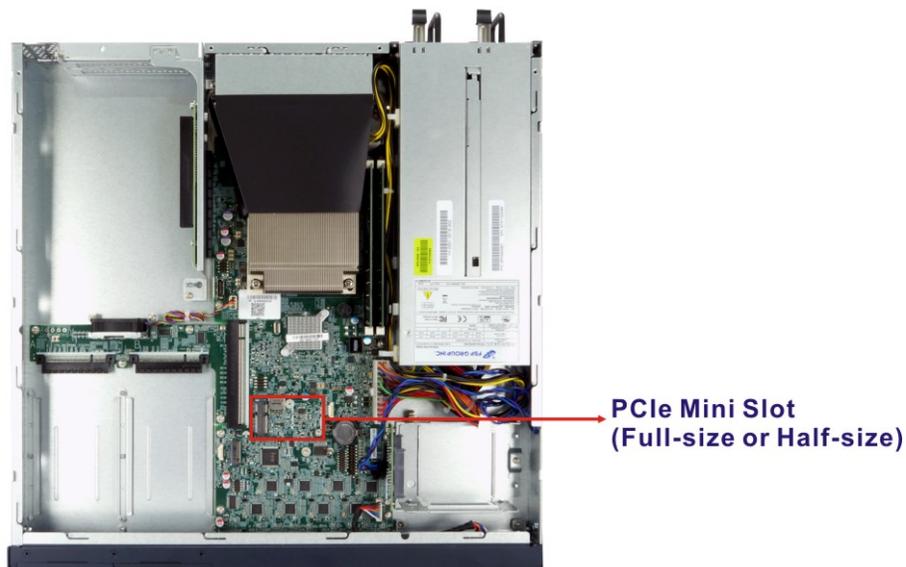


Figure 3-13: PCIe Mini Slot Location

Step 3: Remove the pre-installed retention screw from the standoff.

Step 4: Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the socket at an angle of about 20°.

Step 5: Secure the full-size PCIe Mini card with the retention screw previously removed.

3.8.1 Half-size PCIe Mini Card Installation

The PCIe Mini slot also allows installation of a half-size PCIe Mini card. To install a half-size PCIe Mini card, please follow the steps below.

- Step 1:** Remove the pre-installed retention screw and the standoff from the motherboard.
- Step 2:** Install the previously removed standoff to the screw hole for the half-size PCIe Mini card.
- Step 3:** Line up the notch on the card with the notch on the slot. Slide the PCIe Mini card into the socket at an angle of about 20°.
- Step 4:** Secure the half-size PCIe Mini card with the retention screw previously removed.

3.9 LAN Connection

The LAN connectors on the front panel allow connection to an external network. The pinouts of the LAN connectors are listed below.

Pin	Description	Pin	Description
1	TRD0+	5	TRD2-
2	TRD0-	6	TRD1-
3	TRD1+	7	TRD3+
4	TRD2+	8	TRD3-

Table 3-1: LAN Pinouts

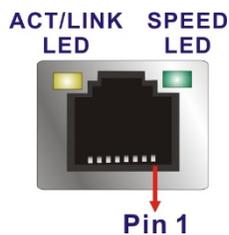


Figure 3-14: RJ-45 Ethernet Connector

PUZZLE-IN001

The RJ-45 Ethernet connector has two status LEDs, one yellow and one green/orange. The yellow LED indicates activity on the port and the green/orange LED indicates the speed. See **Table 3-2**.

Activity/Link LED		Speed LED	
STATUS	DESCRIPTION	STATUS	DESCRIPTION
Off	No link	Off	10 Mbps connection
Yellow	Linked	Green	100 Mbps connection
Blinking	TX/RX activity	Orange	1 Gbps connection

Table 3-2: RJ-45 Ethernet Connector LEDs

3.10 Console Connection

The PUZZLE-IN001 has one RJ-45 serial device connector on the front panel. The RJ-45 connector for the serial port can be identified easily as the RJ-45 for the network has two LEDs on the port, while the connectors for the serial cables don't. The pinouts of the serial port are listed below.

Pin	Description	Pin	Description
1	-NRTS1	5	GND
2	-NDTR1	6	NSIN1
3	NSOUT1	7	-NDSR1
4	GND	8	-NCTS1

Table 3-3: RJ-45 Serial Port Pinouts

The serial device slot (RJ-45) connects to a cable with a standard D-sub 9 connector or a USB connector (varied from SKU) at the other end.

3.11 Mounting the System

The PUZZLE-IN001 is shipped with two mounting brackets that support 1U rack mount. To install the mounting brackets, please follow the steps below.

- Step 1:** Align the three retention screw holes in each bracket with the corresponding retention screw holes on the sides of the PUZZLE-IN001.
- Step 2:** Secure the brackets to the system by inserting three retention screws (M4*6) into each bracket (**Figure 3-15**). Make sure the screws are tight and on the right positions.



Figure 3-15: Rack Mounting Bracket Installation

3.12 Power-On Procedure



WARNING:

Make sure a power supply with the correct input voltage is being fed into the system. Incorrect voltages applied to the system may cause damage to the internal electronic components and may also cause injury to the user.

To power-on the PUZZLE-IN001 please follow the steps below:

- Step 1:** Connect the power source to the power inlets on the rear panel.
- Step 2:** Turn on the power switch to power up the system.

PUZZLE-IN001

Step 3: The power LED indicator on the front panel turns to green.

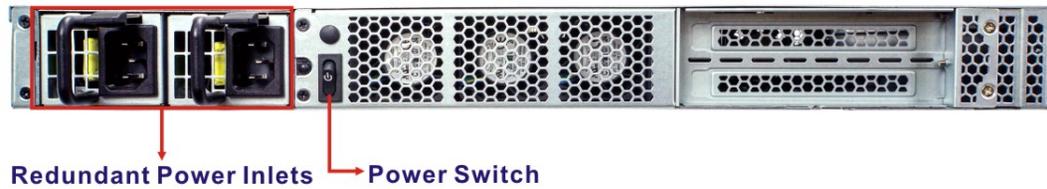


Figure 3-16: Power-on

3.13 Available Drivers

All the drivers for the PUZZLE-IN001 are available on IEI Resource Download Center (<https://download.ieiworld.com>). Type PUZZLE-IN001 and press Enter to find all the relevant software, utilities, and documentation.

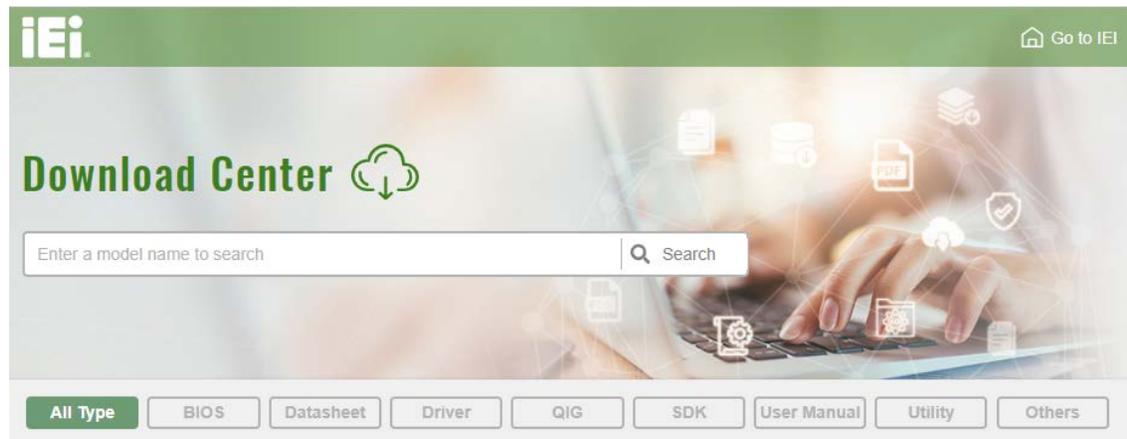


Figure 3-17: IEI Resource Download Center




NOTE:

To install software from the downloaded ISO image file in Windows 10, double-click the ISO file to mount it as a virtual drive to view its content.


3.13.1 Driver Download

To download drivers from IEI Resource Download Center, follow the steps below.

Step 1: Go to <https://download.ieiworld.com>. Type PUZZLE-IN001 and press Enter.

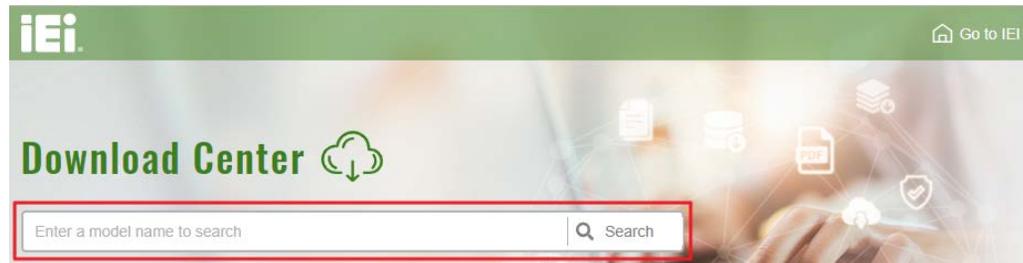

Step 2: All product-related software, utilities, and documentation will be listed. You can choose **Driver** to filter the result.

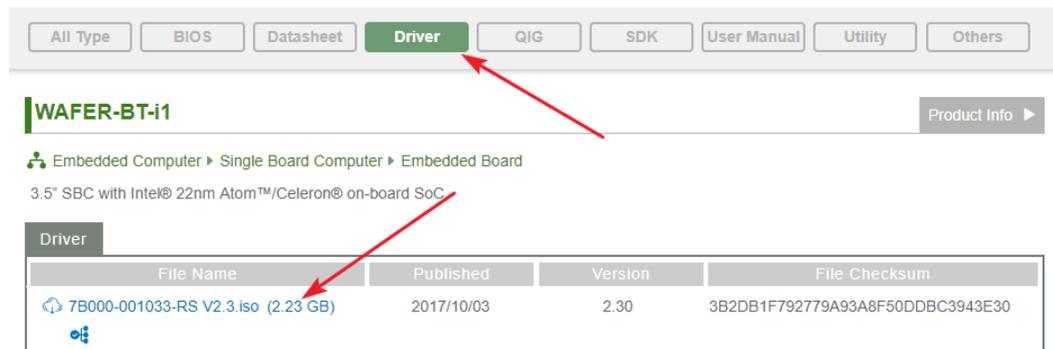


WAFER-BT-i1 Product Info ▶

Embedded Computer ▶ Single Board Computer ▶ Embedded Board
3.5" SBC with Intel® 22nm Atom™/Celeron® on-board SoC

File Name	Published	Version	File Checksum
7B000-001033-RS V2.3.iso (2.23 GB)	2017/10/03	2.30	3B2DB1F792779A93A8F50DDBC3943E30

Step 3: Click the driver file name on the page and you will be prompted with the following window. You can download the entire ISO file (❶), or click the small arrow to find an individual driver and click the file name to download (❷).

PUZZLE-IN001

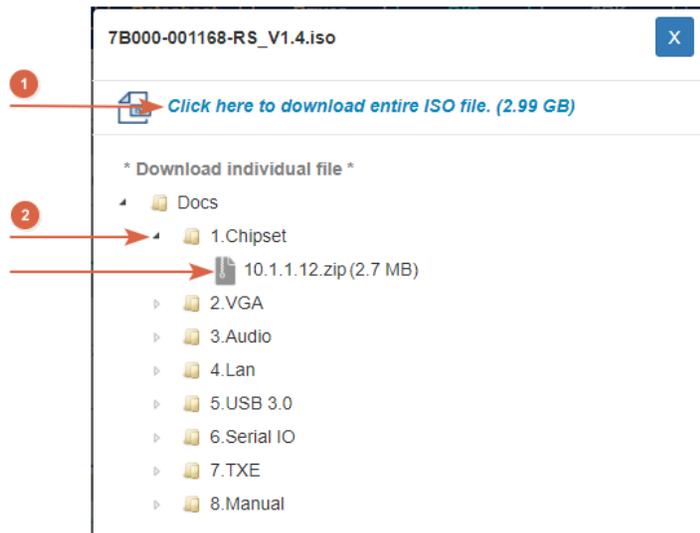

3.14 Maintenance

**WARNING:**

The following instructions should only be performed by an authorized and trained technician.

Before starting, please ensure that you turn off the PUZZLE-IN001, disconnect the power cords, network cable(s), and also remove any other device/cable that is attached to the server.


Take Anti-Static precautions whenever maintenance is being carried out on the system components. Failure to take anti-static precautions can cause permanent system damage. For more details on anti-static precautions, please refer to **Section 2.1**.

3.14.1 Power Supply Unit Replacement

To replace a failed power supply unit, please follow the steps below.

Step 1: Turn off the PUZZLE-IN001. Disconnect the power cords, network cable(s), and any other connectors or cables from the PUZZLE-IN001.

Step 2: Firmly press and hold the black button on back of PSU downwards. Pull out power supply by pulling the black handle.

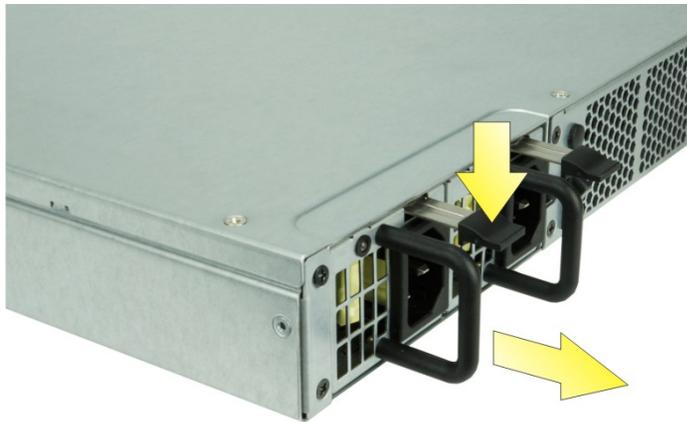

Step 3: Insert new power supply into the PUZZLE-IN001.



Step 4: Connect the power cord to the PUZZLE-IN001.

Step 5: Power on the system.

PUZZLE-IN001

3.14.2 Jumper Settings

To configure the jumper settings, please follow the steps below.

Step 1: Remove the top cover. See **Section 3.2**.

Step 2: Locate the jumper/button on the embedded motherboard.

Step 3: Make the jumper settings in accordance with the settings described and defined in the following sections.

3.14.2.1 Clear CMOS

If the PUZZLE-IN001 fails to boot due to improper BIOS settings, the clear CMOS button clears the CMOS data and resets the system BIOS information. To do this, push the clear CMOS button for a few seconds.

If the “CMOS Settings Wrong” message is displayed during the boot up process, the fault may be corrected by pressing the F1 to enter the CMOS Setup menu. Do one of the following:

- Enter the correct CMOS setting
- Load Optimal Defaults
- Load Failsafe Defaults.

After having done one of the above, save the changes and exit the CMOS Setup menu.

The clear CMOS button location is shown in **Figure 3-18** below.

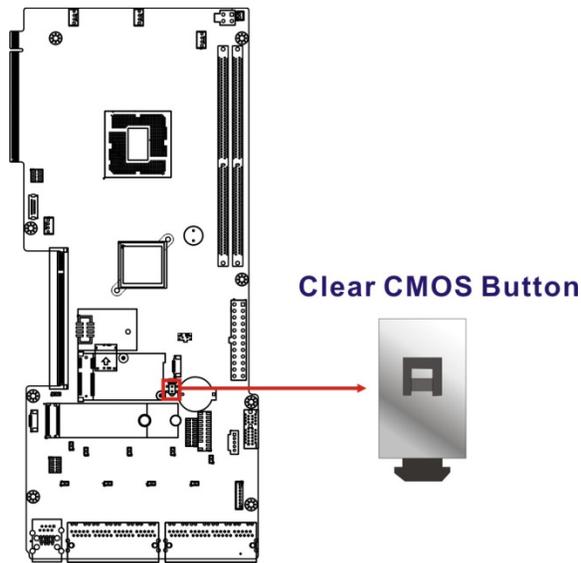


Figure 3-18: Clear CMOS Button Location

3.14.2.2 Flash Descriptor Security Override Jumper

The Flash Descriptor Security Override jumper (J_FLASH1) allows users to enable or disable the ME firmware update. Refer to **Figure 3-19** and **Table 3-4** for the jumper location and settings.

Setting	Description
Short 1-2	Disabled (default)
Short 2-3	Enabled

Table 3-4: Flash Descriptor Security Override Jumper Settings

PUZZLE-IN001

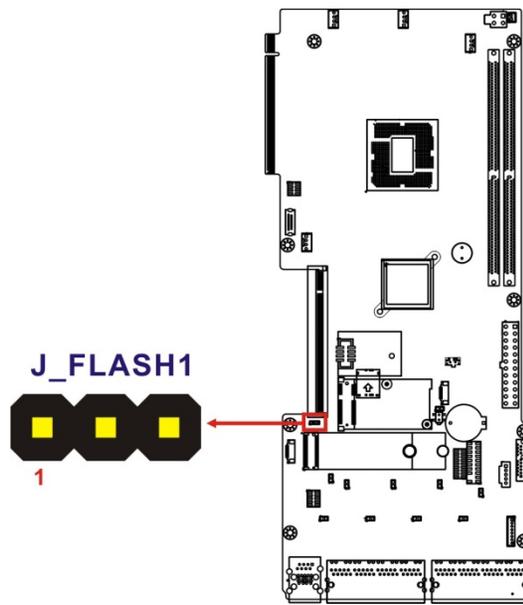


Figure 3-19: Flash Descriptor Security Override Jumper Location

To update the ME firmware, please follow the steps below.

- Step 1:** Before turning on the system power, short pin 2-3 of the jumper.
- Step 2:** Update the BIOS and ME firmware, and then turn off the system power.
- Step 3:** Remove the metal clip on the jumper or return to its default setting (short pin 1-2).
- Step 4:** Restart the system. The system will reboot 2~3 times to complete the ME firmware update.

Chapter

4

BIOS

PUZZLE-IN001

4.1 Introduction

The BIOS is programmed onto the BIOS chip. The BIOS setup program allows changes to certain system settings. This chapter outlines the options that can be changed.



NOTE:

Some of the BIOS options may vary throughout the life cycle of the product and are subject to change without prior notice.

4.1.1 Starting Setup

The UEFI BIOS is activated when the computer is turned on. The setup program can be activated in one of two ways.

1. Press the **DEL** or **F2** key as soon as the system is turned on or
2. Press the **DEL** or **F2** key when the “**Press DEL or F2 to enter SETUP**” message appears on the screen.

If the message disappears before the **DEL** or **F2** key is pressed, restart the computer and try again.

4.1.2 Using Setup

Use the arrow keys to highlight items, press **ENTER** to select, use the PageUp and PageDown keys to change entries, press **F1** for help and press **ESC** to quit. Navigation keys are shown in **Table 4-1**.

Key	Function
Up arrow	Move to previous item
Down arrow	Move to next item
Left arrow	Move to the item on the left hand side
Right arrow	Move to the item on the right hand side
+	Increase the numeric value or make changes

Key	Function
-	Decrease the numeric value or make changes
Esc key	Main Menu – Quit and not save changes into CMOS Status Page Setup Menu and Option Page Setup Menu -- Exit current page and return to Main Menu
F1 key	General help, only for Status Page Setup Menu and Option Page Setup Menu
F2 key	Load previous values
F3 key	Load optimized defaults
F4 key	Save changes and exit BIOS

Table 4-1: BIOS Navigation Keys

4.1.3 Getting Help

When **F1** is pressed a small help window describing the appropriate keys to use and the possible selections for the highlighted item appears. To exit the Help Window press **Esc** or the **F1** key again.

4.1.4 Unable to Reboot after Configuration Changes

If the computer cannot boot after changes to the system configuration is made, CMOS defaults. Use the clear CMOS button described in **Chapter 3**.

4.1.5 BIOS Menu Bar

The **menu bar** on top of the BIOS screen has the following main items:

- Main – Changes the basic system configuration.
- Advanced – Changes the advanced system settings.
- Chipset – Changes the chipset settings.
- Security – Sets User and Supervisor Passwords.
- Boot – Changes the system boot configuration.
- Save & Exit – Selects exit options and loads default settings

PUZZLE-IN001

The following sections completely describe the configuration options found in the menu items at the top of the BIOS screen and listed above.

4.2 Main

The **Main** BIOS menu (**BIOS Menu 1**) appears when the **BIOS Setup** program is entered.

The **Main** menu gives an overview of the basic system information.

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.					
Main	Advanced	Chipset	Security	Boot	Save & Exit
BIOS Information				Set the Date. Use Tab to switch between Date elements.	
BIOS Vendor	American Megatrends				
Core Version	5.13				
Compliance	UEFI 2.6; PI 1.4				
Project Version	Z532AR11.R01				
Build Date and Time	09/06/2018 16:11:46				
iWDD Vendor		iEi			
iWDD Version		Z532ER11.bin			
Processor Information					
Name	CoffeeLake DT				
Brand String	Intel(R) Core(TM)				
	i3-8100T CPU @ 3.10GHz				
Frequency	3100 MHz				
ID	0x906EB				
Stepping	B0				
Number of Processors	4Core(s) / 4Thread(s)				
Microcode Revision	8E				
GT Info	GT2 (0x3E91)				
IGFX VBIOS Version		1010			
Memory RC Version		0.7.1.58			
Total Memory		16384 MB			
Memory Frequency		2400 MHz			
PCH Information					
Name	CNL PCH-H				
PCH SKU	C246				
Stepping	B0				
ME FW Version		12.0.0.1068			
ME Firmware SKU		Corporate SKU			
Access Level		Administrator			
System Date		[Thu 01/01/2018]			
System Time		[01:10:27]			

→←: Select Screen					
↑ ↓: Select Item					
Enter: Select					
+/-: Change Opt.					
F1: General Help					
F2: Previous Values					
F3: Optimized Defaults					
F4: Save & Exit					
ESC: Exit					
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.					

BIOS Menu 1: Main

The **Main** menu has two user configurable fields:

➔ **System Date [xx/xx/xx]**

Use the **System Date** option to set the system date. Manually enter the day, month and year.

➔ **System Time [xx:xx:xx]**

Use the **System Time** option to set the system time. Manually enter the hours, minutes and seconds.

4.3 Advanced

Use the **Advanced** menu (**BIOS Menu 2**) to configure the CPU and peripheral devices through the following sub-menus:



WARNING!

Setting the wrong values in the sections below may cause the system to malfunction. Make sure that the settings made are compatible with the hardware.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main  Advanced  Chipset  Security  Boot  Save & Exit
-----
> CPU Configuration
> Trusted Computing
> iWDD H/M Monitor
> IT8528 Super IO Configuration
> Serial Port Console Redirection
> NVMe Configuration

Trusted Computing
Settings

-----
➔←: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
    
```

BIOS Menu 2: Advanced

PUZZLE-IN001

4.3.1 CPU Configuration

Use the **CPU Configuration** menu (**BIOS Menu 3**) to view detailed CPU specifications or enable the Intel Virtualization Technology.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
CPU Configuration
Type                Intel(R) Core(TM)
                   i3-8100T CPU @ 3.10GHz
ID                 0x906EB
Speed              3100 MHz
L1 Data Cache     32 kB x 4
L1 Instruction Cache 32 kB x 4
L2 Cache          256 kB x 4
L3 Cache          6 MB
L4 Cache          N/A
VMX                Supported
SMX/TXT            Not Supported

Intel (VMX) Virtualization [Enabled]
Technology
Active Processor Cores   [All]

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 3: CPU Configuration

➔ Intel (VMX) Virtualization Technology [Enabled]

Use the **Intel (VMX) Virtualization Technology** option to enable or disable virtualization on the system. When combined with third party software, Intel® Virtualization technology allows several OSs to run on the same system at the same time.

- ➔ **Disabled** Disables Intel Virtualization Technology.
- ➔ **Enabled** **DEFAULT** Enables Intel Virtualization Technology.

➔ Active Processor Cores [All]


Use the **Active Processor Cores** BIOS option to enable numbers of cores in the processor package.

- ➔ **All** **DEFAULT** Enable all cores in the processor package.

- ➔ 1 Enable one core in the processor package.
- ➔ 2 Enable two cores in the processor package.
- ➔ 3 Enable three cores in the processor package.

4.3.2 Trusted Computing

Use the **Trusted Computing** menu (**BIOS Menu 4**) to configure settings related to the Trusted Computing Group (TCG) Trusted Platform Module (TPM).

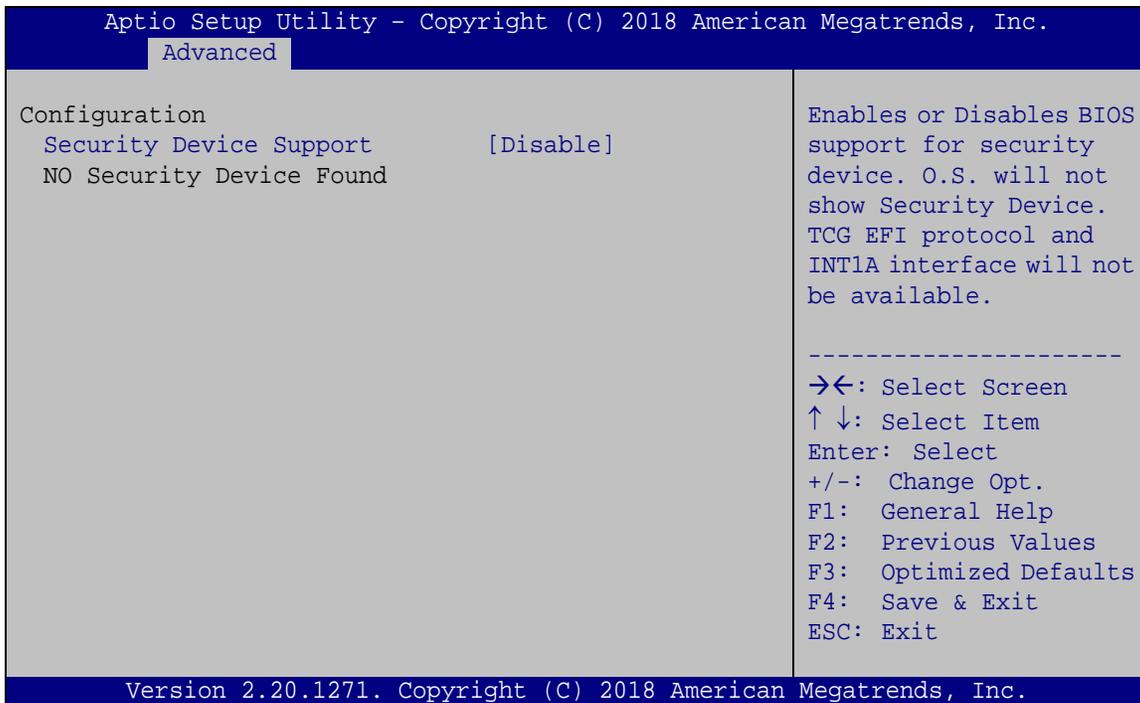

BIOS Menu 4: Trusted Computing

➔ Security Device Support [Disable]

Use the **Security Device Support** option to configure support for the TPM.

- ➔ **Disable** **DEFAULT** TPM support is disabled.
- ➔ **Enable** TPM support is enabled.

PUZZLE-IN001

4.3.3 iWDD H/W Monitor

The **iWDD H/W Monitor** menu (**BIOS Menu 5**) contains the fan configuration submenu, and displays the system temperature and CPU fan speed.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Advanced
PC Health Status
CPU temperature           :+42 °C
System temperature       :+31 °C

CPU_FAN1 Speed           :3307 RPM
CPU_FAN3 Speed           :3106 RPM
CPU_FAN4 Speed           :3369 RPM
CPU_FAN2 Speed           :1705 RPM

CPU_CORE                  :+0.973 V
+5V                       :+5.005 V
+12V                      :+12.193 V
+DDR                      :+1.202 V
+5VSB                     :+5.070 V
+3.3V                     :+3.357 V
+3.3VSB                   :+3.306 V

> Smart Fan Mode Configuration

Smart Fan Mode Select
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.

```

BIOS Menu 5: iWDD H/W Monitor**→ PC Health Status**


The following system parameters and values are shown. The system parameters that are monitored are:

- System Temperatures:
 - CPU Temperature
 - System Temperature
- Fan Speeds:
 - CPU Fan Speed
- Voltages:
 - CPU_CORE
 - +5V

- +12V
- DDR
- +5VSB
- +3.3V
- +3.3VSB

4.3.3.1 Smart Fan Mode Configuration

Use the **Smart Fan Mode Configuration** submenu (**BIOS Menu 6**) to configure the CPU/system fan temperature and speed settings.

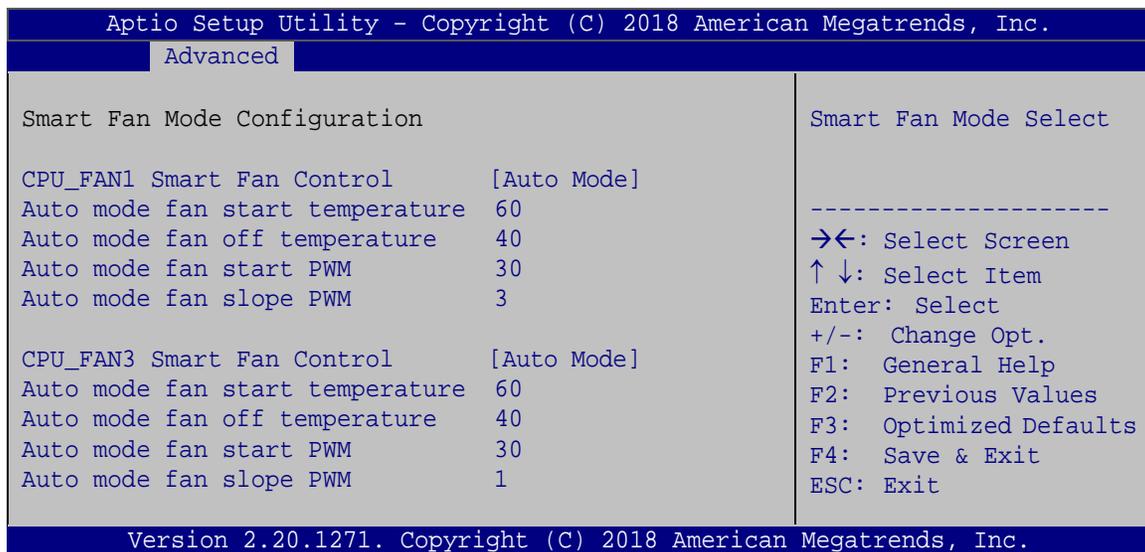

BIOS Menu 6: Smart Fan Mode Configuration

→ CPU_FAN Smart Fan Control [Auto Mode]

Use the **CPU_FAN Smart Fan Control** options to configure the CPU Smart Fans.

- **Manual Mode** The fan spins at the speed set in Manual Mode settings.
- **Auto Mode** **DEFAULT** The fan adjusts its speed using Auto Mode settings.

The following options can only be set if the CPU Smart Fan Control option is set to Auto Mode.

PUZZLE-IN001

→ Auto mode fan start temperature

If the CPU temperature is between **fan off** and **fan start**, the fan speed change to **fan start PWM**. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ Auto mode fan off temperature

If the CPU temperature is lower than the value set this option, the fan speed change to be lowest. To set a value, Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ Auto mode fan start PWM


Use the **Auto mode fan start PWM** option to set the PWM start value. Use the + or – key to change the value or enter a decimal number between 1 and 100.

→ Auto mode fan slope PWM

Use the **Auto mode fan slope PWM** option to select the linear rate at which the PWM mode increases with respect to an increase in temperature. Use the + or – key to change the value or enter a decimal number between 1 and 8.

4.3.4 IT8528 Super IO Configuration


Use the **IT8528 Super IO Configuration** menu (**BIOS Menu 7**) to set or change the configurations for the parallel ports and serial ports.

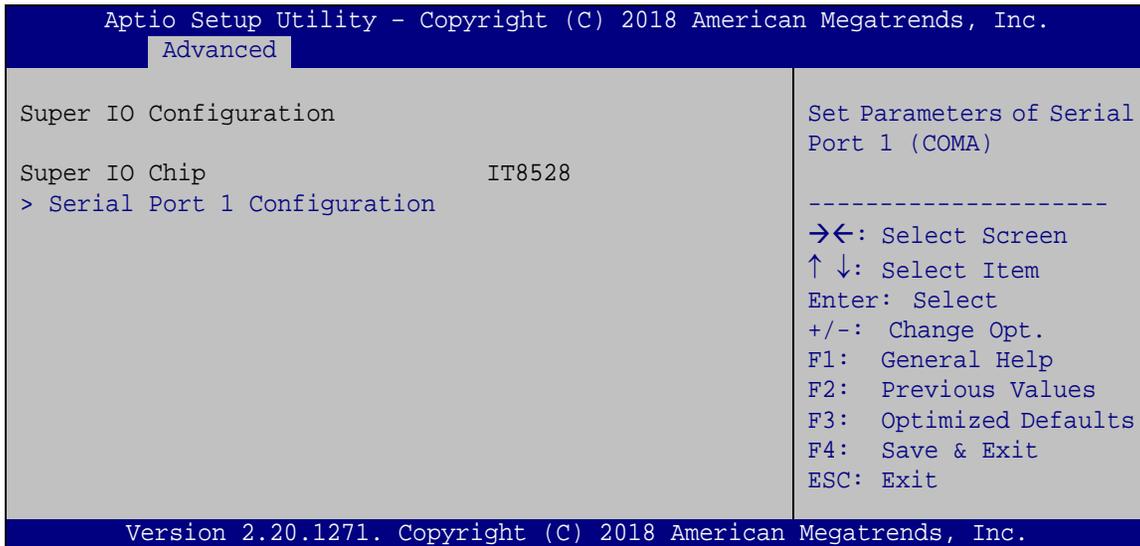

BIOS Menu 7: IT8528 Super IO Configuration

4.3.4.1 Serial Port 1 Configuration

Use the **Serial Port 1 Configuration** menu (**BIOS Menu 8**) to configure the serial port n.

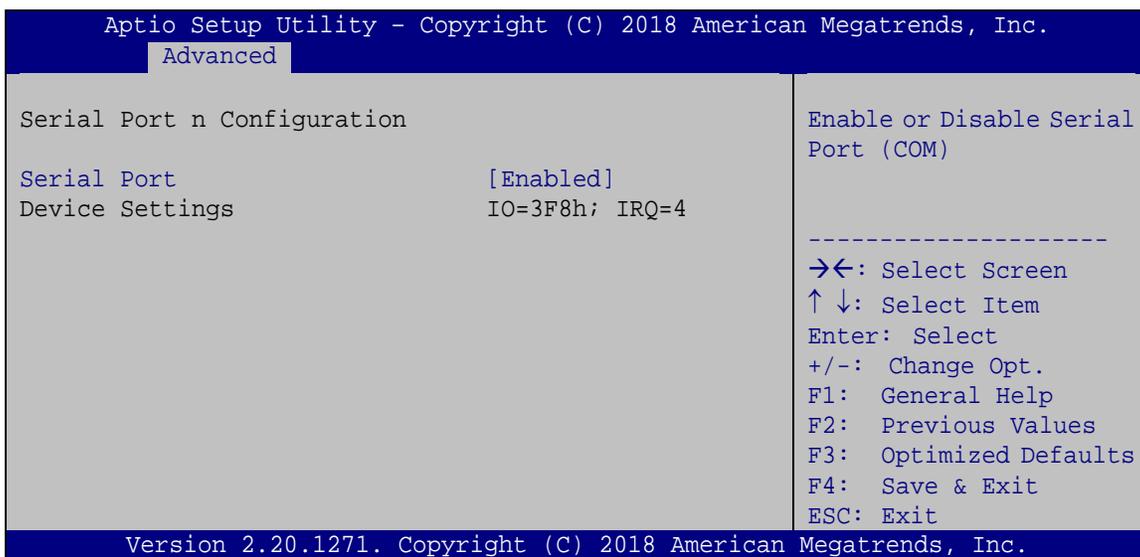

BIOS Menu 8: Serial Port 1 Configuration Menu

PUZZLE-IN001


→ Serial Port [Enabled]

Use the **Serial Port** option to enable or disable the serial port.

- **Disabled** Disable the serial port
- **Enabled** **DEFAULT** Enable the serial port

4.3.5 Serial Port Console Redirection

The **Serial Port Console Redirection** menu (**BIOS Menu 9**) allows the console redirection options to be configured. Console redirection allows users to maintain a system remotely by re-directing keyboard input and text output through the serial port.

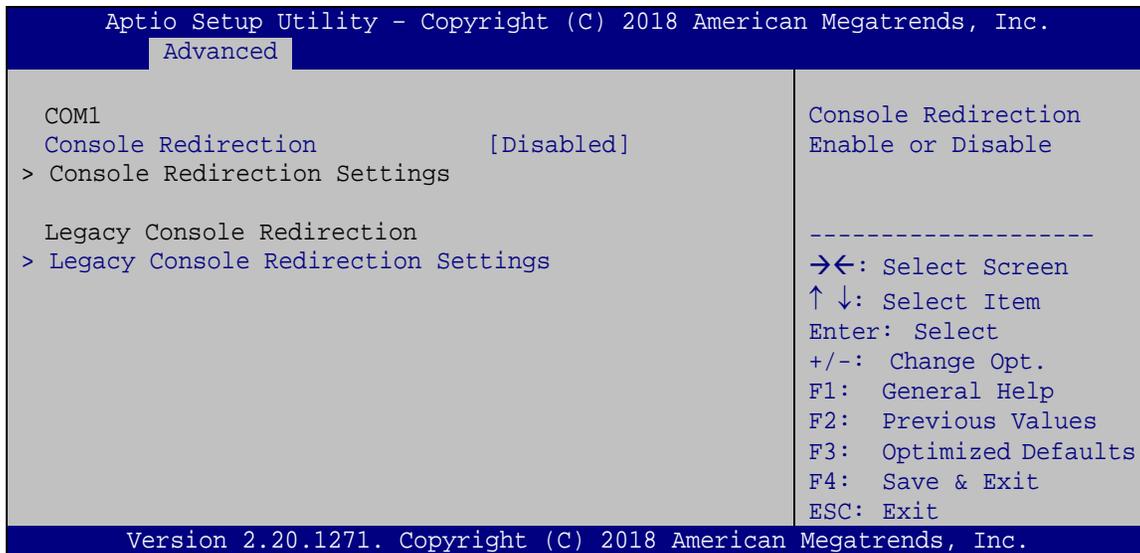

BIOS Menu 9: Serial Port Console Redirection

→ Console Redirection [Enabled]

Use **Console Redirection** option to enable or disable the console redirection function.

- **Disabled** Disabled the console redirection function
- **Enabled** **DEFAULT** Enabled the console redirection function

The following options are available in the **Console Redirection Settings** submenu when the **Console Redirection** option is enabled.

→ Terminal Type [ANSI]

Use the **Terminal Type** option to specify the remote terminal type.

- **VT100** The target terminal type is VT100
- **VT100+** The target terminal type is VT100+
- **VT-UTF8** The target terminal type is VT-UTF8
- **ANSI** **DEFAULT** The target terminal type is ANSI

→ Bits per second [115200]

Use the **Bits per second** option to specify the serial port transmission speed. The speed must match the other side. Long or noisy lines may require lower speeds.

- **9600** Sets the serial port transmission speed at 9600.
- **19200** Sets the serial port transmission speed at 19200.
- **57600** Sets the serial port transmission speed at 57600.
- **115200** **DEFAULT** Sets the serial port transmission speed at 115200.

→ Data Bits [8]

Use the **Data Bits** option to specify the number of data bits.

- **7** Sets the data bits at 7.
- **8** **DEFAULT** Sets the data bits at 8.

→ Parity [None]

Use the **Parity** option to specify the parity bit that can be sent with the data bits for detecting the transmission errors.

- **None** **DEFAULT** No parity bit is sent with the data bits.
- **Even** The parity bit is 0 if the number of ones in the data bits is even.

PUZZLE-IN001

- ➔ **Odd** The parity bit is 0 if the number of ones in the data bits is odd.
- ➔ **Mark** The parity bit is always 1. This option does not provide error detection.
- ➔ **Space** The parity bit is always 0. This option does not provide error detection.

➔ **Stop Bits [1]**

Use the **Stop Bits** option to specify the number of stop bits used to indicate the end of a serial data packet. Communication with slow devices may require more than 1 stop bit.

- ➔ **1** **DEFAULT** Sets the number of stop bits at 1.
- ➔ **2** Sets the number of stop bits at 2.

4.3.5.1 Legacy Console Redirection Settings

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
  Advanced
Legacy Serial Redirection Port  [COM1]
Select a COM port to
display redirection of
Legacy OS and Legacy
OPROM Messages.

-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 10: Legacy Console Redirection Settings

→ Legacy Serial Redirection Port [COM1]

Use the **Legacy Serial Redirection Port** option to select a COM port to display redirection of legacy OS and legacy OPRM messages. Configuration option is listed below.

- COM1 **Default**

4.3.6 NVMe Configuration

Use the **NVMe Configuration (BIOS Menu 11)** menu to display the NVMe controller and device information.

```
Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Advanced
NVMe Configuration
No NVMe Device Found
-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
```

BIOS Menu 11: NVMe Configuration

PUZZLE-IN001

4.4 Chipset

Use the **Chipset** menu (**BIOS Menu 12**) to access the PCH IO and System Agent (SA) configuration menus.

**WARNING!**

Setting the wrong values for the Chipset BIOS selections in the Chipset BIOS menu may cause the system to malfunction.


```
Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Main   Advanced  Chipset  Security  Boot   Save & Exit
-----
> System Agent (SA) Configuration      System Agent (SA)
> PCH-IO Configuration                Parameters
-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
```

BIOS Menu 12: Chipset

4.4.1 System Agent (SA) Configuration

Use the **System Agent (SA) Configuration** menu (**BIOS Menu 13**) to configure the System Agent (SA) parameters.

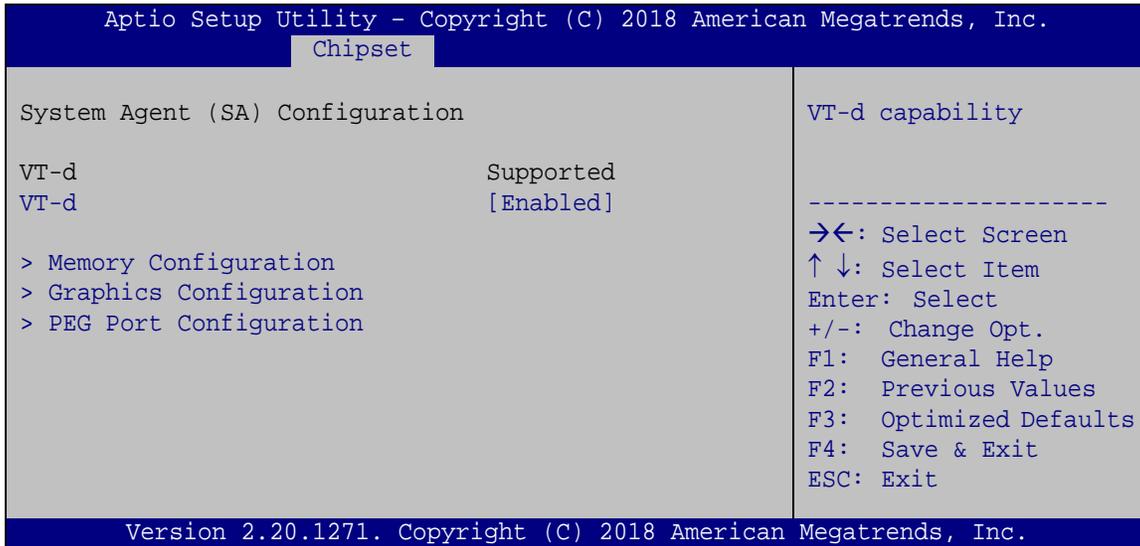

BIOS Menu 13: System Agent (SA) Configuration

→ VT-d [Enabled]

Use the **VT-d** option to enable or disable VT-d capability.

- **Disabled** Disables VT-d capability.
- **Enabled** **DEFAULT** Enables VT-d capability.

PUZZLE-IN001

4.4.1.1 Memory Configuration

Use the **Memory Configuration** submenu (**BIOS Menu 14**) to view memory information.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Chipset
Memory Configuration
CHA_DIMM0          Populated & Enabled
  Size              8192 MB (DDR4)
  Number of Ranks   1
  Manufacturer      Unknown
CHB_DIMM0          Populated & Enabled
  Size              8192 MB (DDR4)
  Number of Ranks   1
  Manufacturer      Unknown
-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 14: Memory Configuration

4.4.1.2 Graphics Configuration

Use the **Graphics Configuration (BIOS Menu 15)** menu to configure the video device connected to the system.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Chipset
Graphics Configuration
Primary Display     [Auto]
Internal Graphics   [Enabled]
DVMT Pre-Allocated [32M]
DVMT Total Gfx Mem [MAX]
-----
Select which of
IGFX/PEG/PCI Graphics
device should be Primary
Display.
-----
-><: Select Screen
↑ ↓: Select Item
Enter: Select
+/-: Change Opt.
F1:  General Help
F2:  Previous Values
F3:  Optimized Defaults
F4:  Save & Exit
ESC: Exit
Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.
  
```

BIOS Menu 15: Graphics Configuration

→ Primary Display [Auto]

Use the **Primary Display** option to select the primary graphics controller the system uses.

The following options are available:

- Auto **Default**
- IGFX
- PEG
- PCIe

→ Internal Graphics [Enabled]

Use the **Internal Graphics** option to keep IGFX enabled basing on the setup options. The following options are available:

- Auto
- Disabled
- Enabled **Default**

→ DVMT Pre-Allocated [32M]

Use the **DVMT Pre-Allocated** option to set the amount of system memory allocated to the integrated graphics processor when the system boots. The system memory allocated can then only be used as graphics memory, and is no longer available to applications or the operating system. Configuration options are listed below:

- 32M **Default**
- 64M


→ DVMT Total Gfx Mem [MAX]

Use the **DVMT Total Gfx Mem** option to select DVMT5.0 total graphic memory size used by the internal graphic device. The following options are available:

- 128M
- 256M
- MAX **Default**

PUZZLE-IN001

4.4.1.3 PEG Port Configuration

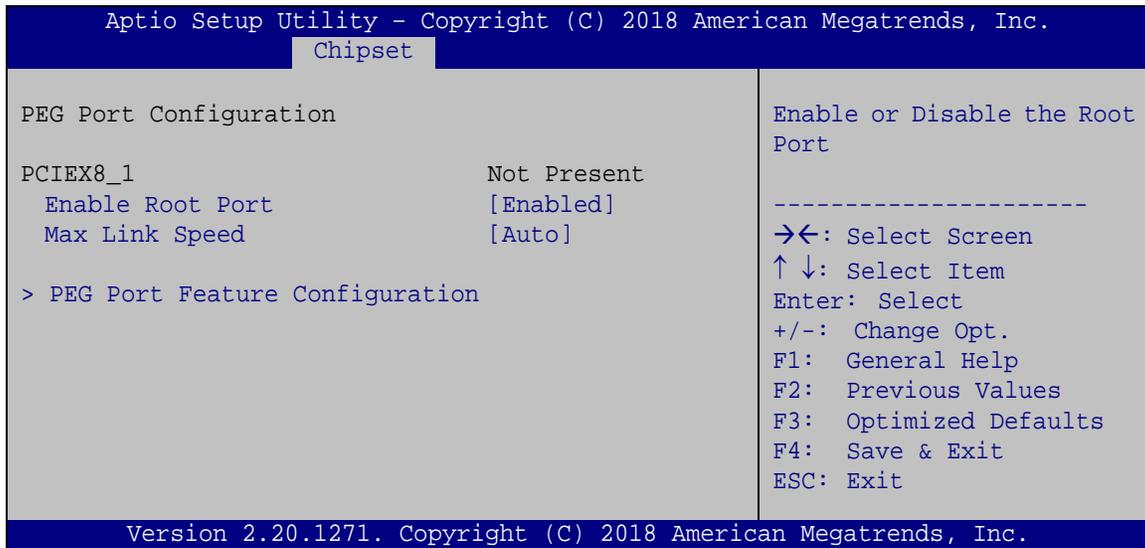

BIOS Menu 16: PEG Port Configuration

→ Enable Root Port [Enabled]

Use the **Enable Root Port** option to enable or disable the PCI Express (PEG) controller.

→ **Disabled** Disables the PCI Express (PEG) controller.

→ **Enabled** **DEFAULT** Enables the PCI Express (PEG) controller.

→ Max Link Speed [Auto]


Use the **Max Link Speed** option to select the maximum link speed of the PCI Express slot.

The following options are available:

- Auto **Default**
- Gen1
- Gen2
- Gen3

4.4.2 PCH-IO Configuration

Use the **PCH-IO Configuration** menu (**BIOS Menu 17**) to configure the PCH parameters.

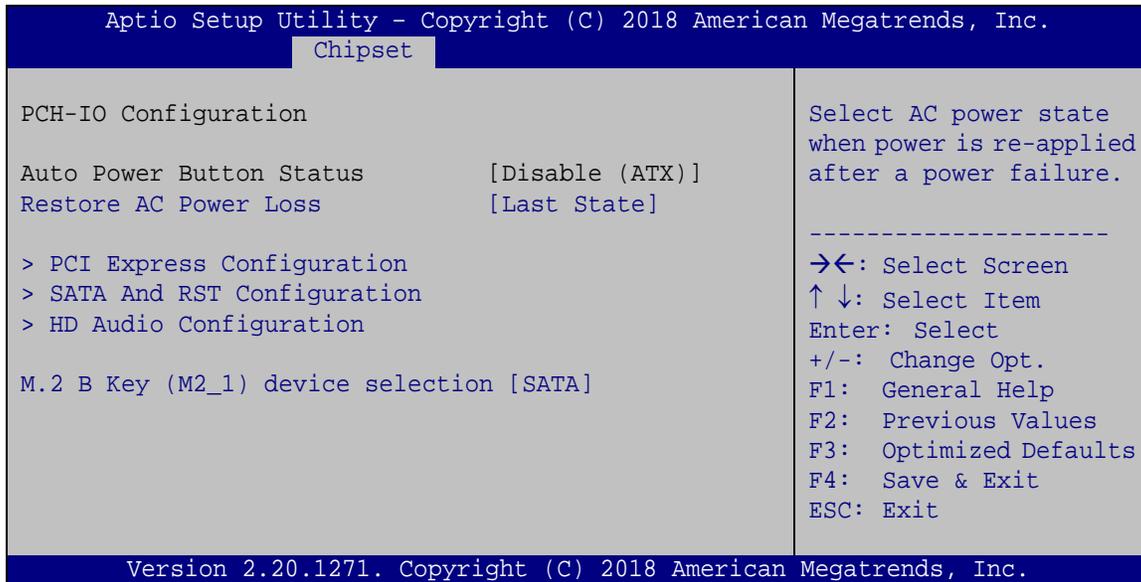

BIOS Menu 17: PCH-IO Configuration

→ Restore AC Power Loss [Last State]

Use the **Restore AC Power Loss** BIOS option to specify what state the system returns to if there is a sudden loss of power to the system.

- **Power Off** The system remains turned off
- **Power On** The system turns on
- **Last State** **DEFAULT** The system returns to its previous state. If it was on, it turns itself on. If it was off, it remains off.

→ M.2 B Key (M2_1) device selection [SATA]


Use the **M.2 B Key (M2_1) device selection [SATA]** BIOS option to configure M.2 device as SATA or PCIe device.

- **SATA** **DEFAULT** Configure M.2 device as SATA device.
- **PCIe** Configure M.2 device as PCIe device.

PUZZLE-IN001

4.4.2.1 PCI Express Configuration

Use the **PCI Express Configuration** menu (**BIOS Menu 18**) to configure the PCI Express slot.

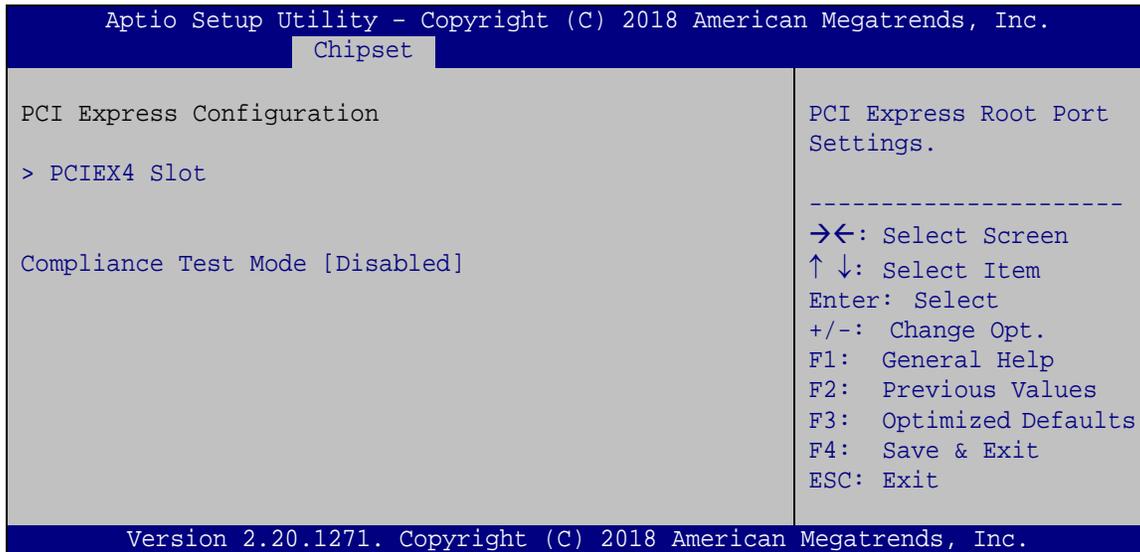


BIOS Menu 18: PCI Express Configuration

→ Compliance Test Mode [Disabled]

Use the **Compliance Test Mode** option to enable or disable detecting if a non-compliance PCI Express device is connected to the PCI Express slot.

- **Disabled** **DEFAULT** Disables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.
- **Enabled** Enables to detect if a non-compliance PCI Express device is connected to the PCI Express slot.

4.4.2.1.1 PCIEX4 Slot

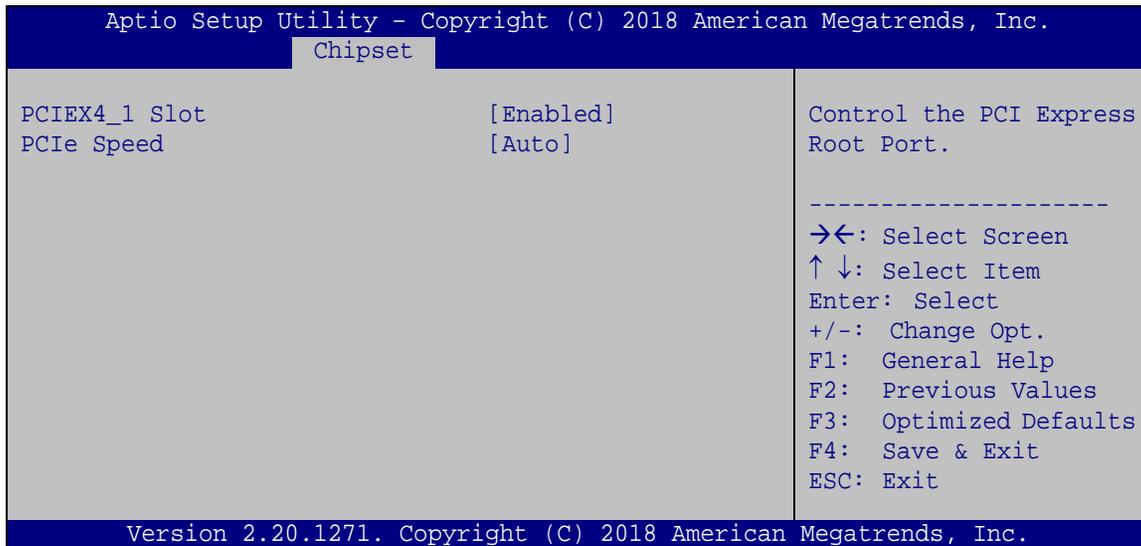

BIOS Menu 19: PCIEX4 Slot

➔ **PCIEX4_1 Slot [Enabled]]**

Use the **PCIEX4_1 Slot** option to enable or disable the PCIe x4 slot (PCIEX4_1).

- ➔ **Disabled** Disables the PCIe x4 slot.
- ➔ **Enabled** **DEFAULT** Enables the PCIe x4 slot.

➔ **PCIe Speed [Auto]**


Use this option to select the support type of the PCI Express slots. The following options are available:

- Auto **Default**
- Gen1
- Gen2
- Gen3

PUZZLE-IN001

4.4.2.2 SATA and RST Configuration

Use the **SATA and RST Configuration** menu (**BIOS Menu 20**) to change and/or set the configuration of the SATA devices installed in the system.

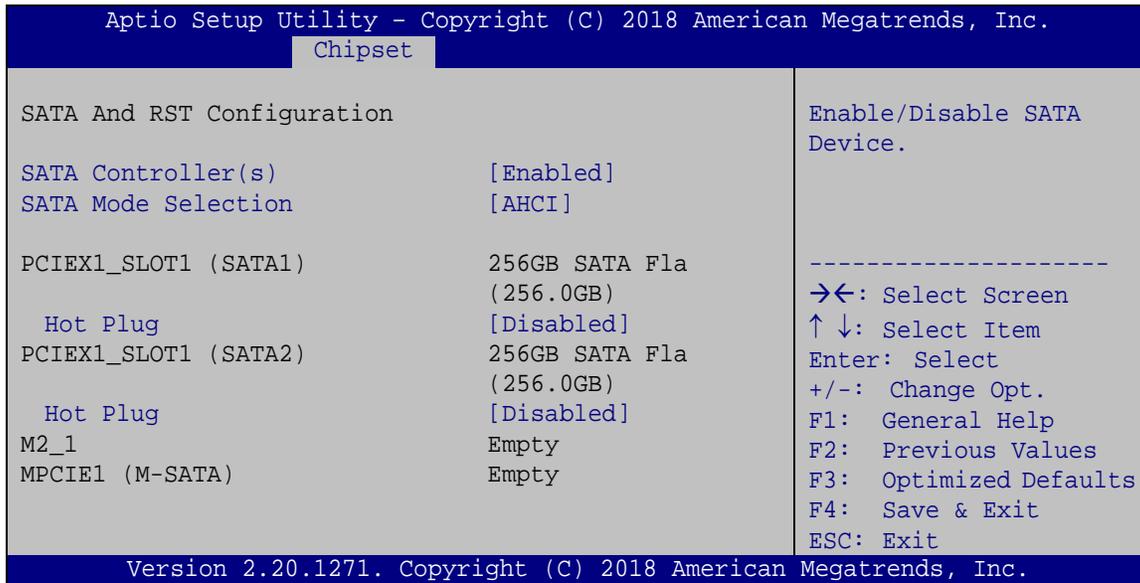

BIOS Menu 20: SATA and RST Configuration

→ SATA Controller(s) [Enabled]

Use the **SATA Controller(s)** option to configure the SATA controller(s).

- **Enabled** **DEFAULT** Enables the on-board SATA controller(s).
- **Disabled** Disables the on-board SATA controller(s).

→ **SATA Mode Selection [AHCI]**

Use the **SATA Mode Selection** option to determine how the SATA devices operate.

- **AHCI** **DEFAULT** Configures SATA devices as AHCI device.
- **Intel RST**
Premium With
Intel Optane
System
Acceleration Configures SATA devices to the Intel RST Premium With Intel Optane System Acceleration mode.

→ **Hot Plug**

Use the **Hot Plug** option to enable or disable the hot plug function.

- **Disabled** **DEFAULT** Disables the hot plug function.
- **Enabled** Enables the hot plug function.

PUZZLE-IN001

4.4.2.3 HD Audio Configuration

Use the **HD Audio Configuration** menu (**BIOS Menu 21**) to configure the PCH Azalia settings.

```

Aptio Setup Utility - Copyright (C) 2018 American Megatrends, Inc.
Chipset
HD Audio Configuration
HD Audio [Enabled]
Control Detection of the
HD-Audio device.
Disable = HDA will be
unconditionally disabled
Enabled = HDA will be
unconditionally enabled

-----
-><: Select Screen
↑↓: Select Item
Enter: Select
+/-: Change Opt.
F1: General Help
F2: Previous Values
F3: Optimized Defaults
F4: Save & Exit
ESC: Exit

Version 2.20.1271. Copyright (C) 2018 American Megatrends, Inc.

```


BIOS Menu 21: HD Audio Configuration**→ HD Audio [Enabled]**

Use the **HD Audio** option to enable or disable the High Definition Audio controller.

- **Disabled** The onboard High Definition Audio controller is disabled.
- **Enabled** **DEFAULT** The onboard High Definition Audio controller is enabled.

4.5 Security

Use the **Security** menu (**BIOS Menu 22**) to set system and user passwords.

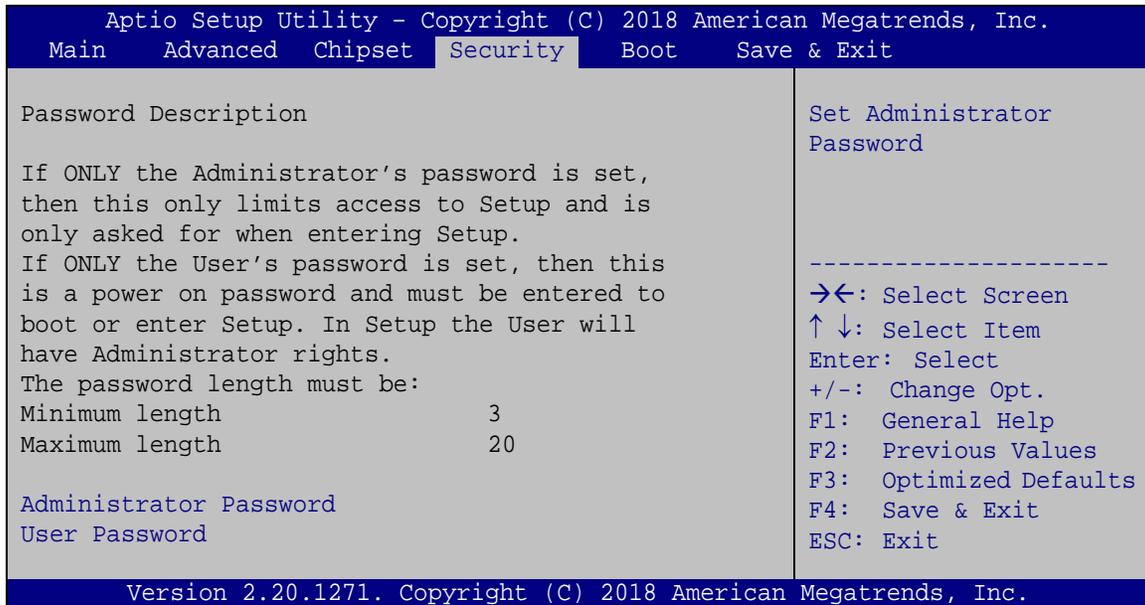

BIOS Menu 22: Security

→ Administrator Password

Use the **Administrator Password** to set or change a administrator password.


→ User Password

Use the **User Password** to set or change a user password.

PUZZLE-IN001

4.6 Boot

Use the **Boot** menu (**BIOS Menu 23**) to configure system boot options.

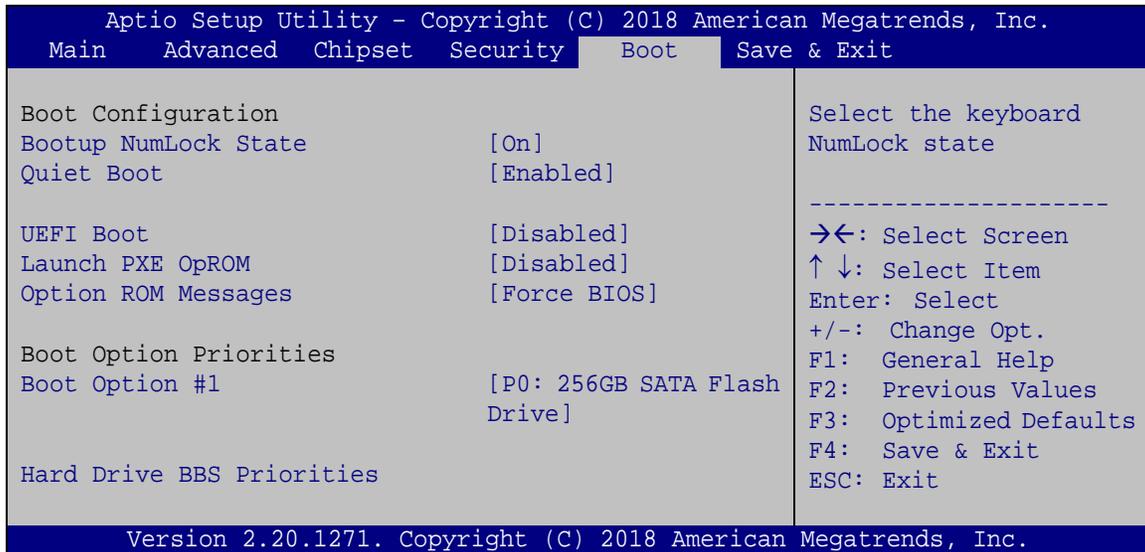

BIOS Menu 23: Boot

→ Bootup NumLock State [On]

Use the **Bootup NumLock State** BIOS option to specify if the number lock setting must be modified during boot up.

- **On** **DEFAULT** Allows the Number Lock on the keyboard to be enabled automatically when the computer system boots up. This allows the immediate use of the 10-key numeric keypad located on the right side of the keyboard. To confirm this, the Number Lock LED light on the keyboard is lit.

- **Off** Does not enable the keyboard Number Lock automatically. To use the 10-keys on the keyboard, press the Number Lock key located on the upper left-hand corner of the 10-key pad. The Number Lock LED on the keyboard lights up when the Number Lock is engaged.

→ Quiet Boot [Enabled]

Use the **Quiet Boot** BIOS option to select the screen display when the system boots.

- **Disabled** Normal POST messages displayed
- **Enabled** **DEFAULT** OEM Logo displayed instead of POST messages

→ UEFI Boot [Disabled]

Use the **UEFI Boot** option to enable or disable to boot from the UEFI devices.

- **Disabled** **DEFAULT** Boot from UEFI devices is disabled.
- **Enabled** Boot from UEFI devices is enabled.

→ Launch PXE OpROM [Disabled]

Use the **Launch PXE OpROM** option to enable or disable boot option for legacy network devices.

- **Disabled** **DEFAULT** Ignore all PXE Option ROMs
- **Enabled** Load PXE Option ROMs.

→ Option ROM Messages [Force BIOS]


Use the **Option ROM Messages** option to set the Option ROM display mode.

- **Force BIOS** **DEFAULT** Sets display mode to force BIOS.
- **Keep Current** Sets display mode to current.

PUZZLE-IN001

4.7 Save & Exit

Use the **Safe & Exit** menu (**BIOS Menu 24**) to load default BIOS values, optimal failsafe values and to save configuration changes.

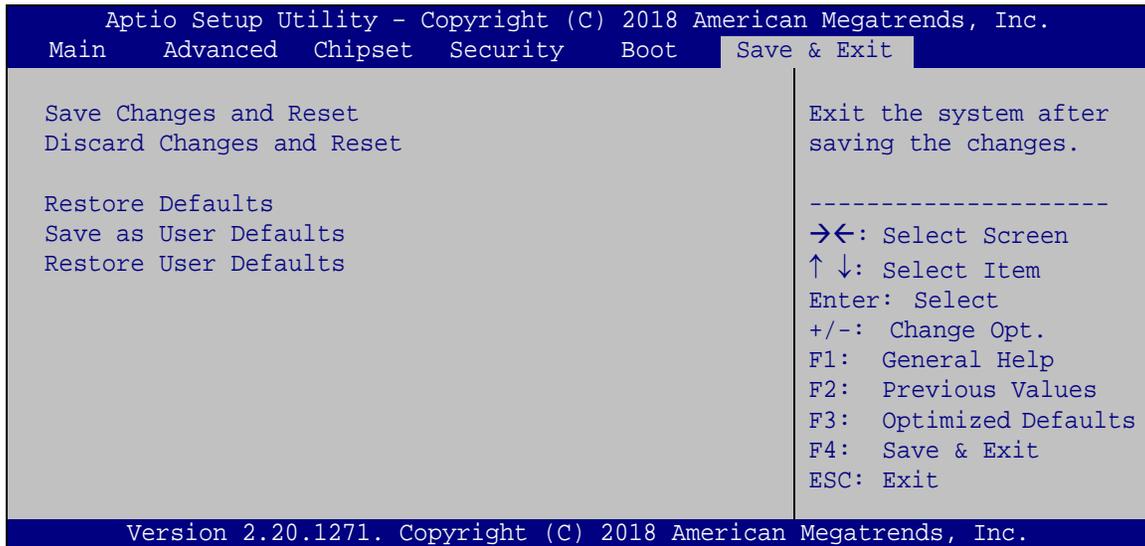**BIOS Menu 24: Save & Exit**→ **Save Changes and Reset**

Use the **Save Changes and Reset** option to save the changes made to the BIOS options and reset the system.

→ **Discard Changes and Reset**

Use the **Discard Changes and Reset** option to exit the system without saving the changes made to the BIOS configuration setup program.

→ **Restore Defaults**

Use the **Restore Defaults** option to load the optimal default values for each of the parameters on the Setup menus. **F3 key can be used for this operation.**

→ **Save as User Defaults**

Use the **Save as User Defaults** option to save the changes done so far as user defaults.

→ **Restore User Defaults**

Use the **Restore User Defaults** option to restore the user defaults to all the setup options.

Chapter


5

Interface Connectors

PUZZLE-IN001

5.1 Peripheral Interface Connectors

The connector locations of the PUZZLE-IN001's motherboard are shown below. The connector pinouts for these connectors are listed in the following sections.

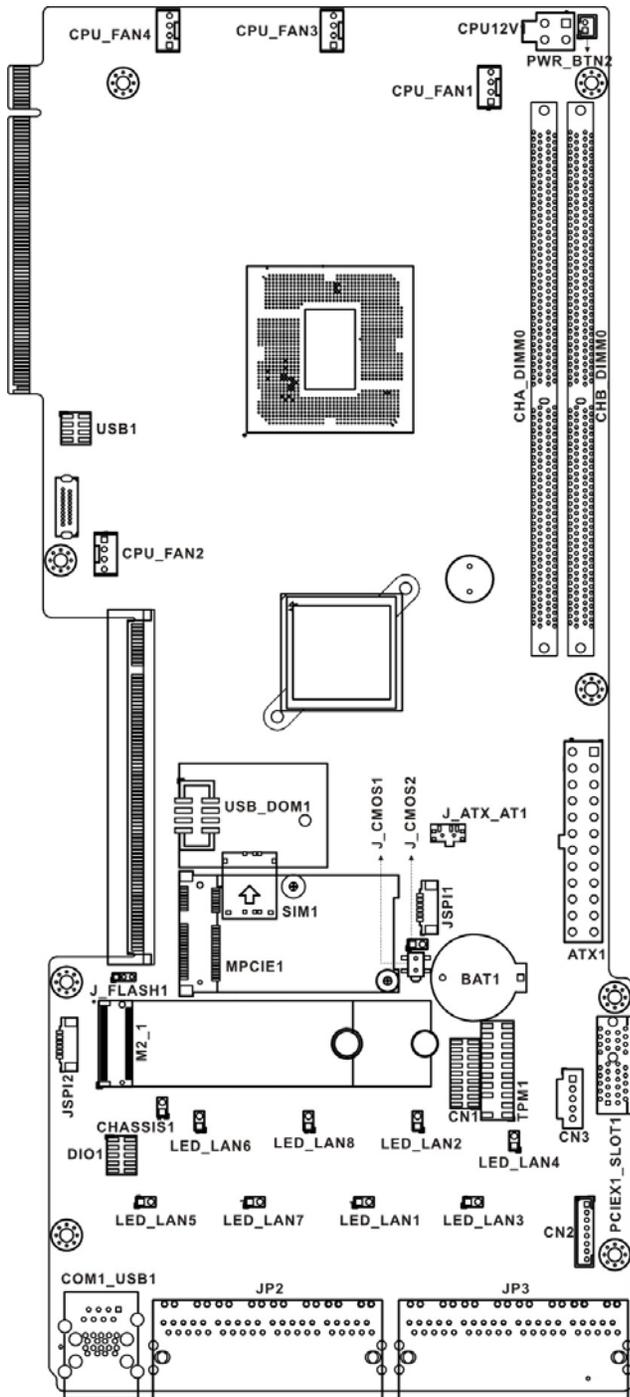

5.2 Internal Peripheral Connectors

Internal peripheral connectors on the motherboard and are only accessible when the motherboard is outside of the chassis. The table below shows a list of the connectors on the motherboard. Pinouts of these connectors can be found in the following sections.

Connector	Type	Label
ATX power connector	24-pin connector	ATX1
ATX PSU SMBus connector	5-pin wafer	CN3
CPU power connector	4-pin connector	CPU12V1
Chassis intrusion connector	2-pin header	CHASSIS1
Digital I/O connector	10-pin header	DIO1
EC debug connector	18-pin header	CN1
Fan connectors	4-pin wafer	CPU_FAN1, CPU_FAN2, CPU_FAN3, CPU_FAN4
LCM connector	8-pin wafer	CN2
LAN LED connector	2-pin header	LED_LAN1, LED_LAN2, LED_LAN3, LED_LAN4, LED_LAN5, LED_LAN6, LED_LAN7, LED_LAN8
M.2 B-key slot	M.2 B-key 2260/2280	M2_1
Memory slots	DDR4 DIMM slot	CHA_DIMM0, CHB_DIMM0
PCIe Mini slot	Full/Half-size PCIe Mini	MPCIE1
Power button connector	2-pin wafer	PWR_BTN2
SATA 6Gb/s socket	36-pin socket	PCIEX1_SLOT1
SPI flash connector	6-pin wafer	JSPI1
SPI flash connector (EC)	6-pin wafer	JSPI2
TPM connector	20-pin header	TPM1
USB 2.0 connector	8-pin header	USB1

PUZZLE-IN001

Connector	Type	Label
USB DOM connector	8-pin header	USB_DOM1

Table 5-1: Peripheral Interface Connectors

5.2.1 ATX Power Connector (ATX1)

Pin	Description	Pin	Description
1	+3.3 V	13	+3.3 V
2	+3.3 V	14	-12 V
3	GND	15	GND
4	+5 V	16	PS-ON
5	GND	17	GND
6	+5 V	18	GND
7	GND	19	GND
8	PW-OK	20	N/C
9	+5VSB	21	+5 V
10	+12V	22	+5 V
11	+12V	23	+5 V
12	+3.3 V	24	GND

Table 5-2: ATX Power Connector Pinouts

5.2.1 ATX PSU SMBus Connector (CN3)

PIN NO.	DESCRIPTION
1	SMCLKO_EC
2	SMDATO_EC
3	NC
4	GND
5	NC

Table 5-3: ATX PSU SMBus Connector (CN3) Pinouts

5.2.2 CPU Power Connector (CPU12V1)

Pin	Description
1	GND
2	GND
3	+12 V
4	+12 V




Table 5-4: CPU Power Connector (CPU12V1) Pinouts

5.2.3 Chassis Intrusion Connector (CHASSIS1)

PIN NO.	DESCRIPTION
1	+3.3VSB
2	CHASSIS OPEN

Table 5-5: Chassis Intrusion Connector (CHASSIS1) Pinouts

5.2.4 DIO Connector (DIO1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	GND	2	VCC
3	Output 3	4	Output 2
5	Output 1	6	Output 0
7	Input 3	8	Input 2
9	Input 1	10	Input 0

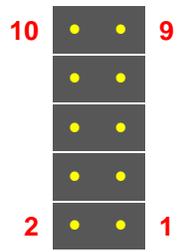


Table 5-6: DIO Connector (DIO1) Pinouts

5.2.5 EC Debug Connector (CN1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	EC_EPP_STB#	2	EC_EPP_AFD#
3	EC_EPP_PD0	4	NC
5	EC_EPP_PD1	6	EC_EPP_INIT#
7	EC_EPP_PD2	8	EC_EPP_SLIN#

PUZZLE-IN001

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
9	EC_EPP_PD3	10	GND
11	EC_EPP_PD4	12	NC
13	EC_EPP_PD5	14	EC_EPP_BUSY
15	EC_EPP_PD6	16	EC_EPP_KSI5
17	EC_EPP_PD7	18	EC_EPP_KSI4

Table 5-7: EC Debug Connector (CN1) Pinouts

5.2.6 Fan Connectors (CPU_FAN1/2/3/4)

PIN NO.	DESCRIPTION
1	GND
2	+12V
3	FANIO
4	PWM

Table 5-8: Fan Connectors (CPU_FAN1/2/3/4) Pinouts

5.2.7 LCM Connector (CN2)

PIN NO.	DESCRIPTION
1	VCC5V
2	Power button
3	LCM RX
4	LCM TX
5	HDD LED
6	Alert LED
7	Reset button
8	GND

Table 5-9: LCM Connector (CN2) Pinouts

5.2.1 LAN LED Connector (LED_LAN1/2/3/4/5/6/7/8)

PIN NO.	DESCRIPTION
1	+3.3V
2	LAN1_LED_LNK#_ACT

Table 5-10: LAN LED Connector (LED_LAN1/2/3/4/5/6/7/8) Pinouts

5.2.1 M.2 Slot (M2_1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	CONFIG_3	2	+3.3V
3	GND	4	+3.3V
5	GND	6	N/C
7	USB_D+	8	N/C
9	USB_D-	10	N/C
11	Notch	12	Notch
13	Notch	14	Notch
15	Notch	16	Notch
17	Notch	18	Notch
19	Notch	20	N/C
21	CONFIG_0	22	N/C
23	N/C	24	N/C
25	N/C	26	N/C
27	GND	28	N/C
29	USB3.0-RX-	30	N/C
31	USB3.0-RX+	32	N/C
33	GND	34	N/C
35	USB3.0-TX-	36	N/C
37	USB3.0-TX+	38	N/C
39	GND	40	N/C
41	PETNO/SATA-B+	42	N/C
43	PETPO/SATA-B-	44	N/C
45	GND	46	N/C

PUZZLE-IN001

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
47	PERNO/SATA-A-	48	N/C
49	PERPO/SATA-A+	50	PERST#
51	GND	52	CLKREQ#
53	REFCLKN	54	PEWAKE
55	REFCLKP	56	N/C
57	GND	58	N/C
59	N/C	60	N/C
61	N/C	62	N/C
63	N/C	64	N/C
65	N/C	66	N/C
67	PESET_N	68	N/C
69	N/C	70	+3.3V
71	GND	72	+3.3V
73	GND	74	+3.3V
75	N/C		

Table 5-11: M.2 Slot (M2_1) Pinouts

5.2.2 PCIe Mini Card Slot (MPCIE1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	PCIE_WAKE#	2	+3.3V
3	N/C	4	GND
5	N/C	6	1.5V
7	N/C	8	N/C
9	GND	10	N/C
11	MSATA_CLK#	12	N/C
13	MSATA_CLK	14	N/C
15	GND	16	N/C
17	PLTRST_N	18	GND
19	N/C	20	+3.3V
21	GND	22	PLTRST_N

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
23	PERNO/SATA_RX+	24	+3.3V
25	PERPO/SATA_RX-	26	GND
27	GND	28	1.5V
29	GND	30	SMB_CLK
31	PETNO/SATA_TX-	32	SMB_DATA
33	PETPO/SATA_TX+	34	GND
35	GND	36	USB_DATA-
37	GND	38	USB_DATA+
39	+3.3V	40	GND
41	+3.3V	42	N/C
43	+3.3V	44	N/C
45	CLINK_CLK	46	N/C
47	CLINK_DATA	48	1.5V
49	CLINK_RST#	50	GND
51	MSATA_DET	52	+3.3V

Table 5-12: PCIe Mini Card Slot (MPCIE1) Pinouts

5.2.1 Power Button Connector (PWR_BTN2)

PIN NO.	DESCRIPTION
1	PWRBTN_SW#
2	GND

Table 5-13: Power Button Connector (PWR_BTN2) Pinouts

5.2.2 SATA Connector (PCIEX1_SLOT1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
B1	+V12S	A1	N/C
B2	+V12S	A2	+V12S
B3	+V12S	A3	+V12S
B4	GND	A4	GND
B5	SATA_TX2-	A5	+V5S

PUZZLE-IN001

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
B6	SATA_TX2+	A6	+V5S
B7	GND	A7	SATA_RX2-
B8	+V3.3S	A8	SATA RX2+
B9	+V5S	A9	+V3.3S
B10	N/C	A10	+V3.3S
B11	+V5S	A11	+V5S
B12	+V5S	A12	GND
B13	GND	A13	N/C
B14	SATA_TX1-	A14	N/C
B15	SATA_TX1+	A15	GND
B16	GND	A16	SATA_RX1-
B17	+V5S	A17	SATA RX1+
B18	GND	A18	GND

Table 5-14: SATA 6Gb/s Connector (PCIEX1_SLOT1) Pinouts

5.2.3 SPI Flash Connector (JSPI1)

PIN NO.	DESCRIPTION
1	+3.3V
2	SPI_CS
3	SPI_SO
4	SPI_CLK
5	SPI_SI
6	GND

Table 5-15: SPI Flash Connector (JSPI1) Pinouts

5.2.4 SPI Flash Connector - EC (JSPI2)

PIN NO.	DESCRIPTION
1	+3.3V
2	SPI_CS#0_CN_EC
3	SPI_SO_SW_EC

4	SPI_CLK_SW_EC
5	SPI_SI_SW_EC
6	GND

Table 5-16: SPI Flash Connector - EC (JSPI2) Pinouts

5.2.5 TPM Connector (TPM1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	LCLK	2	GND
3	LFRAME#	4	KEY
5	LRERST#	6	+5V
7	LAD3	8	LAD2
9	+3.3V	10	LAD1
11	LAD0	12	GND
13	SCL	14	SDA
15	SB3V	16	SERIRQ
17	GND	18	GLKRUN#
19	LPCPD#	20	LDRO#

Table 5-17: TPM Connector (TPM1) Pinouts

5.2.6 USB 2.0 Connector (USB1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC	2	GND
3	USB_DATA-	4	USB_DATA+
5	USB_DATA+	6	USB_DATA-
7	GND	8	VCC

Table 5-18: USB 2.0 Connector (USB1) Pinouts

PUZZLE-IN001

5.2.7 USB DOM Connector (USB_DOM1)

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1	VCC5V	2	N/A
3	USB-	4	N/A
5	USB+	6	N/A
7	GND	8	N/A

Table 5-19: USB DOM Connector (USB_DOM1) Pinouts

Appendix

A

Regulatory Compliance

DECLARATION OF CONFORMITY

This equipment is in conformity with the following EU directives:

- EMC Directive 2014/30/EU
- Low-Voltage Directive 2014/35/EU
- RoHS II Directive 2011/65/EU

If the user modifies and/or install other devices in the equipment, the CE conformity declaration may no longer apply.

If this equipment has telecommunications functionality, it also complies with the requirements of the R&TTE Directive 1999/5/EC.

English

IEI Integration Corp declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Български [Bulgarian]

IEI Integration Corp. декларира, че този оборудване е в съответствие със съществените изисквания и другите приложими правила на Директива 1999/5/EC.

Česky [Czech]

IEI Integration Corp tímto prohlašuje, že tento zařizení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.

Dansk [Danish]

IEI Integration Corp erklærer herved, at følgende udstyr overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.

Deutsch [German]

IEI Integration Corp, erklärt dieses Gerät entspricht den grundlegenden Anforderungen und den weiteren entsprechenden Vorgaben der Richtlinie 1999/5/EU.

Eesti [Estonian]

IEI Integration Corp deklareerib seadme seadme vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.

Español [Spanish]

IEI Integration Corp declara que el equipo cumple con los requisitos esenciales y cualesquiera otras disposiciones aplicables o exigibles de la Directiva 1999/5/CE.

Ελληνική [Greek]

IEI Integration Corp ΔΗΛΩΝΕΙ ΟΤΙ ΕΞΟΠΛΙΣΜΟΣ ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/EK.

Français [French]

IEI Integration Corp déclare que l'appareil est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.

Italiano [Italian]

IEI Integration Corp dichiara che questo apparecchio è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.

Latviski [Latvian]

IEI Integration Corp deklarē, ka iekārta atbilst būtiskajām prasībām un citiem ar to saistītajiem noteikumiem Direktīvas 1999/5/EK.

Lietuvių [Lithuanian]

IEI Integration Corp deklaruoja, kad šis įranga atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.

Nederlands [Dutch]

IEI Integration Corp dat het toestel toestel in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.

Malti [Maltese]

IEI Integration Corp jiddikjara li dan prodott jikkonforma mal-ħtiġijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Dirrettiva 1999/5/EC.

Magyar [Hungarian]

IEI Integration Corp nyilatkozom, hogy a berendezés megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.

Polski [Polish]

IEI Integration Corp oświadcza, że wyrobu jest zgodny z zasadniczymi wymogami oraz pozostałymi stosownymi postanowieniami Dyrektywy 1999/5/EC.

Português [Portuguese]

IEI Integration Corp declara que este equipamento está conforme com os requisitos essenciais e outras disposições da Directiva 1999/5/CE.

PUZZLE-IN001

Româna [Romanian]

IEI Integration Corp declară că acest echipament este în conformitate cu cerințele esențiale și cu celelalte prevederi relevante ale Directivei 1999/5/CE.

Slovensko [Slovenian]

IEI Integration Corp izjavlja, da je ta opreme v skladu z bistvenimi zahtevami in ostalimi relevantnimi določili direktive 1999/5/ES.

Slovensky [Slovak]

IEI Integration Corp týmto vyhlasuje, že zariadenia spĺňa základné požiadavky a všetky príslušné ustanovenia Smernice 1999/5/ES.

Suomi [Finnish]

IEI Integration Corp vakuuttaa täten että laitteet on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.

Svenska [Swedish]

IEI Integration Corp förklarar att denna utrustningstyp står i överensstämmelse med de väsentliga egenskapskrav och övriga relevanta bestämmelser som framgår av direktiv 1999/5/EG.

FCC WARNING

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

ROHS STATEMENT

The label on the product indicates this product conforms to European (EU) Restriction of Hazardous Substances (RoHS) that set maximum concentration limits on hazardous materials used in electrical and electronic equipment.

CHINA ROHS

The label on the product indicates the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Appendix

B

Safety Precautions

B.1 Safety Precautions



WARNING:

The precautions outlined in this appendix should be strictly followed. Failure to follow these precautions may result in permanent damage to the PUZZLE-IN001.

Please follow the safety precautions outlined in the sections that follow:

B.1.1 General Safety Precautions

Please ensure the following safety precautions are adhered to at all times.

- ***Make sure the power is turned off and the power cord is disconnected*** when moving, installing or modifying the system.
- ***Do not apply voltage levels that exceed the specified voltage range.*** Doing so may cause fire and/or an electrical shock.
- ***Electric shocks can occur*** if opened while still powered on.
- ***Do not drop or insert any objects*** into the ventilation openings.
- ***If considerable amounts of dust, water, or fluids enter the system***, turn off the power supply immediately, unplug the power cord, and contact the system vendor.
- **DO NOT:**
 - Drop the system against a hard surface.
 - In a site where the ambient temperature exceeds the rated temperature

B.1.2 Anti-static Precautions



WARNING:

Failure to take ESD precautions during the installation of the PUZZLE-IN001 may result in permanent damage to the PUZZLE-IN001 and severe injury to the user.

PUZZLE-IN001

Electrostatic discharge (ESD) can cause serious damage to electronic components, including the PUZZLE-IN001. Dry climates are especially susceptible to ESD. It is therefore critical that whenever the PUZZLE-IN001 is opened and any of the electrical components are handled, the following anti-static precautions are strictly adhered to.

- **Wear an anti-static wristband:** Wearing a simple anti-static wristband can help to prevent ESD from damaging any electrical component.
- **Self-grounding:** Before handling any electrical component, touch any grounded conducting material. During the time the electrical component is handled, frequently touch any conducting materials that are connected to the ground.
- **Use an anti-static pad:** When configuring or working with an electrical component, place it on an anti-static pad. This reduces the possibility of ESD damage.
- **Only handle the edges of the electrical component:** When handling the electrical component, hold the electrical component by its edges.

B.1.3 Product Disposal




CAUTION:

Risk of explosion if the battery is replaced by an incorrect type;

Dispose of used batteries according to instructions and local regulations.

- Outside the European Union - If you wish to dispose of used electrical and electronic products outside the European Union, please contact your local authority so as to comply with the correct disposal method.
- Within the European Union:

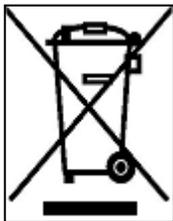

EU-wide legislation, as implemented in each Member State, requires that waste electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste. This includes monitors and electrical accessories, such as signal cables or power cords. When you need to dispose of your display products, please follow

the guidance of your local authority, or ask the shop where you purchased the product. The mark on electrical and electronic products only applies to the current European Union Member States.

Please follow the national guidelines for electrical and electronic product disposal.

B.2 Maintenance and Cleaning Precautions

When maintaining or cleaning the PUZZLE-IN001, please follow the guidelines below.

B.2.1 Maintenance and Cleaning

Prior to cleaning any part or component of the PUZZLE-IN001, please read the details below.

- The interior of the PUZZLE-IN001 does not require cleaning. Keep fluids away from the PUZZLE-IN001 interior.
- Be cautious of all small removable components when vacuuming the PUZZLE-IN001.
- Turn the PUZZLE-IN001 off before cleaning the PUZZLE-IN001.
- Never drop any objects or liquids through the openings of the PUZZLE-IN001.
- Be cautious of any possible allergic reactions to solvents or chemicals used when cleaning the PUZZLE-IN001.
- Avoid eating, drinking and smoking within vicinity of the PUZZLE-IN001.

B.2.2 Cleaning Tools

Some components in the PUZZLE-IN001 may only be cleaned using a product specifically designed for the purpose. In such case, the product will be explicitly mentioned in the cleaning tips. Below is a list of items to use when cleaning the PUZZLE-IN001.

- **Cloth** – Although paper towels or tissues can be used, a soft, clean piece of cloth is recommended when cleaning the PUZZLE-IN001.
- **Water or rubbing alcohol** – A cloth moistened with water or rubbing alcohol can be used to clean the PUZZLE-IN001.
- **Using solvents** – The use of solvents is not recommended when cleaning the PUZZLE-IN001 as they may damage the plastic parts.

PUZZLE-IN001

- **Vacuum cleaner** – Using a vacuum specifically designed for computers is one of the best methods of cleaning the PUZZLE-IN001. Dust and dirt can restrict the airflow in the PUZZLE-IN001 and cause its circuitry to corrode.
- **Swabs** - Swabs moistened with rubbing alcohol or water are excellent tools for wiping hard to reach areas. Whenever possible, it is best to use lint free swabs such as foam swabs for cleaning.

Appendix

C

Hazardous Materials Disclosure

PUZZLE-IN001

The details provided in this appendix are to ensure that the product is compliant with the Peoples Republic of China (China) RoHS standards. The table below acknowledges the presences of small quantities of certain materials in the product, and is applicable to China RoHS only.

A label will be placed on each product to indicate the estimated “Environmentally Friendly Use Period” (EFUP). This is an estimate of the number of years that these substances would “not leak out or undergo abrupt change.” This product may contain replaceable sub-assemblies/components which have a shorter EFUP such as batteries and lamps. These components will be separately marked.

Please refer to the following table.

Part Name	Toxic or Hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (CR(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
Housing	O	O	O	O	O	O
Display	O	O	O	O	O	O
Printed Circuit Board	O	O	O	O	O	O
Metal Fasteners	O	O	O	O	O	O
Cable Assembly	O	O	O	O	O	O
Fan Assembly	O	O	O	O	O	O
Power Supply Assemblies	O	O	O	O	O	O
Battery	O	O	O	O	O	O

O: This toxic or hazardous substance is contained in all of the homogeneous materials for the part is below the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

X: This toxic or hazardous substance is contained in at least one of the homogeneous materials for this part is above the limit requirement in SJ/T11363-2006 (now replaced by GB/T 26572-2011).

此附件旨在确保本产品符合中国 RoHS 标准。以下表格标示此产品中某有毒物质的含量符合中国 RoHS 标准规定的限量要求。

本产品上会附有“环境友好使用期限”的标签，此期限是估算这些物质“不会有泄漏或突变”的年限。本产品可能包含有较短的环境友好使用期限的可替换元件，像是电池或灯管，这些元件将会单独标示出来。

部件名称	有毒有害物质或元素					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (CR(VI))	多溴联苯 (PBB)	多溴二苯 醚 (PBDE)
壳体	○	○	○	○	○	○
显示	○	○	○	○	○	○
印刷电路板	○	○	○	○	○	○
金属螺帽	○	○	○	○	○	○
电缆组装	○	○	○	○	○	○
风扇组装	○	○	○	○	○	○
电力供应组装	○	○	○	○	○	○
电池	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有物质材料中的含量均在 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求以下。

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T 11363-2006 (现由 GB/T 26572-2011 取代) 标准规定的限量要求。